

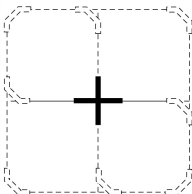


Cross plate, for mounting frame profile, CI system

Part no. **KVB-ID**
 Catalog No. **002300**

EL-Nummer **2502071**
 (Norway)

Delivery program

Product range			CI insulated enclosures
Basic function			Distribution board assembly
Product function			Accessories
Accessories			Cross plates for wall-mounting and floor-standing distribution boards
For use with			For the connection of horizontal and vertical sections
Information about equipment supplied			Including fixing sundries
For use with			

Notes

Additional accessories → #095750

Technical data ETIM 7.0

Cabinet enclosures (EG000011) / Component for installation (switchgear cabinet) (EC002620)

Electric engineering, automation, process control engineering / Electrical cabinet, housing, rack / Elements for switching cabinet, housing, rack / Component for installation (electrical cabinet) (ecI@ss10.0.1-27-18-28-11 [ACN627011])

Model			Fastening profile
Suitable for enclosure building width		mm	0
Suitable for enclosure building height		mm	0
Suitable for enclosure building depth		mm	0
Width		mm	117.5
Height		mm	117.5
Depth		mm	6
Max. load capacity		kg	0
Material			Metal
Colour			Other
RAL-number			0

Additional product information (links)

allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&Render=1 model certification xEnergy Safety Ci	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&noSaveAs=0&Render=1
allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&Render=1 Save time – we assist you with expert pre-assembly	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&noSaveAs=0&Render=1
allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&Render=1 product information xEnergy Safety Ci	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&noSaveAs=0&Render=1
tool for calculating the power loss for switching device combinations	http://www.eaton.eu/DE/Europe/Electrical/CustomerSupport/ConfigurationTools/TCtool/index.htm
configurator - xEnergy family	http://www.eaton.eu/DE/Europe/Electrical/CustomerSupport/ConfigurationTools/xEnergyMainSupport/index.htm