



ZAMEL Sp. z o.o.



ul. Zielona 27, 43-200 Pszczyna, Poland  
Tel. +48 (32) 210 46 65, Fax +48 (32) 210 80 04  
www.zamelcet.com, e-mail: marketing@zamel.pl

## DESCRIPTION

The GRM-10 device is designed to realise simple control and notice operations. The operations are carried out by means of the GSM network. The controller has two independent outputs with a maximum load capacity of 16 A / 250 V AC. Two digital inputs allow for a link with the alarm control panels. The RS485 interface in connection with the RXM-01 translator gives a possibility to control EXTA FREE system receivers with the help of a mobile phone and messages that are defined by the user. The number of operation modes and configuration options make the GRM-10 a very useful device for simple home automation and industrial systems. The GRM-10 device is made in a three-MOD casing and is designed for mounting in switchboards on a TH35 rail.

## FEATURES

- Remote control of the electrical devices by means of commands (incoming phone connection, text message) sent from a mobile phone,
- Comfortable control of difficult access devices (air conditioning, heating, etc.),
- Two relay outputs with the load capacity of 16 A,
- Operation is optically signalled (power supply, relay status, GSM modem status)
- Low power consumption, a possibility of continuous operation.



The device is designed for single-phase installation and must be installed in accordance with standards valid in a particular country. The device should be connected according to the details included in this operating manual. Installation, connection and control should be carried out by a qualified electrician staff, who act in accordance with the service manual and the device functions. In case of casing dismantling an electric shock may occur, and the guarantee is lost then. Before installation make sure the connection cables are not under voltage. The cruciform head screwdriver 3,5 mm should be used to instal the device. Improper transport, storage, and use of the device influence its wrong functioning. It is not advisable to instal the device in the following cases: if any device part is missing or the device is damaged or deformed. In case of improper functioning of the device contact the producer.




The symbol means selective collecting of electrical and electronic equipment. It is forbidden to put the used equipment together with other waste.

## TECHNICAL PARAMETERS

GRM-10	
Nominal input rated voltage:	230 V AC 50 / 60 Hz
Input voltage tolerance:	-15 + +10 %
Nominal power consumption:	1,5 W
GSM frequency:	900/1800/1900 MHz
Operating range:	restricted by the GSM network
Supply voltage optical signalling:	LED diode (green)
GSM status signalling:	LED diode (yellow)
Output number:	2
Output status signalling:	2 x LED diode
Output relays parameters:	2 x NO 16 A / 250 V AC AC1 4000 VA
Input number:	2
Input type:	Digital - potential +4 V
Interfaces:	RS485 MODBUS - A,B,C terminals; USB; PK1, PK2 push-buttons
RS485 transmission signalling:	LED diode
Position on RS485 bus:	only MASTER
Ambient temperature range:	-10 ÷ +55 °C
Operating position:	free
Casing mounting:	TH35 rail
Casing protection degree:	IP20 (PN-EN 60529)
Protection class:	II
Overvoltage category:	II
Pollution degree:	2
Dimensions:	3-modular casing
Weight:	163 g
Reference standard:	PN-EN 60950-1:2007; PN-EN 55024:2000; PN-EN 61000-4-4

## APPEARANCE

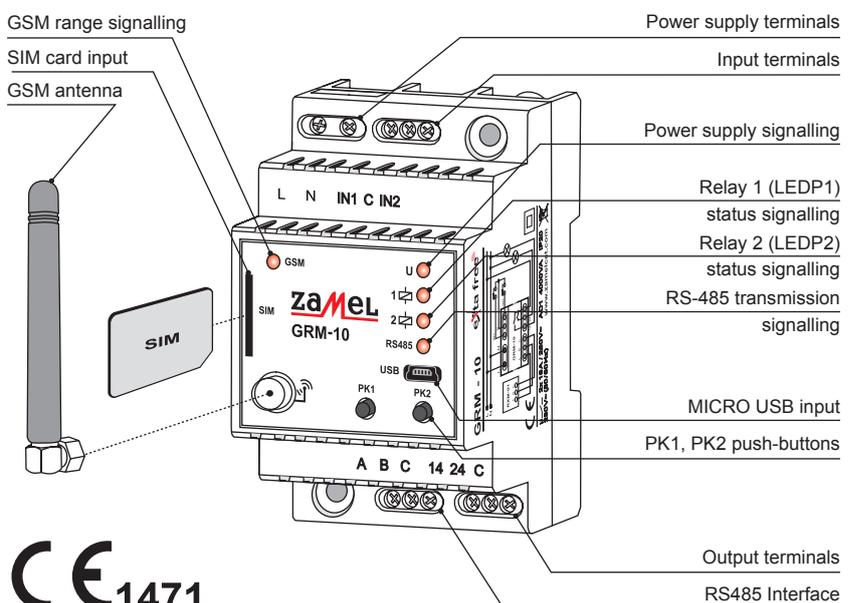


## SOFTWARE UPGRADE


The GRM-10 user has the ability to upgrade the software using the Micro USB interface. It may be necessary in case of an upgrade release by the producer. Information on the current software can be found on the product website: [http://www.zamelcet.com/pl,263,4537,sterownik\\_gsm\\_modulowy\\_2kanalowy\\_grm10.html](http://www.zamelcet.com/pl,263,4537,sterownik_gsm_modulowy_2kanalowy_grm10.html).

The upgrade is carried out by the GRM-10 application on the PC:


1. After switching off the power supply voltage connect the GRM-10 device to the PC by means of a USB, Micro B / USB cable and pressing the PK2 push-button.
2. Start the GRM-10 application and select the UPGRADE window.

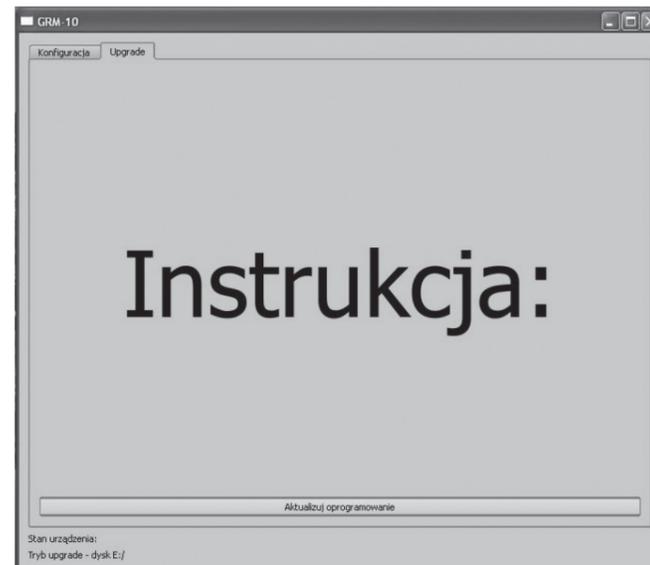


3. Select "Software Upgrade" and then select the latest version of the GRM-10 software (the \*.ZMS) from a specific location.

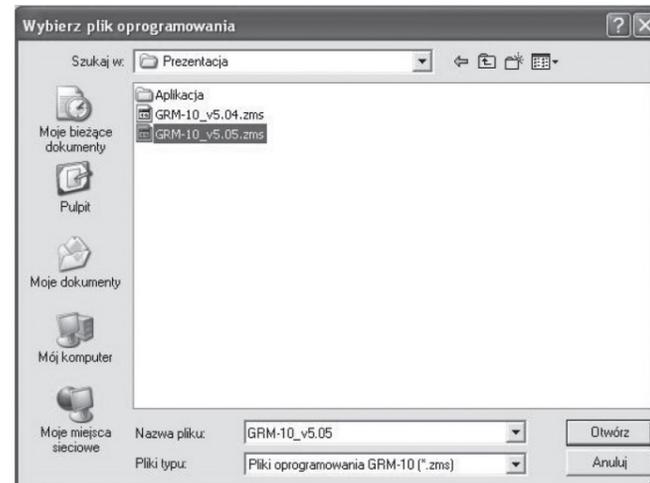

4. If the software is successfully updated the application will show a comment: "The software has been updated".
5. Press "OK."
6. Disconnect the USB Micro B / USB A cable.
7. Switch on the power supply.

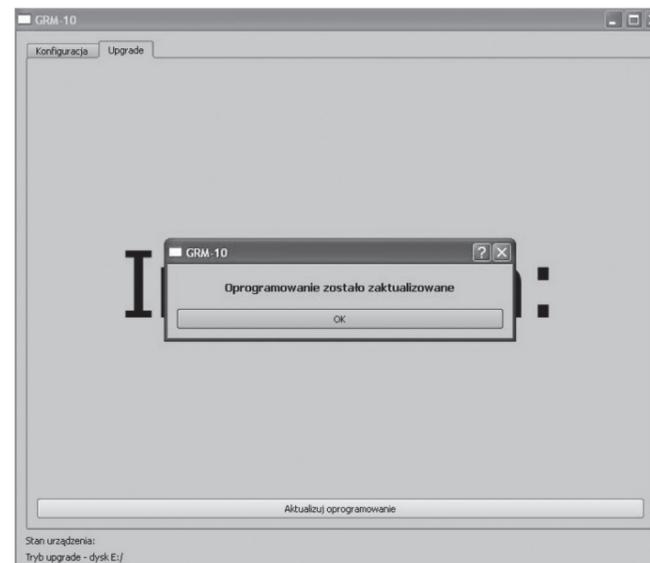

## CONNECTION AND INSTALLING DIAGRAM

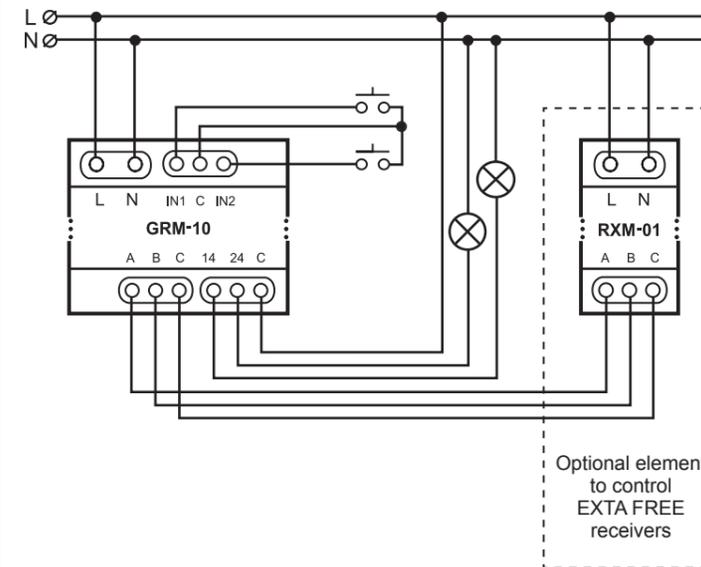

**CAUTION!** The GRM-10 controller connection to a single-phase installation must be done in accordance with standards valid in a particular country. The device should be connected according to the details included in this operating manual. Installation, connection and control should be carried out by a qualified electrician staff, who act in accordance with the service manual and the device functions.

1. Disconnect power supply by the phase fuse, the circuit-breaker or the switch-disconnector combined to the proper circuit.
2. Check if there is no voltage on connection cables by means of a special measure equipment.
3. Connect the GRM-10 device to 230 V AC power supply.
4. Connect the remaining cables with the appropriate terminals of the GRM-10 controller according to the installing diagram.
5. **Insert into the SIM input the active SIM card with funds available. Before installing switch off the PIN code or adjust it choosing 1111. It is recommended to switch off the voice mail.**
6. Carry out a proper device configuration (see DEVICE CONFIGURATION).
7. Switch on the power supply from the mains. Wait until the proper GSM network log in. Check the correctness of the operation.

## DEVICE CONFIGURATION

GRM-10 has a default factory settings. Before use, carefully read the manual instruction and make a proper device configuration. In order to freely manage the configuration settings, the GRM-10 device makes the local and remote configuration possible. The remote configuration allows to manage the settings of the already working GRM-10 device without a physical access to it (for example, to a device that is installed in the building). The configuration can be done as follows:

- a) by means of a mobile phone via text message (local and remote configuration),
- b) by means of the PC application via the Micro USB interface (only the local configuration).

### Local configuration by means of a mobile phone

1. Press the PK2 push-button on the front panel.
2. Switch on the power supply and keep the PK2 push-button pressed.
3. Hold the PK2 push-button as long as the LED red diodes LEDP1 and LEDP2 start flashing.
4. Wait until the GRM-10 device logs into the GSM network (LED yellow diode GSM flashes).
5. Adjust the configuration parameters by sending appropriate text messages (see CONFIGURATION COMMANDS).
6. Switch off the power supply from the mains.

### Remote configuration by means of a mobile phone

The remote configuration is available only for these telephone numbers that have been added to the so called administrative numbers' list by means of the configuration command ADMIN (see CONFIGURATION COMMANDS) during the local configuration (by means of a text message or a PC application). The remote configuration is possible during a usual device operation if it is "logged in" to the GSM network.

1. Send a text message with a CONFIG MODE content from a telephone number included on the ADMIN list.
2. By receiving the above text message, the GRM-10 device will send back a reply "CONFIG MODE OK" and will enter the configuration mode, which is indicated by flashing red LED diodes LEDP1 and LEDP2.
3. Carry out the device configuration in accordance with the CONFIGURATION COMMANDS.
4. Send a TEXT MESSAGE with the CONFIG MODE END content to leave the remote configuration mode.
5. By receiving the above text message, the GRM-10 device will send back a reply "CONFIG MODE END -OK" and will enter a usual operation mode

When entering / leaving the remote configuration mode, the outputs' status remains unchanged.

### Configuration by means of the PC application via an MICRO USB interface

NOTE: Every time before making any changes in the configuration settings by means of the PC application, first read the current configuration of the GRM-10 device. It is necessary not to overwrite or lose the configuration settings implicated by the telephone text message.

1. Start the GRM-10 application on PC.
2. Switch off the power supply to connect the MICRO USB to the GRM-10 device.
3. Wait until the GRM-10 device appears in the operating system to install properly.
4. **READ CURRENT GRM-10 DEVICE CONFIGURATION.**
5. Carry out / change the configuration adjustments by means of the PC application.
6. In order to save the current configuration of the GRM-10 device, press the "ZAPISZ DO URZADZENIA" push-button.
7. Press shortly the PK1 push-button on the front panel of the GRM-10 device (LED yellow diode RS485 switches on for a moment).
8. If the configuration is correct, the application sends back a message 'CONFIGURATION OK.' Otherwise the message 'CONFIGURATION ERROR' displays.
9. Disconnect the MICRO USB cable from the GRM-10 device.

### Saving the configuration to \*.zml file

The current configuration can be saved to a \*.zml' file. In order to do it, by means of the application press the "ZAPISZ DO PLIKU" push-button and select the proper file place to save it.

### Reading the configuration from the \*.zml file

The current configuration can be read from the \*.zml' file. In order to do it, by means of the application press the "WCZYTAJ Z PLIKU" push-button, next choose the correct file place to read it.

## DEVICE CONTROL

Type of control	Possible control types	Remarks
<b>MANUAL</b> By means of PK1 / PK2 push buttons on the front panel	<ul style="list-style-type: none"> <li>Bistable ON/OFF</li> <li>Time TIME</li> <li>Gate GATE</li> </ul>	<ul style="list-style-type: none"> <li>Times for TIME and GATE modes are adjusted during configuration.</li> </ul>
<b>CLIP</b> By calling to the device (specified number of signals)	<ul style="list-style-type: none"> <li>Bistable ON/OFF</li> <li>Time TIME</li> <li>Gate GATE</li> </ul>	<ul style="list-style-type: none"> <li>Times for TIME and GATE modes are adjusted during configuration.</li> <li>The number of signals specified during configuration (in ON / OFF and TIME modes the user must disconnect after certain number of signals, in the GATE mode the disconnection is automatic).</li> </ul>
<b>TEXT MESSAGE</b> By sending a specified message with a control command to the device	<ul style="list-style-type: none"> <li>Bistable ON/OFF</li> <li>Time TIME</li> <li>Gate GATE</li> <li>EXTA FREE control</li> </ul>	<ul style="list-style-type: none"> <li>Times for the TIME and GATE modes are adjusted during configuration with a possibility of changing the text in the control text message.</li> </ul>

\* **ON / OFF bistable mode** - change of the CH1 or CH2 output status to the opposite.

\* **TIME time mode** - change of the CH1 or CH2 output status to the opposite and appropriately through time t1 for CH1 output and time t2 for CH2 output.

\* **GATE gate mode** - change of the CH1 and / or CH2 into times defined for the gate mode.

\* **EXTA FREE control** - control of EXTA FREE system wireless receivers by means of RXM-01 device RXM-01 connected with the GRM-10 device.

## CONFIGURATION COMMANDS

Command	Description
<b>CONFIG</b>	<ul style="list-style-type: none"> <li>Configuration of telephone numbers authorized to control the CLIP.</li> <li>Configuration of the optional password for controlling text messages.</li> <li>Configuration of confirmation.</li> </ul>
<b>CONFIG MODE</b>	<ul style="list-style-type: none"> <li>Adjusting the device for the remote configuration mode.</li> </ul>
<b>CONFIG MODE END</b>	<ul style="list-style-type: none"> <li>Deleting the remote configuration mode.</li> </ul>
<b>ADD NUM</b>	<ul style="list-style-type: none"> <li>Entering additional phone numbers to the list of numbers authorised to control the CLIP. By means of one command maximum six numbers can be added every time. Applies to local and remote configuration.</li> </ul>
<b>DEL NUM</b>	<ul style="list-style-type: none"> <li>Deleting a number (s) from the list of telephone numbers authorized to control the CLIP. Every time by means of one command up to six numbers may be deleted. It refers to local and remote configuration.</li> </ul>
<b>ADMIN</b>	<ul style="list-style-type: none"> <li>Configuration of telephone numbers authorized to a remote configuration.</li> </ul>
<b>INFO</b>	<ul style="list-style-type: none"> <li>Configuration of telephone numbers the text messages will be sent to (it refers to the outputs' status and occurrences on IN1, IN2 inputs).</li> </ul>
<b>RELAY1</b>	<ul style="list-style-type: none"> <li>Operation mode configuration for CH1 output.</li> <li>Operation mode configuration of CH1 output after power supply voltage is switched off.</li> </ul>
<b>RELAY2</b>	<ul style="list-style-type: none"> <li>Operation mode configuration for CH2 output.</li> <li>Operation mode configuration of CH2 output after power supply voltage is switched off.</li> </ul>
<b>MODBUSCONFIG</b>	<ul style="list-style-type: none"> <li>Configuration of RS485 transmission parameters for MODBUS protocol.</li> </ul>
<b>GATE</b>	<ul style="list-style-type: none"> <li>Gate mode configuration.</li> </ul>
<b>TASK IN1</b>	<ul style="list-style-type: none"> <li>IN1 input configuration.</li> </ul>
<b>TASK IN2</b>	<ul style="list-style-type: none"> <li>IN2 input configuration.</li> </ul>
<b>EF</b>	<ul style="list-style-type: none"> <li>Control command configuration for EXTA FREE system.</li> </ul>
<b>EF RESET</b>	<ul style="list-style-type: none"> <li>Deleting the control command table for EXTA FREE system.</li> </ul>
<b>RESET CONFIG</b>	<ul style="list-style-type: none"> <li>Restore the default settings (it does not refer to EXTA FREE commands).</li> </ul>

## CONFIGURATION MODE COMMAND

The command makes the GRM-10 device enters from the normal operation mode into the remote configuration mode. The active command is only for the numbers included in the ADMIN list (by means of ADMIN command or the PC application). The enter into the configuration mode is indicated by a flashing LED diodes LEDP1 and LEDP2.

## CONFIGURATION MODE END COMMAND

The command allows the the GRM-10 device to go out from the configuration mode to normal operation. The active command is only for the numbers included in the ADMIN list (by means of ADMIN command or the PC application). The command is inactive during local configuration.

## CONFIG COMMAND

**CONFIG** <+48tel\_1> <+48tel\_n> **PASS** <password from 5 to 8 signs> **ACK** <REL1,REL2, REL12>

The maximum of numbers available n = 6

**PASS** Keyword - it specifies the password added to the text message during control. The password is added at the beginning of the message. No parameter means a free access for any number during text message control.

**ACK** Keyword - it specifies whether the GRM-10 device must send a confirming text message every time after a specified command is realised:

**REL1** confirmation only for CH1 channel

**REL2** confirmation only for CH2 channel

**REL12** confirmation for channels CH1 and CH2

<> No parameter means no confirmation for channels CH1 and CH2

Examples of commands:

Command	Description
<b>CONFIG +48602360938 +48600915257</b>	Numbers +48602360938, +48600915257 globally released to control CLIP, no password for text message control, no confirmations for OUT1 and OUT2 outputs.
<b>CONFIG +48602360938 +48600915257 ACK REL1</b>	Numbers +48602360938, +48600915257 globally released to control CLIP, no password for text message control, confirmations only for OUT1 output.
<b>CONFIG +48602360938 +48600915257 ACK REL2</b>	Numbers +48602360938, +48600915257 globally released to control CLIP, no password for text message control, confirmations only for OUT2 output.
<b>CONFIG +48602360938 +48600915257 ACK REL12</b>	Numbers +48602360938, +48600915257 globally released to control CLIP, no password for text message control, confirmations for OUT1 and OUT2 outputs.
<b>CONFIG +48602360938 +48600915257 PASS ZAMEL ACK REL1</b>	Numbers +48602360938, +48600915257 globally released to control CLIP, ZAMEL password for text message control, confirmations only for OUT1 output.

**NOTE: If there is a need to add more authorised numbers to control the CLIP (including control in the gate mode) it can be done by means of the PC application (telephone section) or the ADD NUM command in configuration mode. It is possible to enter up to 500 numbers. In order to delete the selected telephone number, use the PC application or the DEL NUM command in configuration mode.**

## ADD NUM COMMAND

The command adds a telephone number / numbers to the authorised list of numbers used to control CLIP (including the control in the gate mode). 6 telephone numbers maximally can be added by one command at each time. The command refers to the local and remote configuration.

**ADD NUM** <+48tel\_1> <+48tel\_2>, ..., <+48tel\_n>

tel\_1...tel\_n successively entered phone numbers preceded by +48.

The maximum of numbers available n = 6.

Examples of commands:

Command	Description
<b>ADD NUM +48602360938</b>	Number +48602360938 is added to the authorised list of numbers used to control by means of CLIP calling signals.
<b>ADD NUM+48603360928 +48600915257 +48600500800</b>	Numbers +48603360928 +48600915257 +48600500800 are added to the authorised list of numbers used to control by means of CLIP calling signals.

## DEL NUM COMMAND

The command deletes a telephone number / numbers from the authorised list of numbers used to control CLIP (including the control in the gate mode). 6 telephone numbers maximally can be deleted by one command at each time. The command refers to the local and remote configuration.

**DEL NUM** <+48tel\_1> <+48tel\_2>, ..., <+48tel\_n>

tel\_1...tel\_n successively entered phone numbers preceded by +48.

The maximum of numbers available n = 6.

Examples of commands:

Command	Description
<b>DEL NUM +48602360938</b>	Number +48602360938 is deleted from the authorised list of numbers used to control by means of CLIP calling signals.
<b>DEL NUM+48603360928 +48600915257 +48600500800</b>	Numbers +48603360928 +48600915257 +48600500800 are deleted from the authorised list of numbers used to control by means of CLIP calling signals.

## INFO COMMAND

**INFO** <+48tel\_1> <+48tel\_2>,...,<+48tel\_n>

tel\_1...tel\_n successively entered phone numbers preceded by +48. The text messages will be sent to these numbers. The confirmations refer to the changed output status and occurrences on IN1, IN2 inputs.

The maximum of numbers available n = 6.

The confirming text messages are sent only if the ACK parameter is set in the CONFIG command. Sending the INFO command with new telephone numbers results in deleting the previous numbers and writing the new ones.

Examples of commands:

Command	Description
<b>INFO +48602360938 +48600915257</b>	Text messages will be sent to the following numbers +48602360938, +48600915257 confirming the realization of a specified control command or occurrences on inputs.
<b>INFO +48602360938 +48600915257 +48600500800</b>	Text messages will be sent to the following numbers +48602360938, +48600915257, +48600500800 confirming the realization of a specified control command or occurrences on inputs.

## RELAY1 / RELAY 2 COMMAND

**RELAY1** <ON/OFF/MEM> <mode> <t1> RING <y>  
**RELAY2** <ON/OFF/MEM> <mode> <t2> RING <y>

**<ON/OFF/MEM>** The parameter defines the output status OUT1/OUT2 after switching on power supply from the mains:

- ON Output switched on.
- OFF Output switched off.
- MEM GRM-10 remembers the output status - when the power supply is switched off and then switched on again, the output has the same status as it was before the power supply switch off. The parameter is not adjusted for the TIME mode..

**<mode>** A parameter that defines the operating mode of OUT1/OUT2 outputs - it is default for CLIP control.

- ONOFF Bistable mode (Switch on / switch off).
- TIME Time mode.

**<t1>/<t2>** A parameter that defines default times [s] for the time mode - possible value from 1 to 3600

**RING** A keyword defining the number of ring signals to control CLIP.

**<y>** A parameter defining the number of rings to control CLIP. The parameter is adjusted in the range of 2 to 12.

If the RING keyword and <y> parameter is not adjusted, the control is carried out only by sending text messages.

**OUT1/OUT2 outputs are independently configurable.**

Examples of commands:

Command	Description
<b>RELAY1 ON ONOFF RING 3</b>	OUT1 output is switched on, bistable mode, adjustment after three rings.
<b>RELAY1 MEM ONOFF RING 2</b>	OUT1 output in the status before power supply switch off, bistable mode, activation after two rings
<b>RELAY1 OFF TIME 60 RING 4</b>	OUT1 output is switched off, time mode, time 60 seconds, adjustment after 4 rings
<b>RELAY2 OFF ONOFF</b>	OUT2 output is switched off, bistable mode, control only by means of text message
<b>RELAY2 ON TIME 10 RING 2</b>	OUT2 output is switched on, time mode, time 10 seconds, adjustment after 2 rings

## MODBUSCONFIG COMMAND

Default MODBUS protocol configuration in GRM-10 device allows for a direct connection with EXTA FREE translator / RS-485 RXM-01 type. **GRM-10 device in such a connection is only a MASTER on the MODBUS bus - it receives control text messages and by means of RS-485 bus it sends appropriate commands to the RXM-01 device.** A default configuration:

<b>Protocol:</b>	MODBUS RTU 8 bits of data	<b>Parity:</b>	Parity bit + stop bit
<b>Transmission rate:</b>	9600 kbps	<b>Address on the bus:</b>	0x01

**MODBUSCONFIG** <address> <rate> **PARITY** <parity options>

**<address>** A parameter defining address on the bus: 1...247.

**<rate>** A parameter defining transmission rate on the RS-485 bus:

- 2400 - 2400 kbps,
- 4800 - 4800 kbps,
- 9600 - 9600 kbps,
- 19200 - 19200 kbps

**PARITY** A keyword defining parity options. Selection possibilities:

- NO - no parity
- ODD - odd test
- EVEN - parity test.

Examples of commands:

Command	Description
<b>MODBUSCONFIG 1 9600 PARITY EVEN</b>	Address 0x01, transmission rate 9600kbps, parity test
<b>MODBUSCONFIG 1 2400 PARITY ODD</b>	Address 0x01, transmission rate 2400kbps, odd test

## GATE COMMAND (GATE MODE)

In the gate mode the settings are as follow:

OUT1 - it cooperates with the existing gate controller that controls the gateway.

OUT2 - it cooperates with the electric latch opening the entry gate to the possession.

The number of telephones authorized to control in the gate mode by means of a ring (CLIP) are adjusted in the CONFIG configuration mode (up to 6 numbers) or by means of:

- the ADD NUM command in the configuration mode,
- the PC application in the Telephones section / CLIP (up to 500 numbers) in the configuration mode.

**GATE** <TIME 1> <TIME2> RING <y> **AUTO** <TIME3>

**<TIME 1>** A parameter that defines the default time [s] of the OUT1 output - configurable in the range of 0 to 10. OUT1 task is to generate a pulse to the gateway controller. If this parameter is set to "0", then OUT1 output is inactive.

**<TIME 2>** A parameter that defines the default time [s] of the OUT2 output - configurable from 0 to 360. The OUT2 output task is to provide voltage supply to the electric latch. If this parameter is set to "0", then the OUT2 output is inactive.

**RING** A keyword that defines the number of rings to control outputs in the gate mode by means of a CLIP.

**<y>** A parameter that defines the number of rings to control outputs in the gate mode by means of a CLIP. This parameter is configured in the range of 2 to 6. If it is not set, the control is carried out only by means of text messages.

**AUTO** A keyword to configure the AUTO mode. In the AUTO mode, after <TIME 3> finishes a gate controller's pulse is automatically generated for a defined <TIME1> time. This impulse is to automatically close the door. If the AUTO mode is activated, the gate remains open till the GATE command is activated, till the next "CLIP'a", till the next pulse in IN1 input or till another pressing of the PK1 push-button.


**<TIME3>** A parameter that defines the time [s] during which the gate remains open. The time is measured after <TIME1> finishes. It is configured in the range from 1 to 600. While adjusting <TIME3> it is necessary to take into consideration the time taken to open the gate..

**IN1/IN2 inputs are not configured in the gate mode. The inputs have the following default settings:**

- The appearance of a short pulse in the IN1 input results in switching on the OUT1 output for the time <TIME1> that is adjusted during the gate mode configuration.
- The appearance of a short pulse in the IN2 input results in switching on the OUT2 output for the time <TIME2> that is adjusted during the gate mode configuration..

Examples of commands:

Command	Description
<b>GATE 2 15 RING 2</b>	time1 = 2 s, time2 = 15 s, setting the CLIP after 2 rings
<b>GATE 2 10 RING 2 AUTO 350</b>	time1 = 2 s, time2 = 10 s, setting the CLIP after 2 rings, automatically generating pulse to close the gate after time3 = 350 s
<b>GATE 2 100</b>	time1 = 2 s, time2 = 100 s, control only by means of text messages
<b>GATE 0 60</b>	Pulse generation only to open the doorway (latch operation time = 60 s)
<b>GATE 2 0</b>	Pulse generation only to open the gate (pulse time = 2 s)

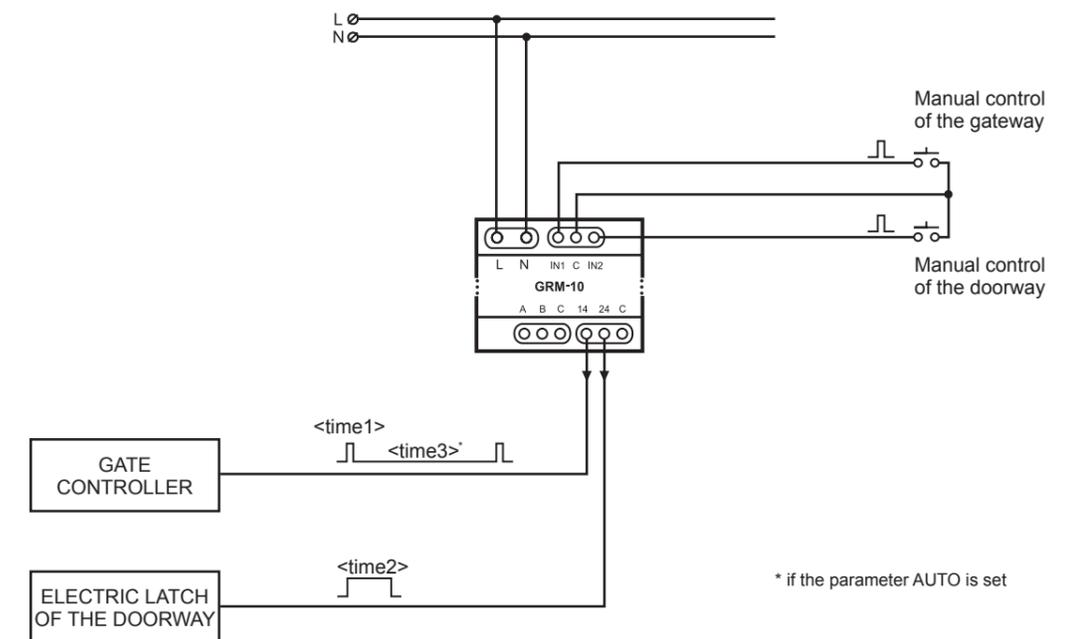

The GRM-10 connection diagram in the gate mode

## TASK IN 1 / TASK IN 2 COMMAND

**TASK IN1 <LO/HI> RELAY1 <ON/OFF>** or **TASK IN2 <LO/HI> RELAY2 <ON/OFF>**  
**TASK IN1 <LO/HI> RELAY1 TIME <t1>** or **TASK IN2 <LO/HI> RELAY2 TIME <t2>**  
**TASK IN1 <LO/HI> NONE** or **TASK IN2 <LO/HI> NONE**

### KEYWORDS

**TASK IN1/TASK IN2** – defines the output the configuration refers to.

**RELAY1/RELAY2** – defines the output that must be activated after a given status occurrence in the input

**TIME** – defines that after an occurrence of the <LO/HI> status in IN1 / IN2 input, the OUT1/OUT2 output changes its status for a time limited by <t1> <t2> parameters.

**NONE** – defines that after an occurrence of the <LO/HI> status in IN1 / IN2 input, the GRM-10 device avoids the status (it does not respond).

### PARAMETERS

<LO/HI> A parameter for the keyword TASK IN1/TASK IN2 defining the level of the input IN1/IN2 that activates a specific output occurrence. The normal status of the IN1/IN2 inputs is the high state HI. The low status is achieved by linking the selected input to terminal C.

<ON/OFF> A parameter for the RELAY1/RELAY2 keyword - it defines the output status:

ON - the output is on.

OFF - the output is off.

<t1> Time [s] of the OUT1 / OUT2 output after a defined status occurred in IN1 input. This parameter is configured in the range of 1 to 3600.

<t2> Time [s] of the OUT1 / OUT2 output after a defined status occurred in IN1 input. This parameter is configured in the range of 1 to 3600.

CLIP or TEXT MESSAGE control have a higher priority than inputs. It means that if a specific status occurs in IN1/IN2 inputs, the OUT1 /OUT2 output is switched on permanently or only for <t1>/<t2> time. It can be switched off by means of a CLIP or a TEXT MESSAGE any time.

In case of MEM parameter adjustment (in RELAY1 / RELAY2 configuration commands) for a selected output, the adjustment remembered for inputs in the time mode is the status before activation of the <t1>/<t2>.

**TASK IN1 <LO/HI> NONE MESSAGE <text message content up to 30 signs>**

**TASK IN2 <LO/HI> NONE MESSAGE <text message content up to 30 signs>**

**MESSAGE** A keyword - it defines the text message content to be sent by the GRM-10 device to its receivers. Their telephone numbers are configured in the INFO command. The text message can include up to 30 signs. The occurrence of a specific status <LO/HI> in the input results in sending a text message.

**TASK INx <LO/HI> RELAYx <ON/OFF/TIME> <tx> MESSAGE <text message content up to 30 signs>**

The command makes the connection between the specific status occurrence (LO/HI) in the IN1/IN2 input with an appropriate activation of the OUT1 / OUT2 output and sending a text message (MESSAGE) with a defined content..

X number of an input / output

1 input /output IN1/OUT1

2 input /output IN2/OUT2

<tx> f the output must be active for a period of time (TIME), then the parameter defines time for the time mode. This parameter is configured in the range of 1 to 3600.

Examples of commands:

Command	Description
<b>TASK IN1 LO RELAY1 ON</b>	After LO status appears in IN1 input, the OUT1 output switches on.
<b>TASK IN1 HI RELAY2 OFF</b>	After HI status appears in IN2 input, the OUT2 output switches off.
<b>TASK IN2 LO RELAY1 TIME 30</b>	After LO status appears in IN2 input, the OUT1 output status changes for 30 sec.
<b>TASK IN1 HI RELAY2 TIME 10</b>	After HI status appears in IN1 input, the OUT2 output status changes for 10 sec.
<b>TASK IN1 LO NONE</b>	After LO status appears in IN1 input, no GRM-10 reaction.
<b>TASK IN2 HI NONE</b>	After HI status appears in IN2 input, no GRM-10 reaction.
<b>TASK IN1 LO NONE MESSAGE WODA W POMIESZCZENIU</b>	After LO status appears in IN1 input, the „WODA W POMIESZCZENIU” message is sent.
<b>TASK IN1 HI NONE MESSAGE WODA WYPOMPOWANA</b>	After HI status appears in IN1 input, only the „WODA WYPOMPOWANA” message is sent.
<b>TASK IN1 LO RELAY1 ON MESSAGE STAN NISKI NA IN1</b>	After LO status appears in IN1 input, the OUT1 output switches on and a text message „STAN NISKI NA IN1” is sent.
<b>TASK IN2 LO RELAY2 TIME 60 MESSAGE ODLICZANIE CZASU</b>	After LO status appears in IN2 input, the OUT2 output changes for time t=60 sec. + a text message „ODLICZANIE CZASU” is sent.

## WARRANTY CARD

There is 24 months guarantee on the product

- ZAMEL Sp. z o.o. assures 24 months guarantee for the product.
- The manufacturer's guarantee does not cover any of the following actions:
  - mechanical damage during transport, loading / unloading or under other circumstances,
  - damage caused by incorrect product mounting or misuse,
  - damage caused by unauthorised modifications made by the PURCHASER or any third parties to the product or any other devices needed for the product functioning,
  - damage caused by Act of God or any other incidents independent of the manufacturer - ZAMEL Sp z o.o.
  - power source (batteries) in the device during sale (if any).
- The PURCHASER shall lay any claims in writing to the dealer or ZAMEL Sp. z o.o.
- ZAMEL Sp. z o.o. is liable for processing any claim according to current Polish legislation.
- ZAMEL Sp. z o.o. shall process the claim at its own discretion: product repair, replacement or money return.
- The manufacturer's guarantee is valid in the Republic of Poland.
- The PURCHASER's statutory rights in any applicable legislation whether against the retailer arising from the purchase contract or otherwise are not affected by this warranty.

Salesman stamp and signature, date of sale

## EF COMMAND

he command allows to configure text messages used to control EXTA FREE system wireless receivers and selected LED lighting fittings and controllers of intelligent lighting Ledix series system. The control is possible only when the GRM-10 device is connected with the RXM-01 translator (www.extafree.pl) by means of RS-485 bus.

**EF <address> <K1..Kn> <control text message content>**

<address> This parameter defines the RXM-01 translator address on MODBUS bus that the specific control command refers to. This parameter is configured in the range of 1 to 247.

<K1...Kn> The parameter defines the the number of push-buttons used to control EXTA FREE system receivers (possible numbers from 1 to 127). In one EF command up to 15 numbers of push-buttons can be configured. The push-buttons refer to a single control text message, for example in order to adjust several EXTA FREE system receivers by means of one text message.

<control text message content> The control command is adjusted by a user, the maximum number of signs is 32.

The user can define 127 independent control commands. The commands can not be repeated - if the command including a given content already exists, the GRM-10 device will display ERROR as a response to this configuration text message. A similar message is given by the PC application. The control commands generated by the EF command are grouped in a table. Commands generated as text messages are placed at the end of the table and from a PC at the beginning. It should be helpful for the user to add new commands by means of a telephone. The maximum number of EF commands that can be configured is 127.

The EF commands table can be completely deleted by sending a **EF RESET** command in the configuration mode.

The user can configure the EF command in such a way as to adjust simultaneously several (up to 15) EXTA FREE / LEDIX system receivers, which are located within RXM-01 range. It is very important in creation the so called scenes or, for example, in the control of central roller blind drives. The next push-buttons codes are sent in a "one by one" sequence with an interval of 1 second.

The cooperation of GRM-10 device with RXM-01 device is fully described in the **EXTA FREE CONTROL section by means of GSM**.

Examples of commands:

Command	Description
<b>EF 1 K1 OSWIETLENIE ON</b>	A text message with the content 'OSWIETLENIE ON' – results in sending a code by RXM-01 with the 0x0,1 address to press a 0x0,1 push-button. The result is that the receiver with this code is switched on.
<b>EF 1 K2 OSWIETLENIE OFF</b>	A text message with the content 'OSWIETLENIE OFF' – results in sending a code by RXM-01 with the 0x0,1 address to press a 0x0,2 push-button. The result is that the receiver with this code is switched off.
<b>EF 2 K3 SCHODY ON</b>	A text message with the content 'SCHODY ON' – results in sending a code by RXM-01 with the 0x0,2 address to press a 0x0,3 push-button. The result is that the receiver with this code is switched on.
<b>EF 2 K4 SCHODY OFF</b>	A text message with the content 'SCHODY OFF' – results in sending a code by RXM-01 with the 0x0,2 address to press a 0x0,4 push-button. The result is that the receiver with this code is switched on.
<b>EF 1 K3 ROLETY GORA</b>	A text message with the content 'ROLETY GORA' – results in sending a code by RXM-01 with the 0x0,1 address to press a 0x0,3 push-button. It results in opening the roller blind connected to SRP-02 with this code.
<b>EF 1 K4 ROLETY DOL</b>	A text message with the content 'ROLETY DOL' – results in sending a code by RXM-01 with the 0x0,1 address to press a 0x0,4 push-button. It results in closing the roller blind connected to SRP-02 with this code.
<b>EF 1 K1 K3 ALL ON (example of a stage)</b>	A text message with the content 'ALL ON' – results in switching on the light and opening the roller blinds - it is equivalent to sending codes by RXM-01 with the 0x0,1 address to receivers to press 0x0,1 and 0x0,3 push-buttons.

## OUTPUT CONTROL COMMANDS

Command	Description	Przykład
RELAY1 ON	Switch on OUT1 output	-
RELAY1 OFF	Switch off OUT1 output	-
RELAY2 ON	Switch on OUT2 output	-
RELAY2 OFF	Switch off OUT2 output	-
RELAY1 TIME	Change of OUT1 output status for time t1[s] adjusted during configuration	-
RELAY2 TIME	Change of OUT2 output status for time t2[s] adjusted during configuration	-
RELAY1 TIME <t>	Change of OUT1 output status for time <t> given in the control command. <t> parameter is adjusted in the range of 1 .... 3600.	RELAY1 TIME 60
RELAY2 TIME <t>	Change of OUT2 output status for time <t> given in the control command. <t> parameter is adjusted in the range of 1 .... 3600.	RELAY2 TIME 10
GATE	Output control in the gate mode. Switching on the OUT1 output for the default time <TIME1> and the OUT2 output for the default time <TIME2>. If the AUTO parameter is adjusted for the gate mode, the pulse to close the gate is automatically generated after time <TIME3> is finished. Times <TIME1>, <TIME2> and <TIME3> are adjusted during the gate mode configuration.	-
GATE <t1> <t2>	Output control in the gate mode. Switching on the OUT1 output for time <t1> and the OUT2 output for time <t2>. The <t1> parameter is adjusted in the range of 0 .... 10 and the <t2> parameter in the range of 0 .... 360. If the AUTO parameter is adjusted for the gate mode, the pulse to close the gate is automatically generated after time <TIME3> is finished. Time <TIME3> is adjusted during the gate mode configuration.	GATE 2 120
STATUS	Checking the output/input status (section: GRM-10 DEVICE REPLY TO STATUS COMMAND)	-

**CAUTION: If the PASS parameter (password to a text message) was adjusted during configuration in the CONFIG command, then the adjusted password must be typed during the text message control at the beginning.**

Example: (adjusted password „Zamel”):

Zamel RELAY1 ON; Zamel RELAY2 OFF; Zamel RELAY1 TIME 10; Zamel GATE; Zamel GATE 2 120

## GRM-10 DEVICE REPLY TO STATUS COMMAND

A full GRM-10 device reply to STATUS command:

**RELAY1** <ON/OFF - current OUT1 output status> **TIME** <Time left to measure for OUT1 output>  
**RELAY2** <ON/OFF - current OUT2 output status> **TIME** <Time left to measure for OUT2 output>  
**IN1** <LO/HI - current IN1 input status> **IN2** <LO/HI - current IN2 input status>

Example:

RELAY1 ON TIME 30 RELAY2 OFF TIME 100 IN1 LO IN2 HI

If times for OUT1/OUT2 outputs are currently not measured, the reply to the STATUS command is:

**RELAY1** <ON/OFF - current OUT1 status> **RELAY2** <ON/OFF - current OUT2 status>  
**IN1** <LO/HI - current IN1 status> **IN2** <LO/HI - current IN2 status>

or

**RELAY1** <ON/OFF - current OUT1 status> **TIME** <0> **RELAY2** <ON/OFF - current OUT2 status> **TIME** <0>  
**IN1** <LO/HI - current IN1 status> **IN2** <LO/HI - current IN2 status>

Example:

RELAY 1 ON RELAY 2 OFF IN1LO IN2HI

RELAY 1 ON TIME 0 RELAY 2 OFF TIME 0 IN1LO IN2HI


## CONTROL OF EXTA FREE SYSEM RECEIVERS

The GRM-10 device, by receiving certain commands (text messages), can control the wireless EXTA FREE system receivers. It is necessary to connect the GRM-10 device with RXM-01 translator using the RS-485 interface. The GRM-10 device has such a default setting that allows for a direct cooperation with RXM-01. If the transmission parameters change is necessary (standard, transmission rate, parity) between GRM-10 and RXM-01 use the **MODBUSCONFIG** command.

**CAUTION:** The transmission line between the GRM-10 device and the RXM-01 device is a two-wire shielded twisted-pair cable (it is recommended to earth in a single point the shield line). The resistors (terminators) of 120 Ohm should be placed at the beginning and at the end of the line.


**he following points should also be carried out:**

1. Connect the RXM-01 device to a PC. An appropriate "adapter" RS232 - RS485 or USB - 485 (depending on the computers' output) should be used.
2. Using the PC application that is dedicated to configure the GRM-10 device, particular control commands and responding number of push-buttons shall be defined in the EXTA FREE section. For each command, specify The RXM-01 address for the MODBUS bus should be defined. The default address is 0x01. The address is important for a larger number of RXM-01 operating independently on a single object.
3. Following the description of the PC, add (programme) particular push-buttons sent by the RXM-01 device to appropriate EXTA FREE system receivers.
4. After programming the receivers, use the PC application to check their appropriateness.
5. Adjust the GRM-10 device into a normal operation mode and check the operation by sending defined control commands to the GRM-10 device (the proper communication between RXM-01 and GRM-10 after sending a control command is indicated by the LED diode RS485, it switches on).

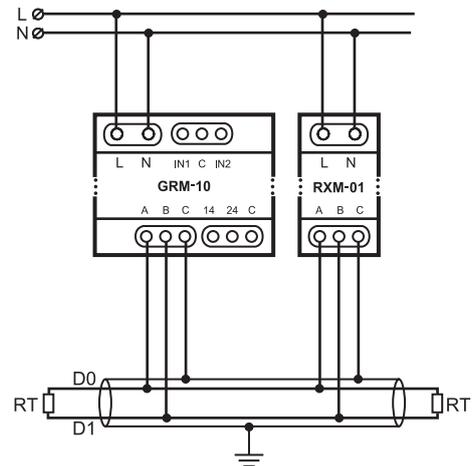

If in the EXTA FREE control command several push-buttons are defined, the codes are sent to RXM-01 device with a defined address in a sequence one after another and with an interval of 1 sec.

Example: **EF K1 K2 K3 SALON OFF**

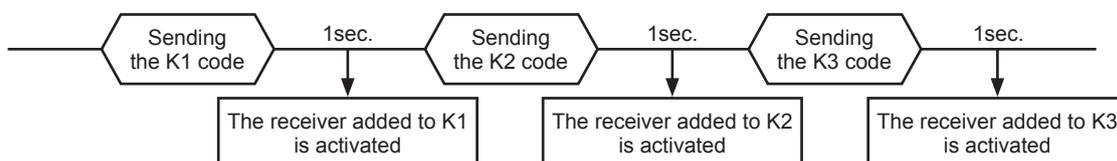

## REMARKS

- Due to the queuing (prioritisation) of text messages in the GSM network, some delays related to sending the control command and its realisation are possible (for example the adjustment of the GRM-10 outputs or EXTA FREE receivers). The delays can be from several to tens of seconds.
- Due to the representation of the text message content, the configuration and control of the GRM-10 device is not possible by means of "SMS gateways" that are provided by the GSM operators.
- In case of operators using other resources of the GSM network, it is not possible to choose the operator manually. The logging procedure is automatical - the operator with the strongest signal is chosen. Successful login of the GRM-10 device to the GSM network is indicated by a flashing LED GSM STATUS diode with a frequency of 1/s. Make sure that the device is mounted in areas with the GSM network reception. Operation on the reception border can have a negative influence on a proper operation of the GRM-10 device and other devices in cooperation.
- It is important to switch off the PIN code or adjust the code to 1111 before installing the SIM card in the GRM-10 device.
- It is recommended to switch off the VOICEMAIL service on the card installed in the GRM-10 DEVICE.