 
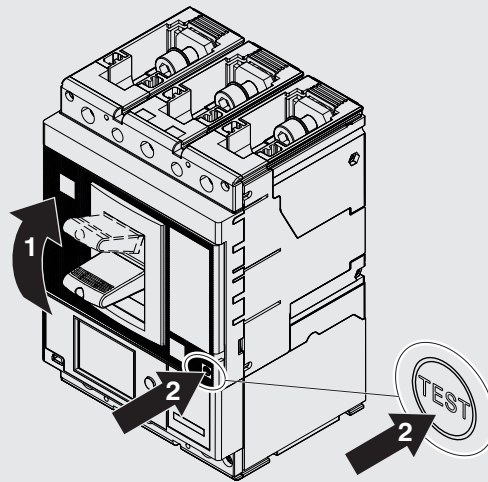
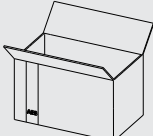
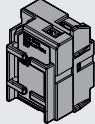
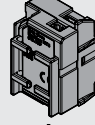
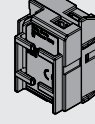



SACE Tmax XT

Ekip Com Modbus RTU, Ekip Comd Modbus RTU Stand-Alone

XT5

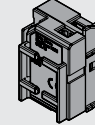

		Ekip Com Modbus RTU STA F/P	Ekip Com Modbus RTU STA W	Ekip Com Modbus RTU F/P	Ekip Com Modbus RTU W
A		1			
B			1		
C				1	
D					1

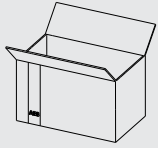 

Ekip Com
Modbus
RTU STA
F/P

Ekip Com
Modbus
RTU STA
W

Ekip Com
Modbus
RTU
F/P

Ekip Com
Modbus
RTU
W

E



1


F



1

G

 
JR2



1

H

 JT2



1

I



 
 
1

1

1

F 2



F

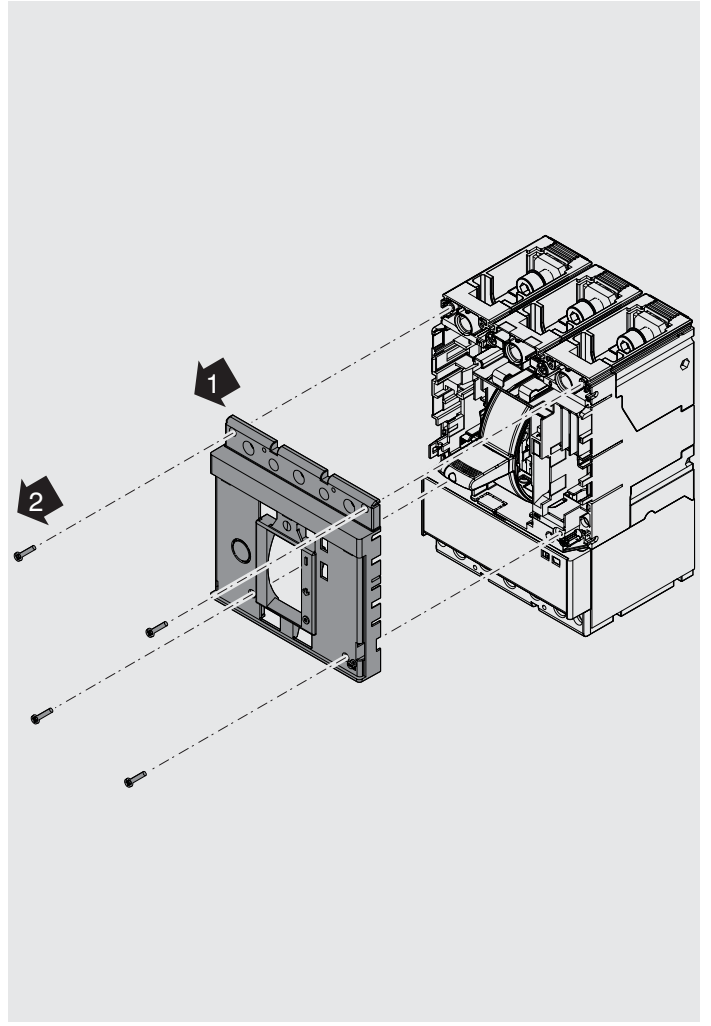
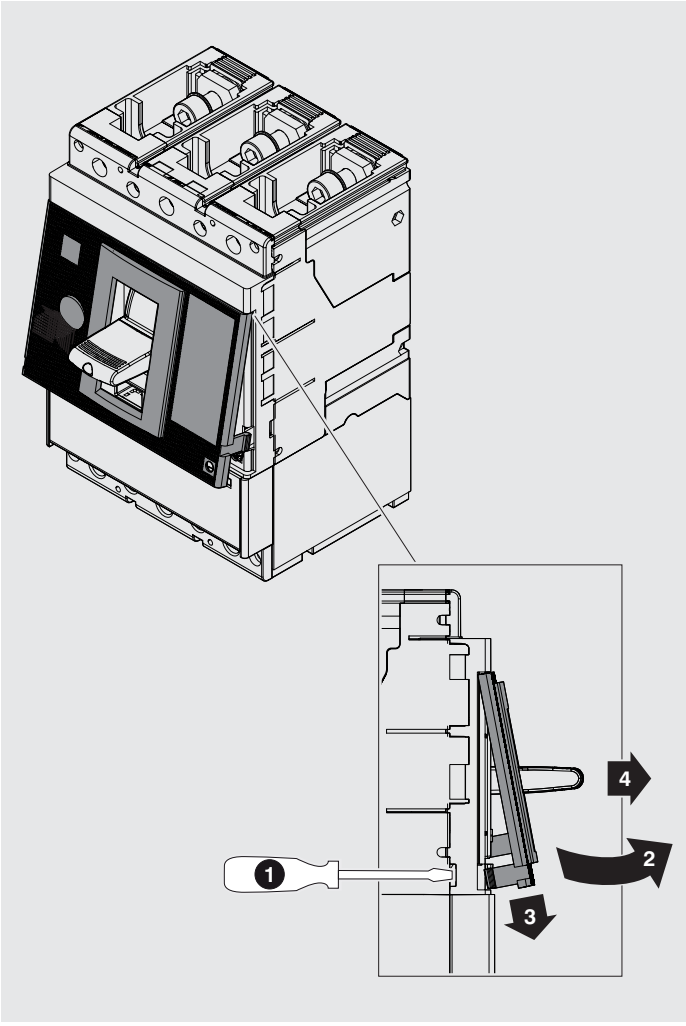


3


F 4

    F

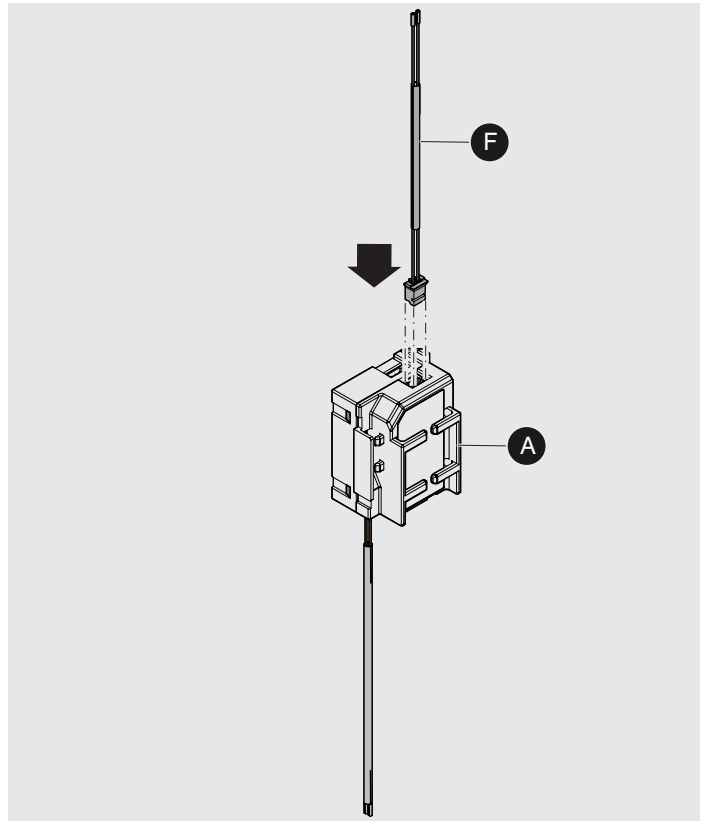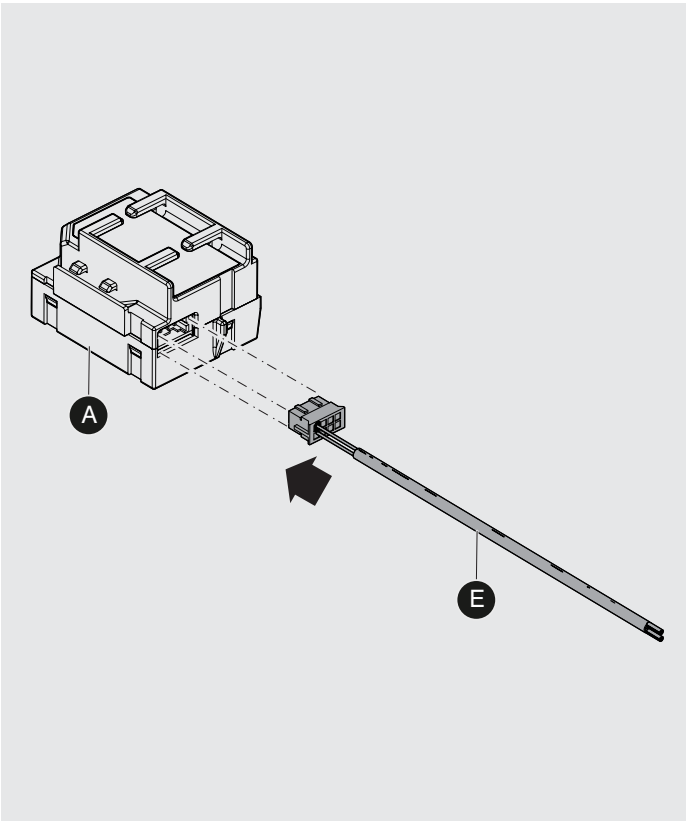


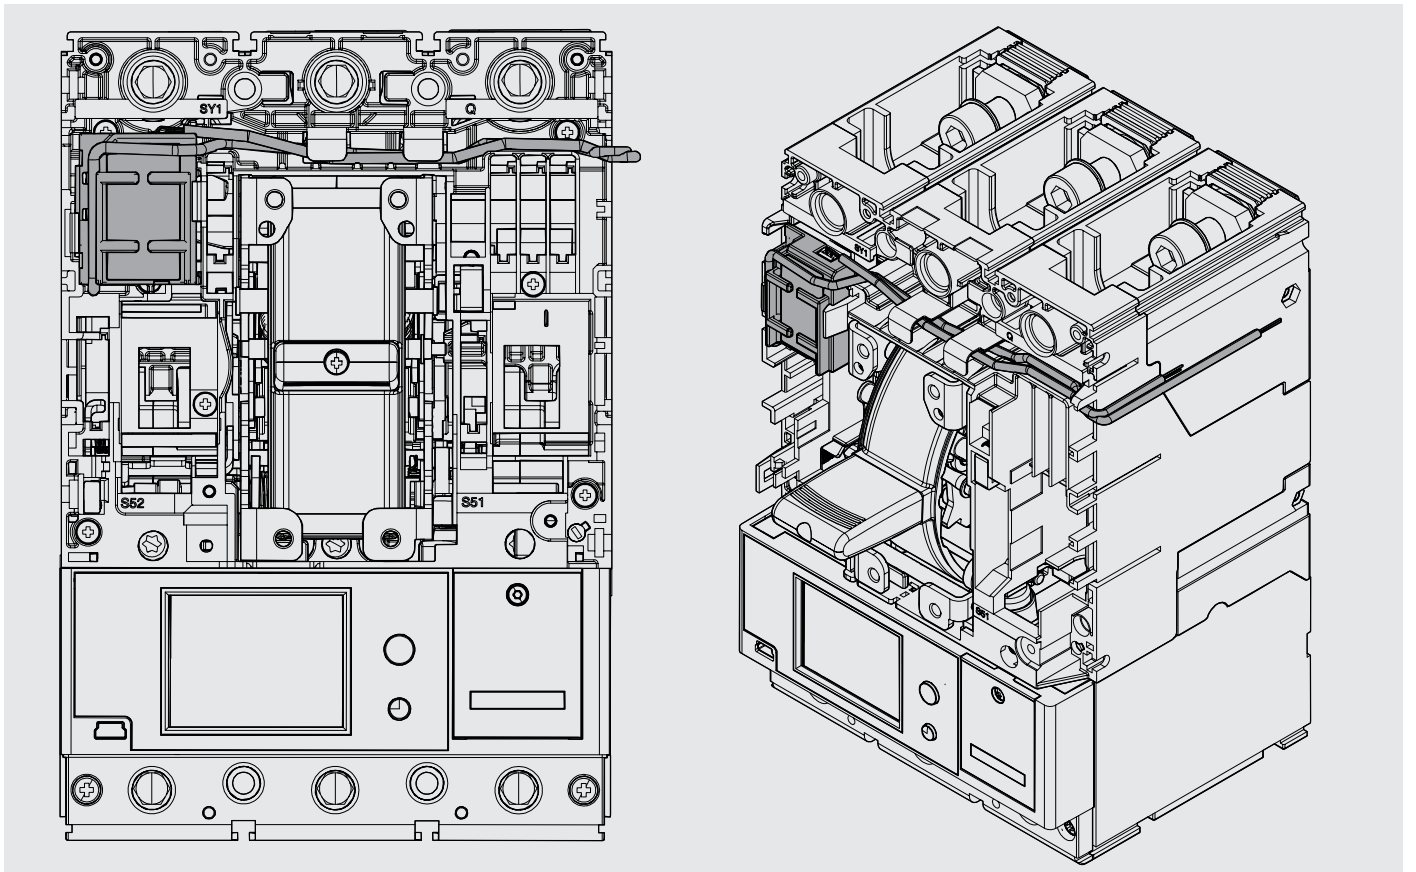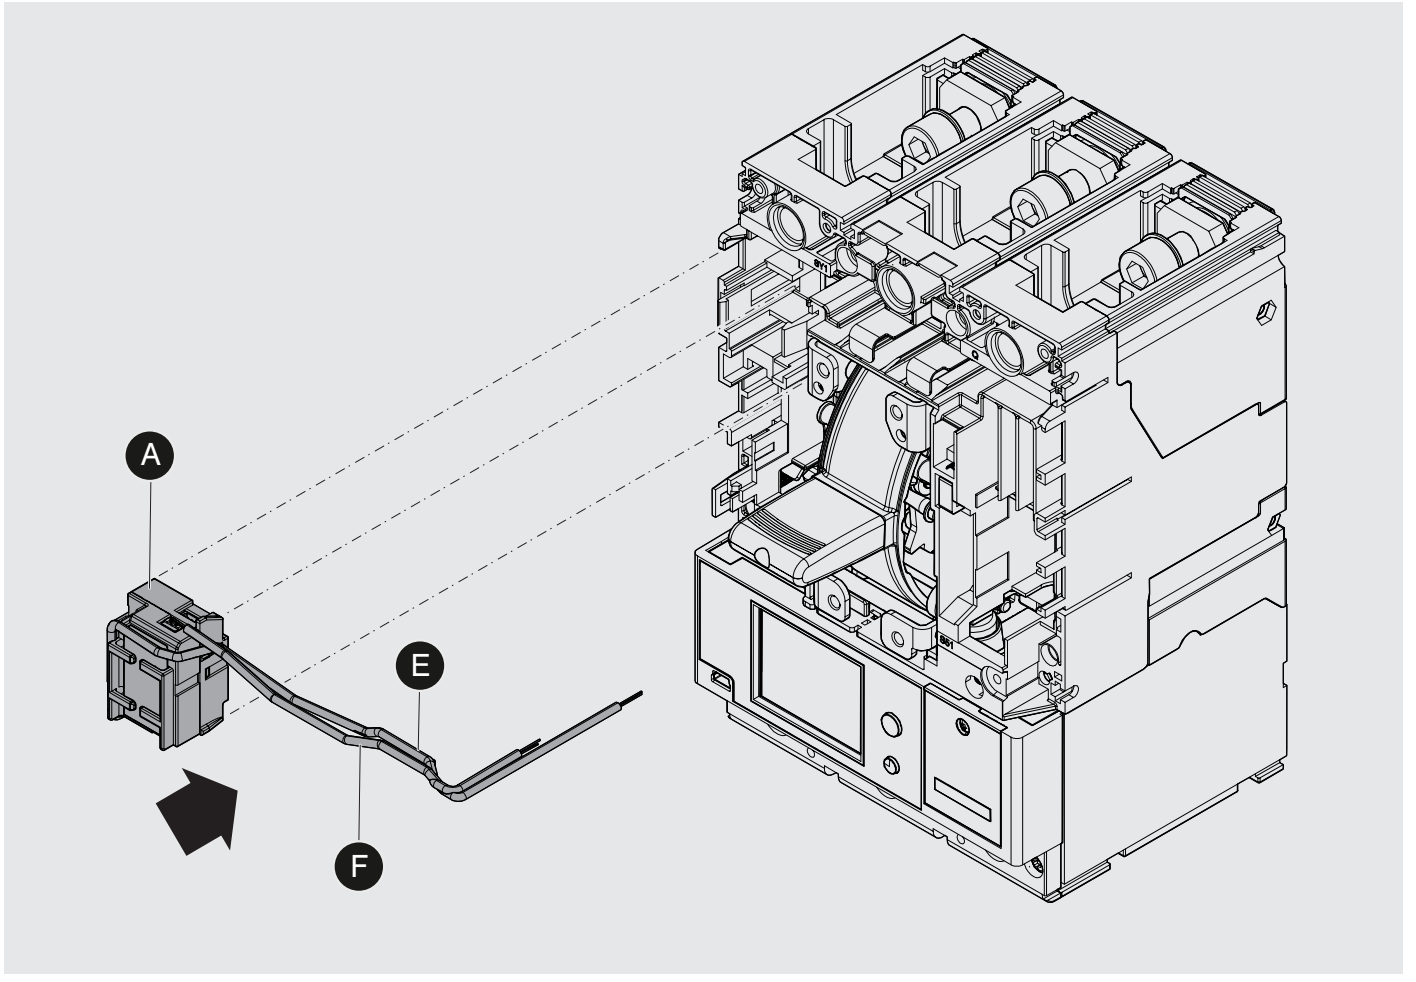

7

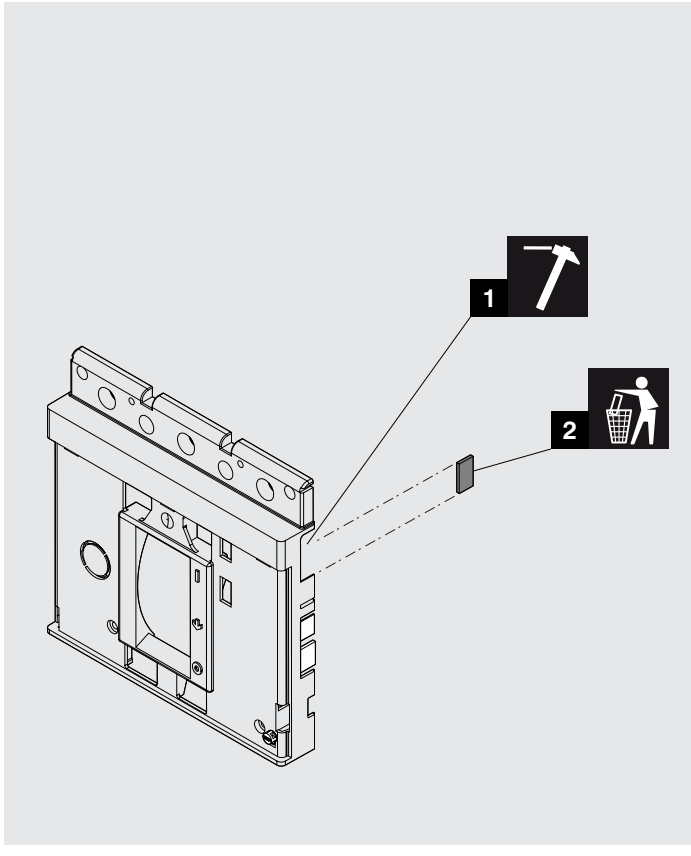 


F 8

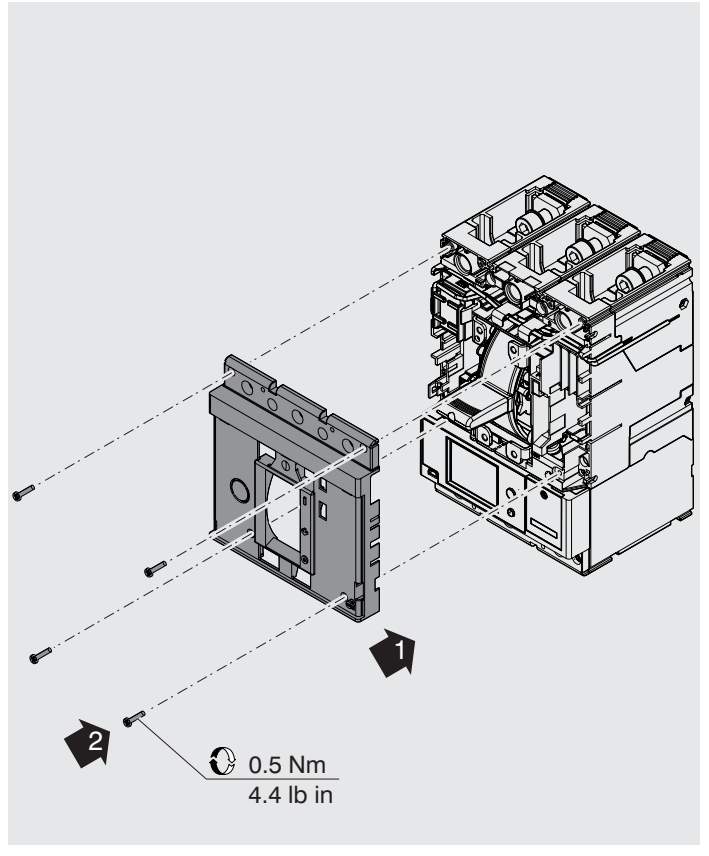 


F



 
9

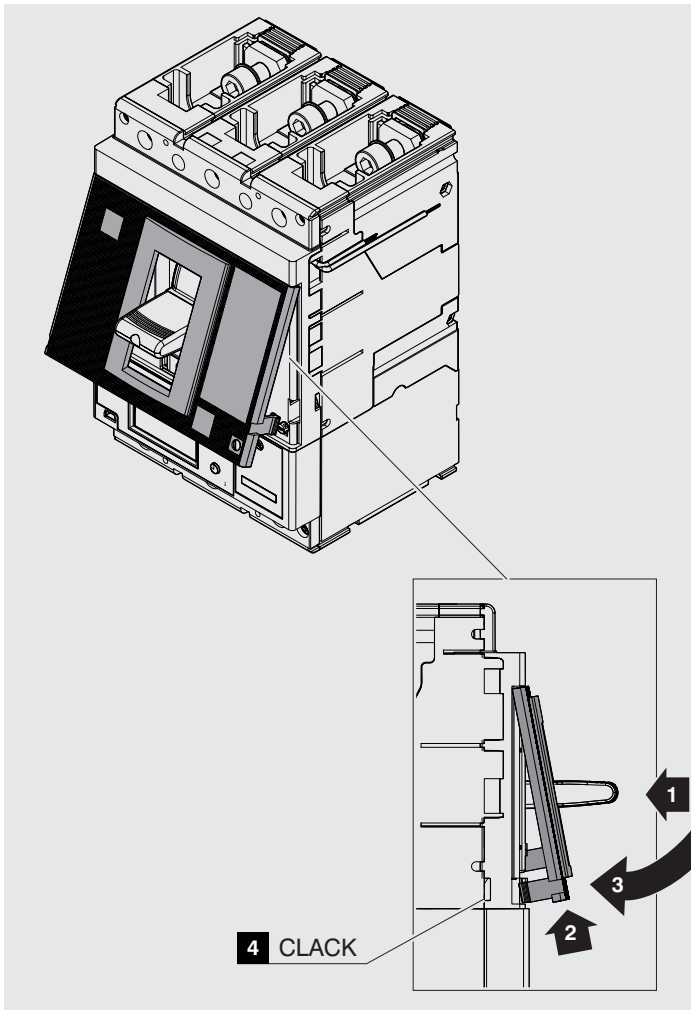


F 10

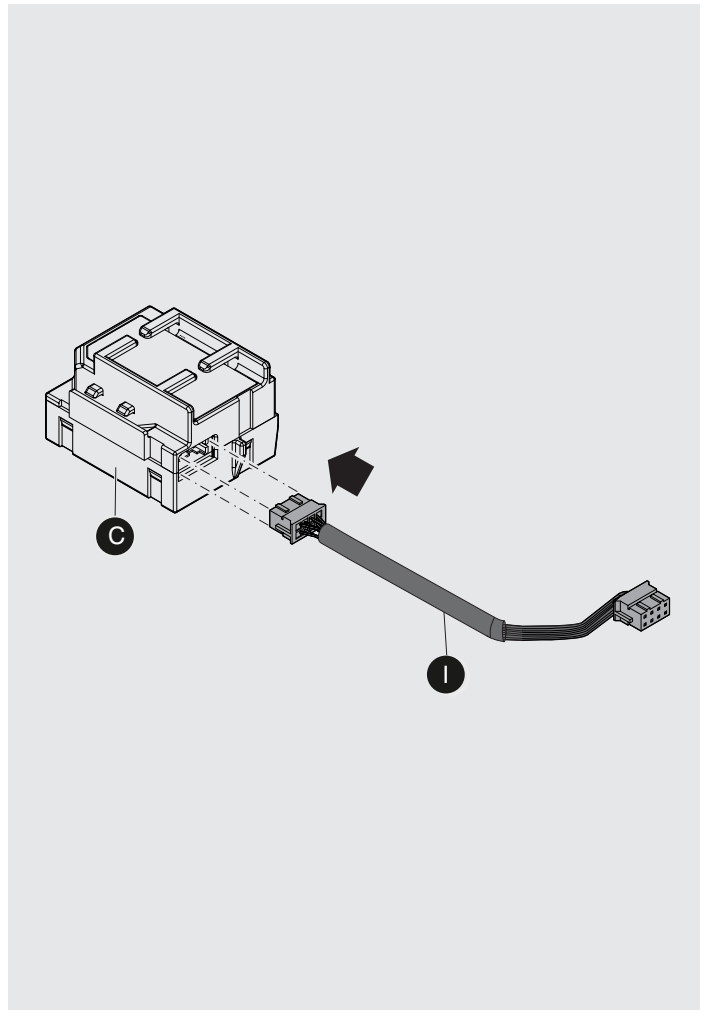 

F

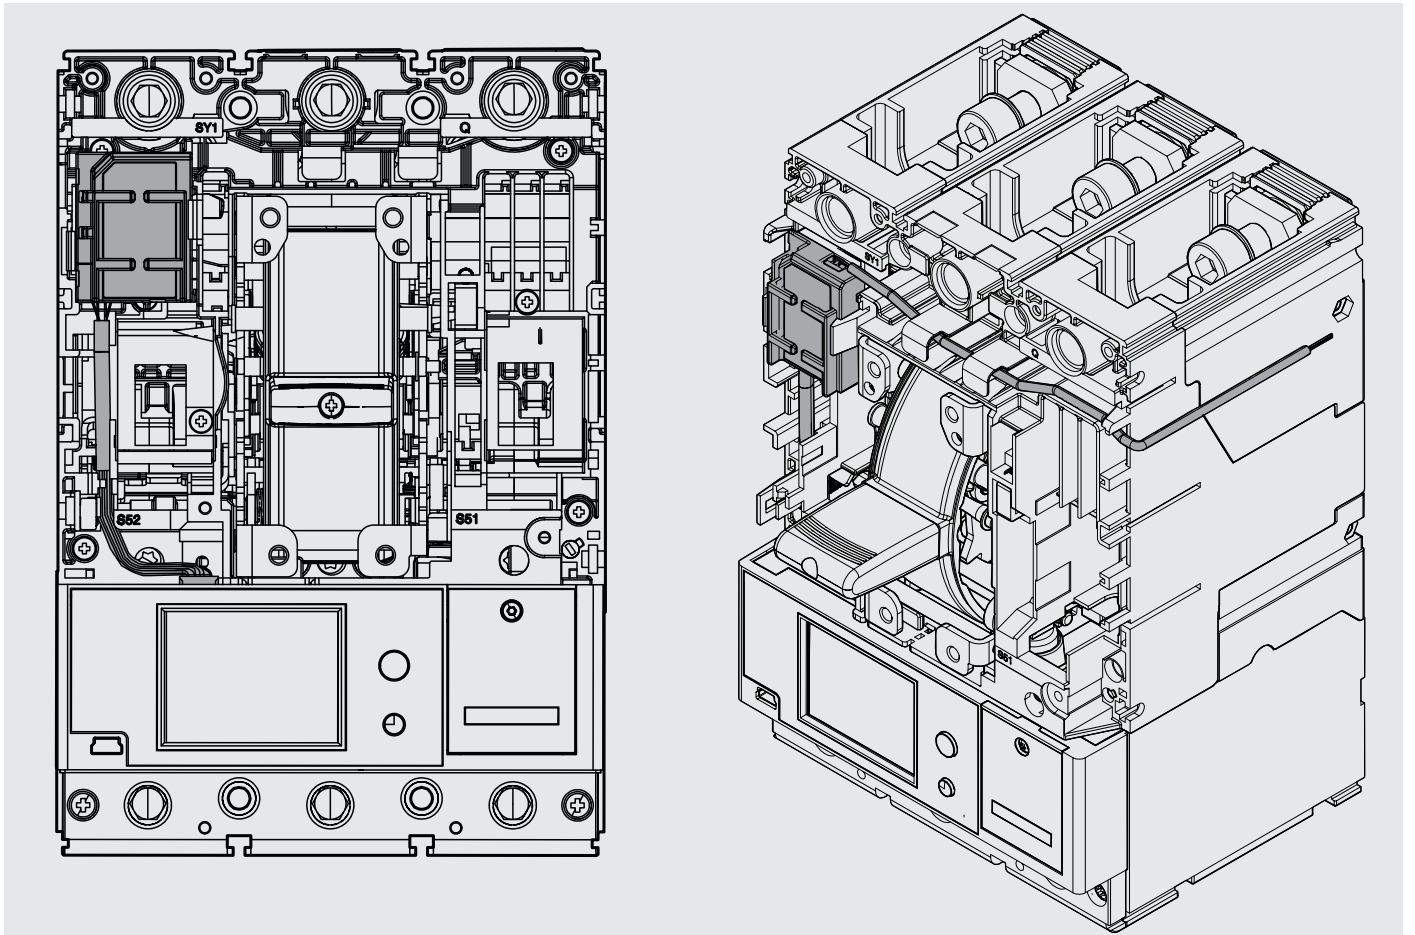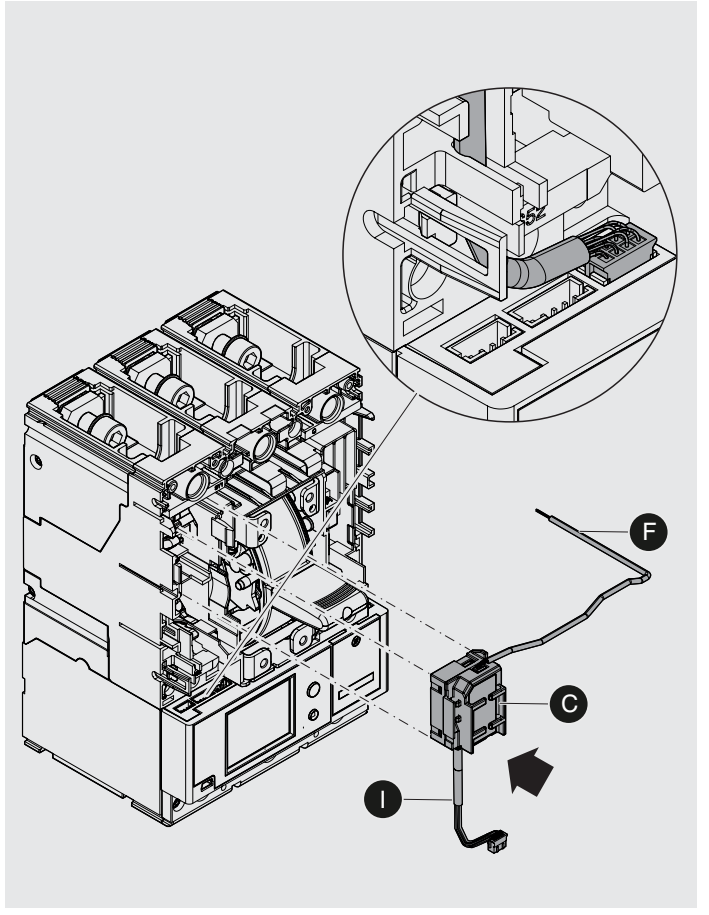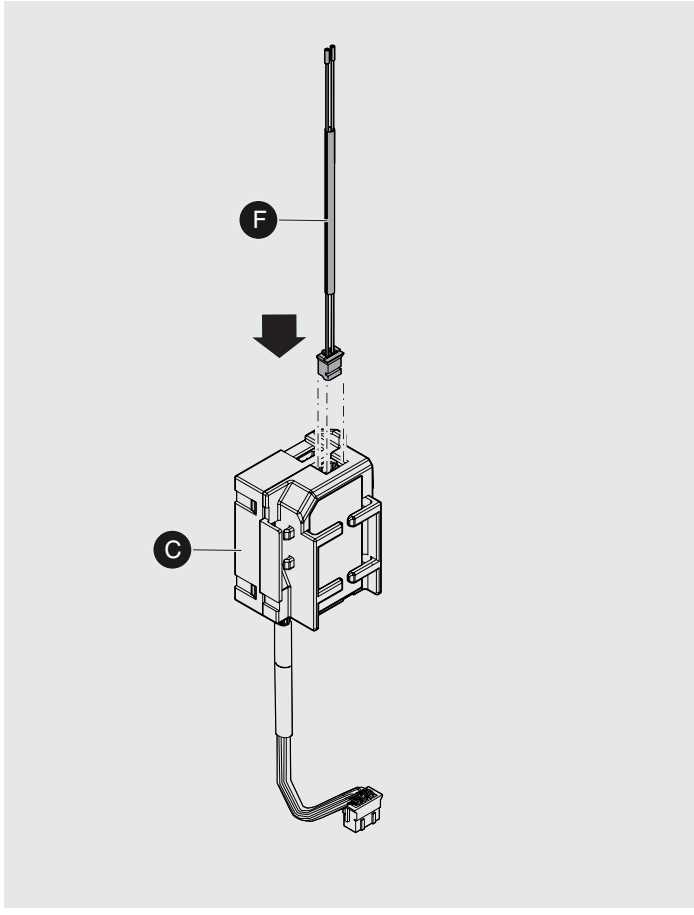   


14

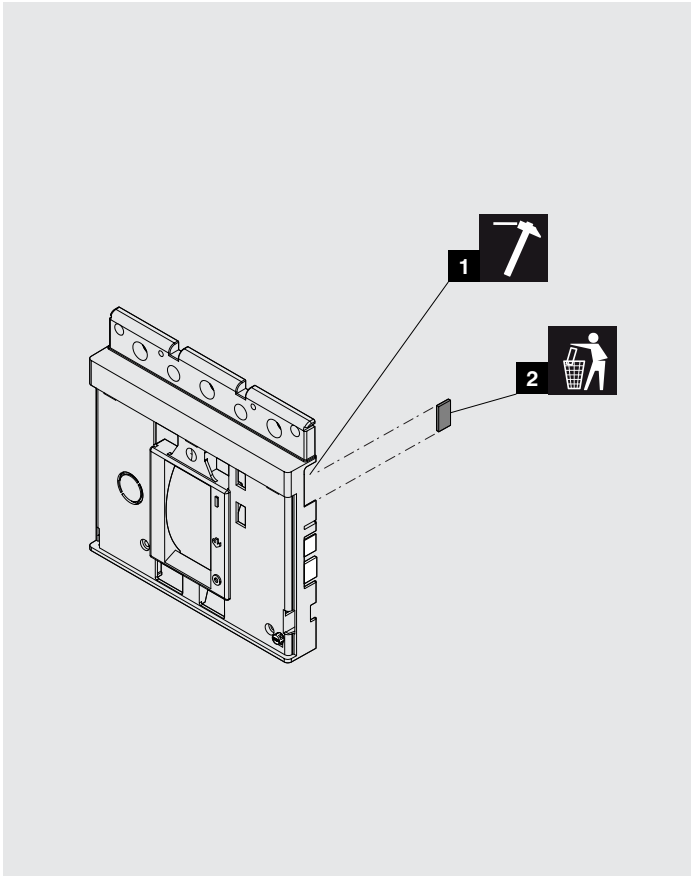 


F 15

 F

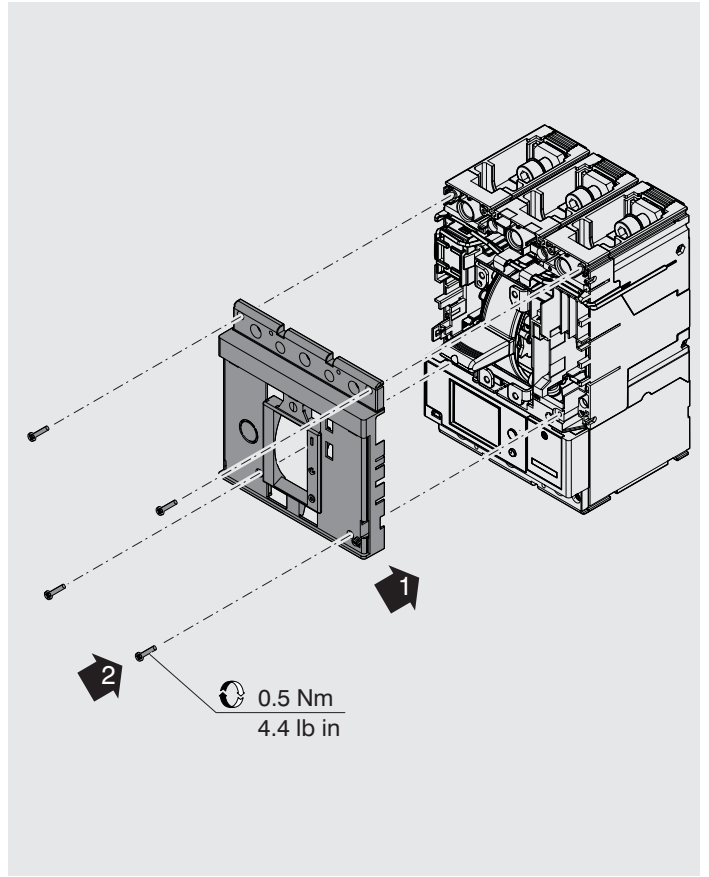






16

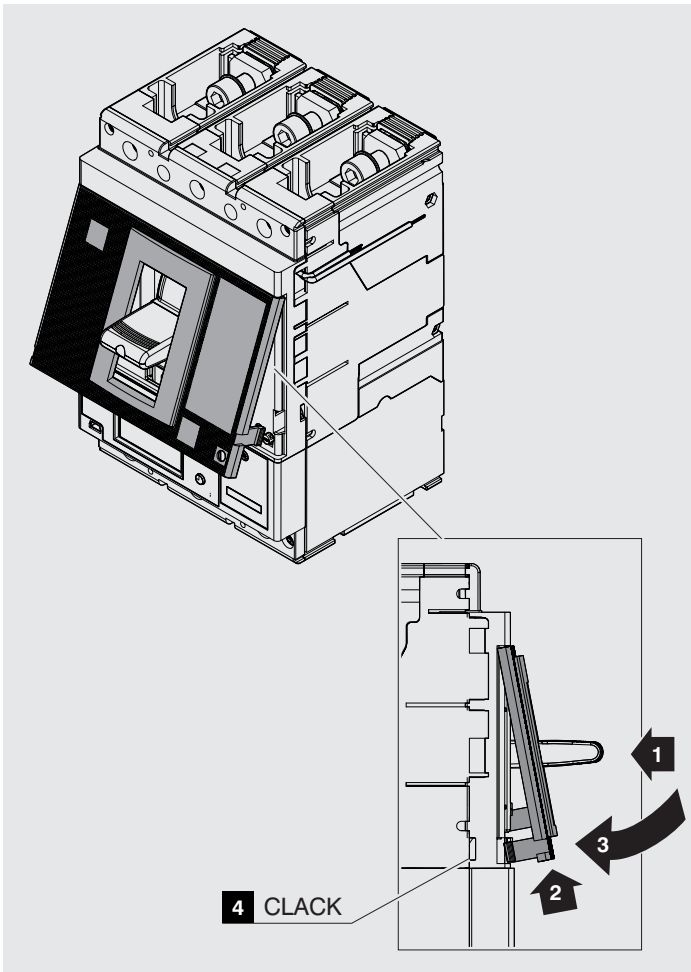 


F 17

     F

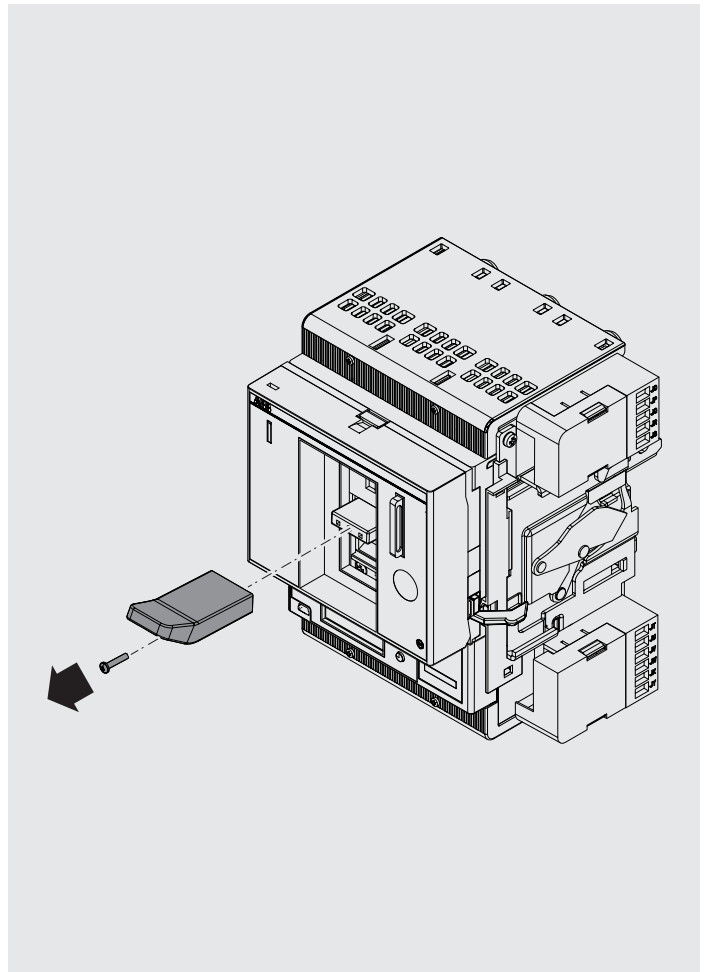

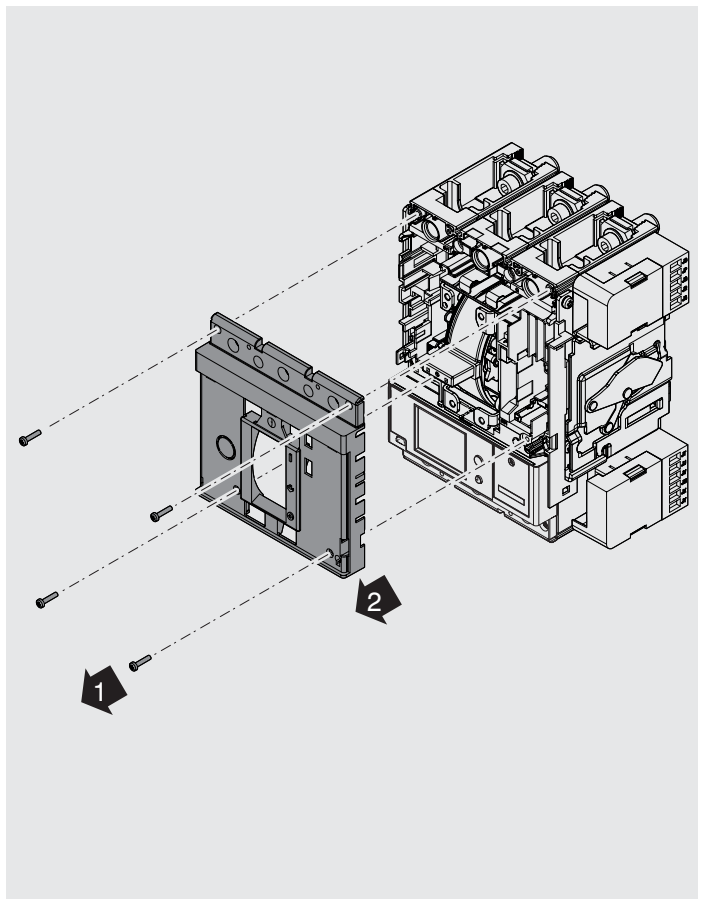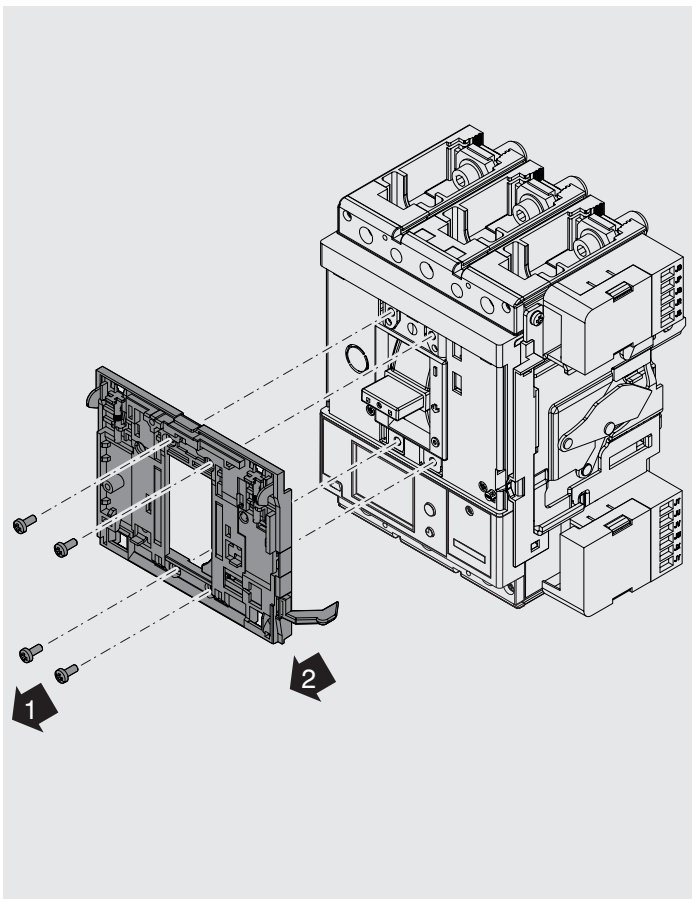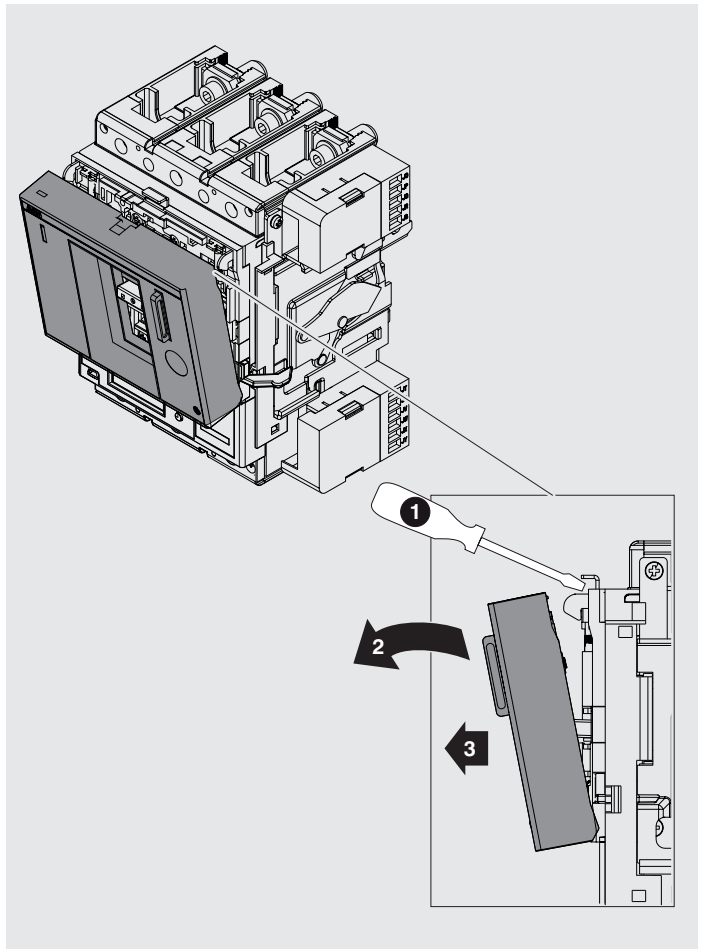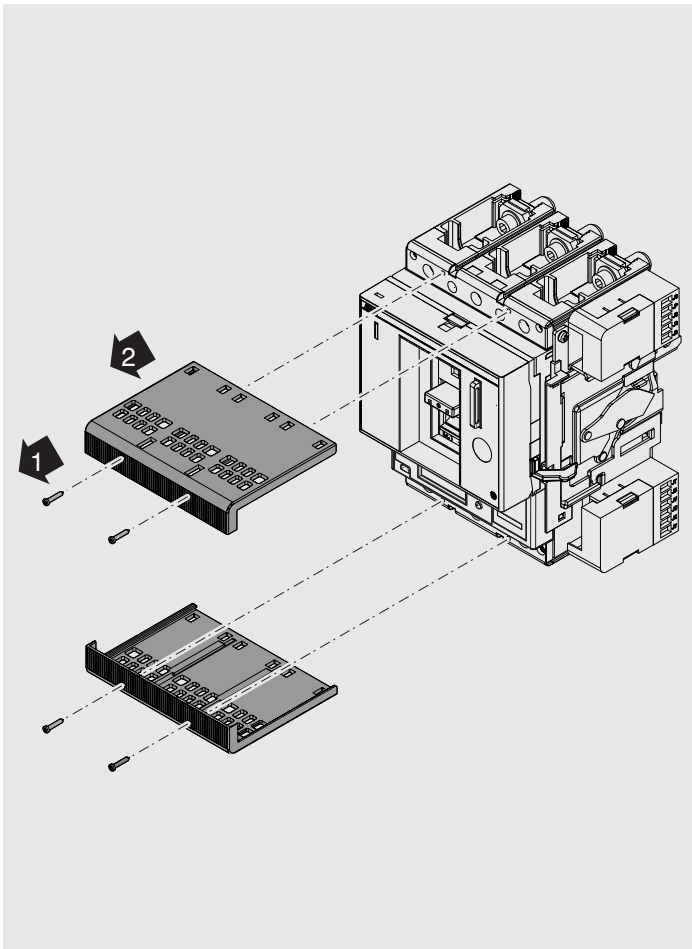


22

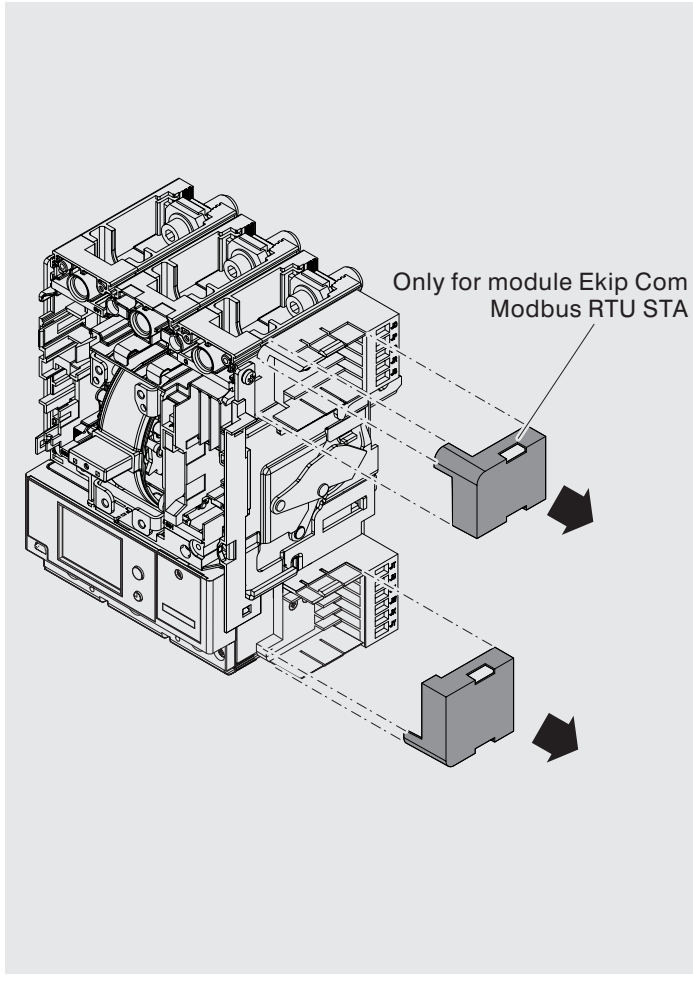 


W 23

 Only for Ekip Com modbus RTU STA W

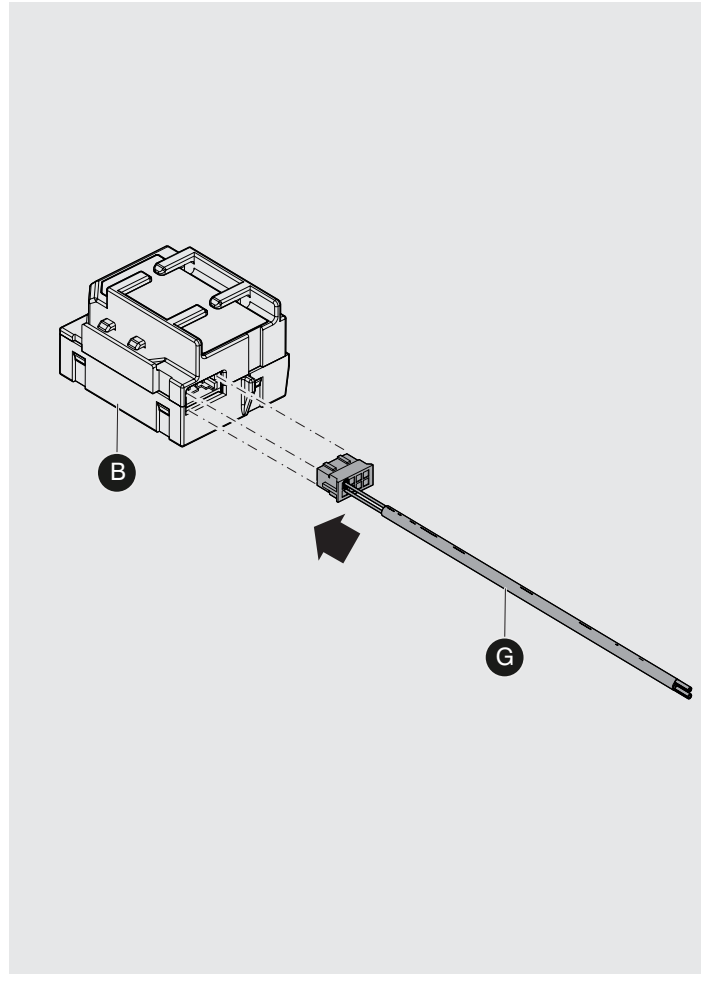




24




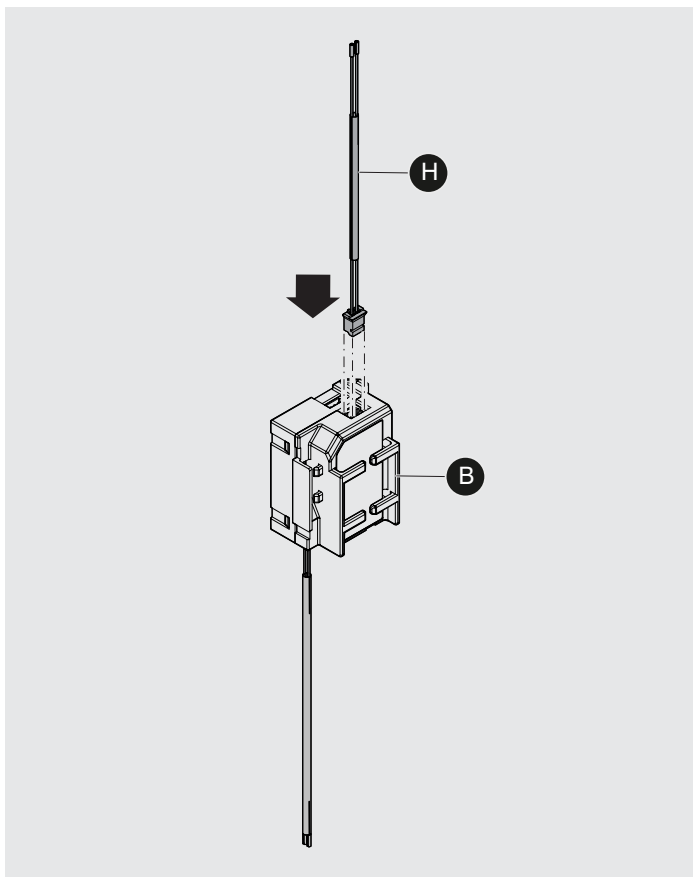 





W 25

          W

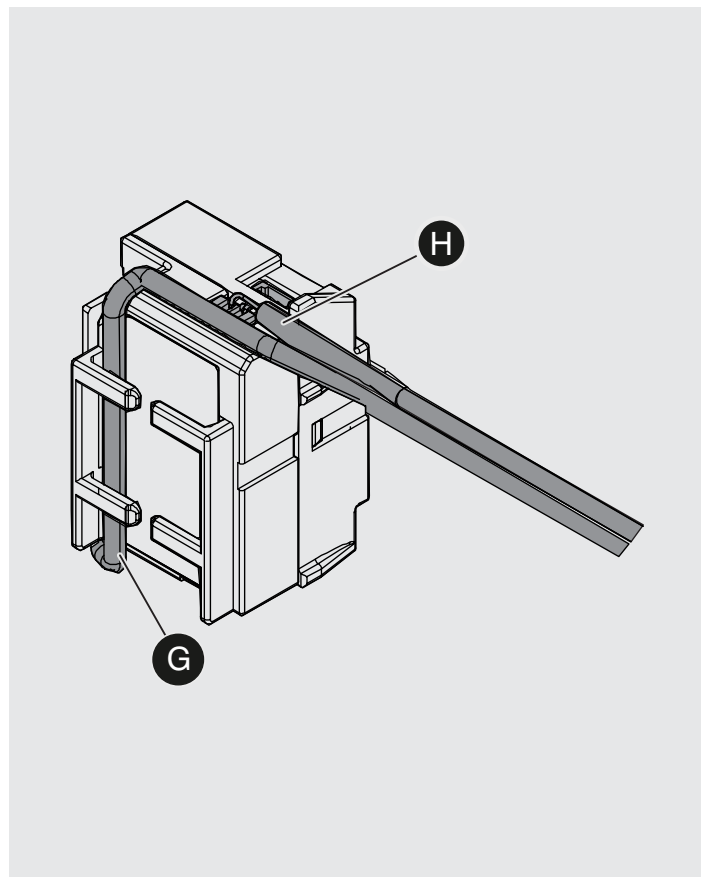

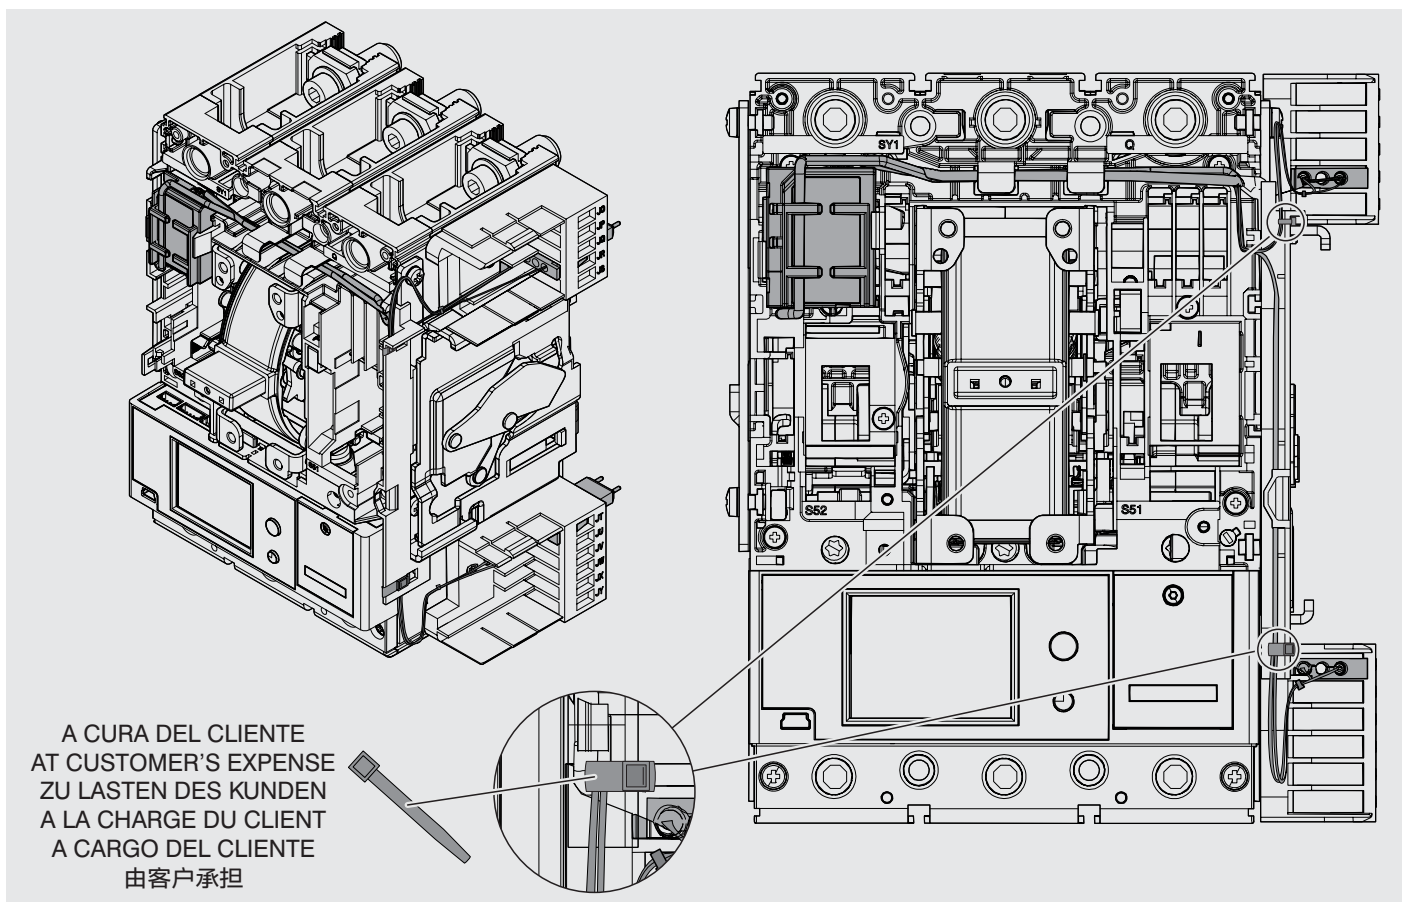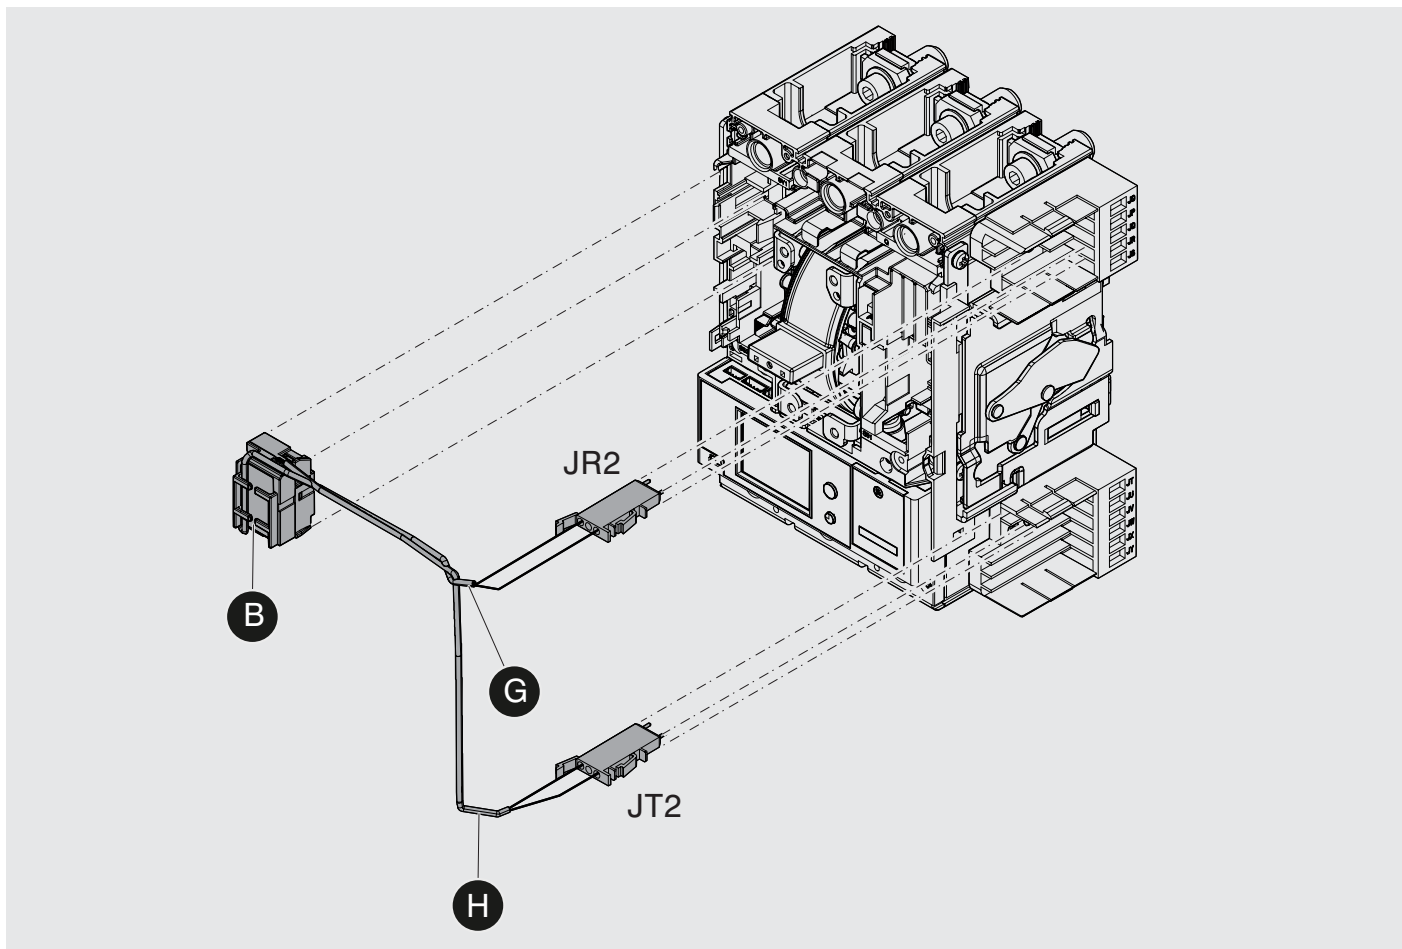

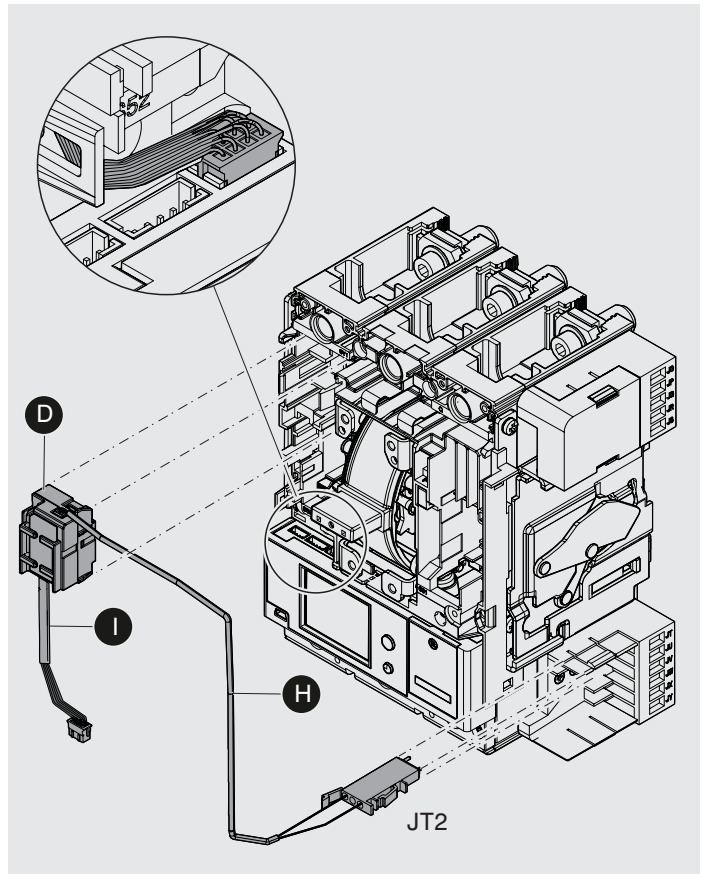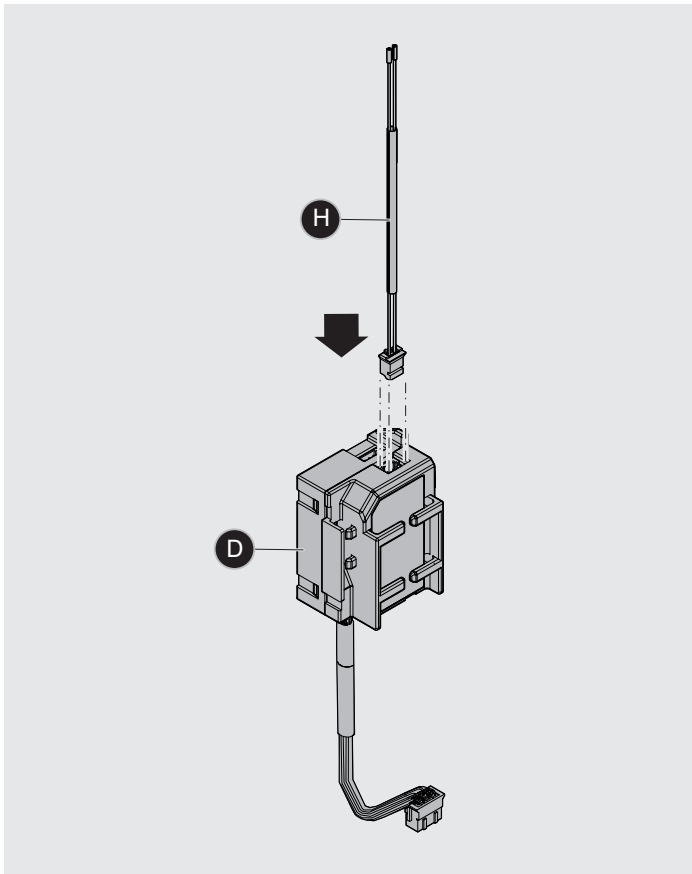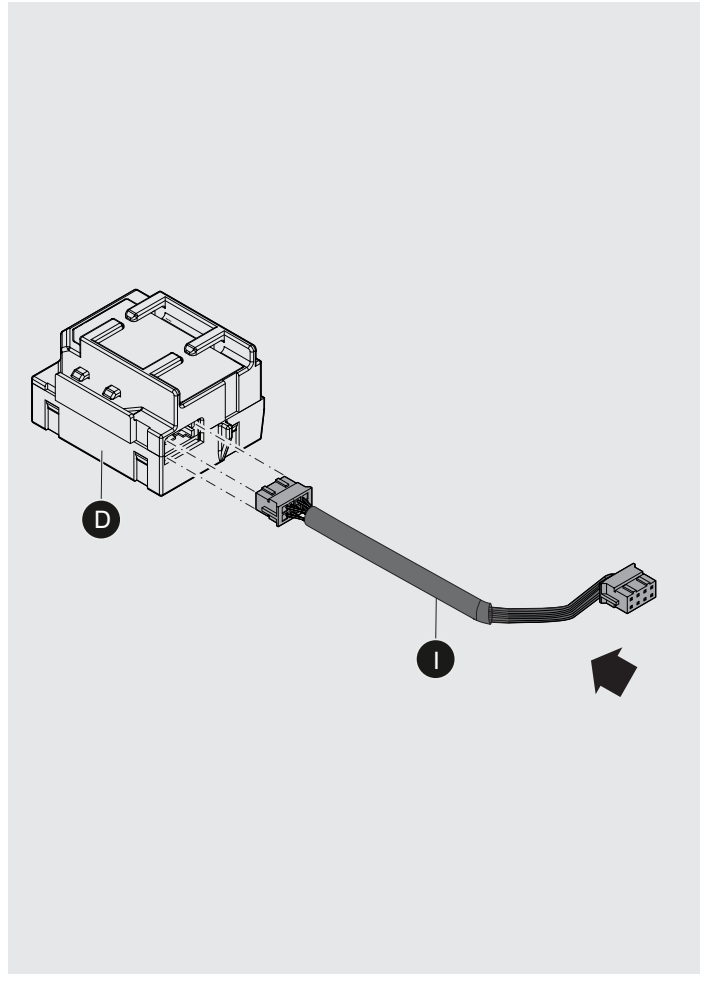
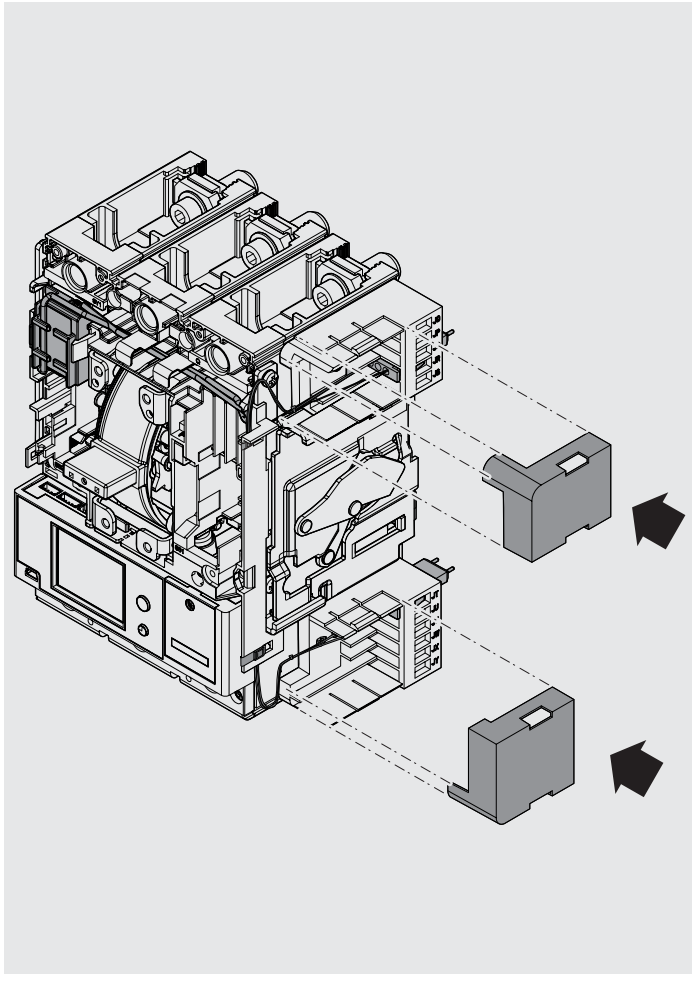


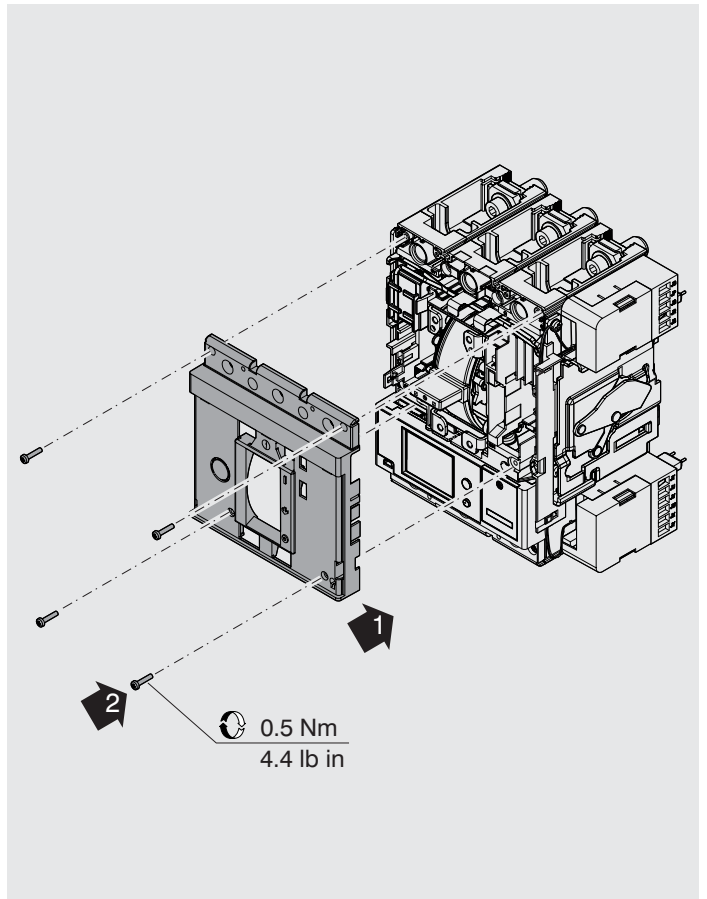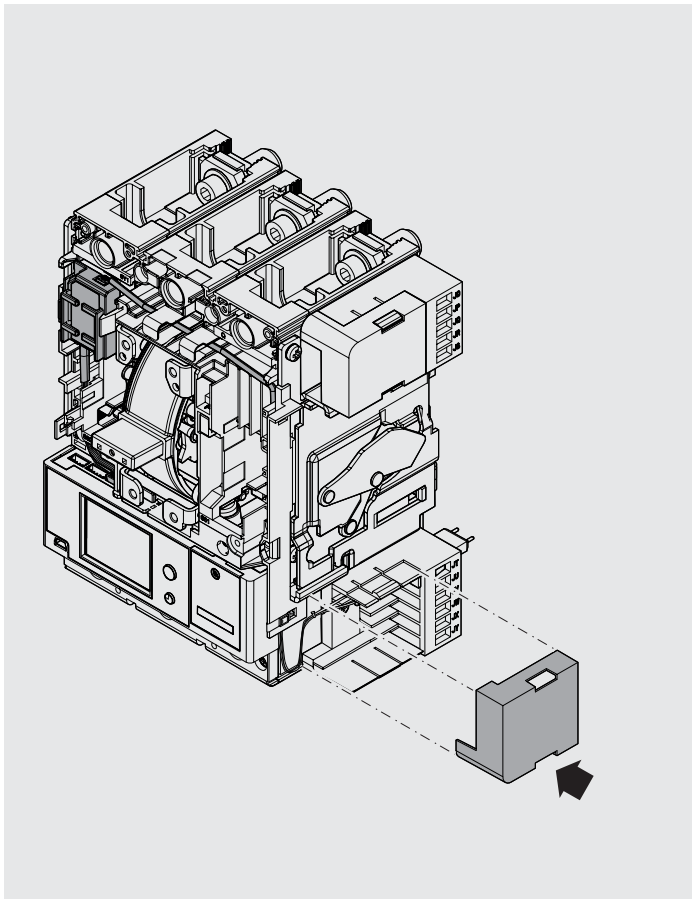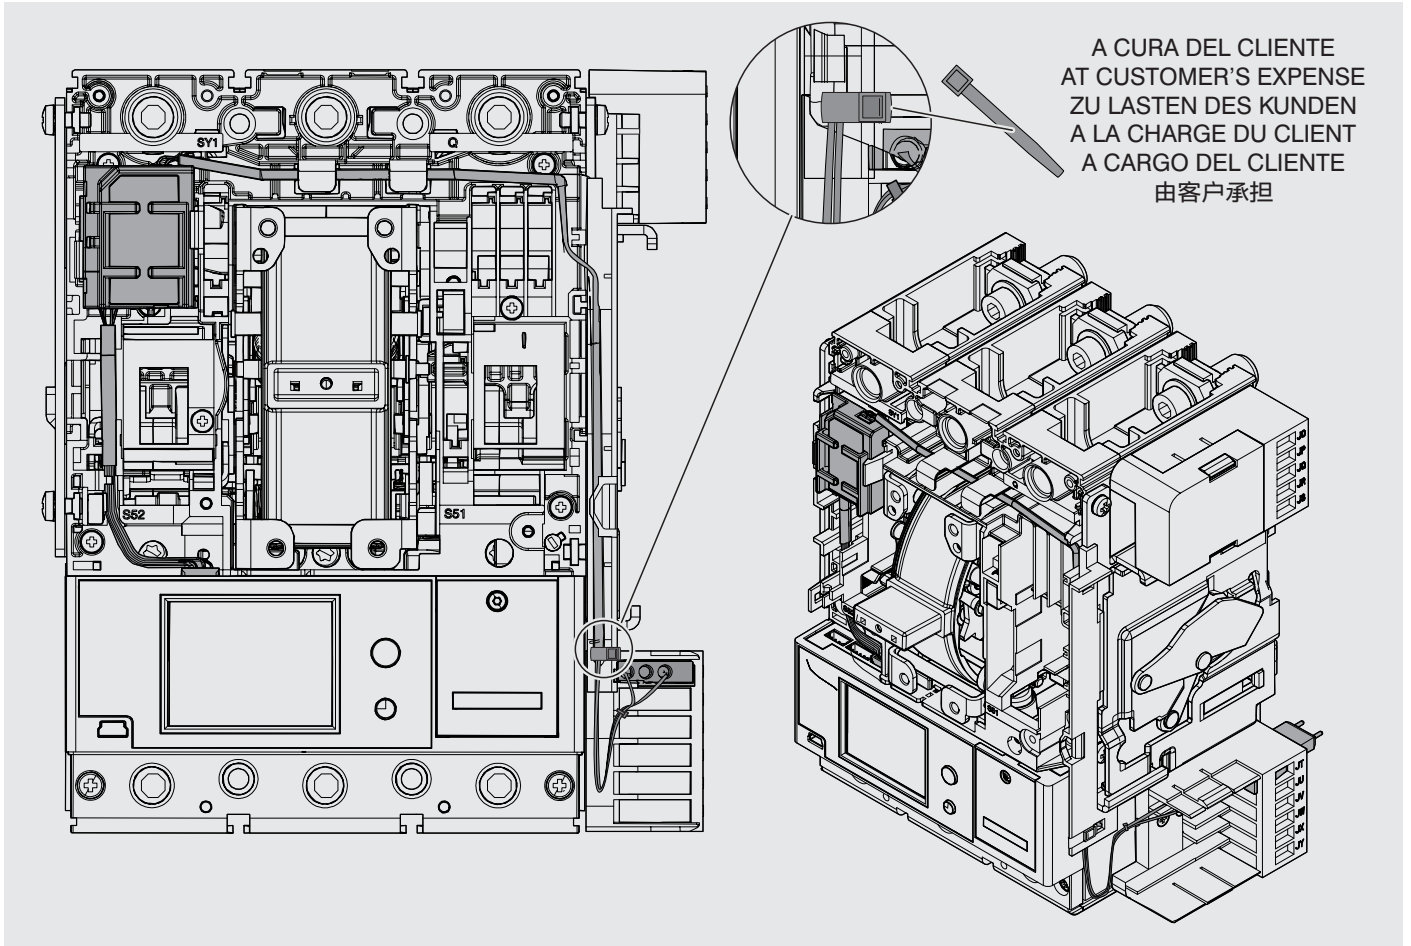

35

W 36

 
 
W

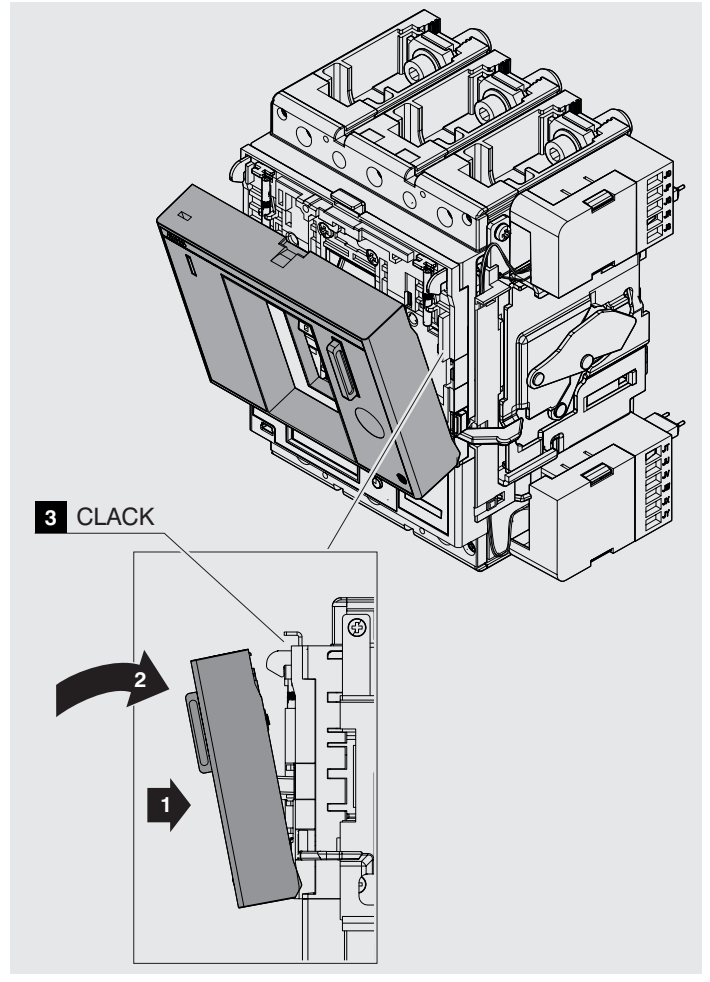
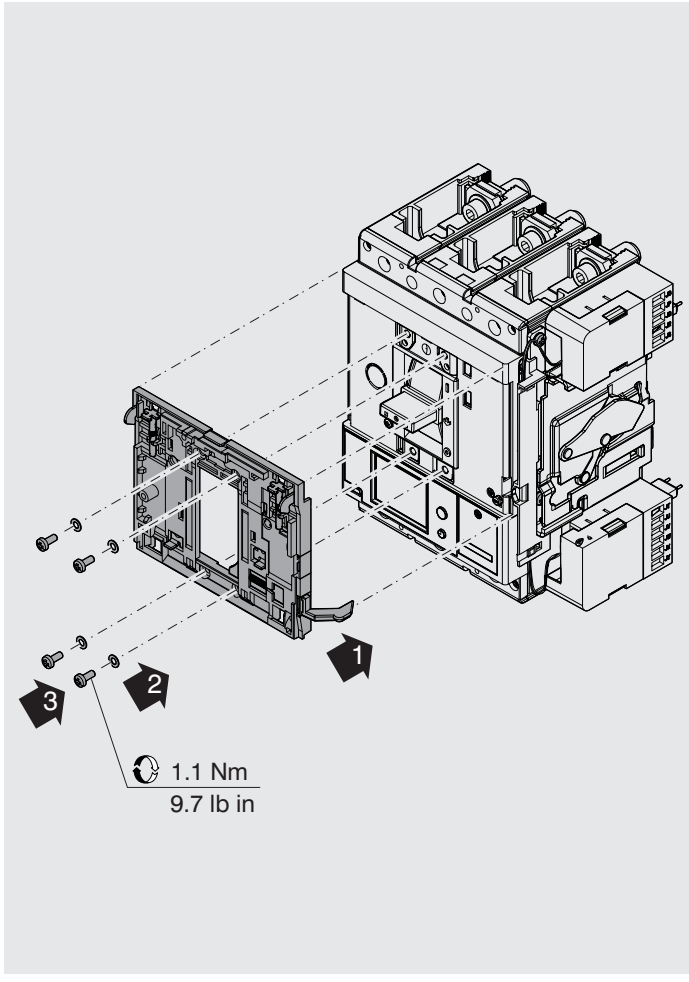




37

W 38

      W

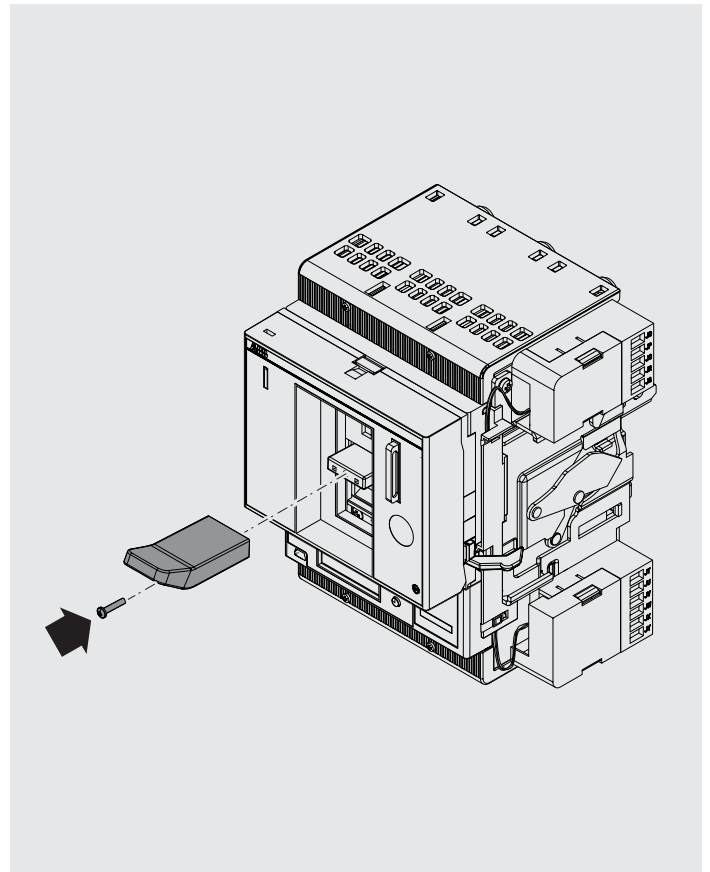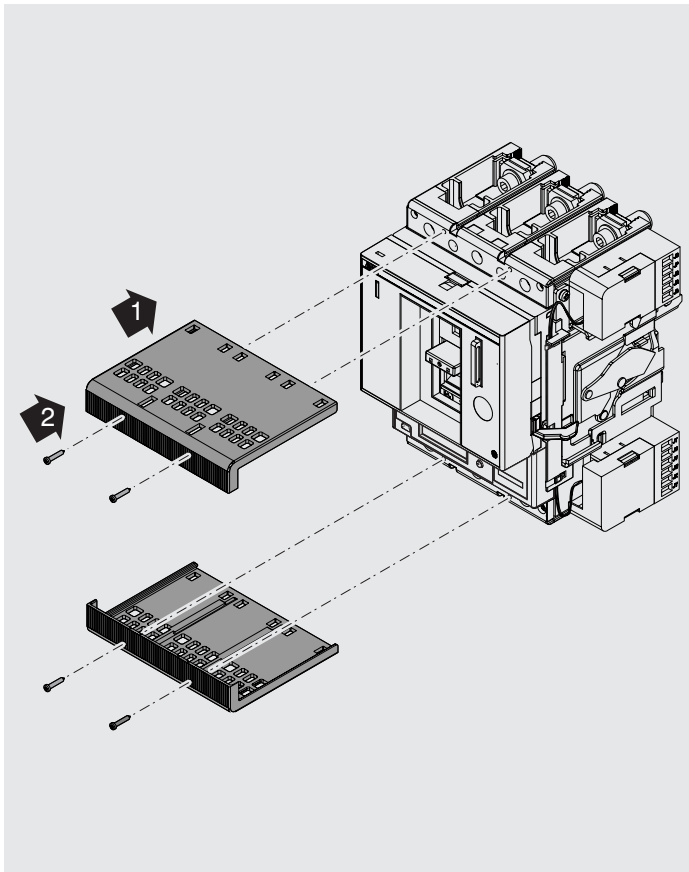

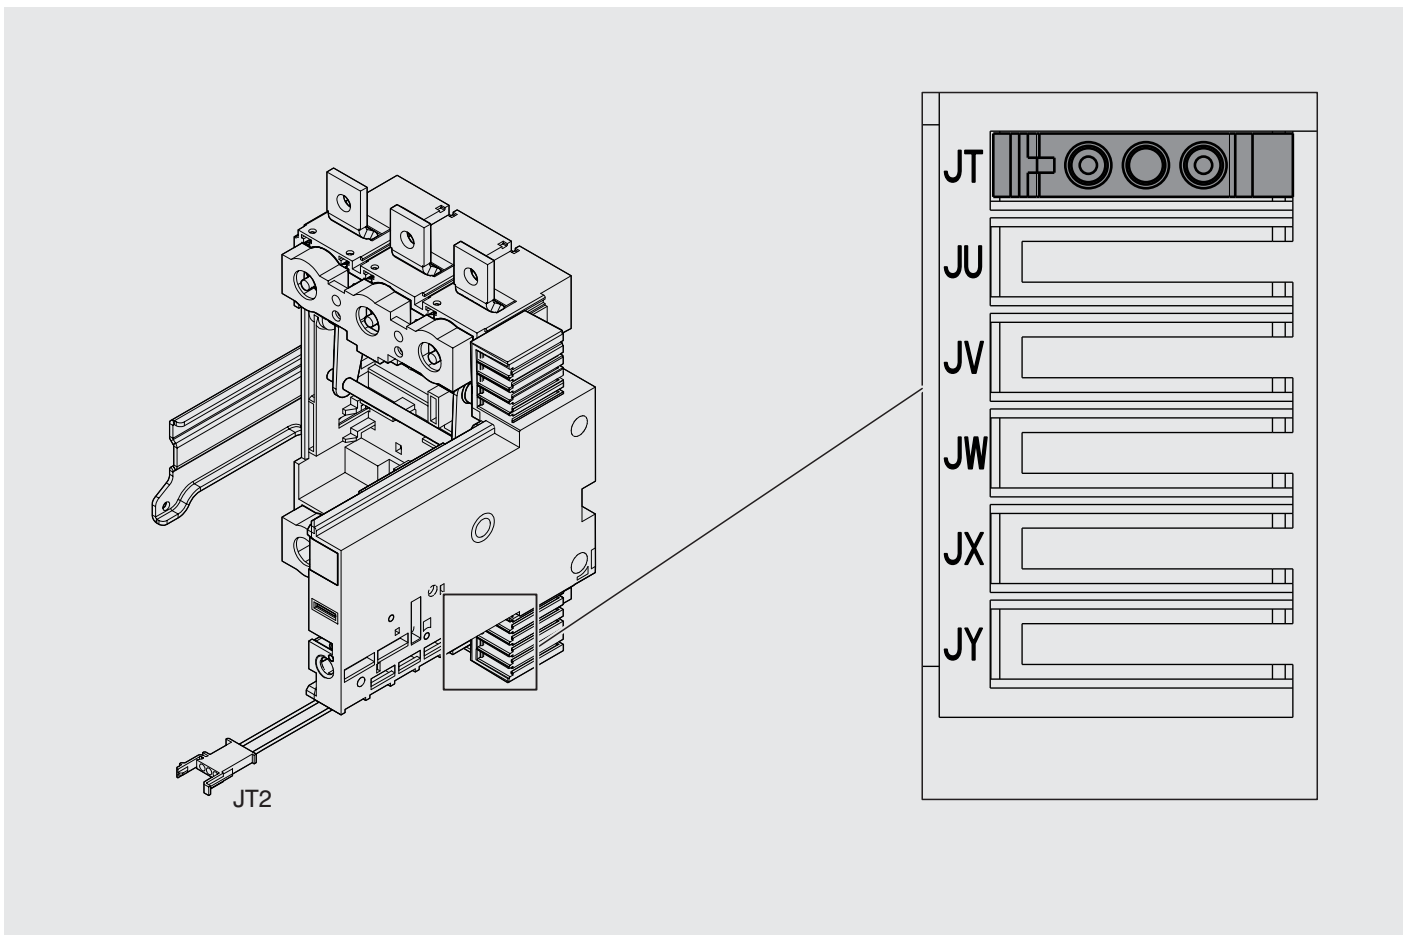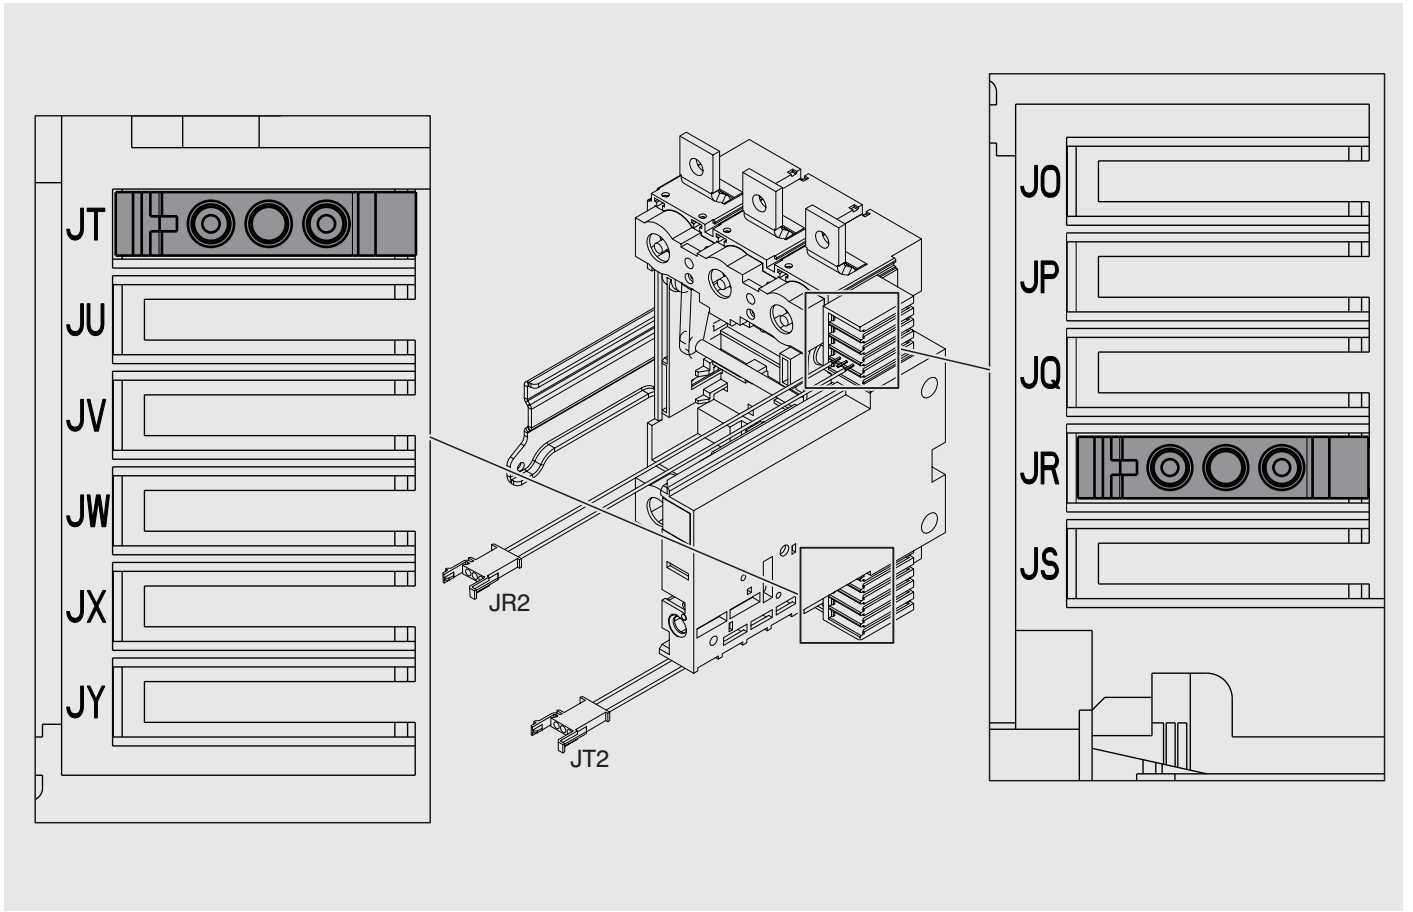

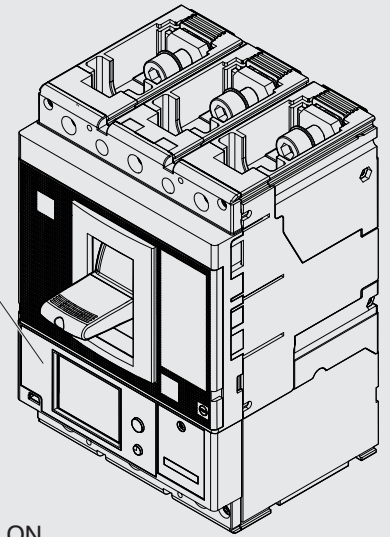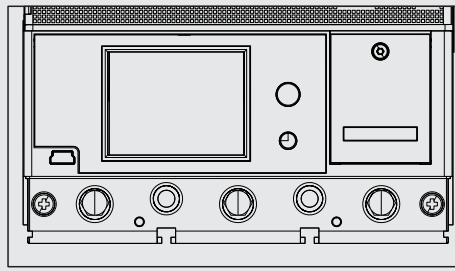

PROCEDURA DI INSTALLAZIONE (solo per versione NO STA):

- Fornire alimentazione tramite K1 e K2 (vedi schemi elettrici)
- Abilitare il bus locale, da Display -> Impostazioni -> Moduli -> Local Bus -> ON

INSTALLATION PROCEDURE (only for NO STA version):

- Energize by means of K1 and K2 (see circuit diagrams)
- Enable the local bus, by Display -> Settings -> Modules -> Local bus -> ON

INSTALLATIONSVERFAHREN (nur für Version NO STA):

- Über K1 und K2 mit Strom versorgen (siehe Schaltbilder)
- Aktivieren Sie den lokalen Bus, mit Anzeige -> Einstellungen -> Module -> Local Bus -> ON

PROCÉDURE D'INSTALLATION (Seulement pour version NO STA):

- Fournir l'alimentation à travers K1 et K2 (voir les schémas électriques)
- Activer le bus local, par affichage -> Paramètres -> Modules -> bus local -> ON

 
PROCEDIMIENTO DE INSTALACIÓN (solo para versión NO STA):

- Suministrar alimentación mediante K1 y K2 (véanse los esquemas eléctricos)
- Habilitar el autobús local, por Pantalla -> Configuración -> Módulos -> bus local -> ON


安装程序 (仅适用于版本 NO STA):

- 通过K1和K2供电 (见电路图)
- 激活本地总线, 点击 Display -> Settings -> Modules -> Local bus -> ON

**INTERFACCIA MODBUS RTU
STA DELL'UNITA' EKIP COM
MODBUS RTU STA INTERFACE
OF EKIP COM UNIT * E)**

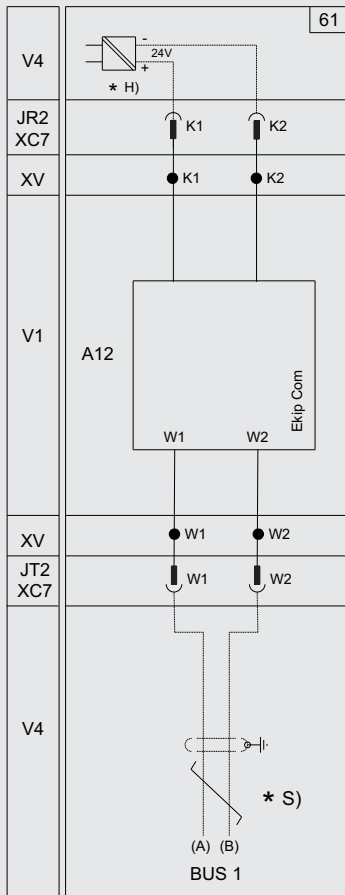

 **INTERFACCIA MODBUS RTU
DELL'UNITA' EKIP COM
MODBUS RTU INTERFACE OF
EKIP COM UNIT * E)**

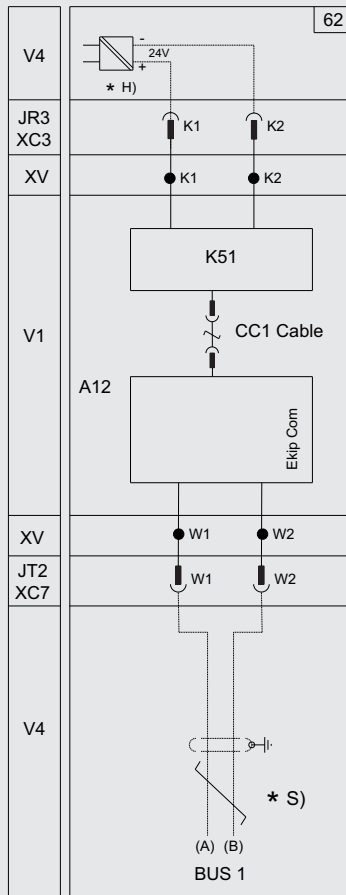

*Per ulteriori informazioni vedere:
*For further details consult:
*Für weitere Informationen siehe:
*Pour plus d'informations voir:
*Para más información véase:
*有关更多信息请参考:

1SDM000005A1001