



MC36C

Safety magnetic sensors

Instruction manual

Manuale d'istruzione

Betriebsanleitung

Manuel d'instructions

Manual de instrucciones

Brugervejledning

使用手册

Table of contents

1. Introduction	5
2. Product description	6
3. Mounting and mechanical dimensions	7
4. Operating mode	7
5. Installation	8
6. Operating and alignment direction	9
7. Electrical connections	10
8. Maintenance and disposal	11
9. Technical data	12
9.1 Electrical data	12
9.2 Outputs	12
9.3 Actuating characteristics	12
9.4 Switching distances (with MC36CM).....	12
9.5 Environmental conditions	12
9.6 Approvals / tests	12
9.7 Safety classification.....	13
9.8 Mechanical data	13
9.9 Cable version	13
9.10 Plug version	13
9.11 Pigtail version.....	13

MC36C safety magnetic sensors - Instruction manual

Ownership

Copyright © 2022, CARLO GAVAZZI Industri. All rights reserved in all countries.

CARLO GAVAZZI reserves the right to modify or make improvements to this document without advance notice.

Safety messages

The following symbols are used in this document to indicate warning concerning the user and/or the safety device:



Warning: indicates actions that if not observed may lead to damage to the device.



Attention: only CARLO GAVAZZI technical service personnel are authorized to open the safety device.

General information



Note: This manual should be consulted for all situations related to installation and use. It must be kept in good condition and in a clean location accessible to all operators.

Service and warranty

In the event of malfunction or requests for information please contact the CARLO GAVAZZI branch or distributor in your country.

1. Introduction

This user manual must be read and understood completely, prior to carrying out any operation on the MC36CH safety sensors, by personnel dealing with all the activities related to the sensors.

All the operations described in this manual must be carried out exclusively by specialized personnel carefully following all the indications given.

Ordering code

This user manual applies to the following types:

Code	Option	Description
M	-	Magnetic
C	-	Compact rectangular size
36	-	36mm length
C	-	Plastic
H	-	Reed contact
<input type="checkbox"/>	2O	Contacts: 2 normally open
	1O1C	Contacts: 1 normally open and 1 normally closed
	2O1C	Contacts: 2 normally open and 1 normally closed
<input type="checkbox"/>	L	Left exit
	R	Right exit
<input type="checkbox"/>	A2	Connection type: PVC cable 2m
	M5	Connection type: M8 integrated connector
	T1	Connection type: pig tail with M12 connector
<input type="checkbox"/>	Null	No LED
	L	With LED indicator

Magnetic actuator

MC36CM



Note: the technical data of this manual are applicable also to the MC36CH models with different cable length. The special products, that are products having a cable length which varies with regards to the standard models, will be identified by one or 2 numbers after the letter "A" in the code. Example: MC36CH2OL with 2 x NO contacts, left exit, without LED and with a cable of 5 meter long: MC36CH2OLA5.

2. Product description

The MC36CH safety sensor features one or more reed contacts that are activated without contact through the coded magnetic field of the actuator MC36CM.

The MC36CH safety sensors are suited for gate/door monitoring applications and can reach PL e, safety category 4 according to EN ISO 13849-1.

The sensors are only a subset of the safety-related parts of the machine: the safety level of the entire system depends also on all the other safety components and devices of the system set.

As application example, if a door is opened, the actuator moves away from the sensor which is positioned on the stationary part of the guard.

If the new position of the actuator reaches the safe switch-off distance (Sar), the switching status can be communicated to a connected safety relay.

The sensors have onboard N.O. and/or N.C. safety contacts, operated when the corresponding MC36CM actuator is close to the sensor.

All the MC36CH/MC36CM pairs described in this manual make up a multiple flow redundant Type 4 coded system with low-level coding, as defined in the standard EN ISO 14119. The design of the MC36CH sensors and of the MC36CM actuators results in MC36CH/MC36CM pairs which cannot be easily operated by readily available instruments, increasing the safety level of the application.

The user is responsible for the risks evaluation of the safety system; he decides with complete responsibility if the products described in the user manual are suitable for his application.

The MC36CH/MC36CM sensors do not require internal maintenance: if they are tampered with, they lose their safety functions and the guarantee is annulled.



Note: the meanings of “Normally Open” and “Normally Closed” contact throughout this manual are the following:

N.O.: contact is open and non-conductive when sensor is not operated with actuator magnet MC36CM away from the sensor.

N.C.: contact is closed and conductive when sensor is not operated with actuator magnet MC36CM away from the sensor.

3. Mounting and mechanical dimensions

The MC36CH/MC36CM pairs can be mounted using the holes on both sides of the enclosure, suitable for M4 screws. It is recommended to use brass or non-magnetic steel screws to avoid reducing the operating distance of the sensor.

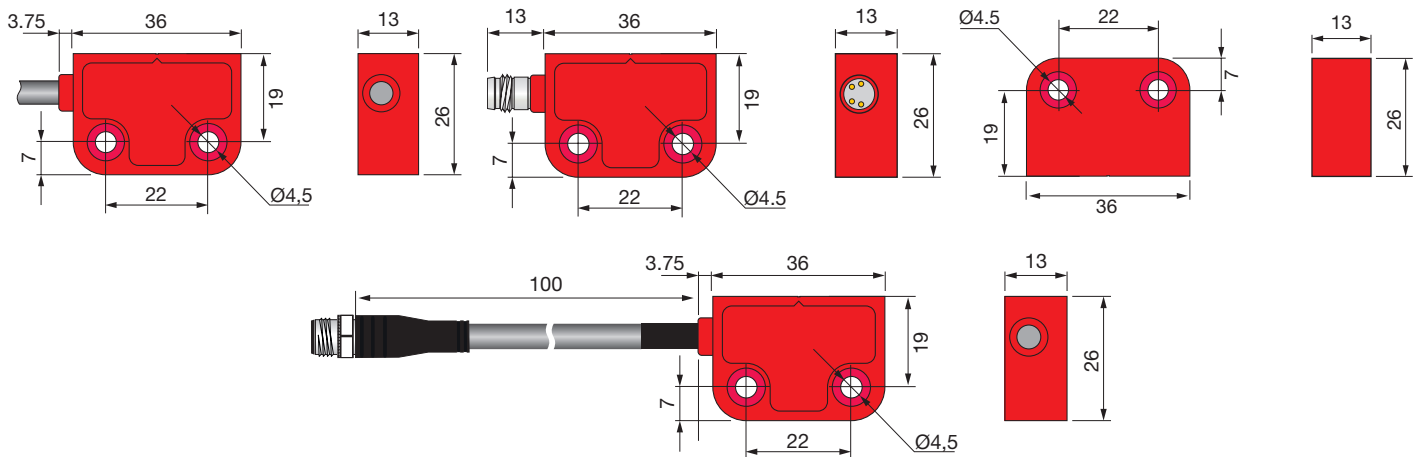


Fig. 1 - Dimensions

4. Operating mode

MC36CH sensor is "operated" when all its safety contacts have changed their open/close condition when the MC36CM actuator is close to the sensor (see section Technical Data for operating distances).

The magnetic coding of the MC36CH sensor requires magnet MC36CM to be correctly aligned with sensor to ensure correct functionality.

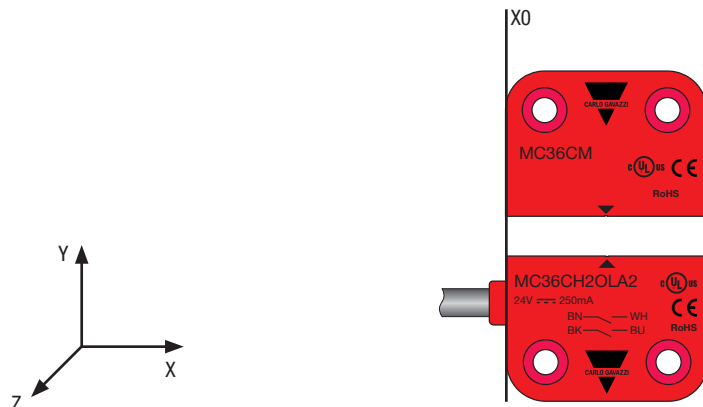


Fig. 2 - Operating and alignment direction of the sensors

The alignment is achieved moving the MC36CM actuator towards the MC36CH sensor along the X axis (side alignment, e.g. sliding door) or Y axis (frontal alignment e.g. hinged gate/door or slide) or perpendicularly to the XY plane (Z axis, e.g. hinged gate/door).

A correct alignment is achieved when the MC36CH sensor and the MC36CM actuator lay on the same XY plane, aligned to the same position X0 (see fig. 2).

In that position, if the Y distance between the sensor and the magnetic unit is less than the Operating Distance (S_{ao} , see Technical Data), the sensor is correctly operated.

Different alignments can lead to wrong operating conditions (e.g. none or only one internal contact changes its status). It should always be the goal to achieve optimal alignment between sensor and magnet during installation. However the MC36CH does allow some misalignment while still keeping correct operation. The typical maximum allowed displacement between sensor and magnet in the XZ-plane can be seen in figure 3. Notice that any misalignment in this plane will reduce the switching distance in the Y-axis.

5. Installation

The MC36CM actuator must be mounted on the moving guard of the machine, and the MC36CH magnetic sensor must be fixed on a stationary part of the machine, by using two screws each (M4), on both sides of the enclosure.

All the screws and nuts must be properly blocked, in compliance with EN ISO 14119, e.g. by using self-locking screws, rivets or similar.

The position of the MC36CH sensors must avoid any possibility for the operator to reach dangerous parts of the machine. It must be difficult for operators to access to the safety switches when the guard is open, and they must be protected against tampering or unintentional switching.

The connections of all the MC36CH sensors are listed in tables 9.9, 9.10 and 9.11; the pin-out of the connectorized models is shown in chapter 7.

Fitting the sensor and/or the actuator directly on ferromagnetic parts (or very close to ferromagnetic parts) would lead to a reduction of the operating distances.

It is recommended to use brass or non-magnetic fixing screws and to fit the sensor and/or the actuator on non-ferromagnetic parts.

If fitted on ferromagnetic material, it is necessary to place a non-ferromagnetic material (min. thickness of 6 mm) between the MC36CH/MC36CM pair and the ferromagnetic parts of the machine closest to them.

To avoid mutual interactions between different magnetic sensors, when using more than one pair of MC36CH/MC36CM in the same application, every pair of sensor-actuator must be placed at least 50 mm away from the adjacent sensor-actuator pair in any direction.

At the end of the installation, the machine installation procedure must be carried out to check for correct wiring and, in particular, to check that the machine stop time is less than the operator access to the machine time, once the guard is open.



Note: the MC36CH sensors with LED make available a signalling LED in series to the N.O. contact: this contact is not voltage free, but it is polarized; it needs and forces a voltage drop when not operated. If the wires are connected with the wrong polarity, the LED is permanently OFF (however the sensor still works properly).

ISO 14119:2013 standard states that the magnetic type of protection devices associated to the guard cannot be easily eluded through the use of easily available instruments or objects such as screws, nails, pieces of metal, keys and generally through objects or tools related to the normal machine working operations. Based on the indication of the standard, a multiple flow coded magnet, such as the MC36CH + MC36CM systems, is a device difficult to be eluded. Nevertheless, due to the impossibility of guaranteeing non elusion through any substituted magnetic actuator for the coded magnetic unit, the machine manufacturer must carry out an installation that includes mechanical obstacles which do not allow the insertion of a substitution actuator in front of the sensor (with the guard open).



Attention:

- The MC36CH safety sensor and the MC36CM actuator must be installed according to the standards in force in the country of use, when the machine is not powered and with no danger for the operator.
- Mount the sensor and the actuator on a flat surface. Excessive shocks and vibrations, over the limits specified in the "Technical Data" section, must be avoided, otherwise proper function of the sensor cannot be guaranteed. The contacts have to be protected from overcurrents.
- It is recommended to keep the connection cables separate from power supply loads cables of other devices.
- Ensure that there are no conductors, cables or loose materials that can come into contact with the sensor and/or with the actuator.
- Ensure that the conductors are not excessively tight, that their positioning avoids potential cuts or squashing and that they are not in the way of people or things.
- Ensure that the machine can operate according to all the technical data in this manual.
- Avoid using the sensor and the actuator as mechanical backstop and avoid installation during storms. Do not dispose of the packaging in the environment.
- Maximum current must be limited by external circuit (e.g. with a resistor in series with the sensor wires)

6. Operating and alignment direction

In case of horizontal and vertical misalignment between the sensor and the actuator, the sensor remains active within the tolerance range.

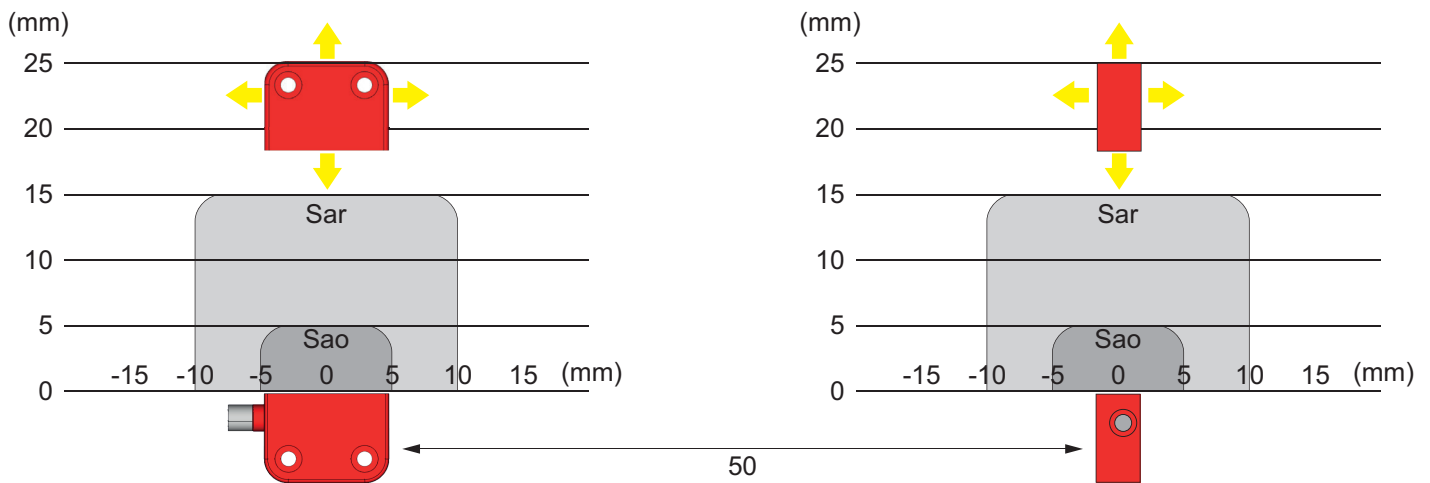



Fig. 3 - Distance

The Assured switching distance S_{ao} is the one in which all safety contacts have switched their status.
The Assured switch-off distance S_{ar} is the one in which, when the actuator moves away from the sensor, all safety contacts have released and return to the rest position.




Note: the typical detection characteristic shown in Fig. 3 may vary from sensor to sensor.


7. Electrical connections

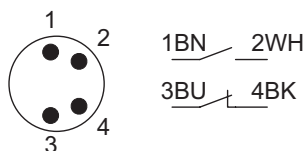


1NC + 1NO, plug M8

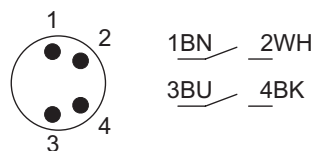


2NO, plug M8

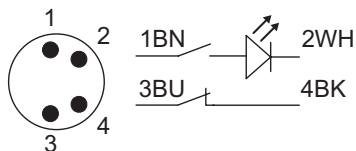


1NC + 1NO, plug M8 with LED

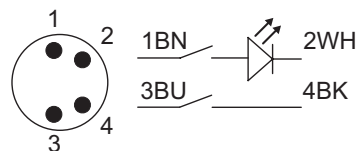


2NO, plug M8 with LED

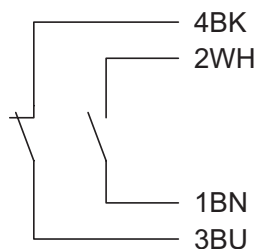


1NC + 1NO, cable

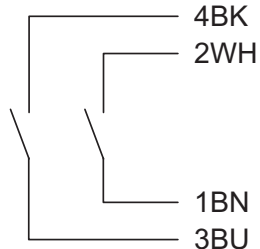


2NO, cable

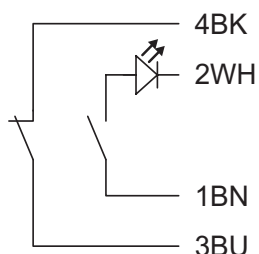


1NC + 1NO, cable with LED

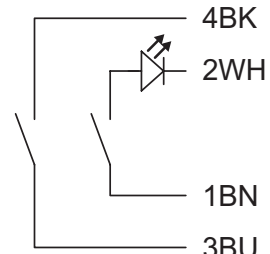


2NO, cable with LED

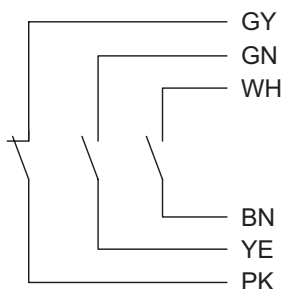


1NC + 2NO, cable

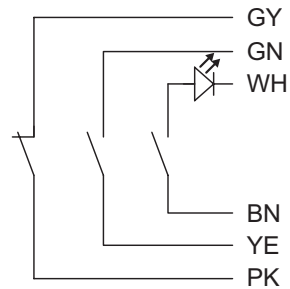


1NC + 2NO, cable with LED

 


1NC + 1NO, M12

 

2NO, M12

 

1NC + 1NO, M12 with LED

 

2NO, M12 with LED



Warning: when sensor contacts are used without the related safety modules, installer should ensure that external circuit limits the maximum load current to no more than 250 mA, e.g. with a resistor in series with the sensor wires.

8. Maintenance and disposal

The integrity of the MC36CH/MC36CM sensors and all the parts connected to them must be checked regularly by specialized personnel. It must be possible to inspect and replace the safety switches, by qualified personnel only. Keep the spare actuators in a safe place.

The frequency of the inspections is part of the machine risks evaluation and it is under the complete responsibility of the person in charge of such evaluations.

Operator safety can be compromised by the lack of regular inspections or maintenance, or if they are carried out incorrectly, or by non specialized personnel, or at lower intervals than prescribed.

Regular inspections consist of carrying out an inspection of the wiring, of the installation, of the tightening and of the integrity of the MC36CH/MC36CM pair, and in repeating, for each sensor / actuator pair, all the operations concerning the machine start-up procedure.

Maintenance consists of a regular cleaning of the sensor and the actuator and of all the connected devices: dust and other substances must be removed from the devices and it must be dried of liquids or any condensation.

All cleaning operations must be carried out whilst the machine is rigorously not powered.

Dispose of the device in accordance with the national environmental regulations when it is no longer used.



Warning: The operating time of the device is restricted to T10D.
After that period, the device must be replaced.
T10D=B10D/Nop (refer to EN ISO 13849-1)

9. Technical data

All the distances involved are referred to a sample MC36CM device, with MC36CH/MC36CM pairs mounted far away from other magnetic parts or devices, and with MC36CH frontally operated (see Fig. 2).

9.1 Electrical data

Rated operational voltage U_e	12-24 V AC/DC
Rated insulation voltage U_i	Cable version / M12: 120 Vac M8 connector version: 60 Vac / 75 Vdc
Rated impulse withstand voltage U_{imp}	6 kV / 1.5 kV (with M8 connector)
Protection class	III
Reverse polarity protection	Yes

9.2 Outputs

Output function	2 x NO, 1 x NO + 1 x NC, 2 x NO + 1 x NC
Voltage drop	3.5 V for sensors with LED 0.5 V for sensors without LED
Rated operational current I_e	0.25 A (resistive load)
Short circuit proof	No
Switching frequency	100 Hz
Max switching load	6W (resistive load)
Thermal current I_{th}	0.25 A

9.3 Actuating characteristics

Operating principle	Magnetic
Actuator	MC36CM coded
Coding level according to EN ISO 14119	Low

9.4 Switching distances (with MC36CM)

Assured switching distance S_{ao}	5 mm*
Assured switch-off distance S_{ar}	15 mm*
Repeat accuracy	≤ 10%
Distance between two sensors	Min. 50 mm

9.5 Environmental conditions

Application (according to EN 60654-1)	Class C
Operating temperature	-25...80 °C (-13...176 °F)
Max. perm. Relative humidity	Short time: 5...95% Permanent: 5...70%
Protection class (IEC 60529)	IP67; IP69K for M8 versions without LED
Pollution degree	3

9.6 Approvals / tests

EMC	IEC 60947-5-2
Shock resistance (EN 60068-2-27)	30 g (11 ms)
Vibration resistance (EN 60068-2-6)	10 g (10...150 Hz)

9.7 Safety classification

B10D for each channel

700 000 operations (@ 250mA resistive load)
Mechanical endurance 80 millions operations

9.8 Mechanical data

Installation	Non flush mountable
Housing material	Glass-fiber reinforced thermoplastic
Tightening torque (for M8 connector)	Max 1.5 Nm
Weight	35 to 75g
Potential-free	Yes
Type of connection	PVC cable 4x0.25 mm ² ; 6x0.25 mm ² M8 connector Pig tail: PVC cable 0.1 m, Ø 5mm, with M12 connector

9.9 Cable version

Model	Output contact	Associated actuator	Usage category
MC36CH2OxA2	2 NO	MC36CM	max. 4
MC36CH2OxA2L	2 NO	MC36CM	max. 4
MC36CH1O1CxA2	1NO + 1NC	MC36CM	max. 4
MC36CH1O1CxA2L	1NO + 1NC	MC36CM	max. 4
MC36CH2O1CxA2	2NO + 1NC	MC36CM	max. 4
MC36CH2O1CxA2L	2NO + 1NC	MC36CM	max. 4

9.10 Plug version

Model	Output contact	Associated actuator	Usage category
MC36CH2OxM5	2 NO	MC36CM	max. 4
MC36CH2OxM5L	2 NO	MC36CM	max. 4
MC36CH1O1CxM5	1NO + 1NC	MC36CM	max. 4
MC36CH1O1CxM5L	1NO + 1NC	MC36CM	max. 4

9.11 Pigtail version

Model	Output contact	Associated actuator	Usage category
MC36CH2OxT1	2 NO	MC36CM	max. 4
MC36CH2OxT1L	2 NO	MC36CM	max. 4
MC36CH1O1CxT1	1NO + 1NC	MC36CM	max. 4
MC36CH1O1CxT1L	1NO + 1NC	MC36CM	max. 4

x:

- L= left exit
- R= right exit

*assuming a correct alignment between sensor and actuator