


—  
INSTALLATION INSTRUCTION

## Fourth pole

OTP\_80FP, OTP\_80FD

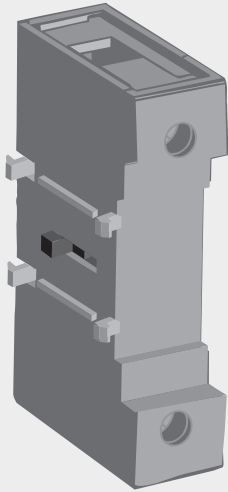

# OTP\_80FP


OTPS80FP OTPL80FP OTPN80F OTPE80FP OTPD80FP








UL not completed  
CSA not completed  
OTPL80FP  
OTPD80FP



OT63F3, OT80F3

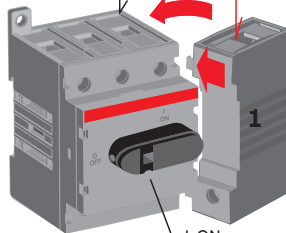


OTPD80FP

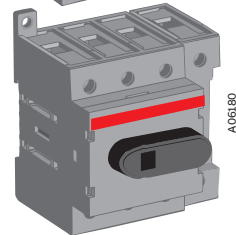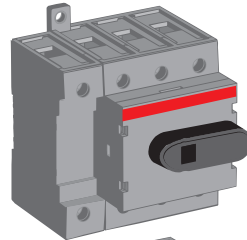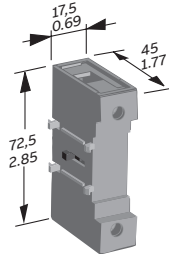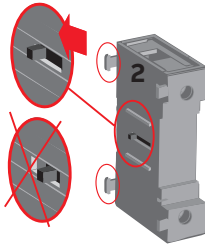
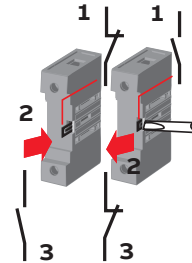


**!** Connect in the middle of the terminal clamp.

 1,5...6 mm<sup>2</sup>  
14...10 AWG




> 6...35 mm<sup>2</sup>  
> 10...4 AWG

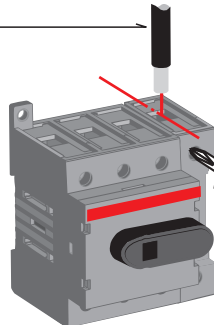 


2 Nm  
17.7 lb.in

POZIDRIVE  
M5 Form 2

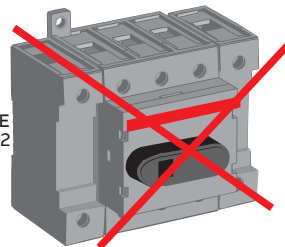

A06180

# OTP\_80FD

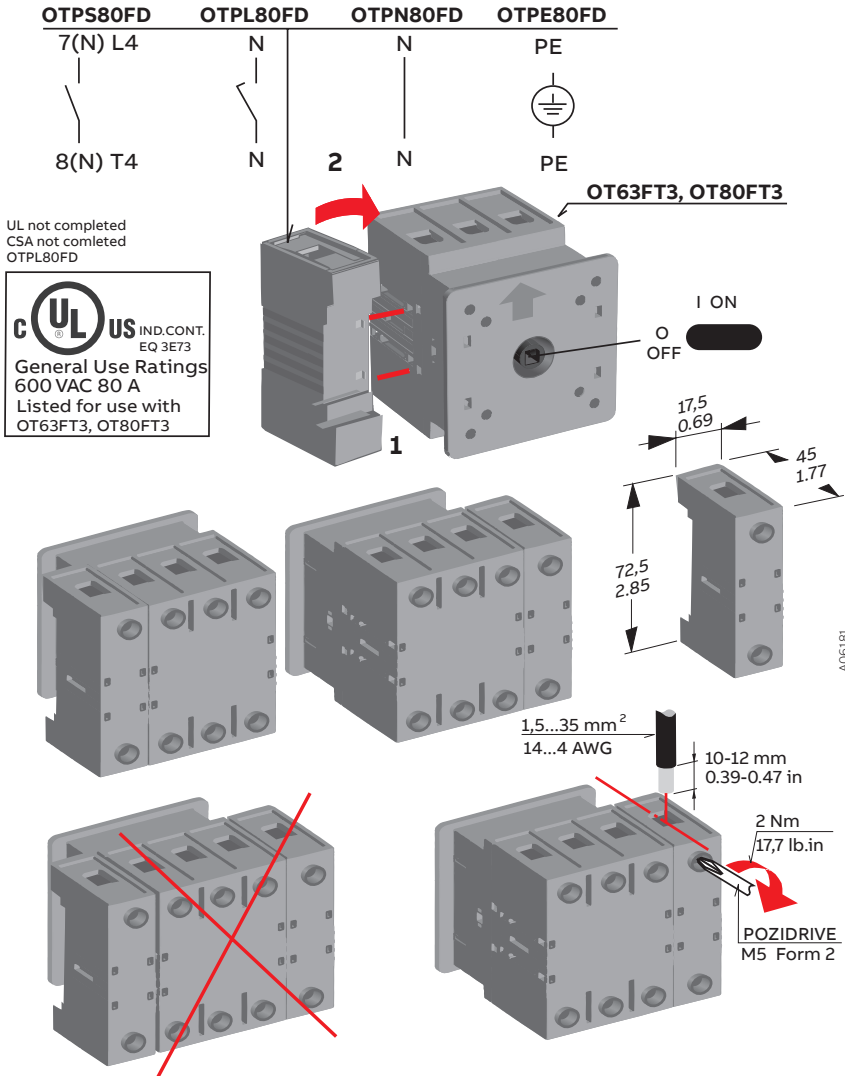



---

## Contact us

### **ABB Oy**

Muottitie 2A 65320

Vaasa, Finland

**[abb.com/lowvoltage](http://abb.com/lowvoltage)**