




—
INSTALLATION INSTRUCTION

Handle

YAST1



YAST1

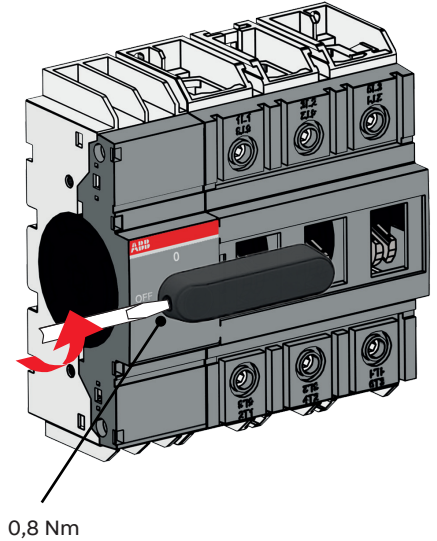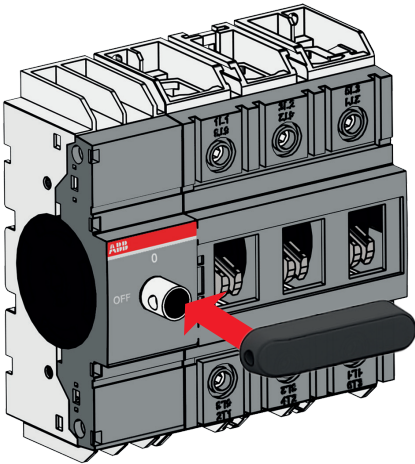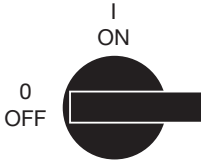



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage