


—
INSTALLATION INSTRUCTION

Auxiliary contact OA2G11




OA2G11


OT16-40F3
OA2G11 OA2G11

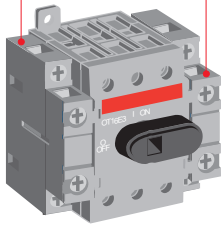

OT63-80F3
OA2G11 OA2G11

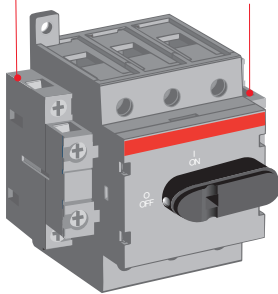


OT100-125F3
OA2G11 OA2G11

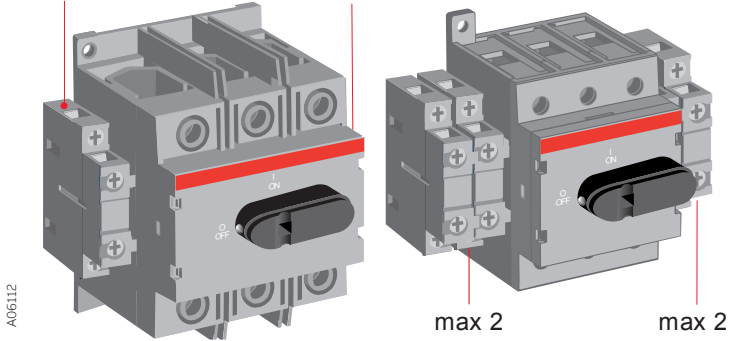


OA2G11




OT16-40F3

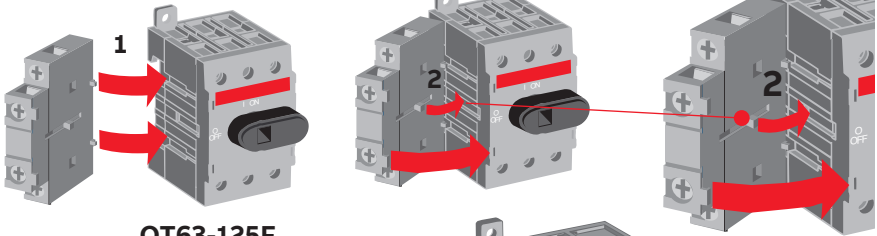

OT63-125F

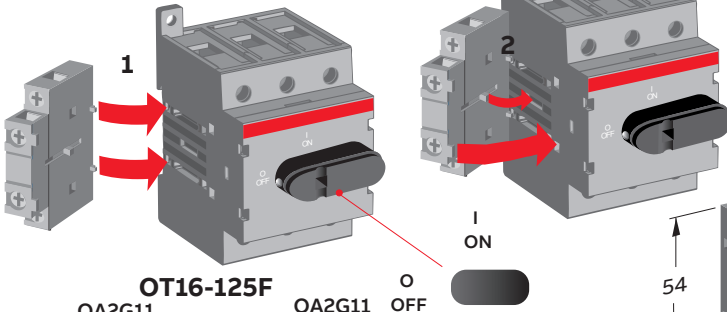

OT16-125F

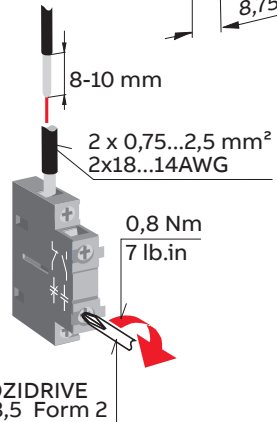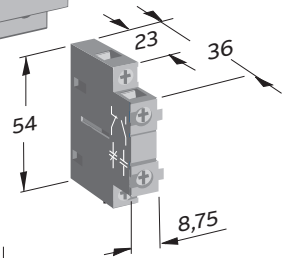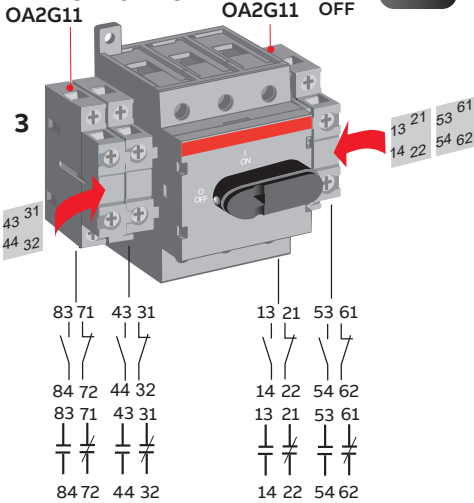



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa Finland

abb.com/lowvoltage