




—
INSTALLATION INSTRUCTION

Change-over and Transfer Switches Bridging bars

OTZC13-34, OTZC43-54,
OTZC63-64, OTZC73-74

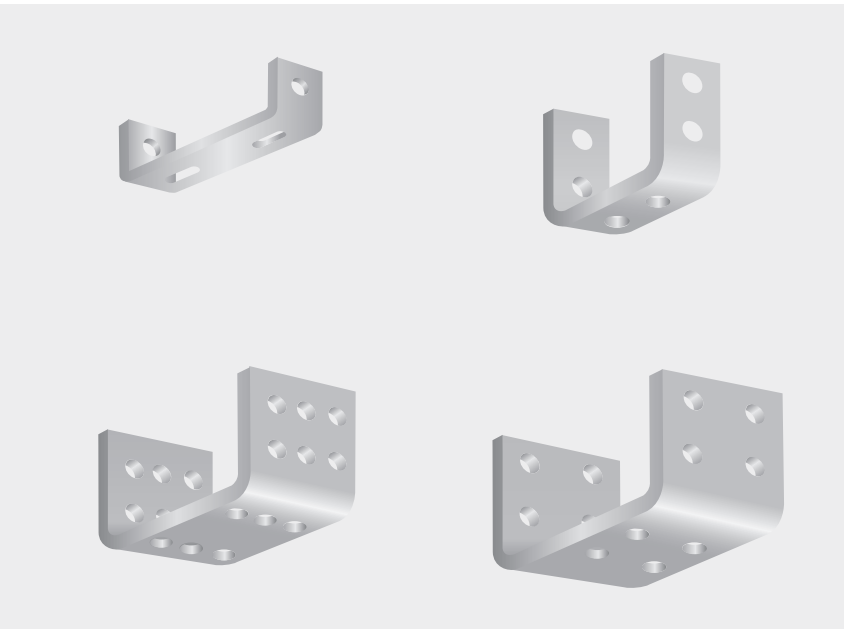

OTZC13-34

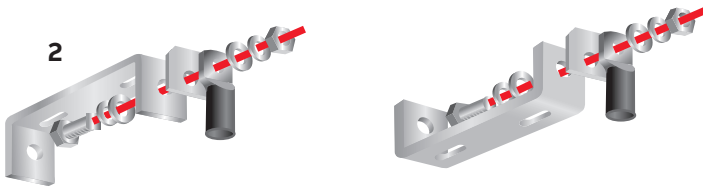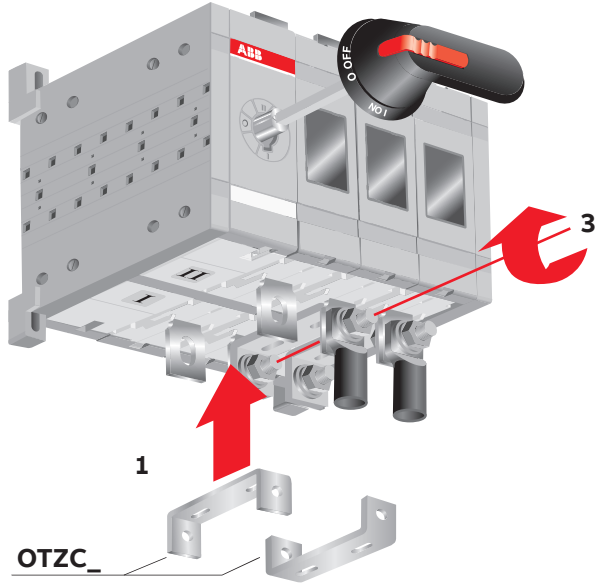


OT_160-250_C_ OTZC13, OTZC14
 OT_315-400_C_ OTZC23, OTZC24
 OT_600-800_C_ OTZC33, OTZC34

630 A




800 A

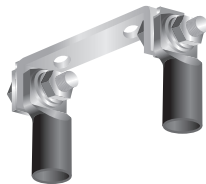




OTZC43-54

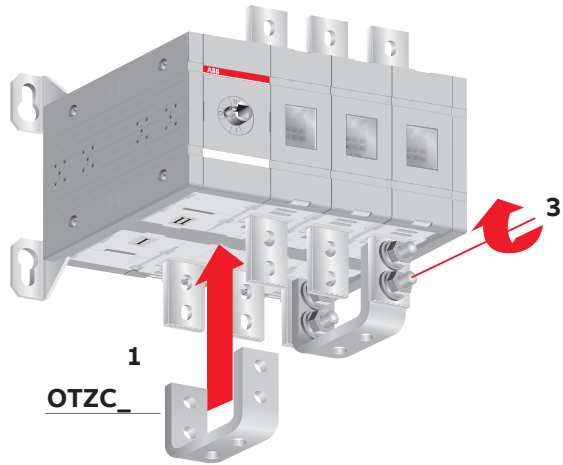


1
OTZC_

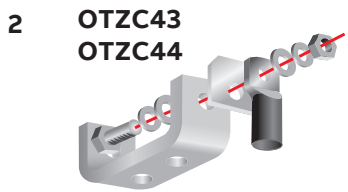

OTZC43
OTZC44


OT_1000_1250_C_
OT_1600_C_, OT_800-1200U_C_

OTZC43, OTZC44
OTZC53, OTZC54

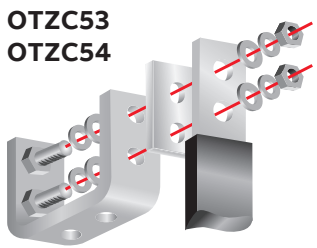


KA00117


OTZC63-64

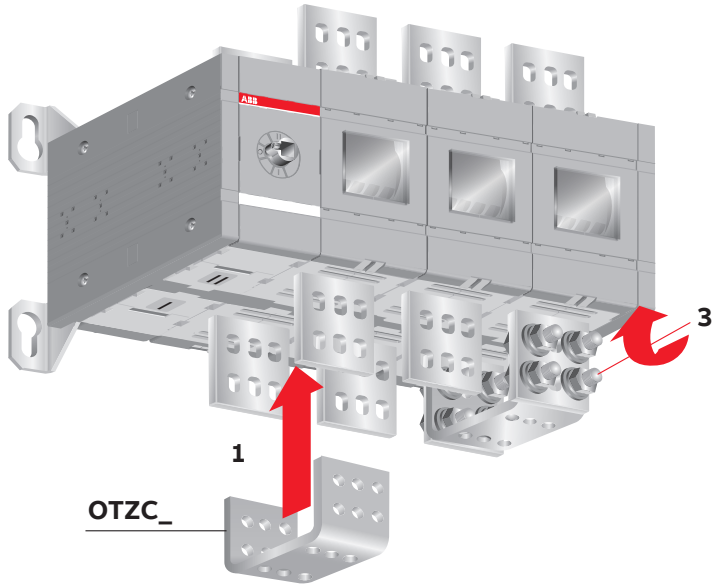

2 OT_2000-2500E_C_ OTZC63, OTZC64

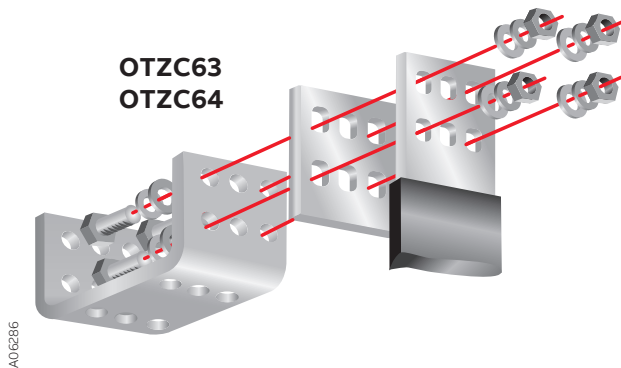


OTZC73-74

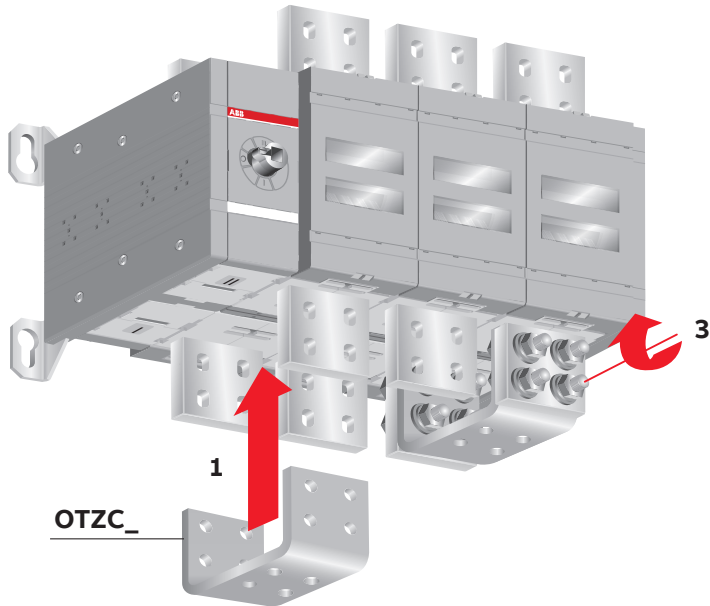

2 OT_3200_C_ OTZC73, OTZC74

OTZC73
OTZC74

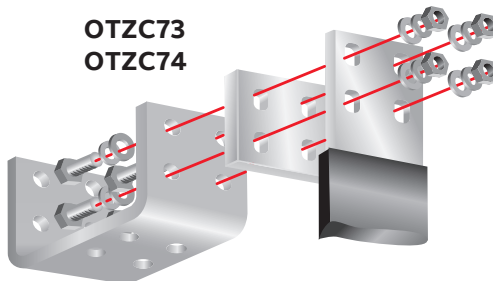

A06287



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage