



INSTALLATION INSTRUCTION

Fuse monitors


OFM_

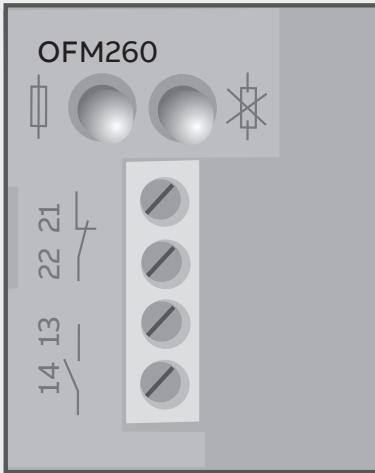

OS32...1250

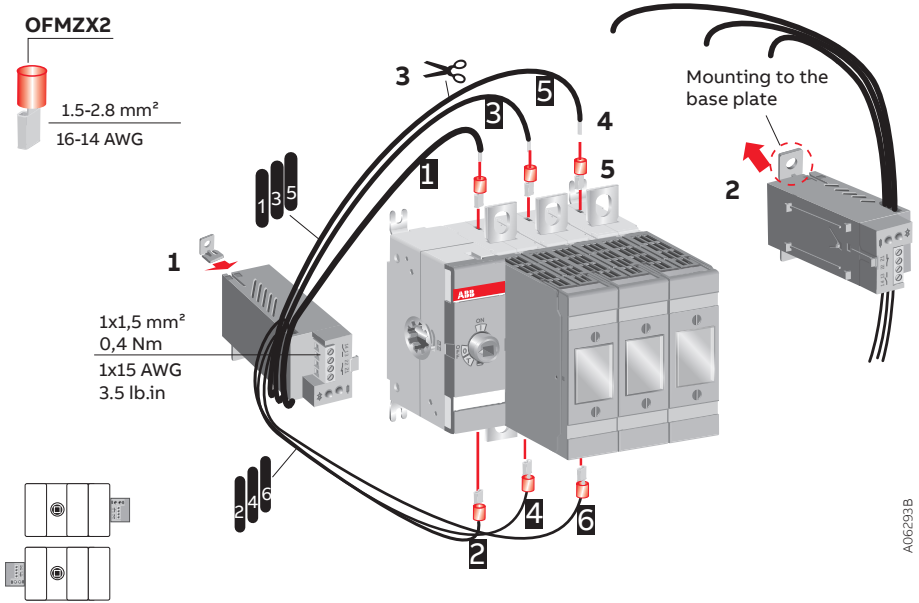


OSMini 20...40 + OFM_

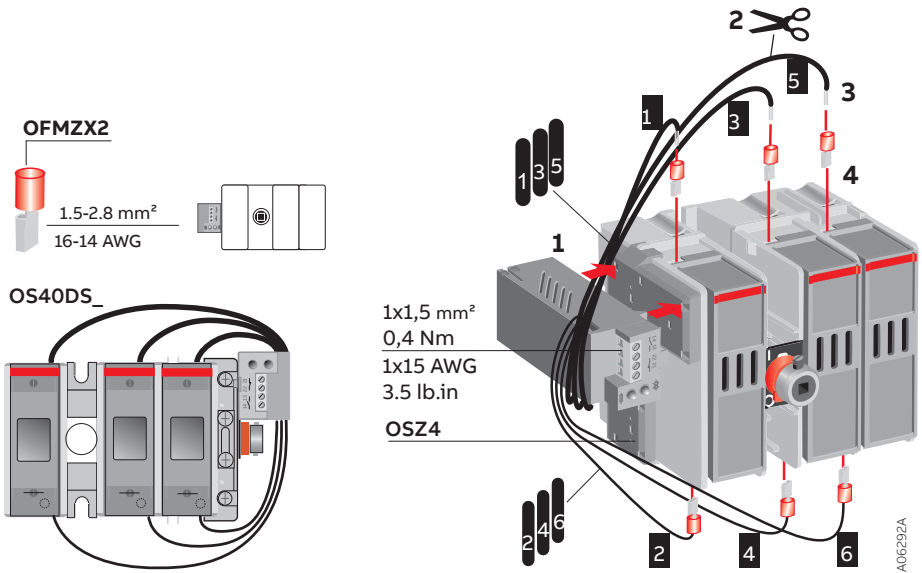


Functionality of the fuse monitor

		Green LED	Red LED	N.O	N.C
Switch fuse closed	Fuse OK	On	Off	Open	Closed
	Fuse blown	Off	On	Closed	Open
Switch fuse open	Fuse Ok	Off	Off	Open	Closed
	Fuse blown	Off	Off	Open	Closed


OFAX + OFM_

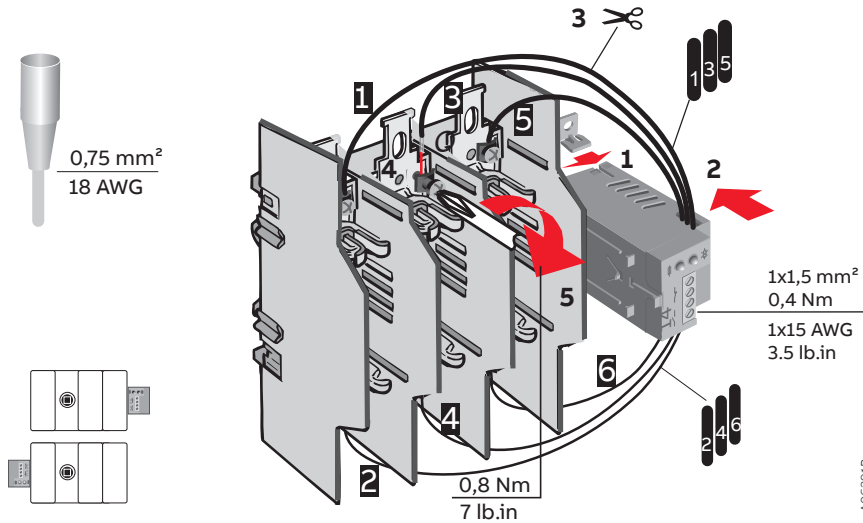

OFM_

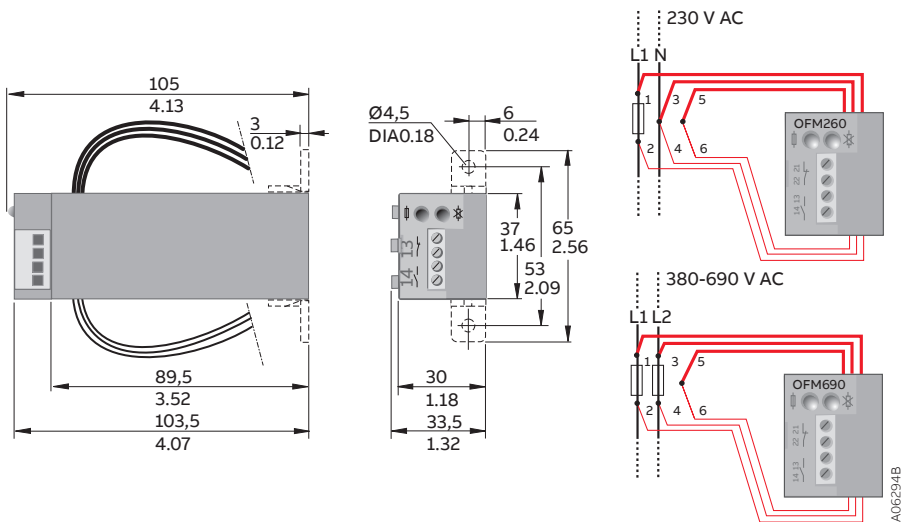

OFM_

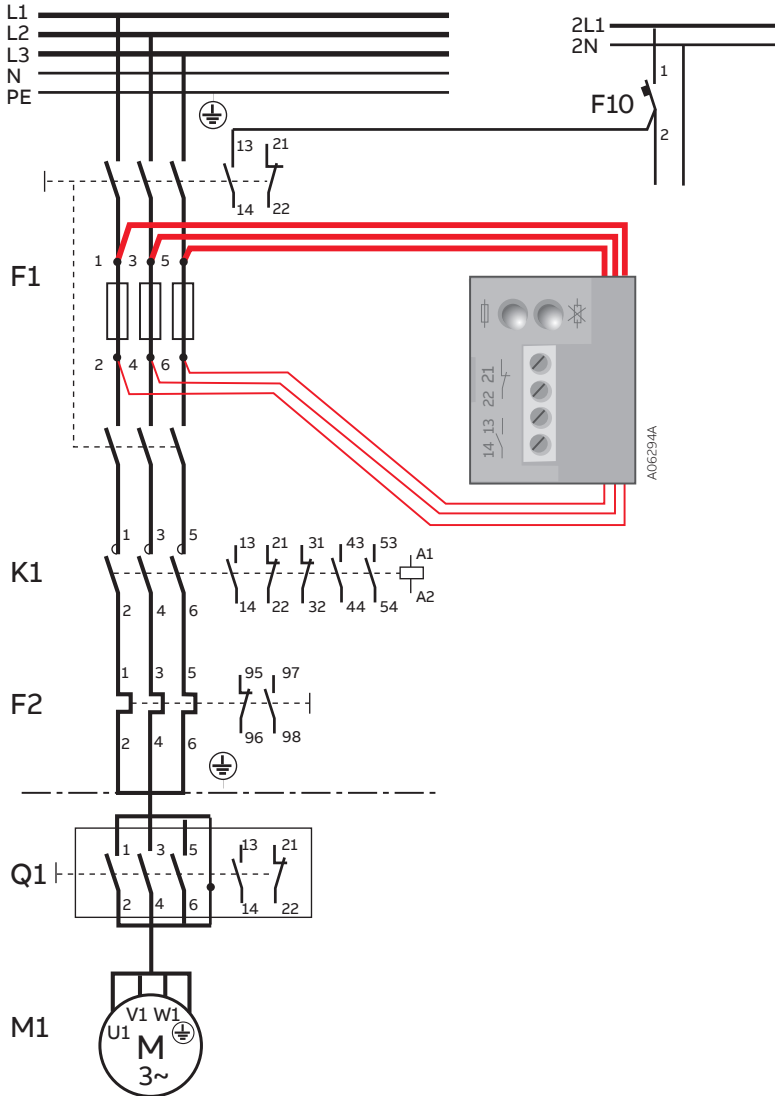



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage