

RGB+Dual Color RF Wireless LED Dimmer

09.28584.04342



- 4 zones/areas
- Press-button RGB+CCT controller

Picture	Brief introduction of buttons
	<p>RGB brightness dimming button. Hold finger down: dimming up/ dimming down of RGB colors.</p> <p>Turn on/off</p> <p>Speed up/down</p> <p>4 zones: click the zone button to turn on/off the corresponding zone, hold to turn up/down the zone's brightness</p> <p>Save button: hold to save color/modes, click to call up the saved. Each zone can save up to 4 colors/modes</p> <p>Touch the slide to switch on the dual color LED lighting ,and choose the color temperature.</p> <p>Click to recall the program by 4 different running mode:jump,flash,fade,strobe</p> <p>Touch color wheel to get any color</p> <p>Program setting button: click the button, LED lighting connected on receiver will flashes one time, then touch the color wheel to choose 2-5 kinds of colors(max 5 colors), then click P button again, LED lighting connected on receiver will flash one time. So it means program finished. Press ▶ button to run the program.</p> <p>RGB buttons:click to turn on/off red , green , blue channel. hold to turn up/ down the brightness. W button is for dimming brightness of CCT dual color .Hold finger down: dimming up/ dimming down.</p>
<p>Operation Voltage</p> <p>4.5V</p>	<p>Operation Frequency</p> <p>868MHz</p> <p>Note : This remote controls 4 zones (areas) receiver, each zone can pair with countless receivers. 1 receiver can be paired by max 8 different remote controls.</p>
Size	Operation
	<p>1. Pair with RF receivers:</p> <pre> Turn on RF remote → Click "Learning Key" on RF receiver → Click a zone number on RF remote → touch color wheel on RF remote, led lights flicker twice means well paired </pre> <p>2. Play the remote after pairing:</p> <pre> Turn on RF remote → Click the paired zone number/numbers → touch color wheel or other buttons to do the controlling. </pre> <p>3. Save color/scene:</p> <pre> Turn on RF remote → Click the paired zone number/numbers → select a color → Hold S1/S2/S3/S4 until light flash twice </pre> <p>5. Call up the saved: Select zone button which we want to called up , then click save button S1,S2,S3,S4.</p> <p>6. How to delete the pairing: Power on the RF receiver, hold the "Learning Key" over 3 seconds until connected led lights flicker twice means well deleted.</p>