



Installation Guide

DEVIreg™ 528

Electronic Thermostat

Table of Contents

1	Introduction	3
	1.1 Technical Specifications	4
	1.2 Safety Instructions	5
2	Mounting Instructions	6
3	Settings	9
4	Warranty	11
5	Disposal Instruction	11

1 Introduction

DEVIreg™ 528 is an electronic thermostat provided with a 2-pole switch and a floor sensor to measure and control the desired floor temperature. It can either be flush-mounted or surface-mounted.

The thermostat has a button for adjusting the temperature setting with a scale from (→) 1 to 6 (each step corresponds to approximately 8°C). Furthermore, it has a LED indicator showing standby periods (green light) and heating periods (red light).

More information on this product can also be found at:
devireg.devi.com

1.1 Technical Specifications

Operation voltage	220-240~, 50Hz
Standby power consumption	Max. 0.25W
Relay:	
Resistive load	Max 10A / 2300W @ 230V
Inductive load	cos φ= 0.3 max 1A
Sensing units	NTC 15kOhm at 25°C
Sensing values:	
0°C	42kOhm
25°C	15kOhm
50°C	6kOhm
Hysteresis	± 0.4°C
Ambient temperature	-10°C to +30°C
Frost protection temperature	5°C - ✕
Temperature range	(✕) 5-45°C with floor sensor only
Cable specification max	1x4mm ² or 2x2,5mm ²
Ball pressure temperature	75°C
Pollution degree	2 (domestic use)
Type	1C
Storage temperature	-20°C to +65°C

IP class	31
Protection class	Class II - 
Dimensions	85 x 85 x 36mm
Weight	90g

The product complies with the EN/IEC Standard "Automatic electrical controls for household and similar use":

- EN/IEC 60730-1 (general)
- EN/IEC 60730-2-9 (thermostat)

1.2 Safety Instructions

Make sure the mains supply to the thermostat is turned off before installation.

IMPORTANT: When the thermostat is used to control a floor heating element in connection with a wooden floor or similar material, always use a floor sensor and never set the maximum floor temperature to more than 35°C.

Please also note the following:

- The installation of the thermostat must be done by an authorized and qualified installer according to local regulations.
- The thermostat must be connected to a power supply via an all-pole disconnection switch.

- The sensor is to be considered as live voltage. Have this in mind if the sensor must be extended.
- Always connect the thermostat to continuous power supply.
- Do not expose the thermostat to moisture, water, dust, and excessive heat.

2 Mounting Instructions

Please observe the following placement guidelines:



Place the thermostat at a suitable height on the wall (typically 80-170cm.).



In wet rooms, place the thermostat according to local regulation on IP classes.




Note: A floor sensor enables a more accurate temperature control and is recommended in all floor heating applications and **mandatory** under wooden floors to reduce the risk of over-heating the floor.

- Place the floor sensor in a conduit in an appropriate place where it is not exposed to sunlight or draft from door openings.
- Equally distant and >2cm from two heating cables.
- The conduit should be flush with the floor surface - countersink the conduit if necessary.
- Route the conduit to the connection box.
- The bending radius of the conduit must be min 50mm.


Follow the steps below to mount the thermostat:

1. Open the thermostat:

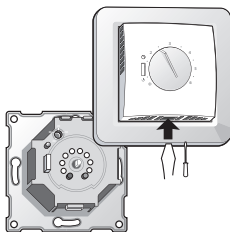

- Press the release tab in the bottom of the thermostat using a screwdriver or similar object.
- Carefully detach the front cover.
- Carefully detach the frame.

2. Connect the thermostat according to the connection diagram.

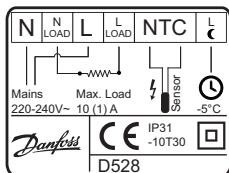

By connecting an external timer to the terminal marked by a moon symbol (and by using for example the same phase as for the mains power supply), the thermostat can be set to reduce the temperature by 5°C during specified periods.

The screen of the heating cable must be connected to the earth conductor of the power supply cable by using a separate connector.

Note: Always install the floor sensor in a conduit in the floor.

3. Mount and reassemble the thermostat:
 - Fasten the thermostat to a flush-mounting box or a surface-mounting box by driving the screws through the holes in each side of the thermostat.
 - Install the frame and front cover in the reverse order of disassembly.
4. Turn on the power supply.

3 Settings


Please be aware of the following:

- The floor temperature is measured where the floor sensor is placed.
- The temperature of the bottom of a wooden floor can be up to 10 degrees higher than the top.
- Floor manufactures often specify the max temperature on the top surface of the floor (usually 27-28°C).
- Always use a floor sensor or a room + floor sensor combination to control floor heating. Without a floor sensor, the temperature control may be less accurate and you risk overheating the floor.

Thermal resistance [m²K/W]	Examples of flooring	Details	Approximate setting for 25°C on top surface of floor
0.05	8 mm HDF based laminate	> 800 kg/m ³	28°C
0.10	14 mm beech parquet	650 - 800 kg/m ³	31°C
0.13	22 mm solid oak plank	> 800 kg/m ³	32°C
< 0.17	Max. carpet thickness suitable for floor heating	acc. to EN/IEC 1307	34°C
0.18	22 mm solid fir planks	450 - 650 kg/m ³	35°C

How to change the minimum and maximum floor temperatures

1. Remove the adjustment button.
2. Move the pins to the desired positions.
3. Put the adjustment button back in place.

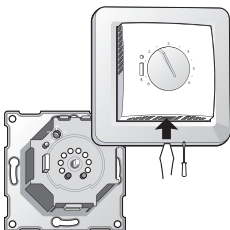

4 Warranty



5 Disposal Instruction




Danfoss A/S
Electric Heating Systems
Ulvehavevej 61
7100 Vejle
Denmark
Phone: +45 7488 8500
Fax: +45 7488 8501
E-mail: EH@DEVI.com
www.DEVI.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. DEVI and the DEVI logo-type are trademarks of Danfoss A/S. All rights reserved.

DEVireg 528 ELKO

140F1030

Thermostat
- Floor Sensor
220-240V~
50-60Hz~
+5 to +45°C
10A/2300W@230V~
IP 31

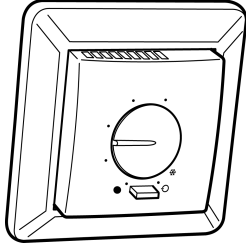

Product Documentation

FI SSTL 3531035

Designed in Denmark for Danfoss A/S

