Ultrathin Touch Slide RF Remote Controller



Scanstrip REMOTE DIM/CCT/RGBW Art.nr. 71155 / 71156 / 71157-15

Touch color slide / 1-3 color / Wireless remote 30m distance / CR2032 battery / Magnet stuck fix



C€ RoHS @mc LVD RED

Features

- · Apply to single color, dual color or RGBW LED controller.
- Ultra sensitive dimming/color adjustment touch slide.
- · Fach remote can match one or more receivers
- CR2032 battery powered.
- · Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m(Barrier-free space)

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,IVD,RED

Warranty	
Warranty	5 years
Weight	
Net weight	24g
Gross weight	64g

Mechanical Structures and Installations



To fix the remote, three options are offered for selection:

Option 1: stick the remote on any metal surfaces directly.

Option 2: fix the remote back holder on the wall with two screws.

Option 3: adhere the remote back holder to the wall using glue.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key,

immediately press on/off key on the remote.
The LED indicator fast flash a few times
means match is successful

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart


Match:


Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Doloto.

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

English User Manual 2021

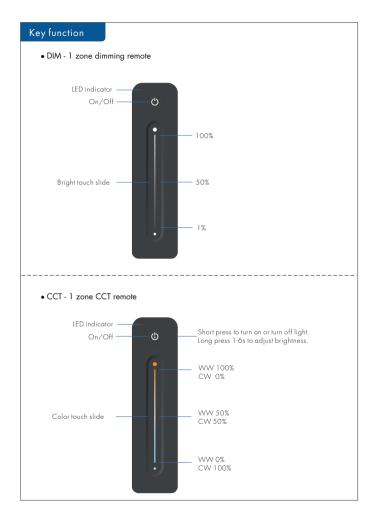

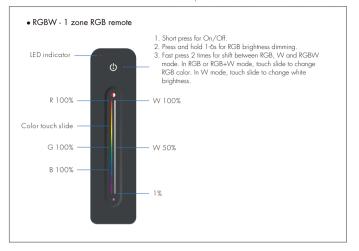

Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity.
 A long time without the remote control, remove the battery.
 When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

English User Manual 2021