

Hjelpeliste faseskinner

Hjelpeliste faseskinner

					Faseskinner:											
					KDN 180A	KDN 180B	KDN 280A	KDN 280B	KDN 380A	KDN 380B	KDN 451D	KDN 451E	KDN 480A	KDN 480B	KDN 380R	
					1659362	1659365	1659361	1659364	1659360	1659363	1659366	1659368	1659367	1659369	1659358	
					1-pol	1-pol	2-pol	2-pol	3-pol	3-pol	3-pol	3-pol	3-pol+N	3-pol+N	3-pol	
					12 mod	1 mtr.	12 mod	1 mtr.	12 mod	1 mtr.	12 mod	1 mtr.	12 mod	1 mtr.	12 mod	
					L1		L1-L2 / N		L1-L2-L3		L1-N / L2-N / L3-N		L1-L2-L3-N		L1-L2/L1-	
Automatsikringer			El.nr. fra-til	Modul												
	NBN106 - NBN163	1x6A - 1 x63A	16 636 00 - 09	1	X	X										
	NCN106 - NCN163	1x6A - 1x63	16 636 00 - 69	1	X	X										
	NDN106 - NDN163	1x6A - 1x63A	16 637 35 - 44	1	X	X										
	NBN206 - NBN263	2x6A - 2x63A	16 636 10 - 19	2			X	X	X	X						
	NCN200 - NCN263	2x0,5A - 2x63A	16 636 70 - 84	2			X	X	X	X						
	NDN206 - NDN263	2x6A - 2x63A	16 637 45 - 54	2			X	X	X	X						
	NBN306 - NBN363	3x6A - 3x63A	16 636 20 - 29	3					X	X						
	NCN300 - NCN363	3x0,5A - 3x63A	16 636 85 - 99	3					X	X						
	NDN306 - NDN363	3x6A - 3x63A	16 637 55 - 64	3					X	X						
	NBN506 - NBN563	1+N 6A-1+N 63A	16 636 40 - 49	2			X	X			X	X				
	NCN506 - NCN564	1+N 6A-1+N 63A	16 637 15 - 24	2			X	X			X	X				
	NBN406 - NBN463	4x6A - 4x63A	16 636 30 - 39	4									X	X		
	NCN400 - NCN463	4x0,5A - 4x63A	16 637 00 - 14	4									X	X		
	NDN406 - NDN463	4x6A - 4x63A	16 637 65 - 74	4									X	X		
	NBN606 - NBN663	3x6A+N- 3x63A+N	16 636 50 - 59	4									X	X		
	NCN606 - NCN663	3x6A+N- 3x63A+N	16 637 25 - 34	4									X	X		
Jordfeilautomater			El.nr. fra-til	Modul												
	ADA306 - ADA332	2x6A-2x32A	16 606 00 - 06	3					X	X					X	
	ADA360 - ADA382	2x10A-2x32A	16 606 10 - 16	3					Ved 2 fase fordeling						X	
	ADA906 - ADA920	1+N 6A-1+N 20A	16 606 20 - 23	2			X	X			X	X				
	ADA956 - ADA975	1+N 6A-1+N 25A	16 606 24 - 28	2			X	X			X	X				