



—  
INSTALLATION INSTRUCTION

## Auxiliary contact

OA1G01-OA1G10, OA7G10, OA8G10

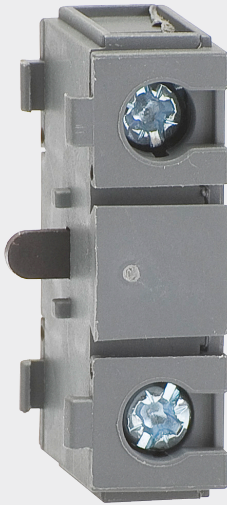


# Auxiliary contacts

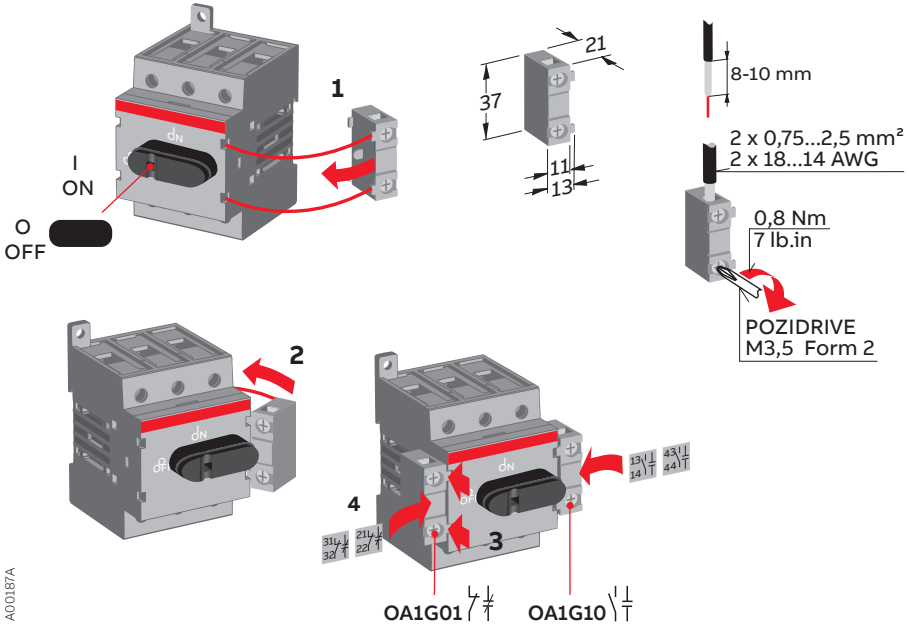









A00187A

# Auxiliary contacts

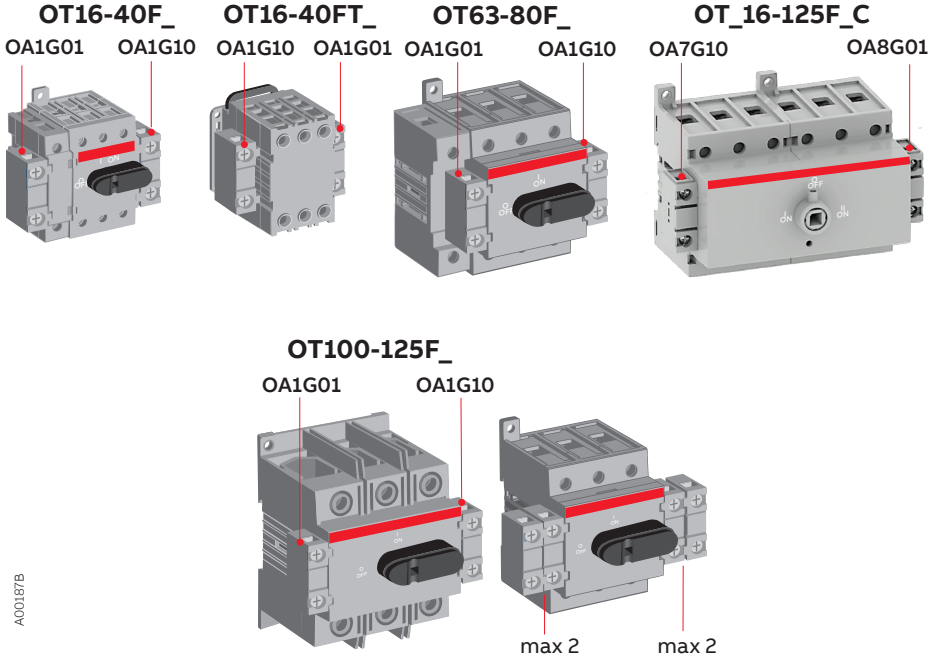


A00187B

# OA1G10-OA3G01

   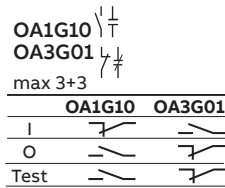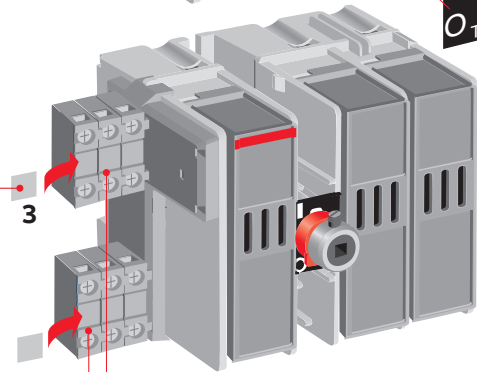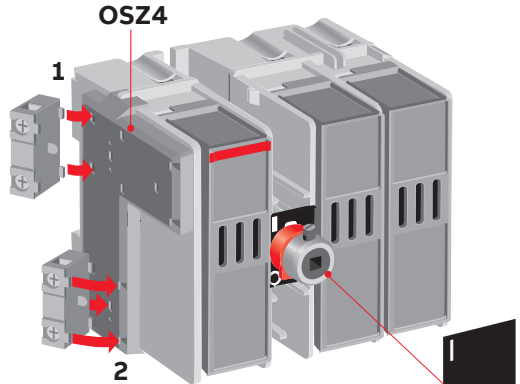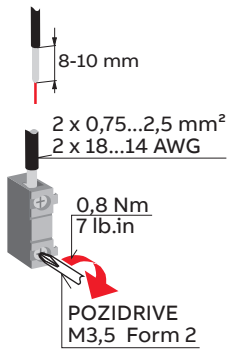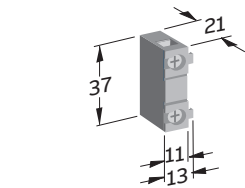


OS40FDS\_

# OA1G10-OA3G01, OA5G10-OA6G01

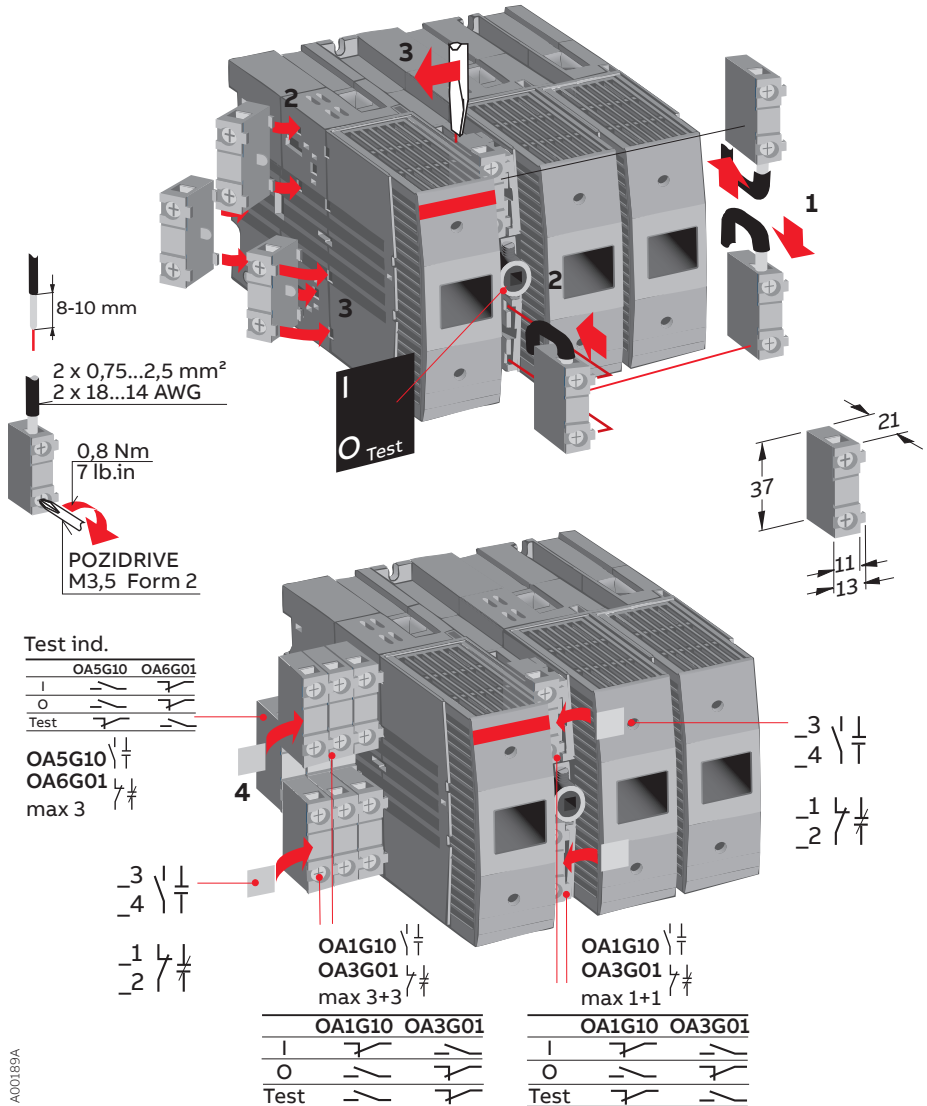

# OA1G10-OA3G01

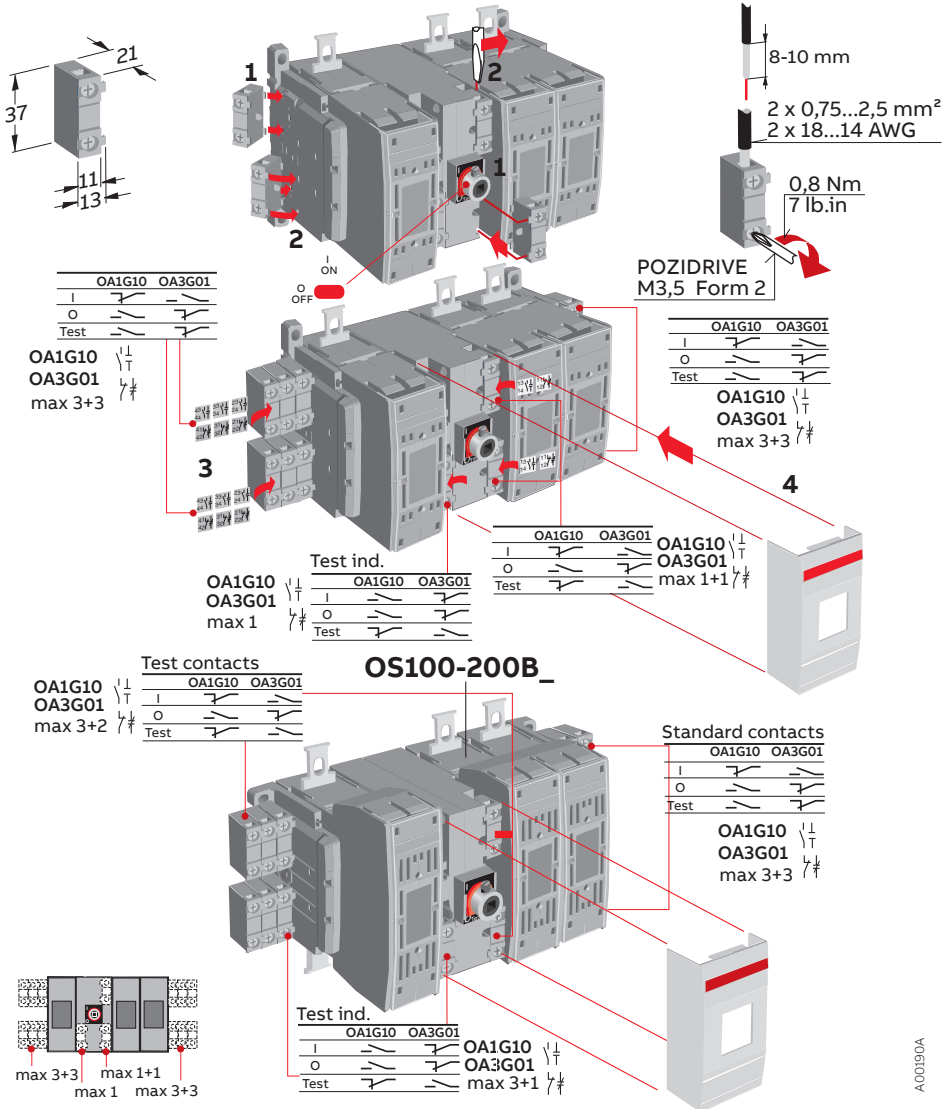





---

## Contact us

### **ABB Oy**

P.O. Box 622  
FI-65101 Vaasa  
Finland

**[abb.com/lowvoltage](http://abb.com/lowvoltage)**