







INSTALLATION INSTRUCTION

Handles



OH_S_

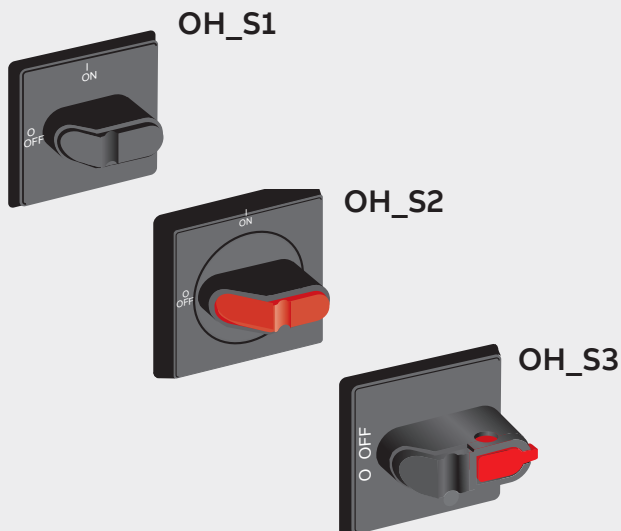


OH_S1P, OH_S2P, OH_S3P

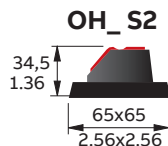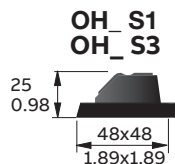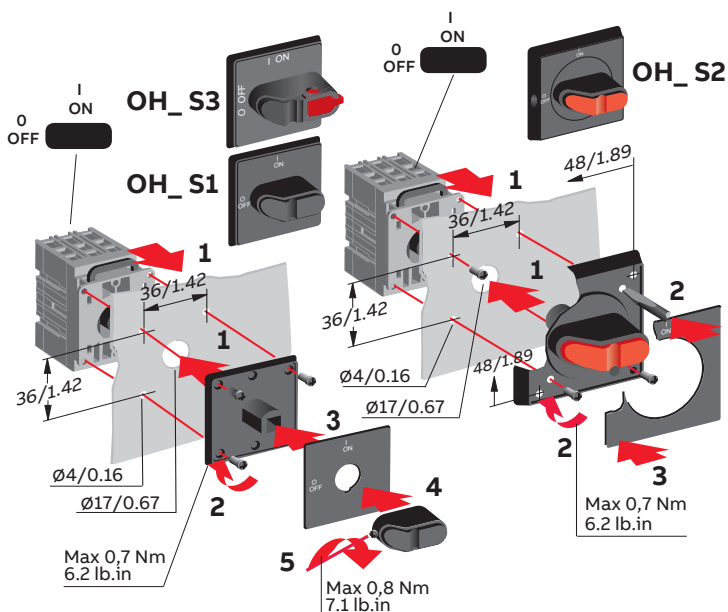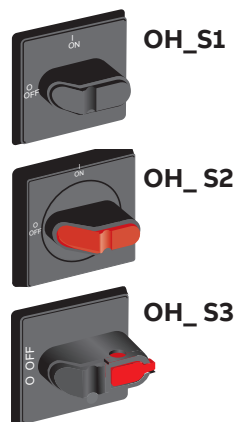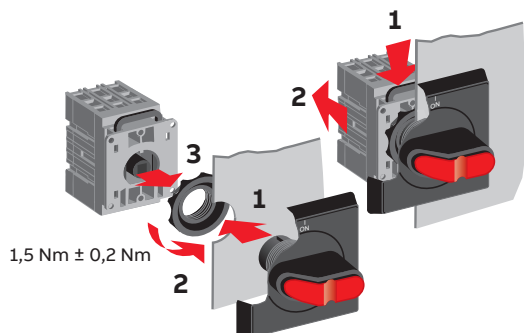

OH_S1R, OH_S2R, OH_S3R

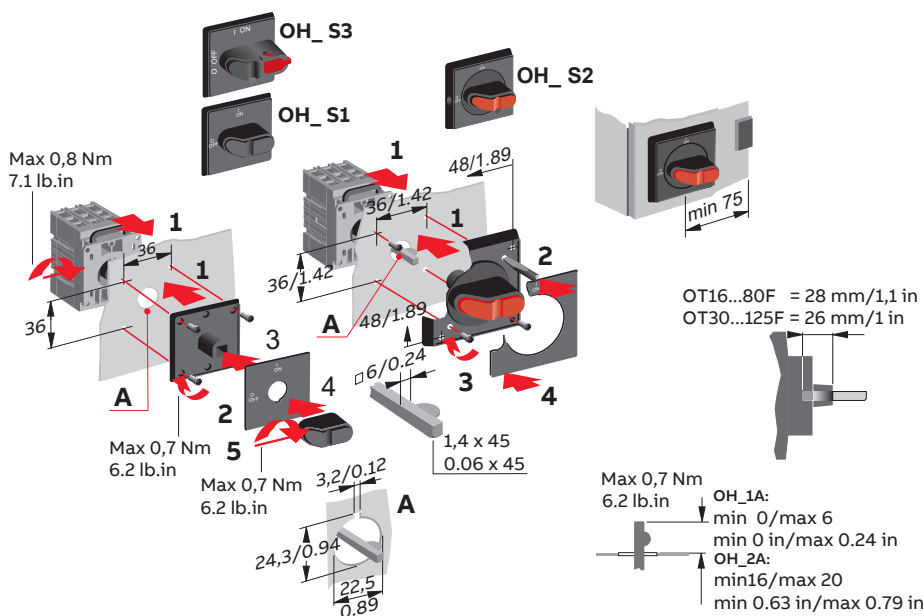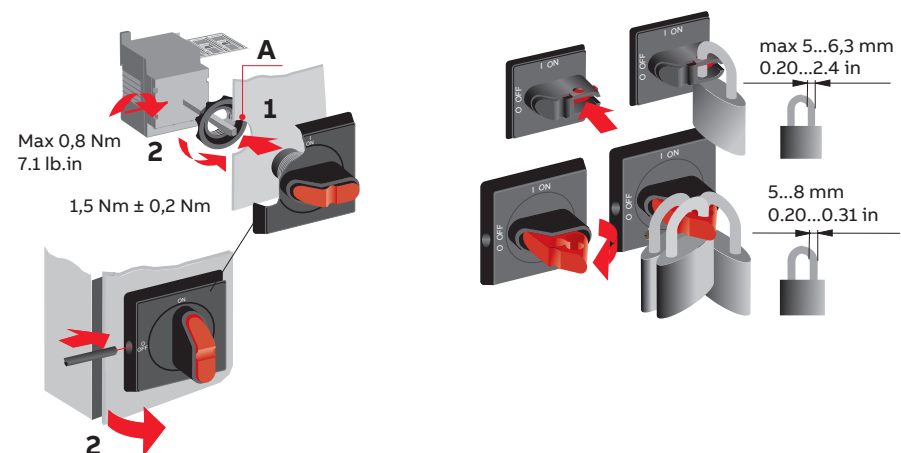

OH_S1A, OH_S3A

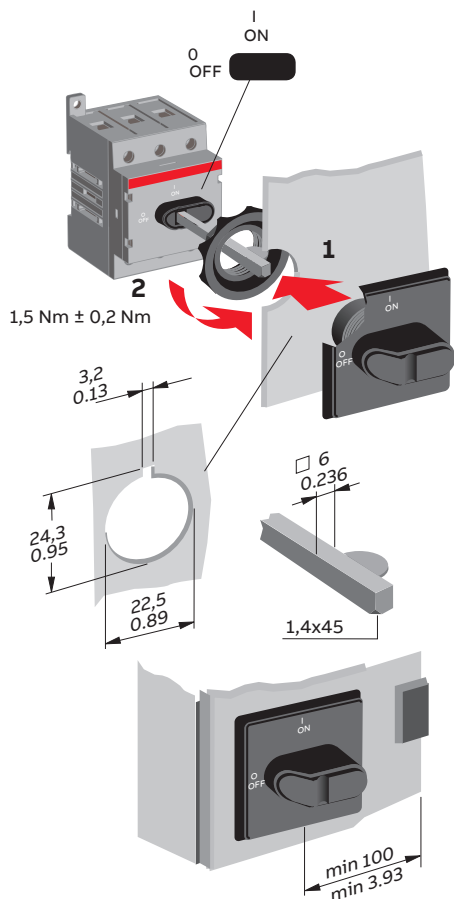


max 5...6,3 mm
0.20...2.4 in



OH_S1AH1





OH_S3AH1


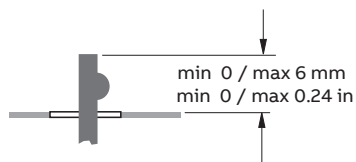


min 0 / max 6 mm
min 0 / max 0.24 in

 
OT16...80F = 28 mm / 1.1 in
OT30...125F = 26 mm / 1 in

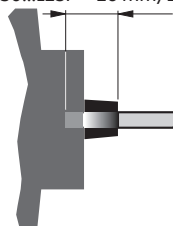

OH_S2A

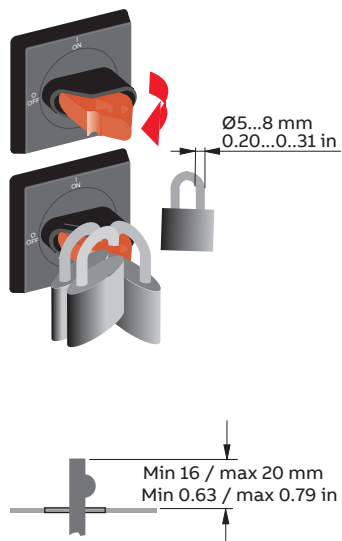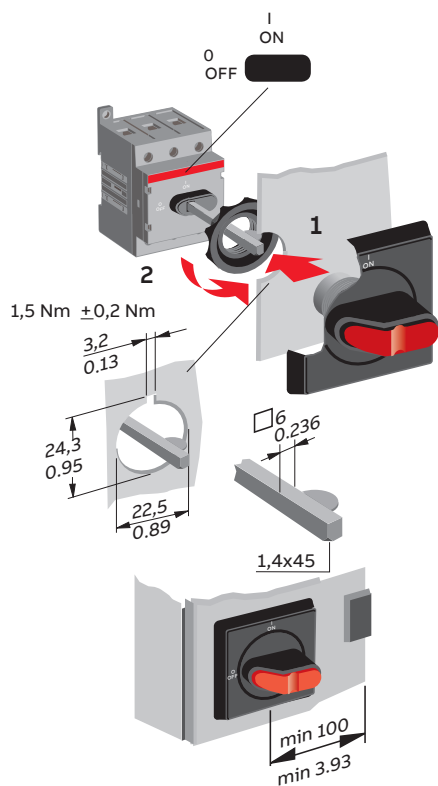

OT16...80F = 28 mm / 1,1 in
OT30...125F = 26 mm / 1 in

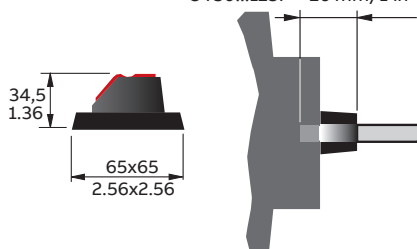



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage