


SACE Tmax XT

AUP - Contatti ausiliari di posizione per parte fissa
 AUP - Auxiliary position contacts for fixed part
 AUP - Hilfspositionsmeldekontakte, für Unterteil
 AUP - Contacts auxiliaires de position pour partie fixe
 AUP - Contactos auxiliares de posición para parte fija


XT1-XT2-XT2-XT4/III-IV

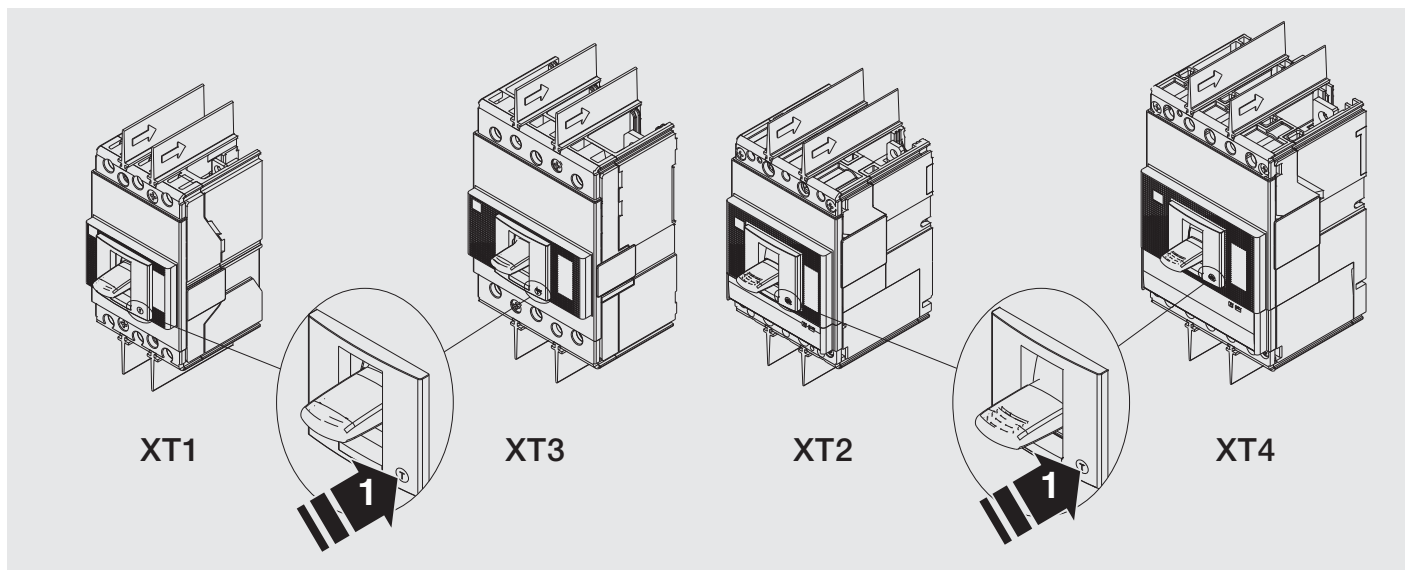

		XT1		XT2		XT3		XT4	
P-W S75/1..4		III	IV	III	IV	III	IV	III	IV
		4	4	2	4	4	4	4	4
		4	4	2	4	4	4	4	4


		XT2		XT4	
W S75E/1..2		III	IV	III	IV
		2	2	2	2
		1	1	1	1

A

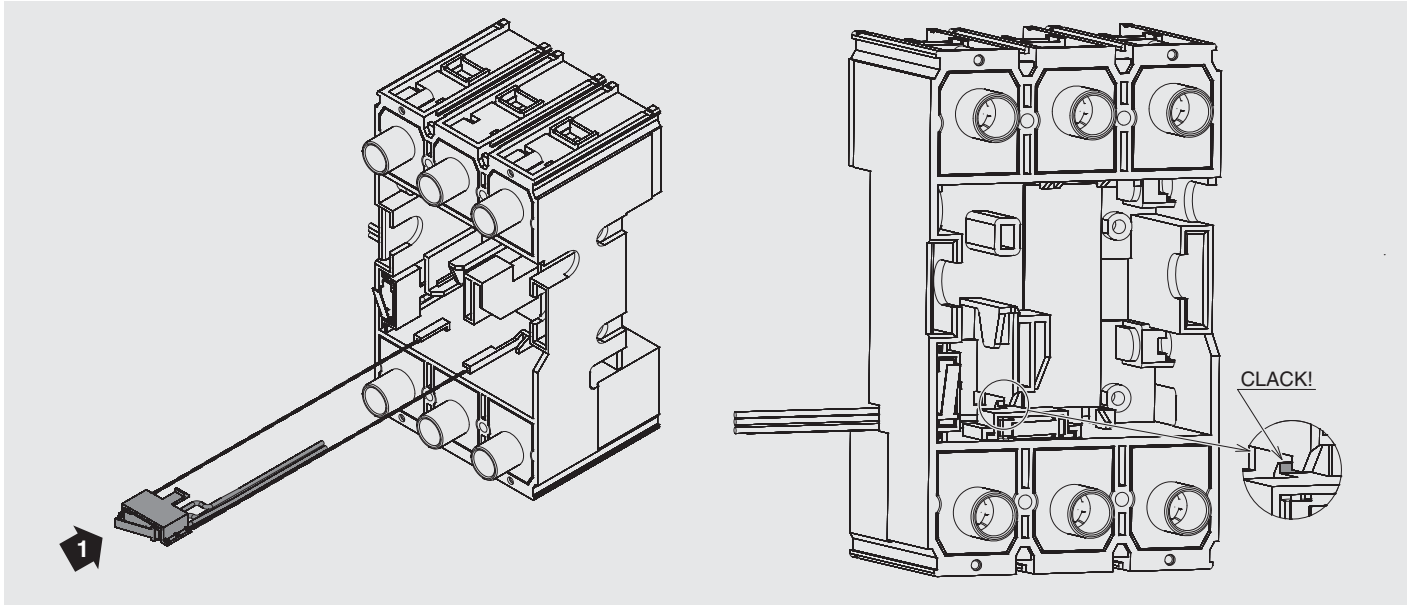


B1

XT1-S75/1..4

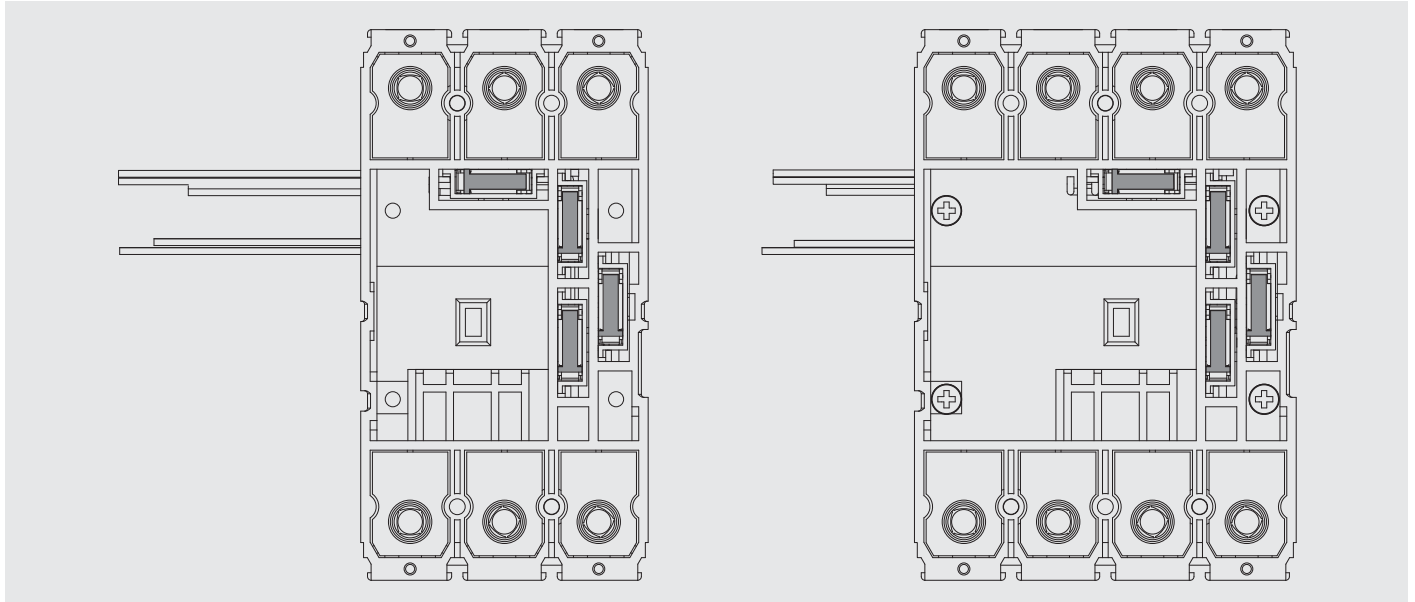


B2

XT1

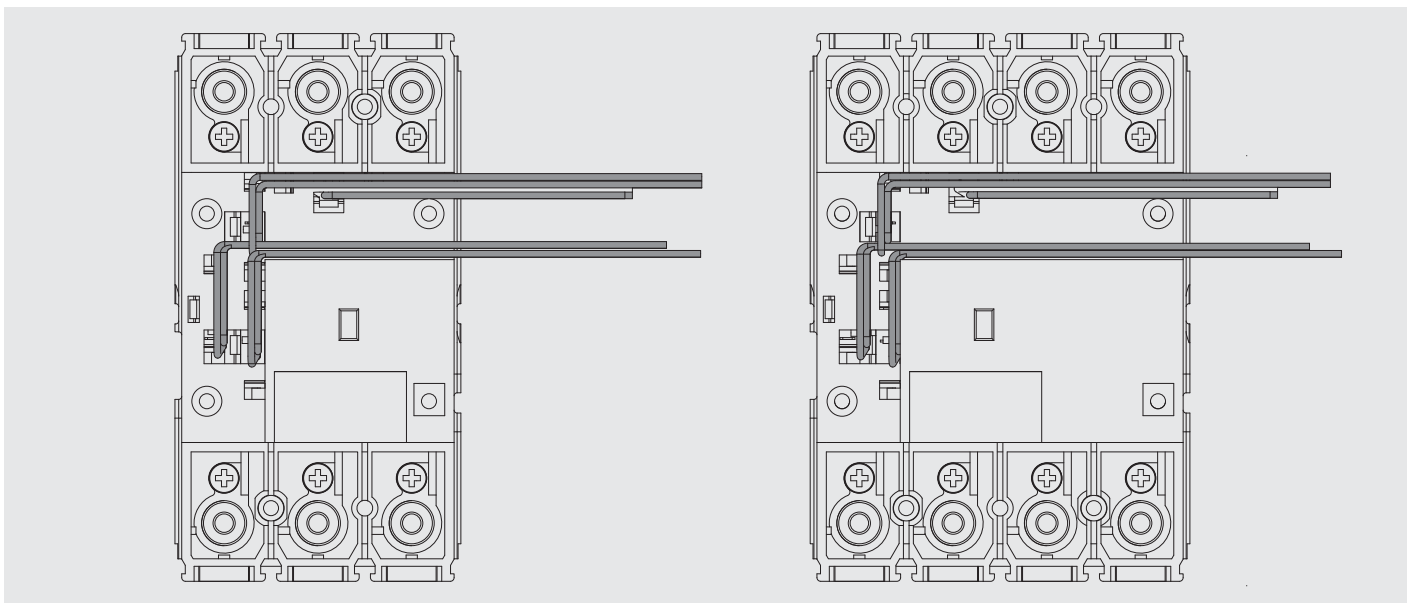


C1

XT3-S75I/1..4

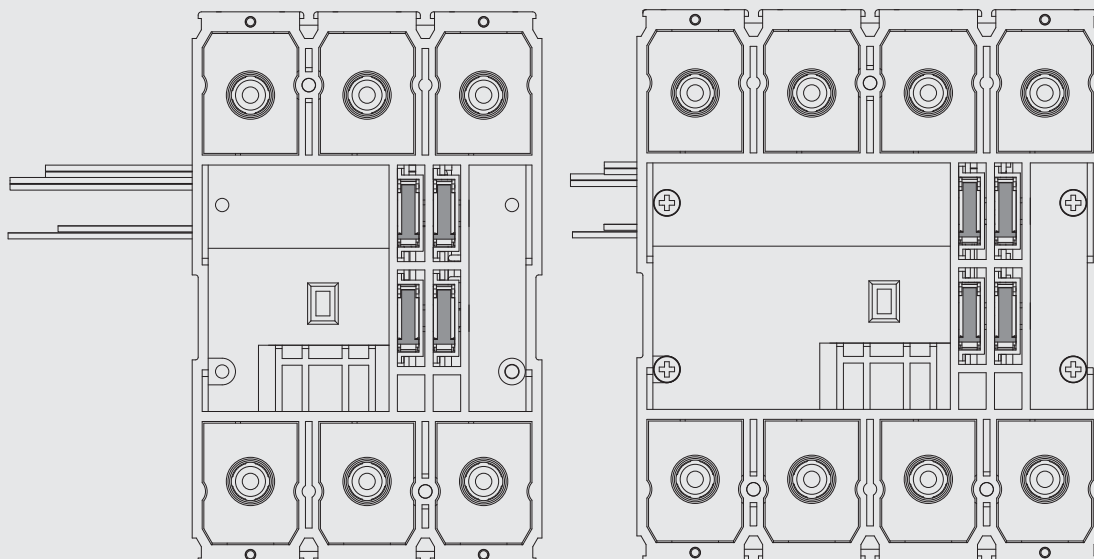


C2




XT3

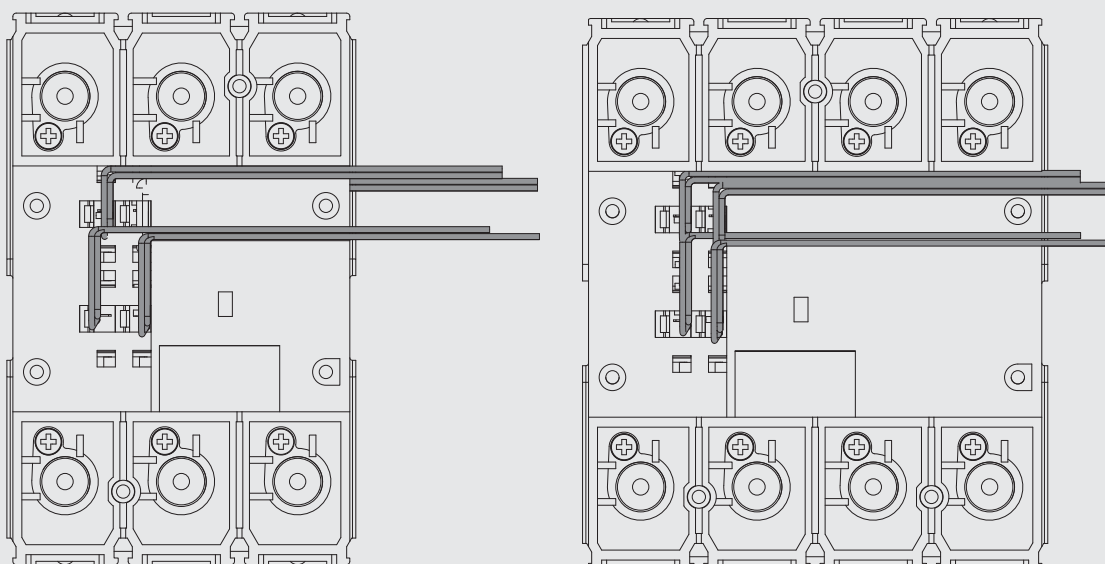

D1


XT2-S75I/1..4

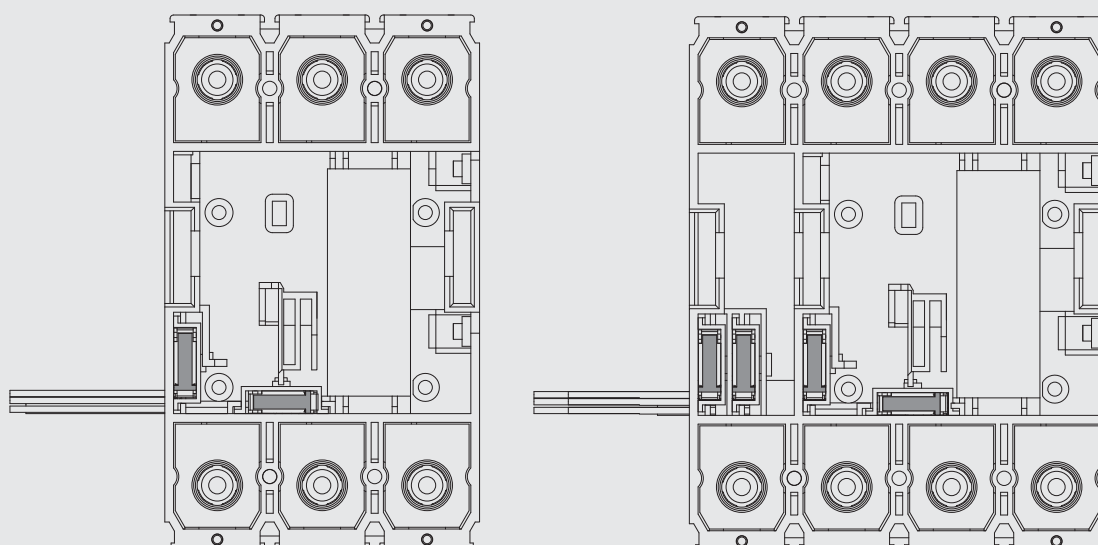

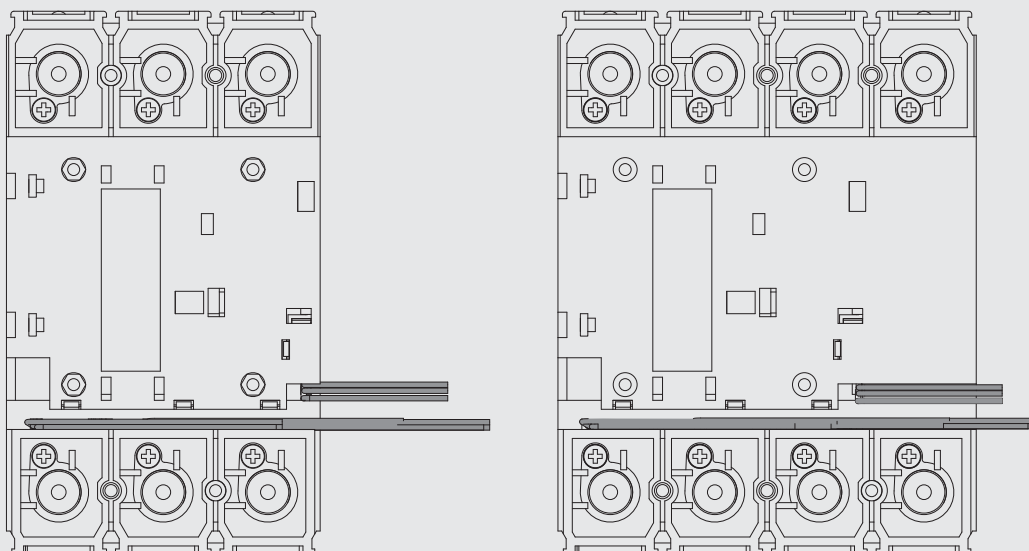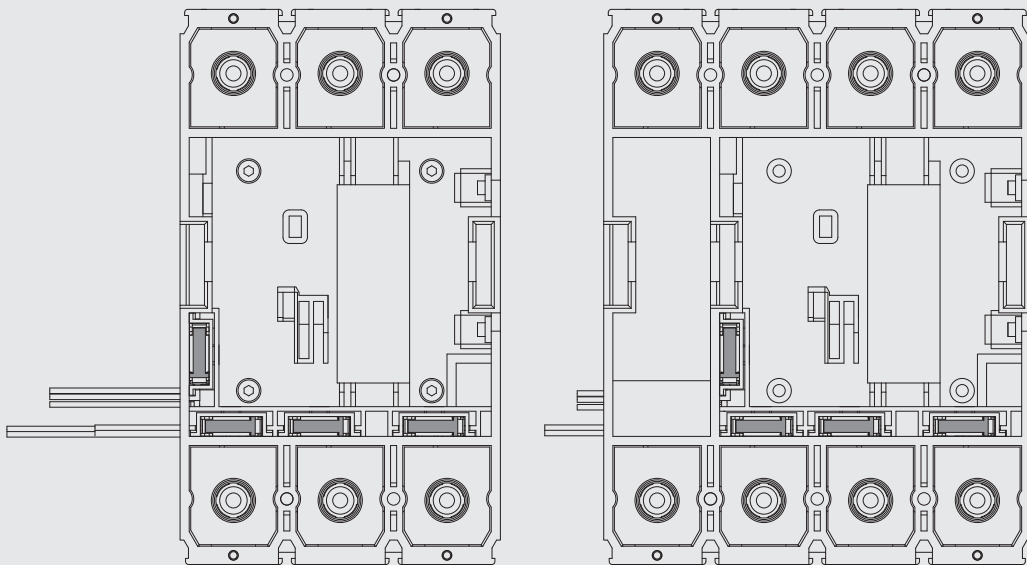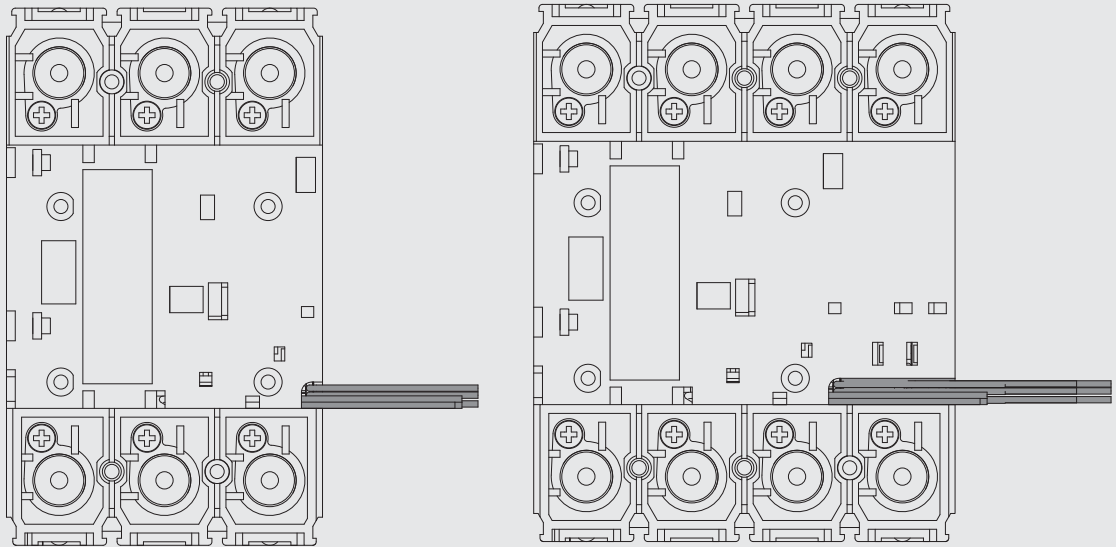


F

ONLY FOR W-S75E/1..2

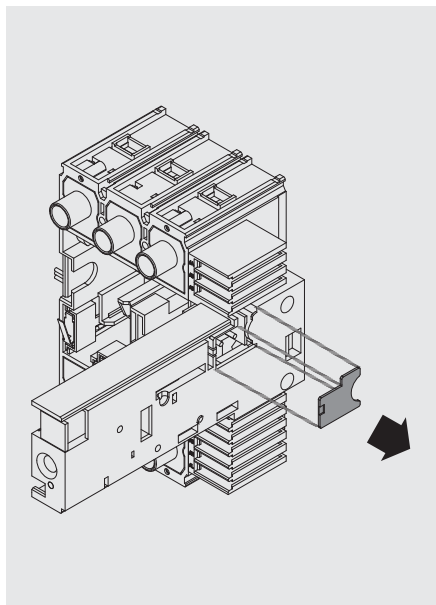


G

w

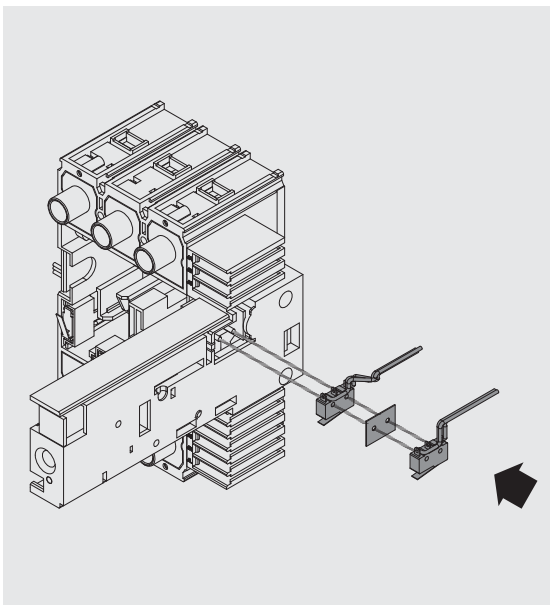

H

w

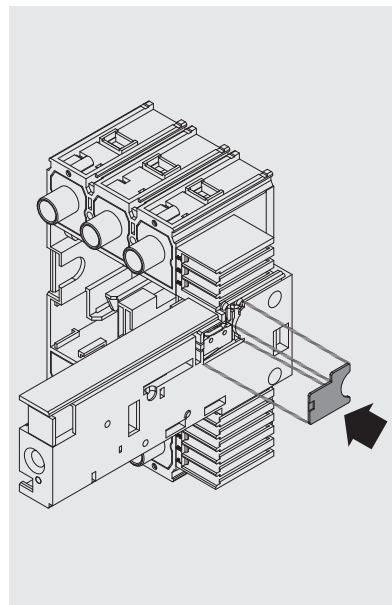

I



For more information please contact:

ABB S.p.A.
 ABB SACE Division
 Via Baioni, 35
 24123 Bergamo - Italy
 Phone: +39 035 395 111
 Fax: +39 035 395 306 - 433
www.abb.com

Power and productivity
 for a better world™

