

SACE Tmax XT

AUX - Contatti ausiliari non cablati



AUX - Not wired auxiliary contacts

AUX - Hilfsschalter verdrahtet

AUX - Contactc auxiliaires not cablés

AUX - Contactos auxiliares non cableados

AUX - 不带导线辅助触点

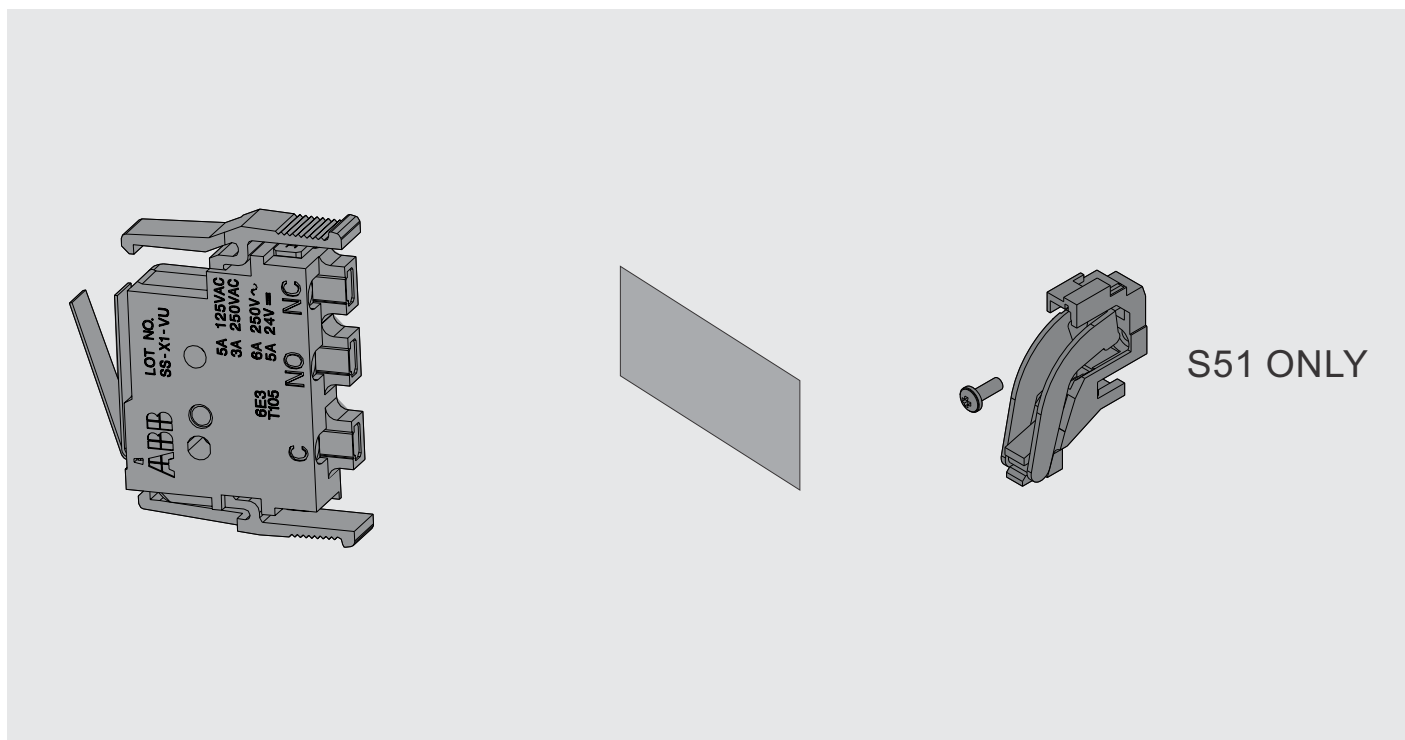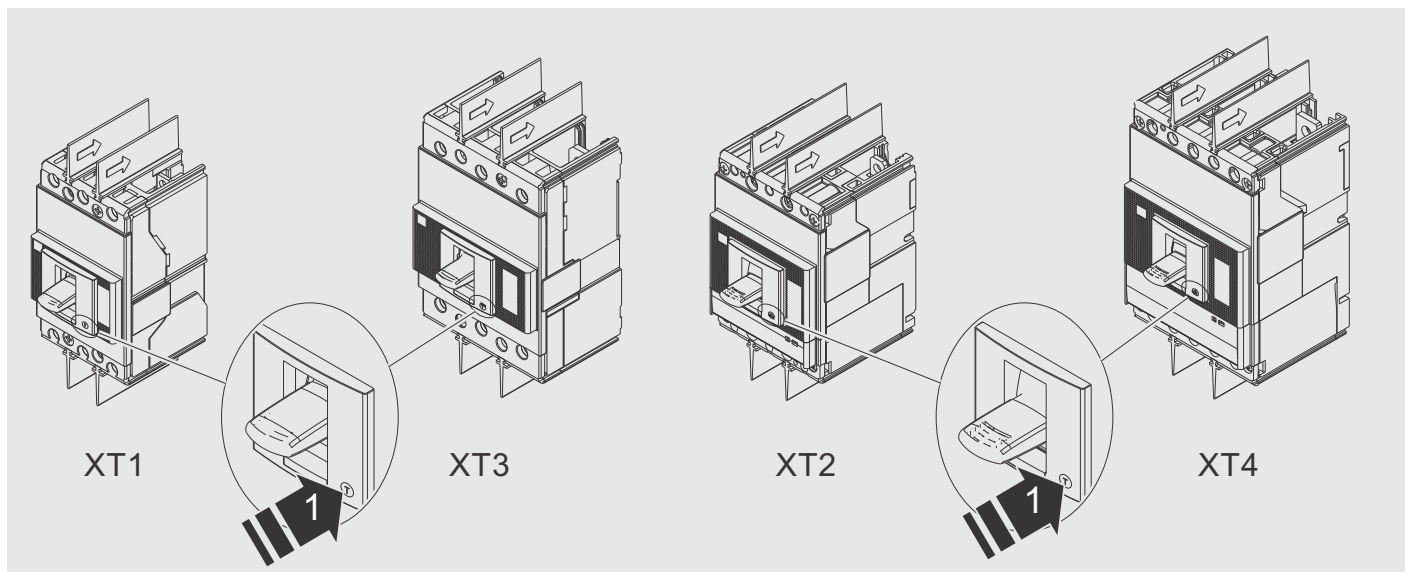

IEC60947-5-1 

GB/T14048.5

AUX 250V, AUX-SA 250V							
IEC	Voltage	Category / Current					
		AC-15	AC-14	AC-13	DC-14	DC-13	DC-12
	250Vac	4A	5A	6A	-	-	-
	125Vac	5A	6A	6A	-	-	-
	250Vdc	-	-	-	0.03A	0.03A	0.3A
	110Vdc	-	-	-	0.05A	0.05A	0.5A

U_{imp} = 2.5kVU_i = 300V

UL	Voltage	max Current
	250Vac	3A
	125Vac	5A
	250Vdc	0.2A
	125Vdc	0.4A


IEC	Voltage	max Current	min Current
	24Vdc	0.1A @ 30Vdc	1mA @ 5Vdc



UL	Voltage	max Current
	125Vac	0.1A
	30Vdc	0.1A


1

XT1-XT2-XT3-XT4

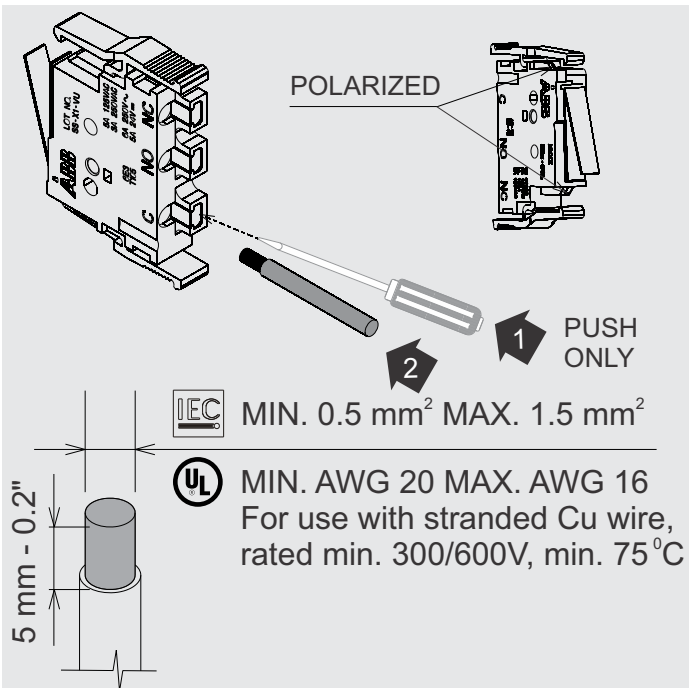


2

ONLY FOR XT1 F - XT3 F

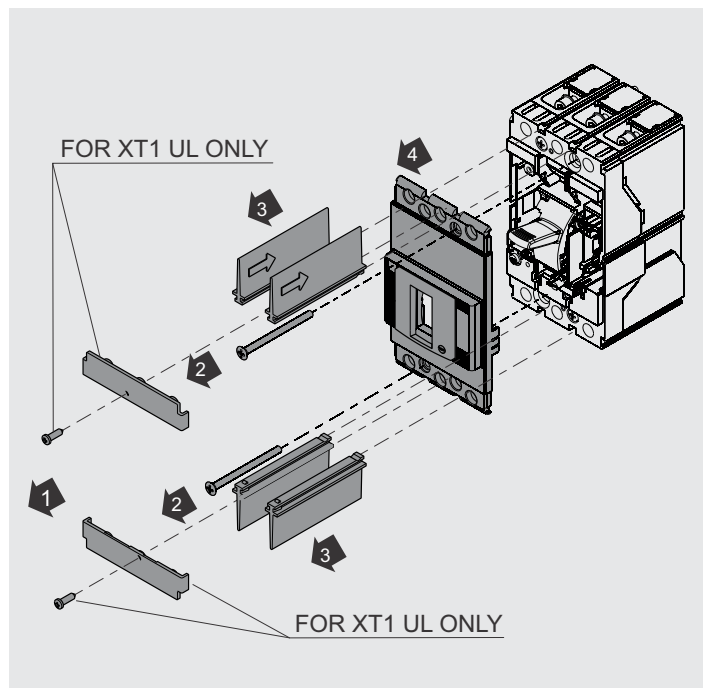


3

XT2-XT4

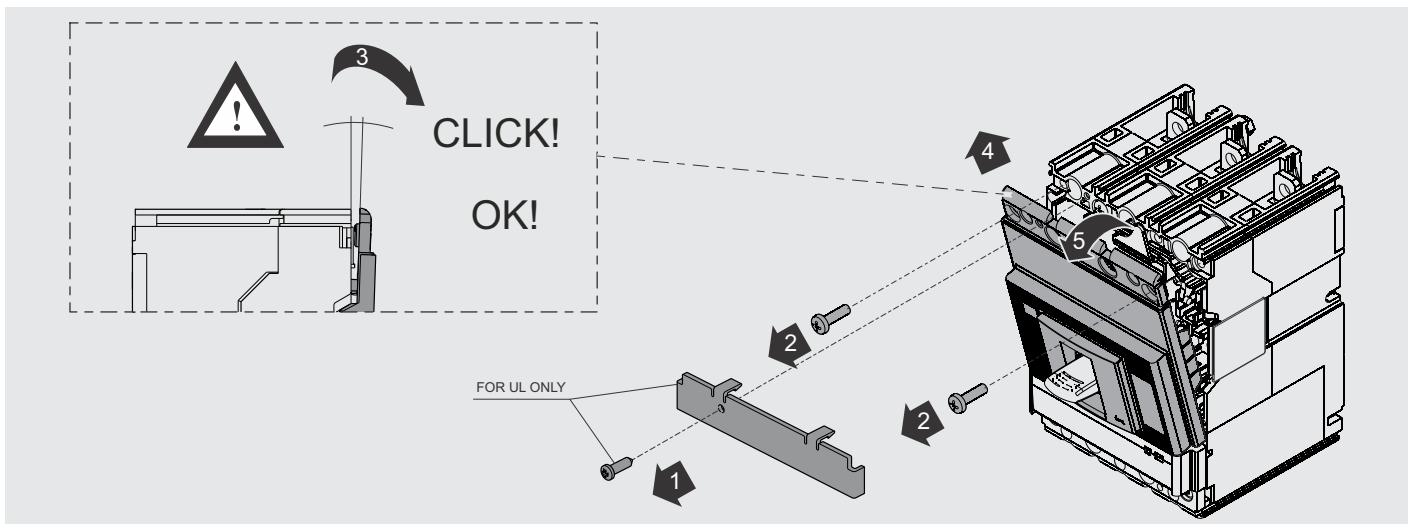


4

FOR XT4 V-X ONLY

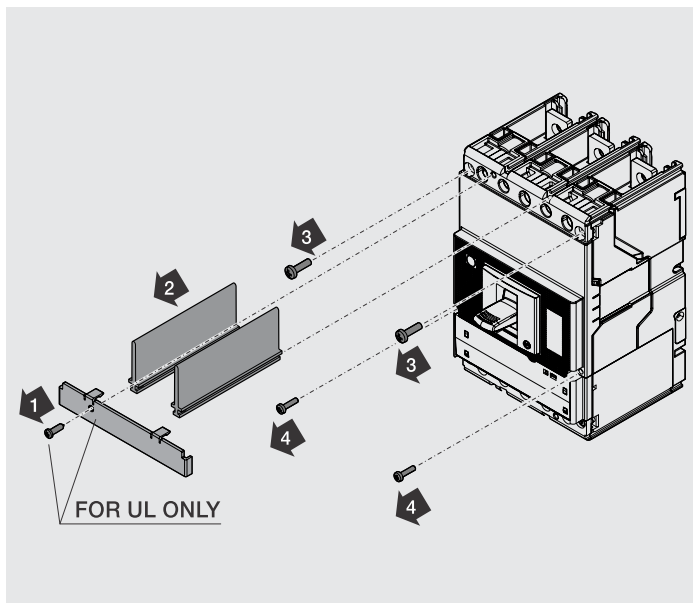


5

XT1-XT2-XT3-XT4

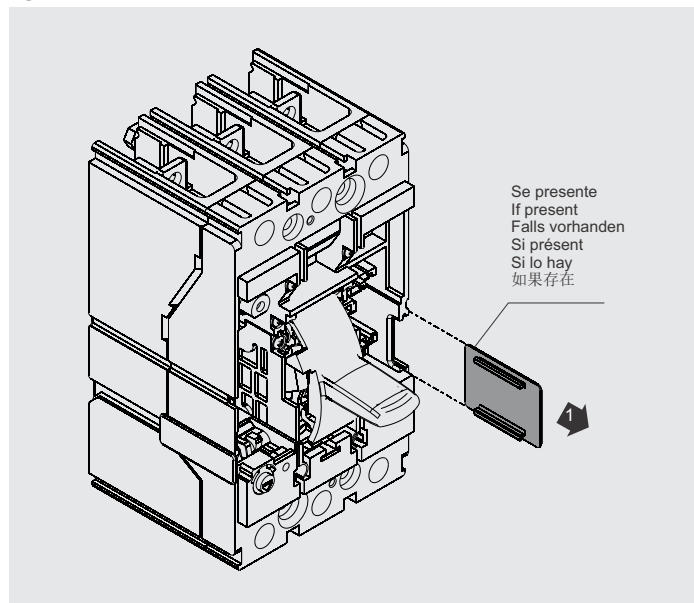


6

Example with Q/2 on XT1-XT3

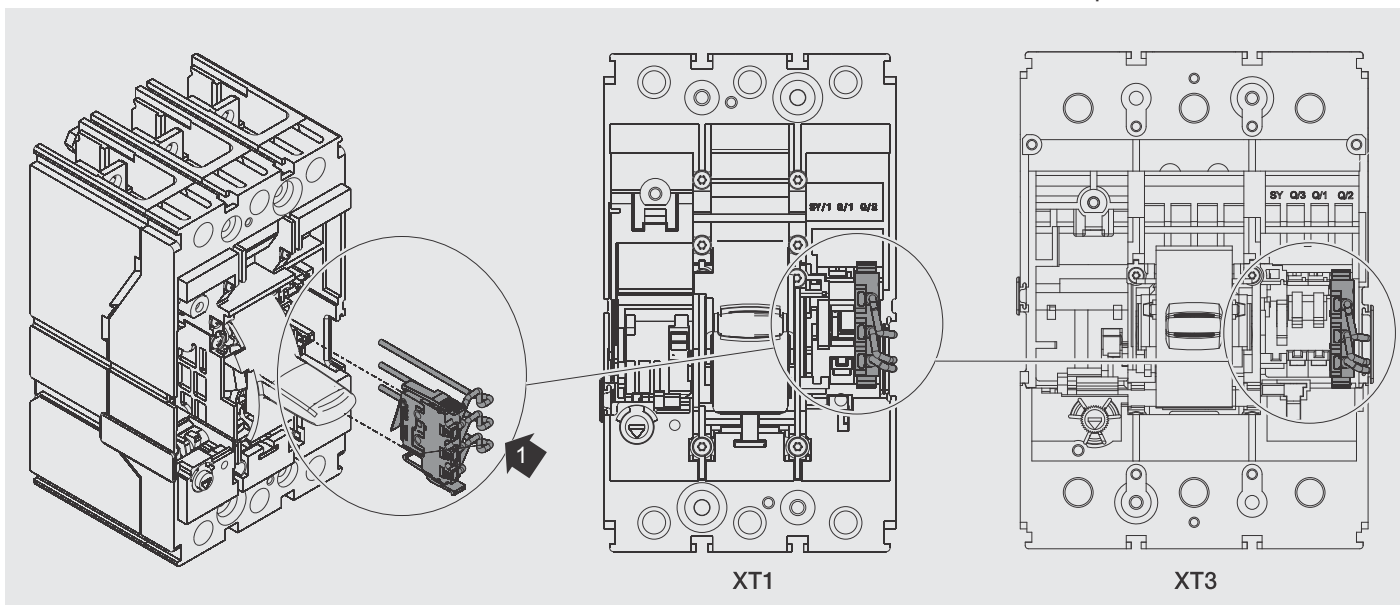


7

Example with SY/1 on XT1-XT3

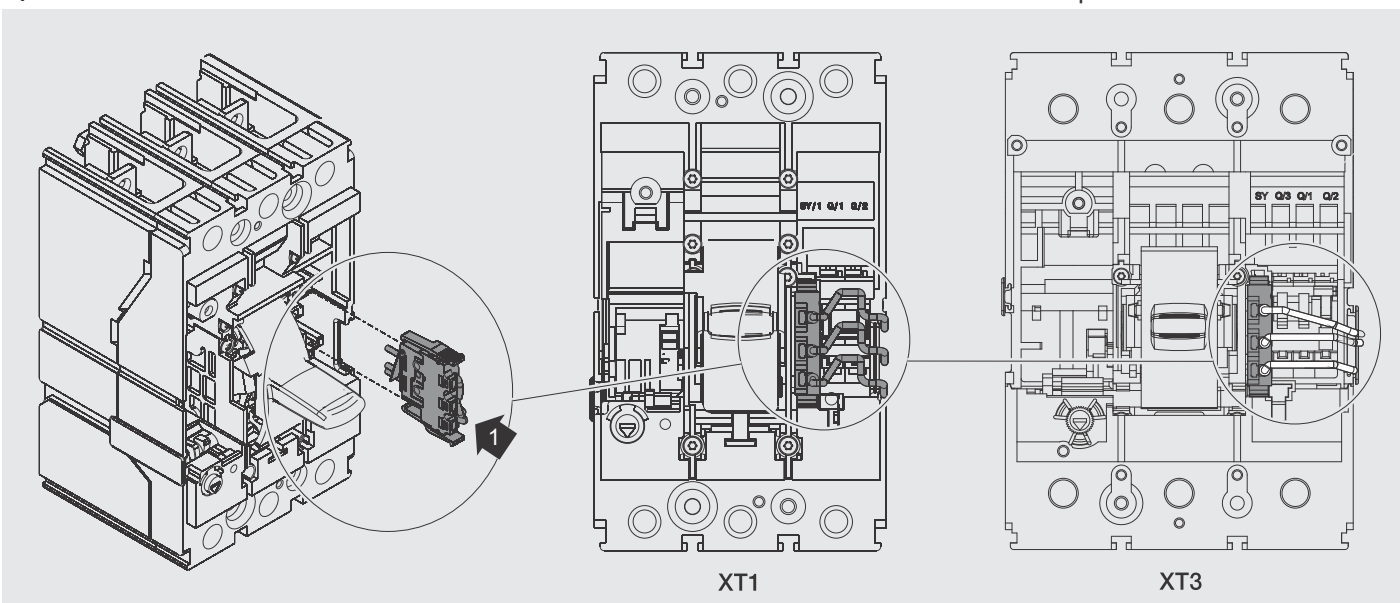


8

XT2-XT4/F-P

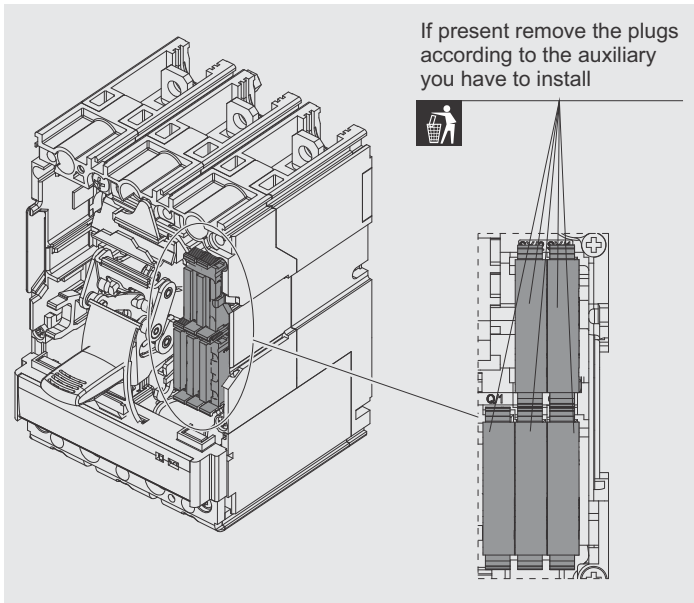


9

XT2-XT4/F-P

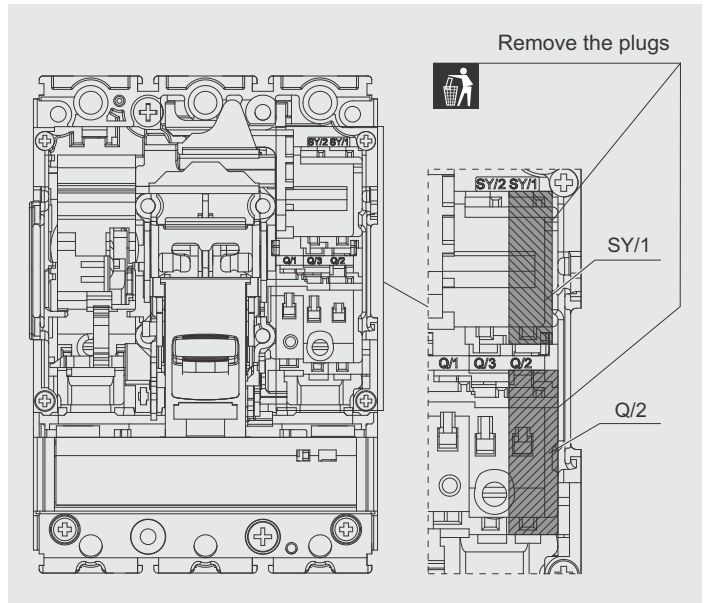


10

Example with SY/1 on XT2-XT4

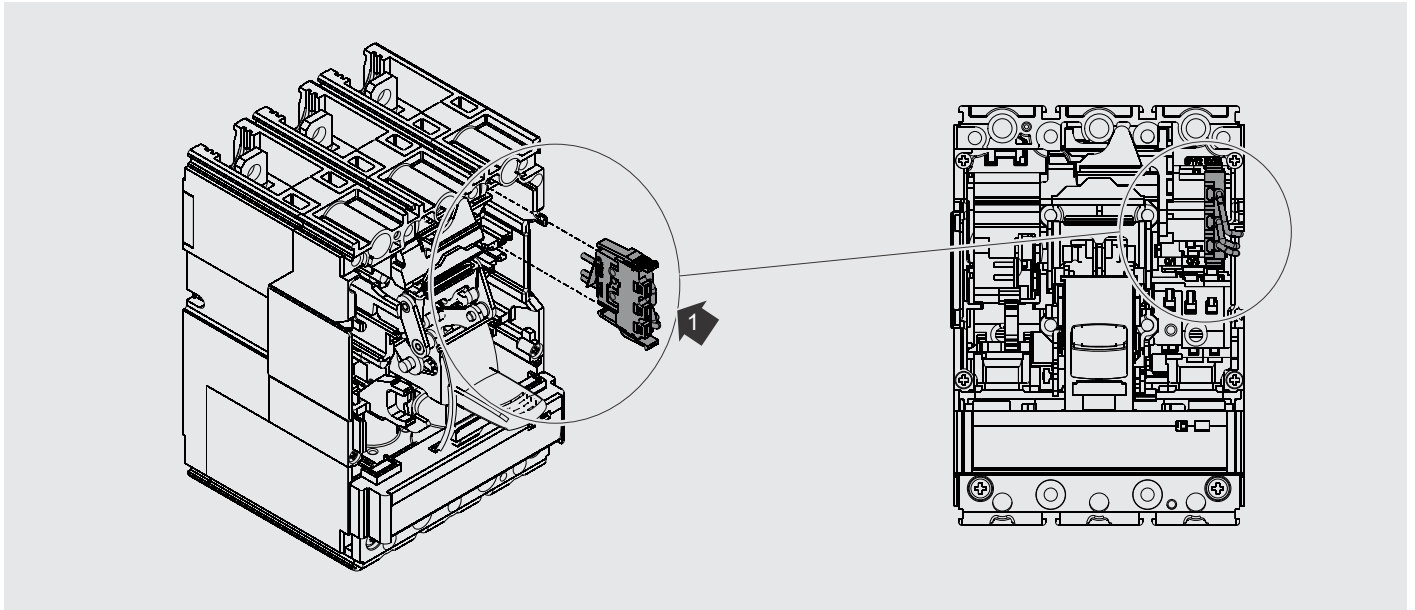


11

Example with Q/2 on XT2-XT4

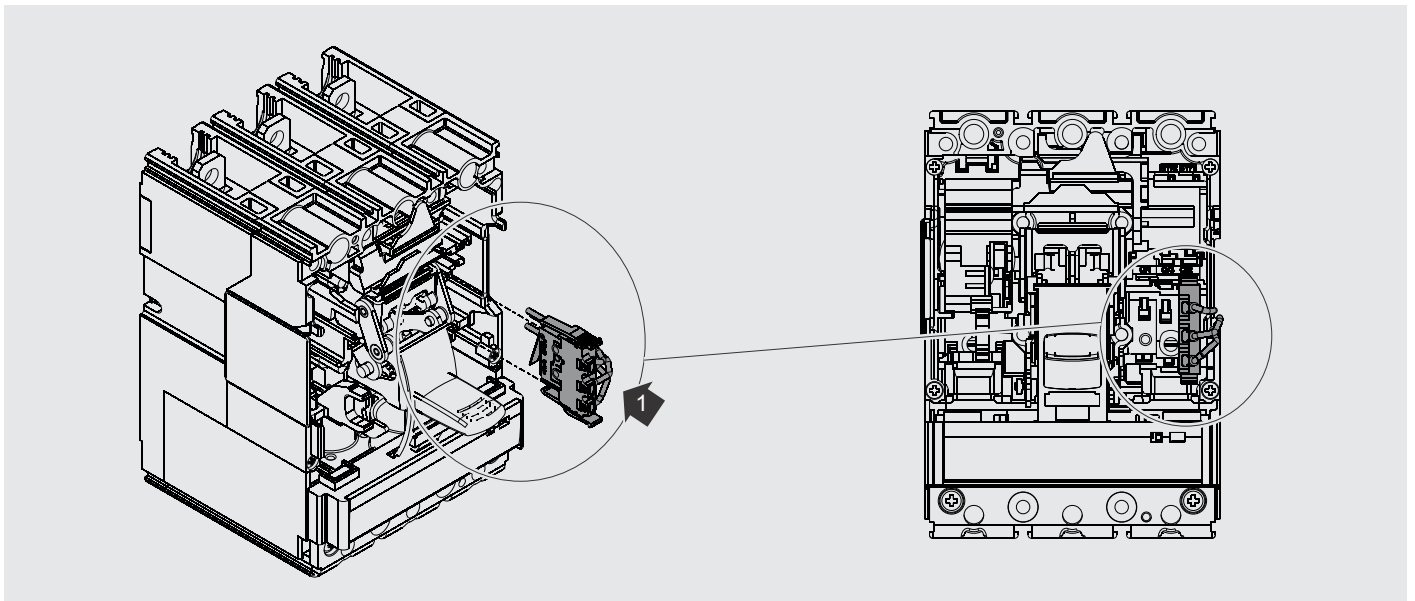


12

XT2-XT4

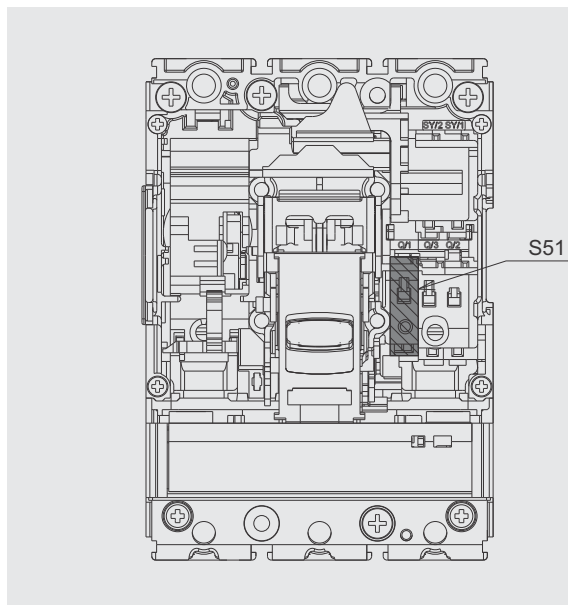


13

XT2-XT4

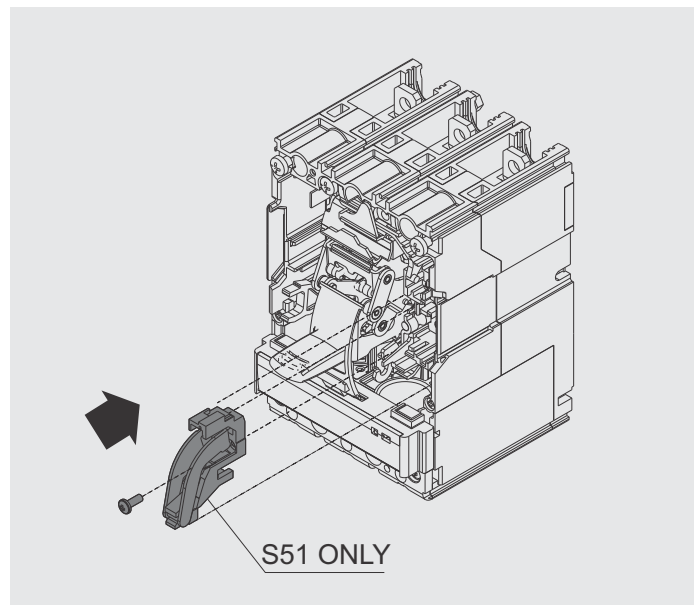


14

XT2-XT4

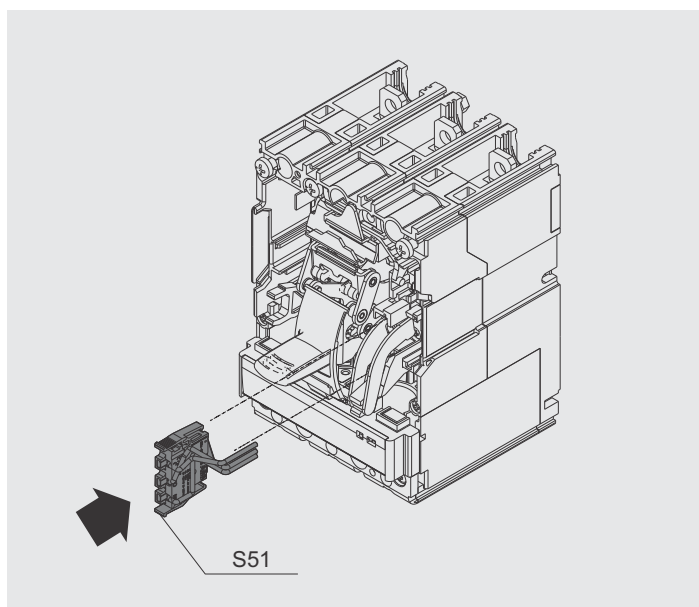


15

XT1-XT2-XT3-XT4

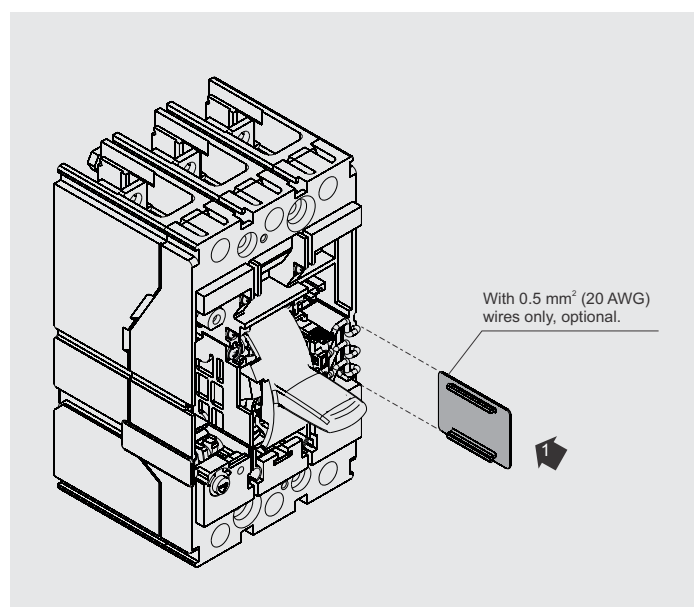


16



XT1-XT3


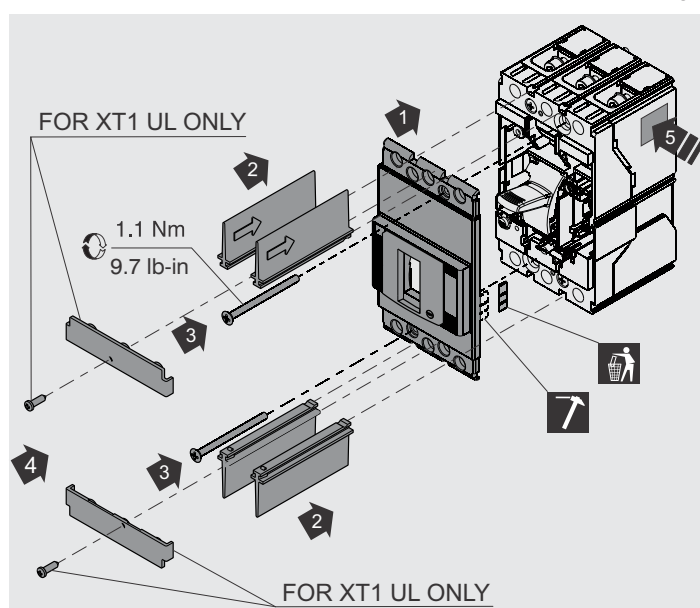



17

XT2-XT4

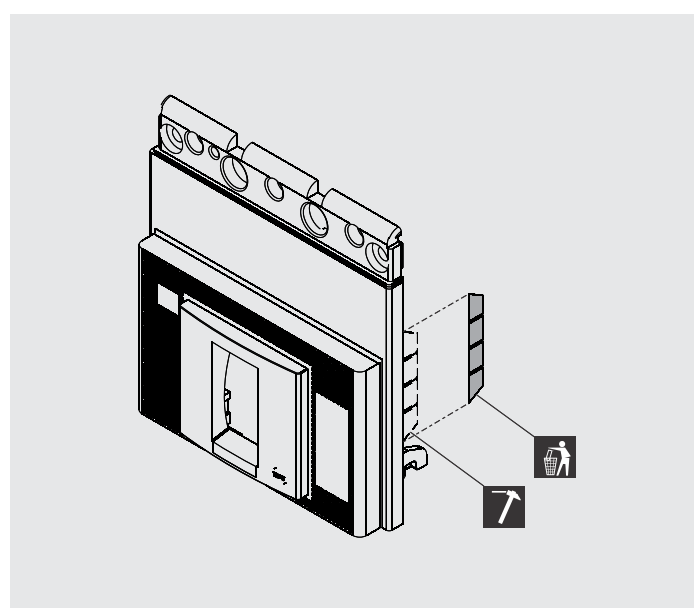

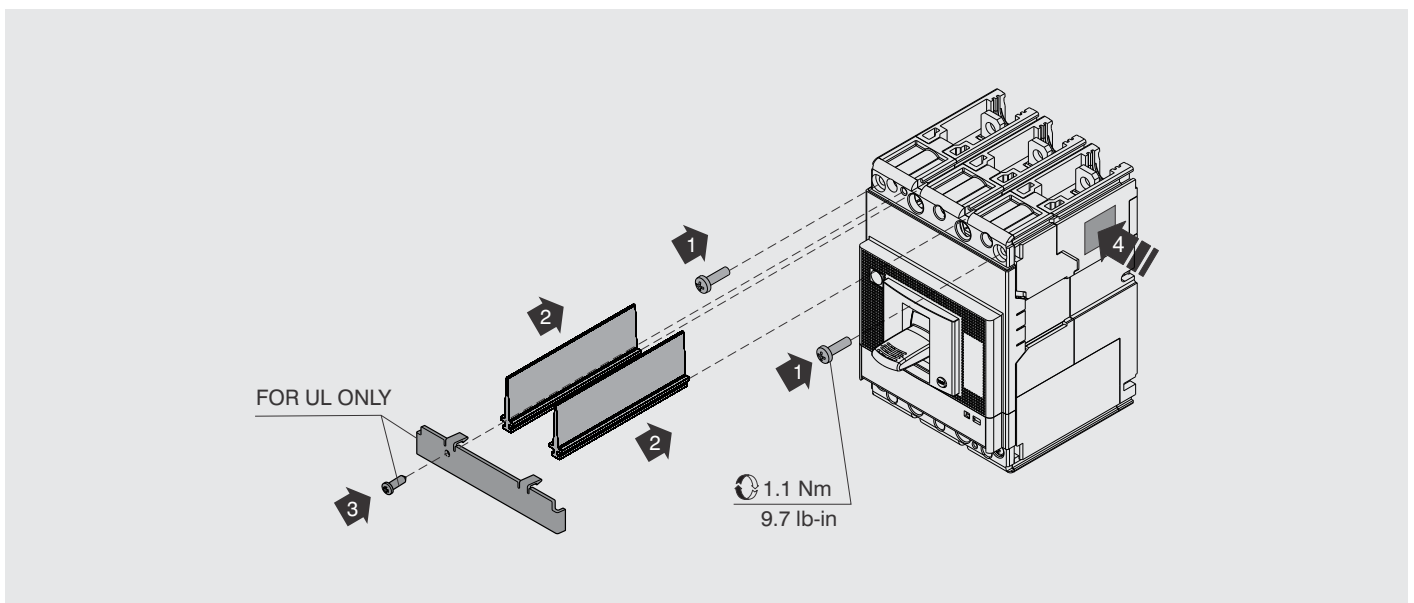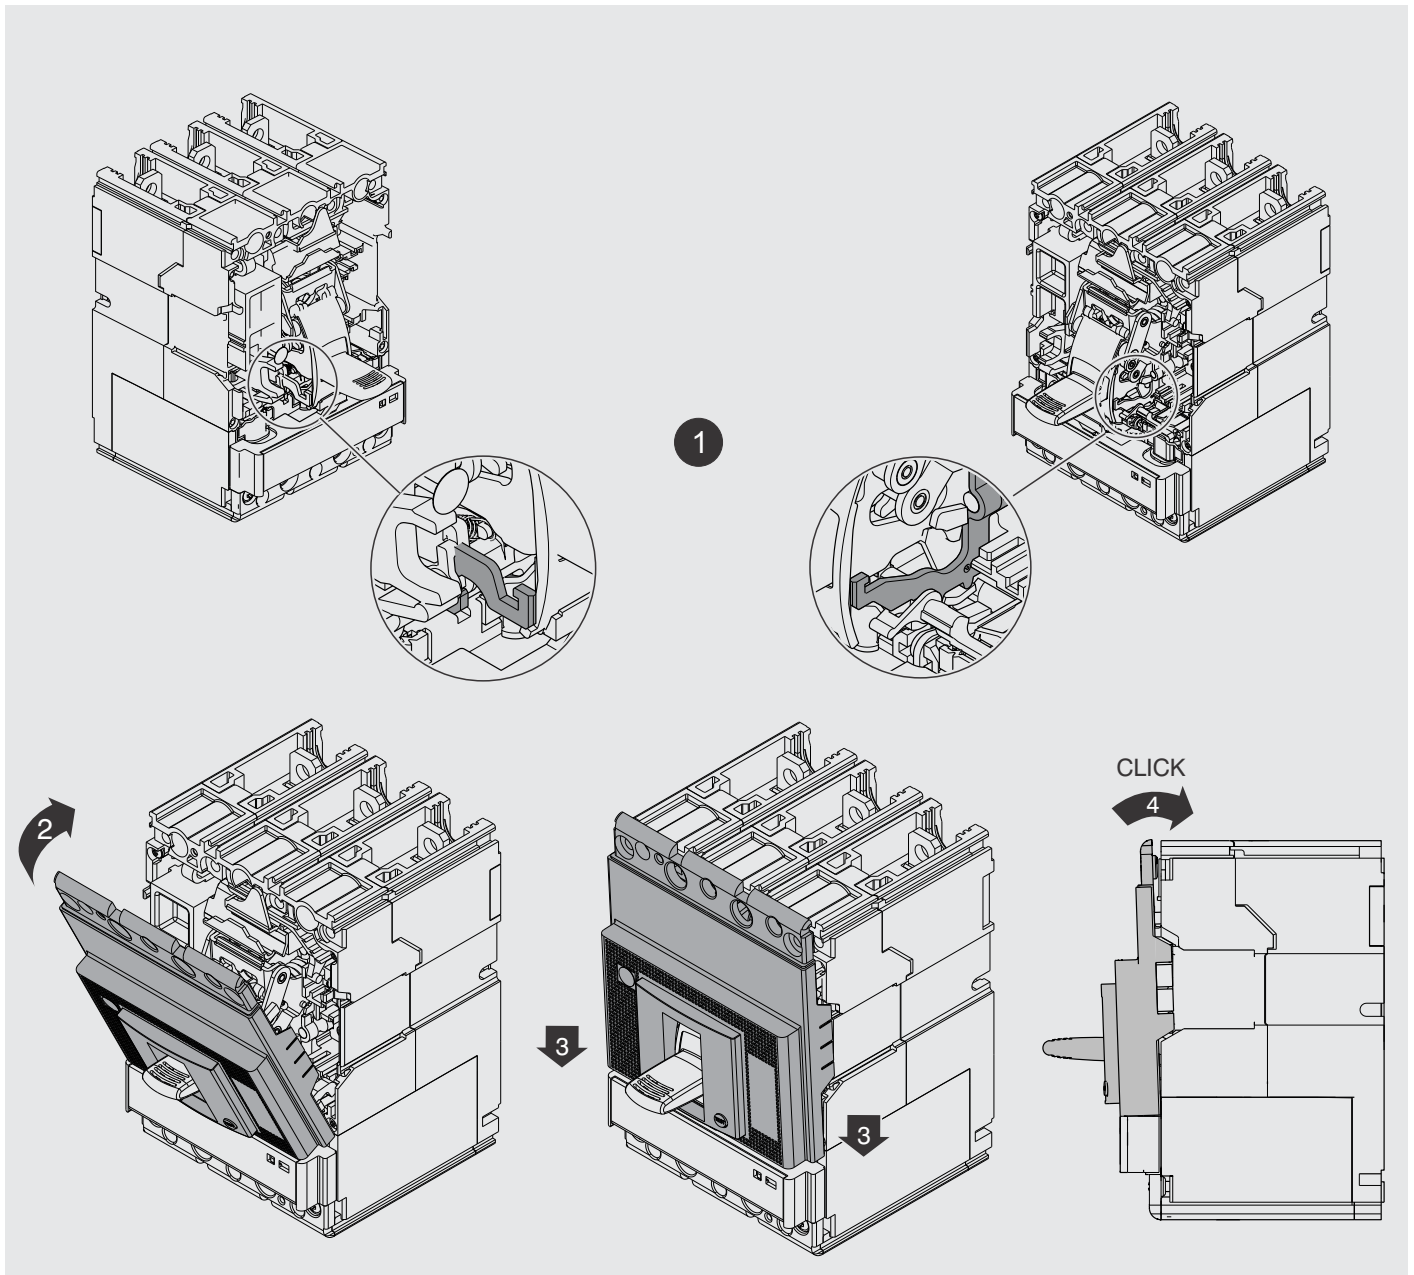

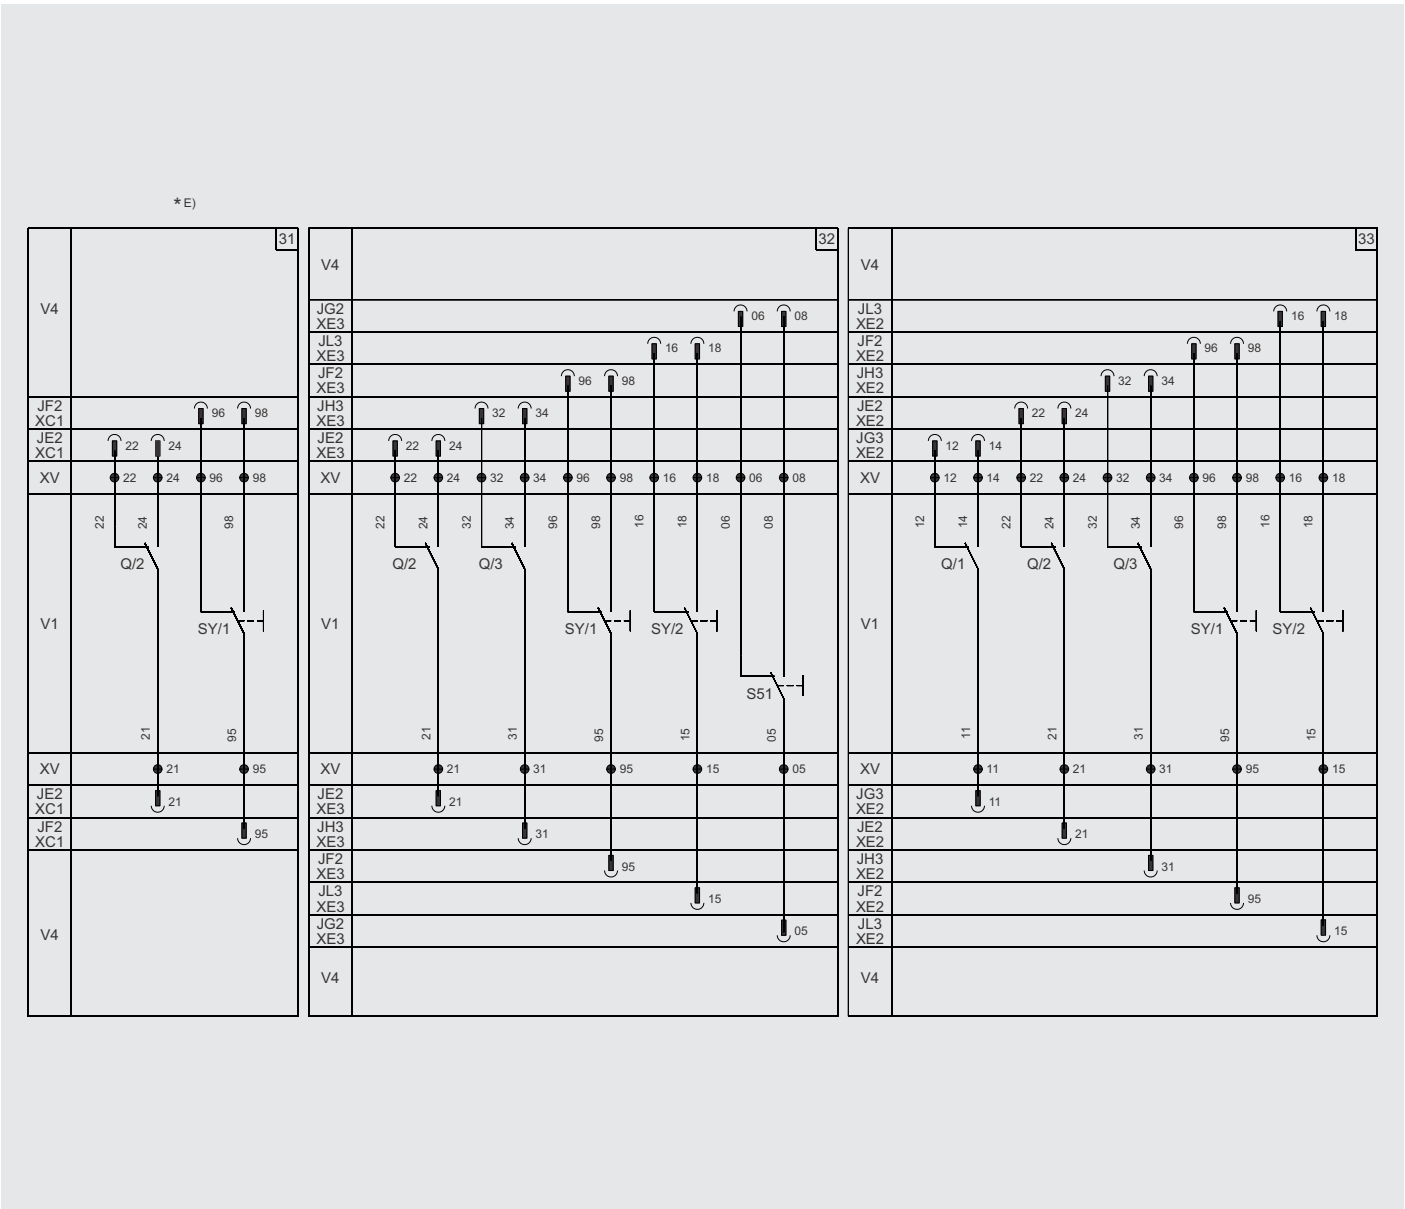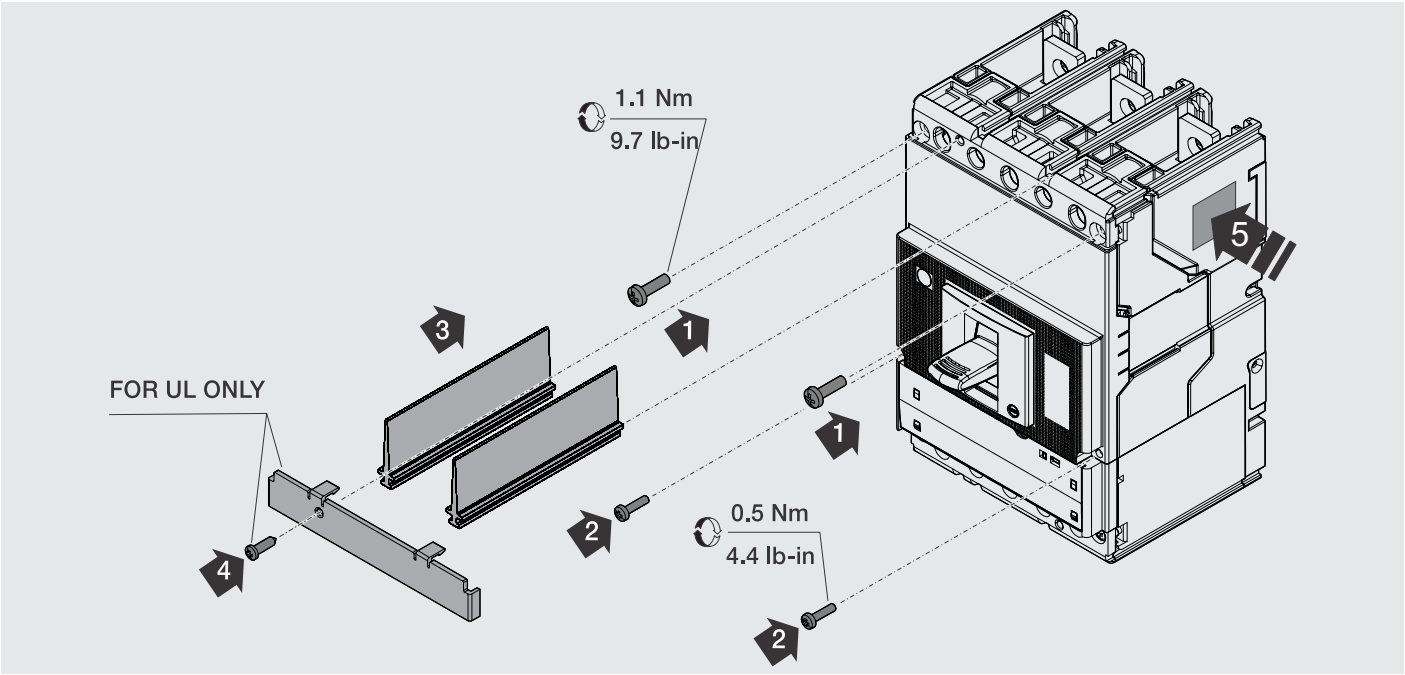

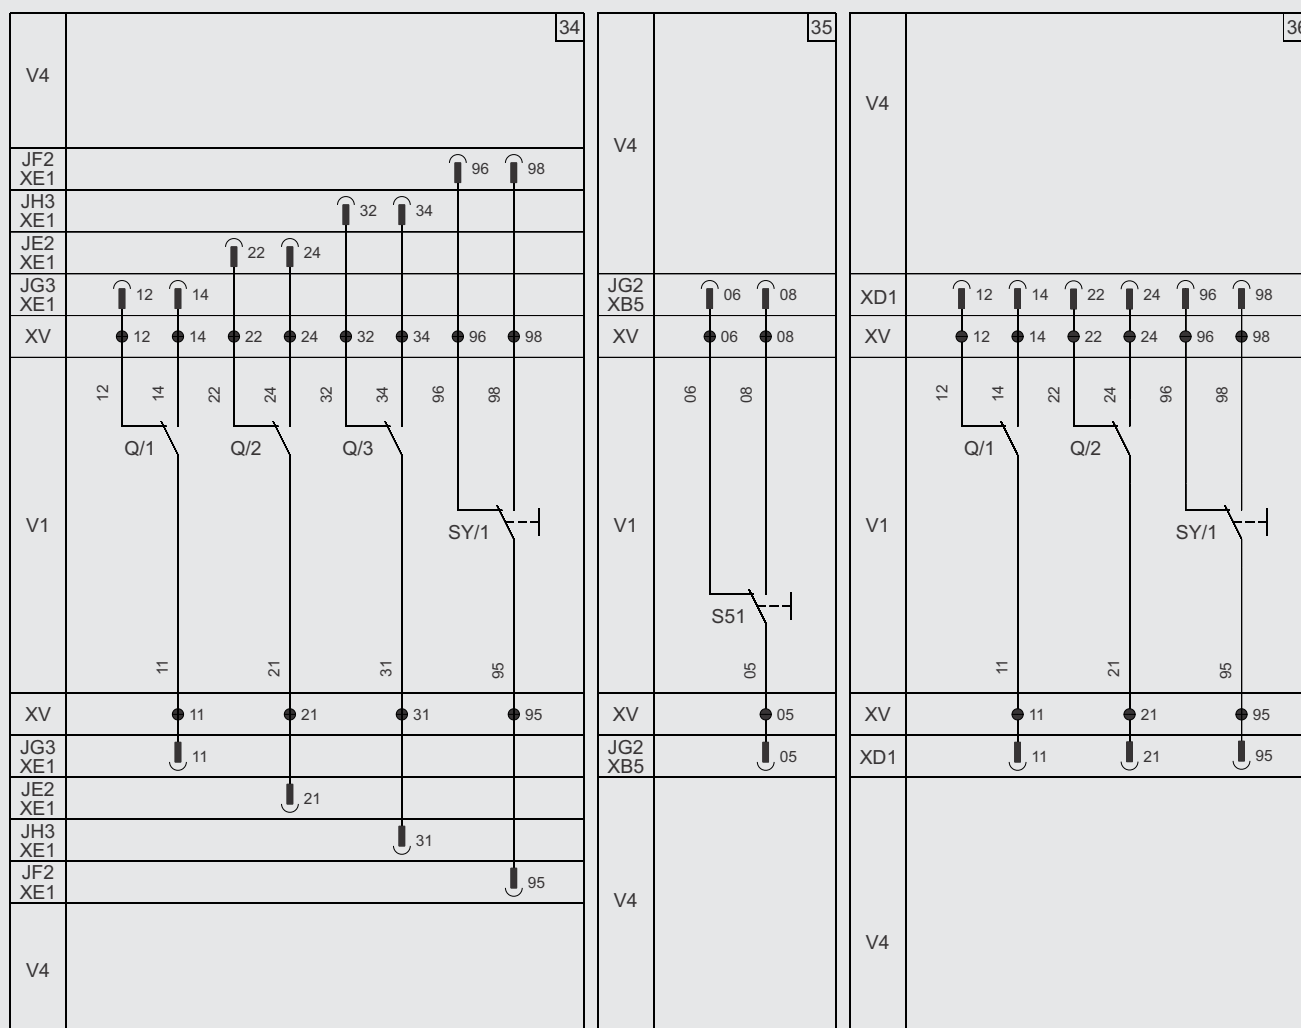

Quando montato. Interruttore in posizione di aperto
 When mounted. circuit breaker in open position
 Wenn montiert. Leistungsschalter in die AUS-Stellung
 Quand il est monté. Disjoncteur en position de ouvert
 Cuando está montado. Interruptor en posición de abierto
 在安装好时. 开关处于分断位置

