


Cube









230V, 50/60Hz, IP21

Cube 1x:

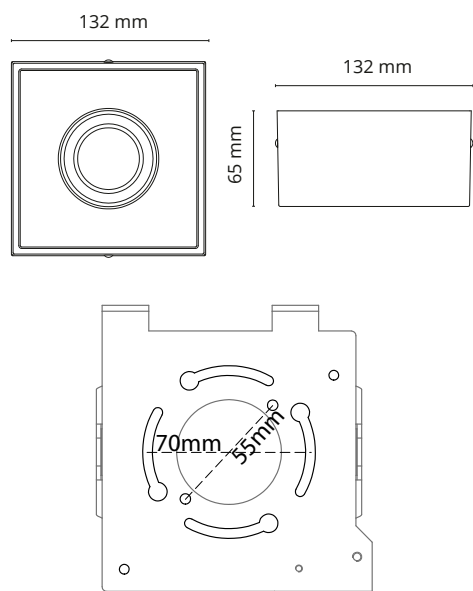

Cube 2x:

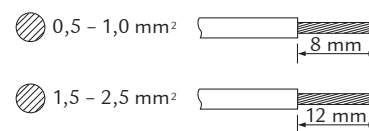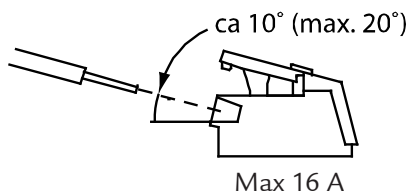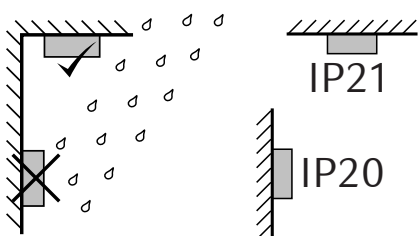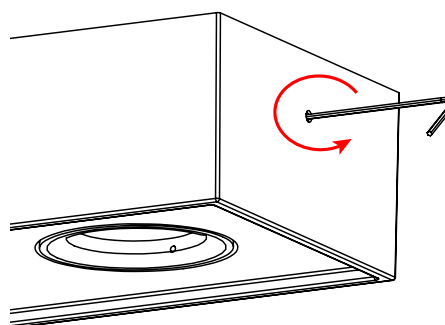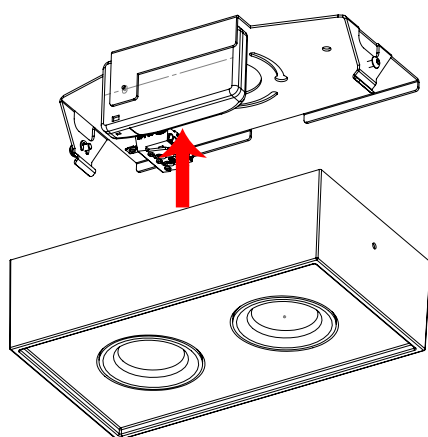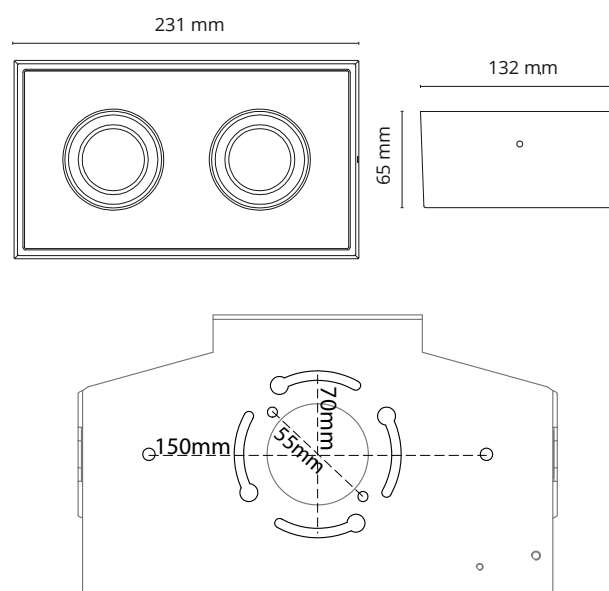

CORPORATE OFFICE:

SG Armaturen AS
Svåbekk 15
4790 Lillesand
NORGE

Tlf: +47 37 50 03 00
firmapost@sg-as.no
www.sg-as.no

BRANCH OFFICE:

SG Lighting SA/NV
Blokhuistraat 47
2800 Mechelen Noord I
BELGIQUE/BELGIË

Tlf: +32(0) 15 20 72 71
info.benelux@sglighting.net
www.sglighting.net

BRANCH OFFICE:

SG Armaturen A/S
Egebakken 19
7400 Herning
DANMARK

Tlf: +45 70 70 72 13
info@sg-as.dk
www.sg-as.dk

BRANCH OFFICE:

SG Lighting SA/NV
73 rue de Saint Mandrier
83140 Six Fours Les Plages
FRANCE

Tlf: +33(0) 4 94 93 00 00
info.france@sglighting.fr
www.sglighting.net

BRANCH OFFICE:

SG Leuchten GmbH
Postfach 67 04 21
22344 Hamburg
GERMANY


 
 
Tlf: +49 40 23 99 44 59
info@sg-leuchten.de
www.sg-leuchten.de

BRANCH OFFICE:

SG Armaturen AB
August Barksg. 30B
421 32 Västra Frölunda
SVERIGE

Tlf: +46 31 81 71 10
info@sg-ab.se
www.sg-ab.se

Rev: 19.04.2017

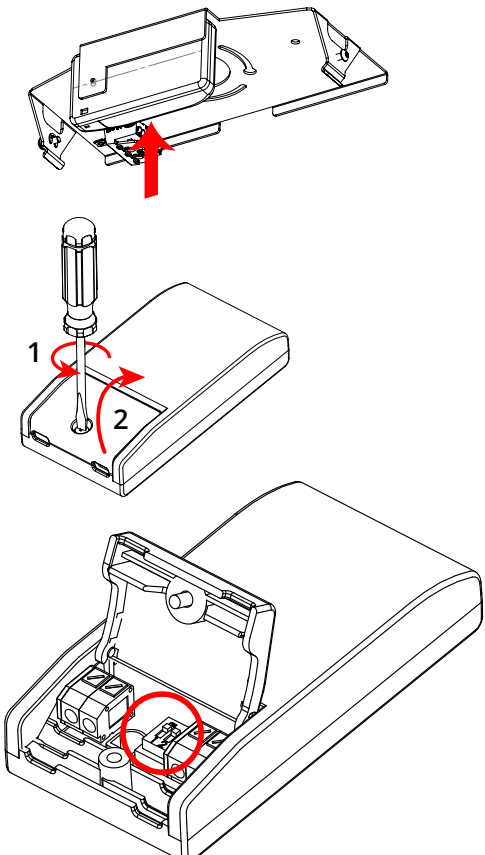	Cube 1x ✓  180 mA (6W)  205 mA  230 mA    255 mA	Cube 2x ✓  300 mA, 10W ✓  350 mA, 12W (Standard)  400 mA    450 mA
	NO: Minimumsavstand til brennbart materiale i armaturens stråleretning. EN: Minimum distance to flammable material in the beam direction. FR: Distance minimum entre le faisceau lumineux de l'armature et toute matière inflammable NL: Minimale afstand tussen de lichtstraal van de armatuur en het brandbaar materiaal. DE: Der kleinste Abstand zum brennbaren Material in die Richtung des Lichtstrahls.	
	NO: Skru av strømmen før montering EN: Turn off power before installing FR: Couper le courant avant l'installation NL: Stroom uitschakelen voor u het toestel installeert DE: Vor Installationsarbeiten den Strom abschalten.	
	NO: Kan kun installeres av en registrert installasjonsvirksomhet EN: Only to be installed by an authorized electrician FR: Doit être installé par un électricien autorisé NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden.	