

ASSEMBLY INSTRUCTIONS FOR THE HANDLE FOR OPTIMIZERS

In order to mount the power optimizers on the module frame, use a dedicated solution, i.e. the **K-42** KENO universal mount for mounting the optimizer, and follow the instructions below.


1. Pre-tighten the Allen screw with the mounting washer



2. Put the back part of the holder against the inside of the module frame



3. Slide the optimizer mount over the screw.

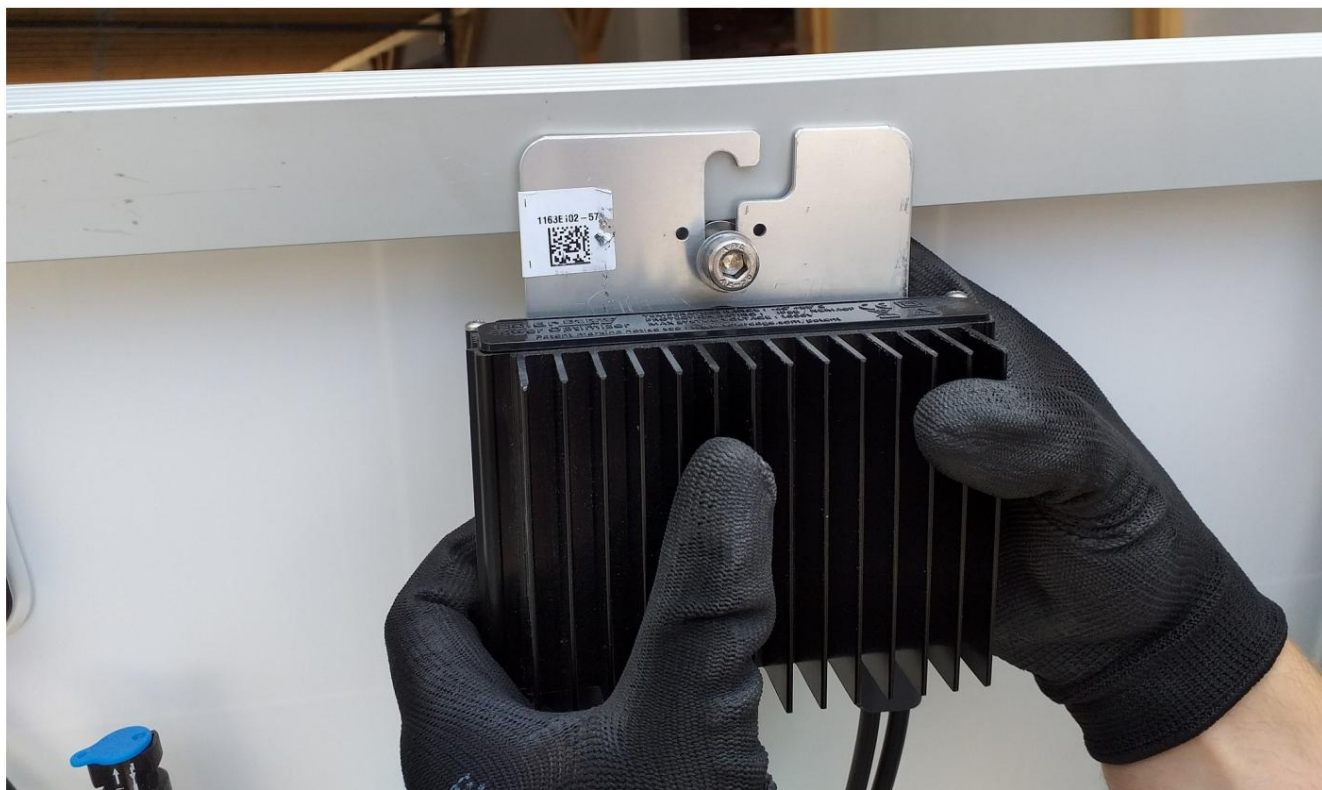

4. Put on the front part of the holder so that it adjoins the upper part of the module frame.

I.

II.

III.

5. Screw the handle pieces together while holding the optimizer.