
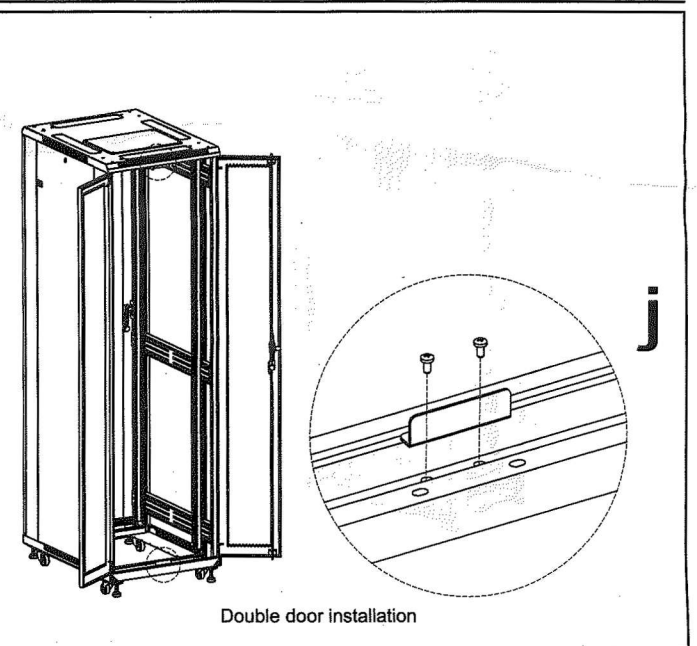
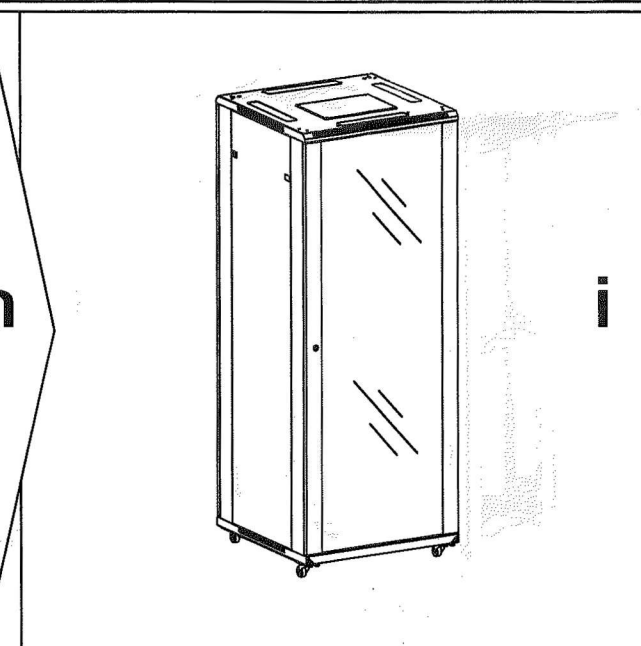
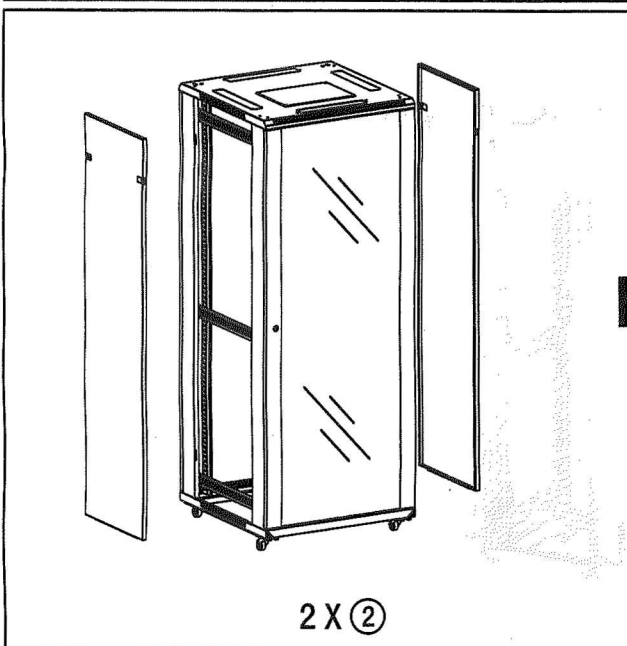
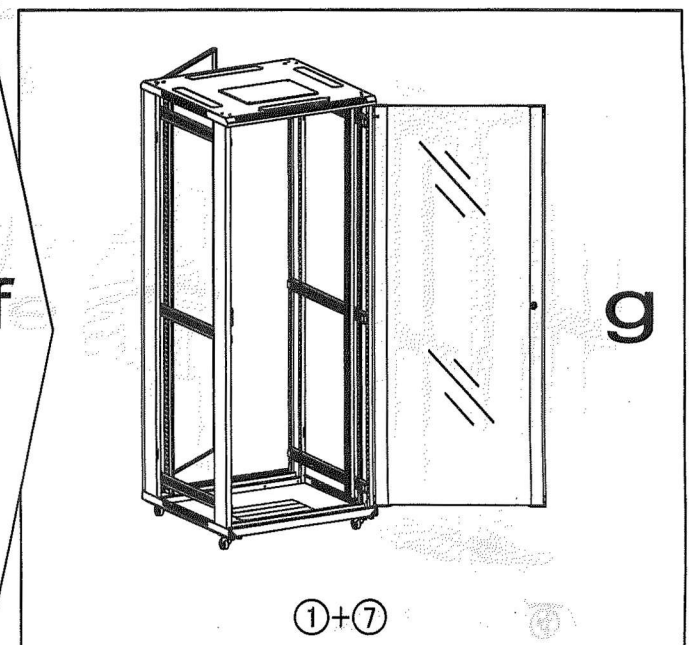
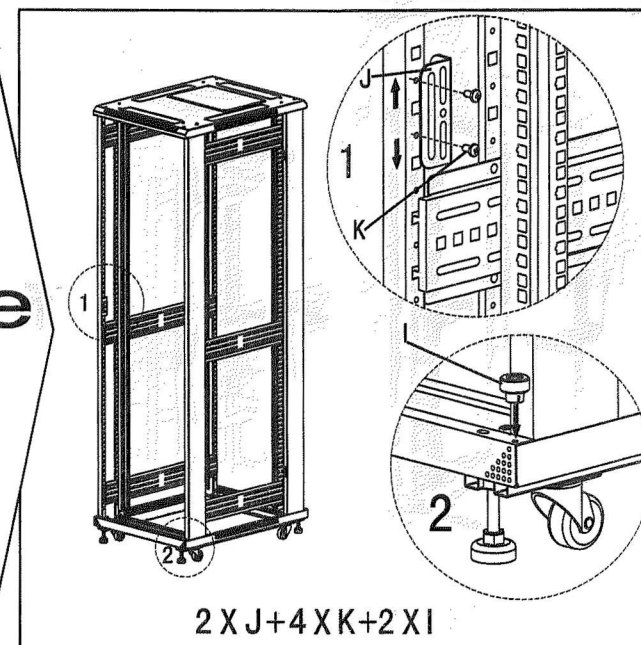
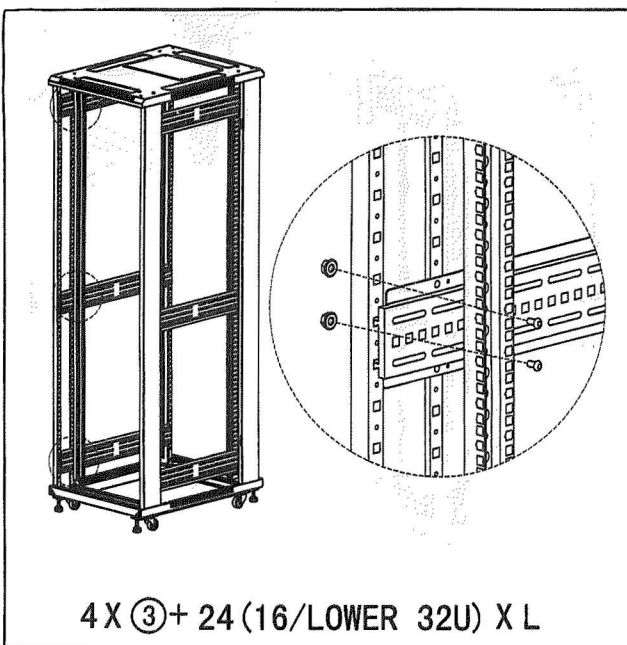
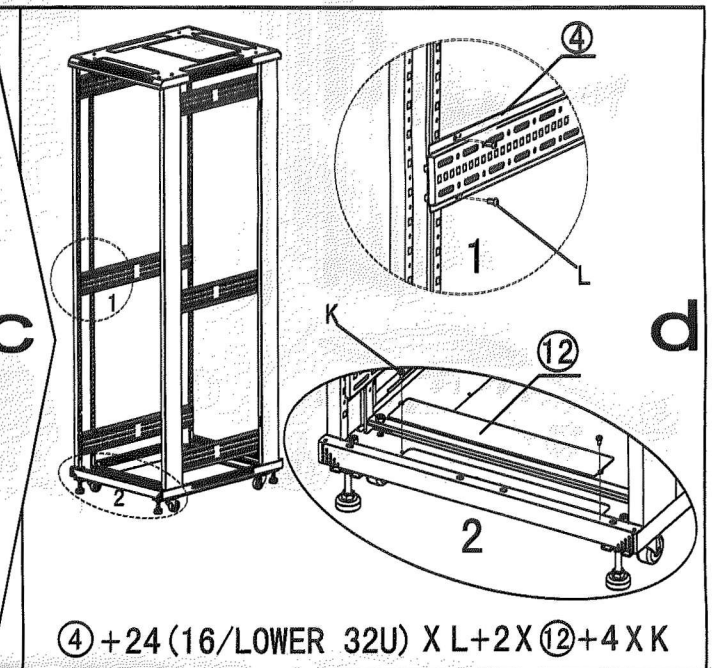
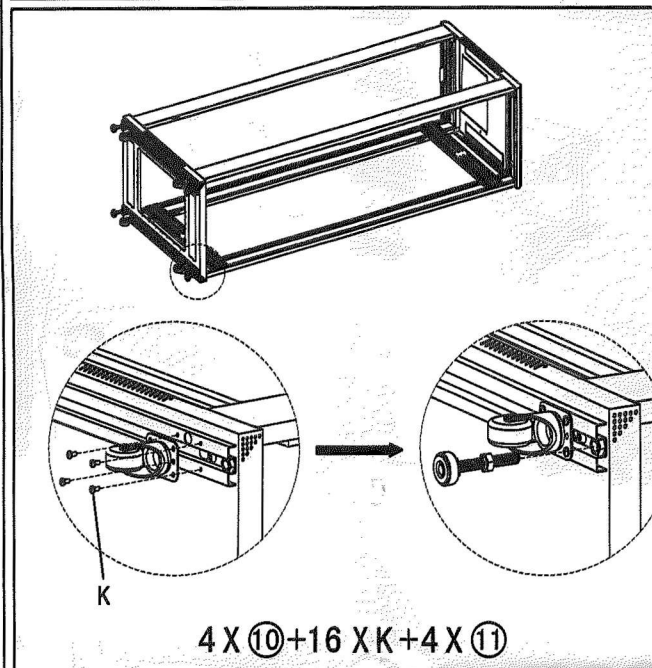
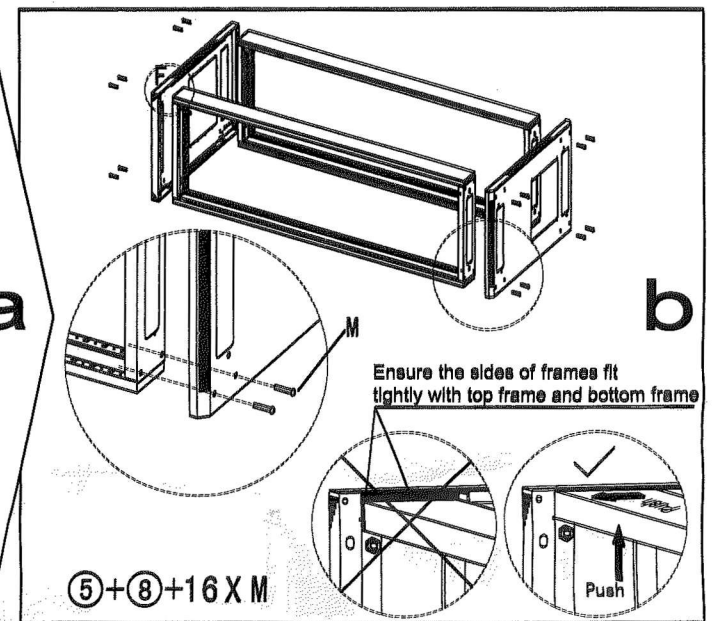
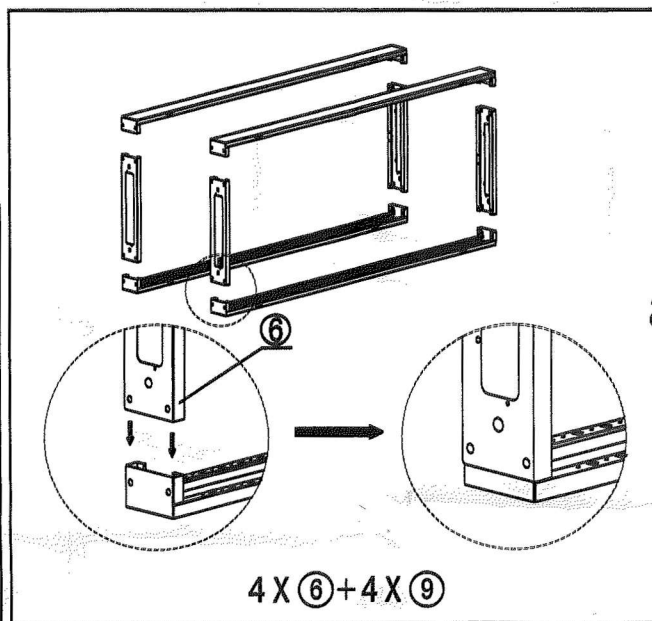


excel Environ CR/ER Series Assembly Instructions - 600mm Wide

SUPPLIED PARTS AND HARDWARE

I	J	K	L	M
				
2 X portlet crane cushion	2 X block slot	24X M8X10 bolt	18 X M8 nut 32 X M8X12 bolt	16X M8X42 bolt

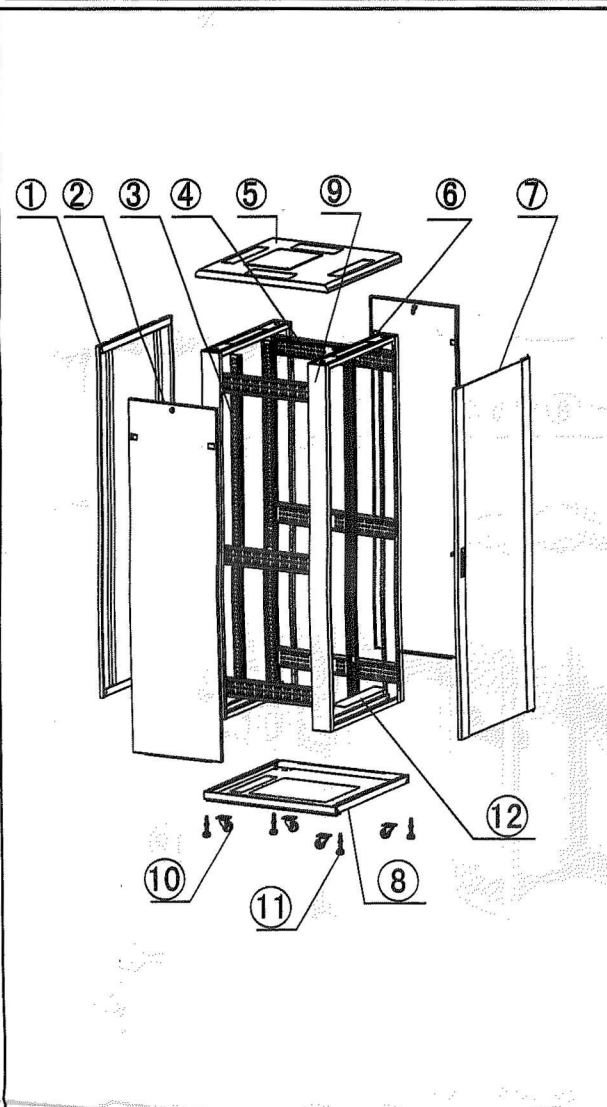

excel Environ CR/ER Series Assembly Instructions - 800mm Wide

SUPPLIED PARTS AND HARDWARE

I	J	K	L	M

