



ASENNUSOHJEET INSTALLATIONS INSTRUKTIONER INSTALLATION INSTRUCTIONS

SAI 6
SAI 6H
SA25H

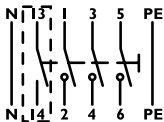

H= APUKONTAKTI
HJÄLPKONTAKT
AUXILIARY CONTACT



Ø 6MM DRILL

VEDENPOISTO
DRÄNERING
DRAINAGE



KNOCK OUT

METRINEN
METRISKA
METRIC

ASENNUSOHJEET INSTALLATIONS INSTRUKTIONER INSTALLATION INSTRUKTIONS

SA616H/SA625H



H = APUKONTAKTI
HJÄLPKONTAKT
AUXILIARY CONTACT



Ø 6MM DRILL

**VEDENPOISTO
DRÄNERING
DRAINAGE**

KNOCK OUT

