




Step 1: Measure the distance between the mounting holes and drill the appropriate holes. Use the supplied screws and plugs and install the metallic base.

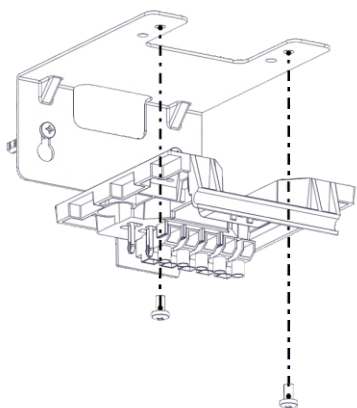


Step 2: Install the socket to the metallic base and fasten the two supplied screws.

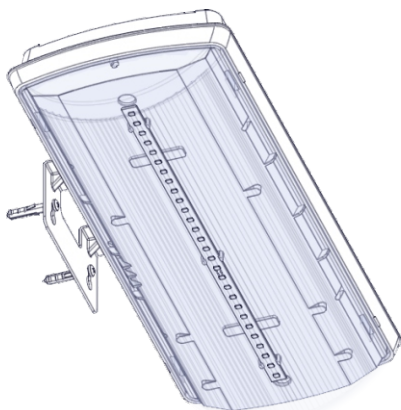


Step 3: Install UniLED to the socket.

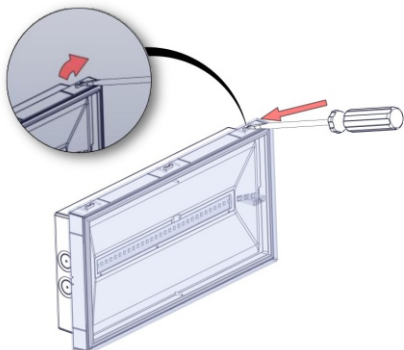


Step 1: Pull up gently the diffuser's clips from both sides to remove the diffuser.

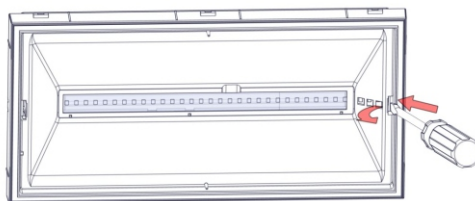


Step 2: Pull up gently the reflector.

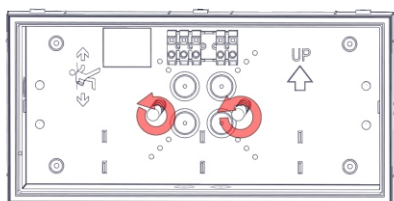


Step 3: Drill 2 holes.

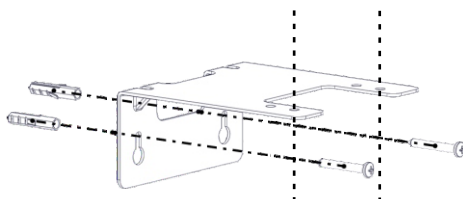

Step 4: Measure the distance between the mounting holes and drill the appropriate holes. Use the supplied screws and plugs and install the metallic base. ImPerLED can be installed only on the 2 depicted holes.

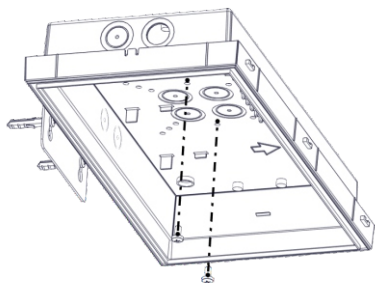

Step 5: Install the ImPerLED base to the metallic base and fasten the 2 supplied screws with the 2 sealing o-rings.

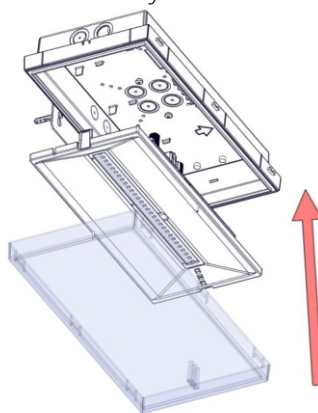

Step 6: Refit carefully the removed parts (Step 1 & 2). The diffuser must be secured (click sound). This requirement is important to ensure the IP65 rating.