

# SACE Tmax XT

Tmax low voltage moulded-case circuit-breakers XT5

Operation and maintenance manual for Ekip Touch Trip  
Units





<b>Glossary .....</b>	<b>3</b>	<b>Additional functions .....</b>	<b>122</b>
<b>Introduction .....</b>	<b>4</b>	1 - Power Controller .....	122
1 - Contents .....	4	2 - Load Shedding .....	123
2 - Safety .....	5	3 - IPS Interface protections .....	125
<b>Overview of Ekip Touch.....</b>	<b>6</b>	<b>Electronic accessories.....</b>	<b>127</b>
1 - General characteristics .....	6	1 - Rating Plug .....	127
2 - Models and Versions.....	7	2 - Ekip Measuring .....	128
3 - Accessories and software .....	13	<b>External accessories.....</b>	<b>129</b>
4 - Operating features .....	16	1 - Introduction and System interface .....	129
<b>Management operations .....</b>	<b>17</b>	2 - Ekip Cartridge.....	130
1 - Putting into service .....	17	3 - Ekip Supply.....	131
2 - Maintenance and troubleshooting.....	19	4 - Ekip Com Modbus RTU .....	132
<b>Interface and menus .....</b>	<b>23</b>	5 - Ekip Com Profibus DP .....	135
1 - Presentation of interface .....	23	6 - Ekip Com DeviceNet™ .....	137
2 - Navigation.....	25	7 - Ekip Com Modbus TCP.....	140
3 - Graphic pages .....	27	8 - Ekip Com Profinet.....	144
4 - Menu.....	30	9 - Ekip Com EtherNet/IP™ .....	146
5 - Changing parameters and commands .....	35	10 - Ekip Com IEC 61850.....	149
6 - PIN and security .....	37	11 - Ekip Link.....	153
<b>Protections .....</b>	<b>38</b>	12 - Ekip Com Hub.....	157
1 - Standard Protections .....	39	13 - Ekip Signalling 2K.....	161
2 - Voltage protections .....	50	14 - Ekip Synchrocheck .....	164
3 - Voltage Advanced protections .....	53	15 - Ekip Signalling 3T .....	169
4 - Frequency protections .....	57	16 - Ekip CI .....	172
5 - Power protections.....	60	<b>Internal accessories.....</b>	<b>175</b>
6 - ROCOF protections.....	66	1 - Ekip Com Modbus RTU .....	175
7 - Protection Adaptive .....	67	2 - Ekip Com Modbus TCP.....	177
8 - Motor protections .....	68	3 - Ekip Com Profinet.....	179
9 - Additional protections and functions.....	72	4 - Ekip Com EtherNet/IP™ .....	181
10 - Logic selectivity .....	77	5 - Ekip Com IEC 61850.....	184
11 - Performance table.....	79	6 - Ekip Link.....	187
12 - Functions .....	82	7 - Ekip Com Hub.....	191
<b>Measurements .....</b>	<b>97</b>	8 - Ekip Signalling 1K.....	194
1 - Standard Measurements .....	97	9 - Ekip Maintenance .....	196
2 - Ekip Measuring Measurements .....	101	10 - Micro I/O.....	198
3 - Class 1 Power & Energy Metering .....	104	<b>Other accessories .....</b>	<b>199</b>
4 - Datalogger .....	105	1 - Ekip Signalling 10K.....	199
5 - Network Analyzer .....	107	2 - Ekip Signalling Modbus TCP .....	199
<b>Settings.....</b>	<b>114</b>	3 - Ekip Multimeter.....	200
1 - Main settings .....	114	4 - External neutral.....	200
2 - Additional settings .....	118	5 - Testing and Programming .....	201
<b>Test.....</b>	<b>120</b>		
1 - Test.....	120		





# Glossary

Term	Description
SACE Tmax XT5	New series of ABB SACE moulded-case circuit-breakers
CB	Circuit-breaker
Trip unit	Electronic unit connected to the CB, which provides measuring, monitoring and protection functions for the CB if faulty operating conditions occur. In the event of an alarm, it commands a TRIP
Ekip Touch	Trip unit for SACE Tmax XT5 CB, equipped with touchscreen display and available in six different versions
Trip coil	CB opening actuator controlled directly by Trip unit
TRIP	Concluding action of protection timing or a test command which, except in special configurations applicable to the trip unit, coincides with activation of the trip coil, which instantly opens the bars of each pole and interrupts the circulating current
Vaux	Auxiliary power supply
4P / 3P / 3P + N	CB configuration: four-pole (4P), three-pole (3P) and three-pole with external neutral (3P + N)

# Introduction

## 1 - Contents

---

**Overview** This manual describes the characteristics of the Ekip Touch Trip units installed on SACE Tmax XT5 CB, among which:

1. general overview:
2. management operations: putting into service, maintenance, troubleshooting
3. operating conditions
4. consultation of menus for changing parameters and displaying measurements
5. accessories

---

**recipients** This manual refers to two user profiles, as defined by standard IEC 60050:

- skilled person, in the electrical field (IEV 195-04-01): person with relevant education, training, knowledge and experience to enable him or her to perceive risks and to avoid danger which electricity can create
- instructed person, in the electrical field (IEV 195-04-02): person adequately advised or supervised by electrically skilled persons to enable him or her to perceive risks and to avoid danger which electricity can create



**IMPORTANT: operations which can be performed by persons trained on the subject of electricity are specifically indicated in this manual. All the remaining operations described in this manual must be performed by skilled persons, in the field of electricity. ABB declines all liability for damage to persons or property caused by failure to comply with the instructions in this document.**

---

**Specifications and supporting documents** To ensure that Ekip Touch is installed and configured correctly, please read the information in this manual and in the technical documentation of the product, available in the website [ABB LIBRARY](#)

Document	Code	Description
Technical catalogue	1SDC210100D0201	CB SACE Tmax XT general catalogue
Wiring diagrams	1SDM000005A1001	CB SACE Tmax XT5 Wiring diagrams
Installation instructions	1SDH002011AR0001 1SDH002011AR0002	CB SACE Tmax XT5 Installation instructions

---

**Design notes** The information in this manual was written in Italian and then translated into other languages to conform to the laws and/or commercial requirements concerning the product.

---

## 2 - Safety

### Safety requirements



**HAZARD! RISK OF ELECTRIC SHOCK!** In accordance with the local laws in force, disconnect all the electricity supplies when Ekip Touch is being assembled, installed, serviced or decommissioned if persons who are not authorized to work in live installations are present.



#### **WARNING!**

- detailed descriptions of the standard installation, operation, maintenance procedures and principles for working safely are not included; it is important to note that this document contains indications about safety and caution, against certain methods (concerning installation, operation and maintenance) which could cause injuries to the personnel, damage devices or make them unsafe
- these warnings and alarms do not include all the conceivable methods of performing the installation, operation and maintenance operations recommended by ABB and others, which could be performed, or the possible consequences and complications of each conceivable method, neither will ABB investigate all those methods
- anyone who is implementing procedures or using maintenance devices recommended by ABB or not must check carefully that neither their personal safety nor the safety devices are endangered by the installation, operation, maintenance method or by the tools used; contact your nearest ABB representative for further information, explanations or specific problems
- this manual is written for qualified personnel only and is not intended to replace an adequate training course or experience concerning the safety procedures of this device
- regarding products equipped with communication systems, the purchaser, installer or end customer are responsible for applying all the IT security measures to prevent risks deriving from connection to communication networks; among others, these risks include use of the product by unauthorized persons, alteration of its normal operation, access to and modification of the information
- the purchaser, installer or end customer are responsible for ensuring that safety warnings and notices are affixed and moreover, that all points of access and operating devices are securely blocked when the switchgear is left even momentarily unattended
- all information in this document is based on the latest product data available at the time of printing. We reserve the right to make changes to the document at any time and without prior notice.

### Warnings



#### **WARNING! READ THIS MANUAL WITH CARE BEFORE INSTALLING, OPERATING OR REPAIRING THE CIRCUIT-BREAKER**

- file this manual with all the other available documents concerning the circuit-breaker
- to facilitate the work, these documents must be readily available when the CB is installed, operated and serviced
- the unit must be installed in accordance with the environmental, electrical and mechanical limitations described in the product documentation
- this circuit-breaker has been designed to operate with voltage and current values within the rating plate limits: do not install in systems that operate at values exceeding these rated limits
- comply with the safety procedures required by your Company.
- do not open covers or doors, do not work on devices before having disconnected all circuits from the electricity sources and after having made sure of this with a measuring instrument

# Overview of Ekip Touch

## 1 - General characteristics

**Families** SACE Tmax XT5 can be configured to operate with two Trip unit families:

- Ekip Dip with interface via dip-switches
- Ekip Touch with touchscreen display

Both families provide protection and measuring functions related to signals from the installation and are available in different models and versions.

There are six Ekip Touch models available:

- Ekip Touch
- Ekip Touch Measuring
- Ekip Hi-Touch
- Ekip G Touch
- Ekip M Touch
- Ekip G-Hi Touch

As mentioned previously, a description of Ekip Touch is given in this manual; consult the *Installation Instructions* for a description of Ekip Dip; references are given on page 4

**Main functions** The Ekip Touch Trip unit provides the following functions:

1. *Measurement*: measurement of different quantities, such as: current, voltage, power, energy
2. *Protection*: depending on the measurements made and the parameters configured by the user, the Trip unit checks for the presence of alarms and commands circuit-breaker opening if necessary
3. *Signalling*: management of contacts and communication networks to optimize plant efficiency, communication among different CB and other functions

The Ekip Touch functions are provided both by means of transducers and actuators inside the circuit-breaker, and by means of a vast range of external accessories

### Presentation



Figure 2

Ekip Touch has a touchscreen display (1) for accessing the configuration menus and checking parameters, measurements and information (page 23).

The nominal size of the Rating plug (2) can be checked on the front (page 127) and access the battery compartment (4).

Connections to the internal and external electronic accessories are in the internal terminal box (3) (page 13 for an overview of the electronic accessories, refer to the Technical catalog and Circuit diagrams for all the other accessories).

The external connectors for zone selectivity are on the back (5) (page 72) and, with 3P CB, for the *External neutral* sensor (page 200).

## 2 - Models and Versions

### Default functions and extensions

Every Ekip Touch module has default measurement and protection functions, which can be extended with the aid of additional software packages.

The extensions (additional SW packages) can be pre-engineered when the circuit-breaker is ordered or at a later date (in this case, via ABB Ability Marketplace™)

### Ekip Touch



Figure 3

Ekip Touch is available in two versions: Ekip Touch LSI and Ekip Touch LSIG.

Both versions have default functions and can be configured with various different additional SW packages (extensions).

#### Default

Functionality	Page
Standard Protections	79
Standard Measurements	97

#### Additional SW packages

Functionality	Page
Voltage protections <sup>(1)</sup>	50
Voltage advanced protections <sup>(1)</sup>	53
Frequency protections <sup>(1)</sup>	57
Power protections <sup>(1)</sup>	60
ROCOF protections <sup>(1)</sup>	66
Adaptive protections	67
Ekip Measuring Measurements	101
Class 1 Power & Energy Metering <sup>(2)</sup>	104
Datalogger <sup>(1)</sup>	105
Network Analyzer <sup>(1)</sup>	107

<sup>(1)</sup> package configurable if Measuring Measurements package is present

<sup>(2)</sup> package only available at the time the circuit-breaker is ordered

## Ekip Touch Measuring



Figure 4

Ekip Touch Measuring is available in two versions: Ekip Touch Measuring LSI and Ekip Touch Measuring LSI G. Both versions have default functions and can be configured with various different additional SW packages (extensions).

**Default**

Functionality	Page
Standard Protections	79
Standard Measurements	97
Ekip Measuring Measurements	101

**Additional SW packages**

Functionality	Page
Voltage protections	50
Voltage advanced protections	53
Frequency protections	57
Power protections	60
ROCOF protections	66
Adaptive protections	67
Class 1 Power & Energy Metering <sup>(1)</sup>	104
Datalogger	105
Network Analyzer	107

<sup>(1)</sup> package only available at the time the circuit-breaker is ordered

Ekip Hi-Touch



Figure 5

Ekip Hi-Touch is available in two versions: Ekip Hi-Touch LSI and Ekip Hi-Touch LSIG. Both versions have default functions and can be configured with various different additional SW packages (extensions).

Default

Functionality	Page
Standard Protections	79
Standard Measurements	97
Ekip Measuring Measurements	101
Voltage protections	50
Frequency protections	57
Power protections <sup>(1)</sup>	60
Adaptive protections	67
Class 1 Power & Energy Metering	104
Datalogger	105
Network Analyzer	107

Additional SW packages

Functionality	Page
Voltage Advanced protections	53
Power protections <sup>(1)</sup>	60
ROCOF protections	66

<sup>(1)</sup> Ekip Hi-Touch has certain protections of the complete package by default; the remaining protections in the package can be activated on request

Ekip M Touch



Figure 6

Ekip M Touch is available in a single version: Ekip G Touch LRIU has default functions that can be integrated by means of various different additional SW packages (extensions).

Default

Functionality	Page
Standard Protections	79
Standard Measurements	97
Ekip Measuring Measurements	101
Voltage protections	50
Frequency protections	57
Power protections <sup>(1)</sup>	60
Adaptive protections	67
Motor protections	68

Additional SW packages

Functionality	Page
Voltage advanced protections	53
Power protections <sup>(1)</sup>	60
ROCOF protections	66
Class 1 Power & Energy Metering <sup>(2)</sup>	104
Datalogger	105
Network Analyzer	107

<sup>(1)</sup> Ekip M Touch has certain protections of the complete package by default; the remaining protections in the package can be activated on request

<sup>(2)</sup> package only available at the time the circuit-breaker is ordered



Ekip G Touch



Figure 7

Ekip G Touch is available in a single version: Ekip G Touch LSIG has default functions that can be integrated by means of various different additional SW packages (extensions).

Default

Functionality	Page
Standard Protections	79
Standard Measurements	97
Ekip Measuring Measurements	101
Voltage protections <sup>(1)</sup>	50
Voltage advanced protections <sup>(1)</sup>	53
Frequency protections <sup>(1)</sup>	57
Power protections <sup>(1)</sup>	60
Class 1 Power & Energy Metering	104
Datalogger	105

Additional SW packages

Functionality	Page
Voltage protections <sup>(1)</sup>	50
Voltage advanced protections <sup>(1)</sup>	53
Frequency protections <sup>(1)</sup>	57
Power protections <sup>(1)</sup>	60
ROCOF protections	66
Adaptive protections	67
Network Analyzer	107

Ekip G Touch has certain protections of the complete package by default; the remaining protections in the package can be activated on request

## Ekip G Hi-Touch




Figure 8

Ekip G Hi-Touch is available in a single version: Ekip G Hi-Touch LSIG, and has all the functions of the Ekip Touch family by default.

Functionality	Page
Standard protections	79
Voltage protections	50
Voltage advanced protections	53
Frequency protections	57
Power protections	60
ROCOF protections	66
Adaptive protections	67
Standard Measurements	97
Ekip Measuring Measurements	101
Class 1 Power & Energy Metering	104
Datalogger	105
Network Analyzer	107

## 3 - Accessories and software

### External accessories

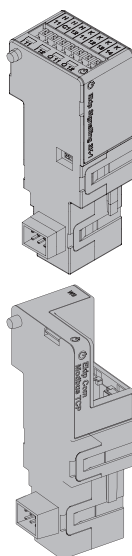

The functions of Ekip Touch can be expanded by further accessories and external modules, which differ as to function and assembly method.

The main external modules are:

Name	Function	Page
Ekip Supply	Power supply	131
Ekip Com	Communication (with various protocols)	132
Ekip Link	Communication via intranet with ABB proprietary protocol	153
Ekip Signalling 2K	Signalling with inputs/outputs	161
Ekip Signalling 3T	Signalling with analog inputs	169
Ekip Synchrocheck	Voltage measurement and synchronism between two supply sources	164
Ekip CI	Command module for motor applications	172

These modules must always be connected to the Trip unit using the Ekip Cartridge DIN Rail accessory and only if there are no internal accessories present (page 130).


Other external modules and accessories, available with direct connections to the internal terminal box or rear connectors, are:

Name	Function	Page
Ekip Signalling 10K	Signalling with inputs/outputs	199
Ekip Multimeter	Panel front display	200
External neutral	Neutral protection with 3P CB	200

In addition, the supervision, configuration and reporting functions are provided by further modules for temporary communication and supply:

Name	Function	Page
Ekip TT	Supply and tests	201
Ekip T&P	Supply, communication, programming and tests	
Ekip Programming	Supply, communication and programming	
Ekip Bluetooth Key	Bluetooth communication and programming	

### Internal accessories

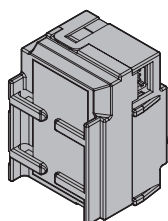

The SACE XT5 circuit-breaker has a compartment for connection certain internal modules to the Trip unit:

Name	Function	Page
Ekip Com	Communication (various protocols)	175
Ekip Signalling 1K	Signalling with inputs/outputs	194
Ekip Maintenance	Signalling with inputs/outputs	196
Micro I/O	CB status signaling	198

These modules connect to the Trip unit directly to the internal terminal box and only if there are no external accessories (with the exclusion of Ekip Signalling 10K, Ekip Multimeter and External neutral).

### Additional functions

Ekip Touch can be equipped with further software configurations compliant with different functional applications:

- Power Controller
- Load Shedding
- Interface protections (IPS)
- Synchro reclosing
- Embedded ATS

For details consult the *Technical catalog* (page 4) or the summary documents of each function (page 14).

## Supporting software and documents



Different softwares and documents are available; the majority are free of charge and are designed to facilitate, optimize and extend the functions and configurations of Ekip Touch in your installation:



**NOTE:** some of the documents mentioned in the next table refer to SACE Emax 2, but can also be used with SACE Tmax XT5

### **Ekip Connect 3**

ABB software to interface with Ekip Touch and other low voltage devices ([LINK](#))

### **Ekip Connect Mobile**

ABB APP to interface with Ekip Touch using a smartphone / tablet via Bluetooth ([LINK](#))

### **Ekip View**

ABB software which supervises the communication network, analyzes the trend of the electricity values and monitors the plant conditions ([1SDH001276R0001](#))



**NOTE:** the link launches the software package download, which requires about 1.3 Gb of space.

### **e-Design**

ABB software suite ([LINK](#)) which includes the following tools:

- DOC, to design the single-line diagrams of low and medium voltage electrical installations, choose the operating and protection devices and check and coordinate the protections
- CAT, for technical / commercial cost estimating of ABB products
- Curves, for drawing, calibrating and printing the trip curves of the protection devices
- OTC, for assessing the thermal behavior of the switchgear and sizing its fans and air conditioners
- UniSec, for configuring medium voltage switchgear

### **Front CAD**

Software comprising libraries of block graphics for ABB panel-making products to be used with the latest versions of AutoCAD, AutoCAD LT, IntelliCAD ([LINK](#))



**NOTE:** the link launches the software package download, which requires about 190 Mb of space.

### **Ekip Link**

Introduction to the *Ekip Link* switchgear monitoring system ([1SDC200031L0202](#))

### **Network Analyzer**

Introduction to the *Network Analyzer* measuring and analysis system ([1SDC200037L0202](#))

### **Adaptive protections***Protezioni adattive*

White paper on adaptive protections ([1SDC007116G0201](#))

### **Generator protections**

White Paper on generator protections ([1SDC007409G0202](#))

### **Power Controller**

White Paper on the *Power Controller* function ([1SDC007410G0202](#))

Continued on the next page

**IPS**

White paper on the Interface protection System (IPS) and Interface Device (DDI) [\(1SDC007117G0202\)](#)

**Load shedding**

White paper on Load Shedding - Load shedding priority [\(1SDC007119G0201\)](#)

**Synchronism and reclosing**

White paper for *Synchro reclosing* synchronization solutions [\(1SDC007118G0201\)](#)

White Paper on ATS systems for applications which require continuity of service [\(1SDC007115G0202\)](#)

**Handbook**

General overview of electrical installations [\(1SDC010002D0206\)](#)

---

## 4 - Operating features

**Introduction** Ekip Touch has been developed and certified to function in specific environmental, electrical and mechanical conditions; full details are available in the *Technical catalog* (page 4).

The following sections describe the electrical and power supply characteristics that enable Ekip Touch and the relative electronic accessories to operate correctly.

**Electrical characteristics** Correct operation of Ekip Touch is guaranteed when the primary voltages and currents are within range and with clearly defined characteristics:

Parameter	Operating limits
Primary current (line-to-line)	$0,03 \div 16 I_n^{(1)}$
Primary voltage (line-to-line)	$0 \div 690 \text{ V AC}$
Rated frequency	$50 / 60 \text{ Hz} \pm 10\%$
Peak factor	Complying with standard IEC 60947-2

<sup>(1)</sup> based on each phase;  $I_n$  refers to the nominal size defined by the Rating plug installed on the Trip unit, available in models from 250 A to 400 A for CB with  $I_u = 400 \text{ A}$  and from 250 A to 630 A for CB with  $I_u = 630 \text{ A}$

Ekip Touch can self-supply itself directly from the internal current sensors:

Parameter	Operating limits
Minimum three-phase turn-on current	$> 0,2 I_n$

**Auxiliary power supply** Ekip Touch can be connected to an external auxiliary supply source, which is useful when certain functions such as communication via Local Bus, recording manual operations, certain measurements and the datalogger must be activated.

The auxiliary supply can be provided by modules from the *Ekip Supply* range (further details about operation are given on page 131), or by direct connection to the internal terminal box.

Direct connection must guarantee the following operating conditions:


Parameter	Operating limits
Voltage	24 V DC galvanically isolated
Tolerance	$\pm 10\%$
Maximum ripple	$\pm 5\%$
Maximum inrush current @ 24 V	10 A per 5 ms
Maximum rated power @ 24 V	4 W
Connection cable	Insulated with grounding cable (same characteristics as Belden 3105A/B or higher)



**IMPORTANT: if connection is direct, the power supply must be galvanically insulated and provide the insulation characteristics established by standard IEC 60950 (UL 1950) or equivalent.**

# Management operations

**Life cycle** The following operations are required to ensure that SACE Tmax XT functions correctly:

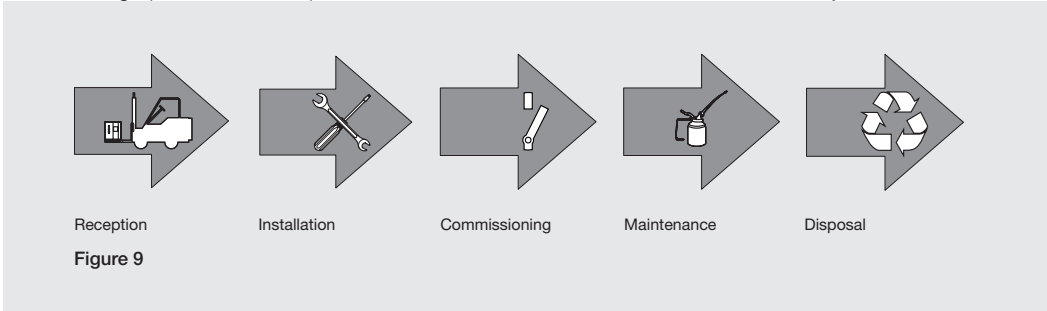


Operation	Description
Reception	Unpacking and inspection of materials received
Installation	Assembly operations
Putting into service	General pre-ignition inspections
Maintenance and faults	Routine inspections and cleaning, management of alarms or faults
Decommissioning	EOL treatment and disposal

This document describes the *Putting into service* and *Maintenance and faults* operations for Ekip Touch; consult the *Installation Instructions* and *Technical catalog* for the other operations (references on page 4).

## 1 - Putting into service

**Wizard** When powered up, Ekip UP displays the Wizard window, a user-friendly procedure for immediate adjustment of certain parameters: language, date, time, voltage of the installation and PIN.

After the procedure has terminated, the window will no longer appear unless it is reset via Ekip Connect by the **Reset Wizard** command: in this case, Wizard will appear when the apparatus is powered up the next time.


 **NOTE:** for security reasons, ABB strongly advises you to change the PIN right from the first access and to keep it in a safe place

**General checks** Perform the following inspections before putting into service:

Points to be checked	Checks
Main connections	Earth connections
	If present, connection and tightening to external voltage tap offs (V0)
	If present, connection of <i>Ekip Supply</i> supply/module
Alarm	If Ekip Touch is not on, connect an external supply device (example: <i>Ekip TT</i> ) to the Trip unit and make sure there are no alarms present (details on page 19).
Parameters	Configure all the parameters of the unit as required

**Check accessories**

The inspections to perform on the external and internal accessories, if present, before putting into service are indicated below:

Accessories	Checks
External modules	1. If <i>Ekip Cartridge</i> is present: check the connections of all modules to <i>Ekip Supply</i> and the connection between <i>Ekip Cartridge</i> and the lateral terminal box of the CB For <i>Ekip Signalling 10K</i> and <i>Ekip Multimeter</i> , in the absence of <i>Ekip Cartridge</i> : check the connection of the bus of the module (W3-W4) to the lateral terminal box of the CB
	2. Power up Ekip Touch (and the external modules if there is a separate supply) and make sure they are on
	3. Check that the Local bus is enabled ( <i>Settings-Modules-Local Bus</i> )
	4. Check that the Power Led of each module is on like the Power Led of Ekip Touch (steady or synchronous flash)
	5. Check in the <i>About-Modules</i> menu to make sure that all installed modules are present and that there are no alarms
Internal modules	1. make sure that module is connected to the internal terminal box
	2. Make sure that the auxiliary supply is connected to the internal terminal box
	3. Power up the Trip unit and make sure it is on
	4. Check in the <i>About-Modules</i> menu to make sure that all installed modules are present and that there are no alarms
External neutral	1. Check that the sensor is connected to the lateral terminal box of the CB in the proper way and that the terminals are in the right direction <sup>(1)</sup>
	2. Power up the Trip unit and make sure it is on
	3. Check in the <i>Settings-Circuit-breaker</i> menu that <i>Configuration</i> = 3P + N; otherwise change the parameter
	4. Make sure there are no alarms
Zone selectivity	1. Check selectivity connections (between Ekip Touch and the other units) as shown in circuit diagrams 1SDM000002A1001
	2. Provide Ekip Touch with auxiliary power and make sure that CB status is: Open
	3. Check that the protection of the selectivity concerned has been enabled (example: S protection)
	4. Select the <i>Zone Selectivity</i> menu and the submenu of the protection concerned; follow the instructions in points 5, 6, 7 and 8 for each protection activated
	 <b>NOTE:</b> for selectivity D, consider submenu S for the Forward connections and G for the Backward connections
	Check <b>Output:</b>
	5. Select the <i>Force Output</i> command and check, on the Trip unit connected to the Ekip Touch output, that the status of its <i>Input</i> = <b>ON</b>
	6. Select the <i>Release Output</i> command and check, on the Trip unit connected to the Ekip Touch output, that the status of its <i>Input</i> = <b>OFF</b>
MOE-E stored energy operating mechanism	Check <b>Input:</b>
	7. Select the <i>Force Output</i> command on the Trip unit connected to the Ekip Touch input and check on Ekip Touch that the status of its <i>Input</i> = <b>ON</b>
	8. Select the <i>Release Output</i> command on the Trip unit connected to the Ekip Touch input and check on Ekip Touch that the status of its <i>Input</i> = <b>OFF</b>
	1. Make sure that the <i>MOE-E</i> stored energy operating mechanism is correctly cabled as shown in circuit diagrams 1SDM000002A1001
	2. Set the circuit-breaker to the closed position
AUP circuit breaker status inputs, if CB is withdrawable version	3. Provide Ekip Touch with auxiliary power and supply the <i>MOE-E</i> device with rated voltage
	4. Perform an opening test from the <i>Test-Test CB</i> menu with the <i>Open CB</i> ) command and check that the CB has opened
	5. Repeat the test from the <i>Test-Test CB</i> menu with the <i>Close CB</i> ) command and check that the CB has closed
	1. Check that Trip unit reads status of withdrawable circuit breaker properly by means of <i>About-Circuit breaker-CB Status</i>
	2. Switch status of AUP device and make sure that Trip unit reads the status change properly by means of <i>About-Circuit breaker-CB status</i> menu

<sup>(1)</sup> for details consult document [1SDH001000R0506](#)



## 2 - Maintenance and troubleshooting

**Introduction** Correct maintenance of the unit and connected devices ensures they operate correctly over time

The maintenance operations must be performed by expert personnel, as required by the safety regulations and maintenance schedule (see recipients, Safety requirements and Maintenance schedule).

If faults are discovered, find out what is causing them and eliminate them before putting the unit back into service.



**WARNING! Detecting faults must only be managed by (electrically) skilled persons (IEV 195-04-01: person with relevant education and experience to enable him or her to perceive risks and to avoid hazards which electricity can create), as it may be necessary to perform insulation and dielectric tests on part or all the installation**

**Inspections and general cleaning** Perform the following inspections:

- check to make sure that Ekip Touch is clean. Remove any dust and traces of other materials with a clean, dry cloth (use a mild detergent if necessary; a laminate thinner such as Henkel 273471 or Chemma 18 or equivalent can be used if there is a heavy coating of dirt)
- check that there are no foreign objects near the connectors or terminals

**Inspection of Ekip Touch** Perform the inspections described in chapter 1 - Putting into service, including an inspection of the state or the wiring, modules and accessories:

- verification of alarms
- check that the modules (internal and external modules) are present and connected
- check zone selectivity connections
- check the MOE-E stored energy operating mechanism
- check the circuit breaker status by means of AUP if the CB is a withdrawable version




**NOTE:** the limitations and notes given for each point in the respective paragraphs are applicable

**Maintenance schedule** The frequency with which Ekip Touch maintenance is scheduled differs, depending on the conditions in the installation site:

	Standard environments	Dusty environments (level of dust measured > 1 mg/m3)
Frequency of maintenance	One year or 2000 operations or after tripping due to short circuit	Every six months or 1000 operations or after a short-circuit trip

**Alarms displayed and suggestions** A list of faults that may appear on the Ekip Touch display is given below along with suggestions on how to resolve them:

Signal	Suggestions
Numerical alarm (e.g. 30002)	Internal error; contact ABB if this type of error occurs
Battery low	Change the battery: <ol style="list-style-type: none"> <li>1. make sure that Trip unit is off and that CB is: Open.</li> <li>2. Remove cover from front of battery compartment</li> <li>3. Remove battery using a flat-head screwdriver</li> <li>4. Insert a new battery. Comply with the polarity indicated on the plastic part of the CB and close the cover</li> <li>5. Press the iTEST key and check that the Power Led comes on</li> </ol>  <b>NOTE:</b> only use batteries supplied by ABB, code 1SDA074193R1

Continued on the next page

Signal	Suggestions
Local bus	Unit on with auxiliary supply, Local Bus parameter enabled but connection to modules not present, incorrect or communication lost (for more than five seconds); check: <ul style="list-style-type: none"> <li>• connection and powering of modules in terminal box or external</li> <li>• that the modules connected are compatible with Ekip Touch</li> <li>• that the Local Bus parameter is: <b>ON</b> details on page 115).</li> </ul>
Trip fail command (BF)	CB has failed to open and/or current still present after a TRIP command: comply with the procedure proposed in the next chapter 'Faults, causes and remedies'
Configuration	Check: <ul style="list-style-type: none"> <li>• <i>Rating plug</i> of model compatible with Ekip Touch and CB size</li> <li>• If present, protection parameters do not conflict with size of current of unit details on page 38)</li> <li>• In the absence of <i>Vaux</i> threshold I4 and/or I41 &gt; 100 A</li> <li>• In the absence of <i>Vaux</i> time t4 and/or t41 &gt; 100 ms</li> </ul>
Invalid Date	Wrong date and time: set in <i>Settings-System-Date</i> and <i>Settings-System-Time</i>
Ekip Com Hub	Problem of Ekip Com Hub module with: certificates, connected devices, missing Com modules (RTU or with Ethernet connection), API TLS device, Hub events, parser configuration
Ekip Link Bus	Fault in <i>Ekip Link</i> module: check loss of connection with one or more actors
Ekip Signalling 3T	Alarm for connection of one or more analog inputs to <i>Ekip Signalling 3T</i> module
Internal error	Internal error; contact ABB if this type of error occurs
SNTP error	Fault with <i>Ekip Com</i> modules: synchronization problem of SNTP synchronization reference module
Measuring Error	<i>Ekip Measuring</i> parameter reading error, contact ABB
Ethernet disconnected	No external cable on one or more <i>Ekip Com</i> modules with Ethernet connection
IEEE1588 synch	Synchronization problem of IEEE 1588 synchronization reference module
MAC Address	<i>Ekip Com</i> module detected with incorrect / not allowed MAC address
Measuring installation	Install <i>Ekip Measuring</i> module ( <i>Settings-Circuit breaker-Installation-Measuring-Install</i> ) menu
RatingPlugInstallation	Install Rating Plug ( <i>Settings-Circuit breaker-Rating Plug-Install</i> menu) and check connection if there are further faults
Maintenance	Maintenance alarm: check whether set maintenance interval has elapsed
PC Power exceed	The average power limit setting of the Power Controller has been exceeded
Rating plug	<i>Rating plug</i> not present or size incompatible with Ekip Touch parameters
Zone Selectivity Diag	Error in zone selectivity connections (Hardware Selectivity)
Sensor L1/L2/L3/Ne	Fault in connection of sensors to Trip unit; check status of sensors, including external Neutral, or call ABB
Configuration Session	TFTP server enabled and/or configuration session open on module <i>Ekip Com IEC61850</i> or <i>Ekip Hub</i>
CB status	CB state incorrect (example: current present but CB in open state)
Switchboard Actor communication Error	Check configuration and connection of <i>Ekip Link</i> module
TC disconnected	Check Trip coil, status of the terminal and cables connecting to Ekip Touch
Contact Wear	Make sure that the contacts/poles are in good condition.

Continued on the next page

### Protections

In the event of protection or measurement alarms, the associated signals are reported:

Signal	Type of alarm
Trip Test	Trip test performed signal. Press <b>iTEST</b> to reset the message
Protection timing (for example: L timing)	Specific protection in time delay mode
Protection prealarm (for example: Prealarm G)	Specific protection in prealarm
Protection (Trip off) [for example: S (Trip off) ]	Specific protection, configured with trip disabled, in alarm state
2I Protection Active	2I Protection active
Load LC1 / Load LC2	Current threshold 1 I1 / 2 I1 exceeded and in alarm state
Iw1 Warning / Iw2 Warning	Current threshold Iw1 / Iw2 exceeded and in alarm state
Harmonic dist.	Harmonic Distortion protection in alarm state
Power factor	Power factor measurement ( $\cos \phi$ ) less than set threshold
Phase cycle	Phase sequence protection in alarm state
Frequency	Frequency measured off range (<30 Hz or >80 Hz)
5th harmonic above Th / I sopra Th / THD I above Th / THD V above Th	Single or total harmonic measurement above threshold

### Faults, causes and remedies

A list of possible faulty situations for Ekip Touch, their possible causes and suggestions about how to resolve them are given below.



**NOTE:** check error messages on display before consulting the table; if the suggestions given fail to resolve the problem, call the ABB assistance service and provide the report produced by the Ekip Connect software if possible

Fault	Possible causes	Suggestions
Communication problems with modules in terminal box	Circuit-breaker in withdrawn position, Vaux absent or modules not inserted properly	Insert modules, set CB to Connected position, connect Vaux
CB status not aligned with CB position	Absence of terminal box modules or of contact S75I	Check for presence of terminal box modules and connect contact S75/I
Circuit-breaker fails to react to opening/closing command from Ekip Touch	The connections or supplies of the opening/closing actuators are not correct	Check connections and supplies.
	Absence of auxiliary power supply to Ekip Touch	Check supplies and status of Power LEDs
	Circuit-breaker is in a condition which fails to enable the selected command	Check circuit-breaker documentation and cases that fail to enable command
Display off and/or not backlit	No auxiliary supply or currents lower than minimum turn-on values	Correct operating condition.
	Temperature outside range	Correct operating condition.
Measurements incorrect or absent (current, voltage, etc)	Current below the minimum threshold that can be displayed	Correct operating condition.
	Incorrect frequency setting	Set frequency
	Harmonic distortion and/or crest factor off range	Correct operating condition.
	Rated Voltage parameter setting error	Set the correct parameters

Continued on the next page

Fault	Possible causes	Suggestions
The PIN is not required	The PIN has been disabled or has already been entered in the same programming session	Operating condition correct; consult chapter relating to the PIN
PIN error	PIN wrong or lost	Contact ABB or consult document 1SDH001501R0001
It is not possible to perform the trip test	Trip coil is not connected properly	Check Trip coil connection and messages on display
	CB trip signal has not been reset	Press the reset pushbutton
	The busbar current is greater than zero	Correct operating condition.
TRIP fail signaling: <i>Trip Fail command (BF)</i>	One or more of the following conditions: <ul style="list-style-type: none"> <li>• Trip coil not working</li> <li>• status contacts not working</li> <li>• faulty internal wiring</li> </ul>	1. If closed, open CB in the manual mode and check changed status. 2. Press iTest, check that the signal has disappeared from the display and the general status of the alarms. 3. Check the conditions of the wiring and internal contacts 4. Working in safety conditions, close the CB and perform a trip test via the trip unit  Contact ABB if problems persist
The expected trip does not occur	Trip excluded	Operating condition correct; enable trip if necessary
Trip times different than expected	Wrong threshold/time/curve selected	Correct parameters
	Thermal memory enabled	Disable it if it is not necessary
	Zone selectivity enabled	Disable it if it is not necessary
	Incorrect neutral selection	Modify the neutral selection
Rapid trip with I3=Off	Inst trip	Correct operating condition with short circuit at high current
High ground-fault current, but no trip occurs	Incorrect selection of the sensor	Set internal or external sensor
	Function G inhibited owing to high current	Operating condition correct (see protection description chapter)
Opening data not displayed	No auxiliary power supply and/or battery low	Correct operating condition.

# Interface and menus

## 1 - Presentation of interface

- Functions** The Ekip Touch operator interface allows you to:
- display signals and measurements of the functions in progress or recorded events
  - configure the parameters, the protections present and other functions of the unit
  - set parameters concerning the accessory modules connected
  - perform tests

**Components** The Ekip Touch interface includes a touchscreen, short-cut push-buttons, status leds and a service connector for certain external accessories:

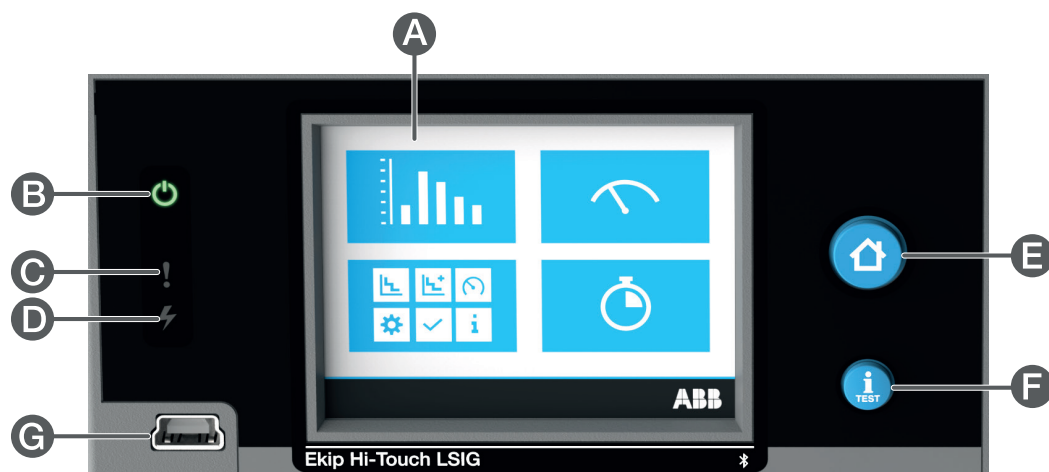


Figure 10




Pos.	Description
A	Single-touch color touchscreen display
B	<b>Power</b> led
C	<b>Warning</b> led
D	<b>Alarm</b> led
E	<b>HOME</b> push-button
F	<b>iTEST</b> push-button
G	Service connector

**Display** The touchscreen display of Ekip Touch is the single-touch, color type.  
The touchscreen function is active when the unit is on.



## LEDs





LEDs	Colour	Description
Power 	Green	Indicates the on status of Ekip Touch: <ul style="list-style-type: none"> <li>off: no power and unit off</li> <li>on, steady (<i>Power mode</i>) or flashing (<i>Alive mode</i>): unit on and self-supplied by external <i>Vaux</i> or service connector</li> </ul> The <i>Power mode</i> or <i>Alive mode</i> can be selected via Ekip Connect: if the <i>Alive mode</i> has been selected and external modules are connected, the Power leds of Ekip Touch and the modules flash in the synchronized mode. More details are given in the chapter on Ekip Connect additional functions on page 119
Warnings 	Yellow	Signals that certain alarms are present: <ul style="list-style-type: none"> <li>off: no alarm</li> <li>on steady: prealarm of an active protection or status contacts error</li> <li>two fast flashes every 0.5 s: trip unit parameter configuration error</li> <li>fast flash: <i>Rating Plug</i> or <i>Ekip Measuring</i> module installation error</li> </ul>
Alarm 	Red	Signals that an alarm is present: <ul style="list-style-type: none"> <li>off: no alarm</li> <li>on steady: on steady signals a TRIP due to a protection</li> <li>two fast flashes every 2 seconds: <i>Rating Plug</i> error</li> <li>on with fast flashing: protection timing tripped or alarm due to disconnection of a current sensor</li> </ul>

If on and flashing at the same time, the Warning and Alarm leds signal an alarm caused by a hardware error inside the Trip unit.

This case requires assistance from ABB.

## Push-buttons



Push-button	Description
HOME 	Allows different areas of the menu to be accessed: <ul style="list-style-type: none"> <li>from pages: <i>HOME</i>, <i>Histograms</i>, <i>Measuring instruments</i>, <i>Measurements</i>, <i>Main measurements</i> -&gt; open: <i>Main page</i></li> <li>from pages: <i>Main page</i>, <i>Alarm list</i>, at any point of the menu area -&gt; open: <i>HOME</i> page</li> </ul>
iTest 	Allows certain pages of information about the unit to be rapidly consulted; press the button in successionj to display the following pages: <ul style="list-style-type: none"> <li><i>Alarm list</i>, if messages are present</li> <li><i>Info</i>, if Customer Page option is active (page 119)</li> <li><i>Protection unit</i>, with information about Ekip Touch</li> <li><i>Circuit breaker</i>, with information about the CB</li> <li><i>Last trip</i>, with information about the last trip, if available</li> </ul> Consultation is active from pages: <i>HOME</i> , <i>Histograms</i> , <i>Measuring instruments</i> , <i>Measurements</i> , <i>Main measurements</i> <b>NOTE:</b> with <i>Ekip Touch</i> off and the internal battery charged, press <b>iTEST</b> to temporarily switch on the Power led and, in the case of a trip, the display with information about the trip protection and the Alarm led

## Service connector



The service connector enables Ekip Touch to be connected to *Ekip TT*, *Ekip T&P* and *Ekip Programming*, allowing the unit to be temporarily supplied, parameter configuration prior to putting into service, tests and extension of the configuration functions.



**IMPORTANT: only use cables supplied by ABB or with ABB accessories**

## 2 - Navigation

**Levels and pages** The Ekip Touch menu is divided into several levels, all accessible using the touchscreen display and buttons available in the units:

### Level 1 (HOME)

Page shown on power up; appears when push-button of the same name appears, as described on page 24; from here you can:

1. access the *MAIN PAGE* (level 2), by pressing the **HOME** button
2. access the *Alarm list*, by selecting the diagnostic bar at the bottom
3. access the *Summary pages* of some of the measurements by pressing on the edges

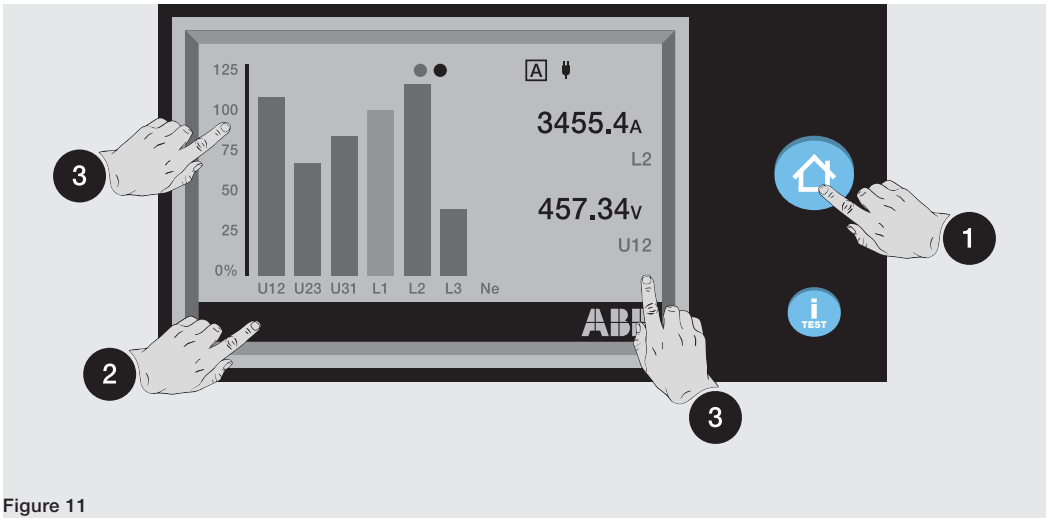


Figure 11



**NOTE:** Ekip Touch is supplied with the *Histograms* page configured as **HOME**; if the configuration is different, the *Histograms* can be set as the main page by pressing and holding the **HOME** key for five seconds and confirming the message on the display

### Level 2 (MAIN PAGE)

This page allows you to:

4. access one of the graphic pages: *Histograms*, *Measuring instruments* and *Measurements*
5. access the **MENU AREA** (level 3)



Figure 12

Continued on the next page

**Level 3 (MENU AREA):**

You can access all the configuration menus and consult the parameters in this page

6. *Protections and Advanced*

7. *Measures*

8. *Settings*

9. *Test*

10. *About*

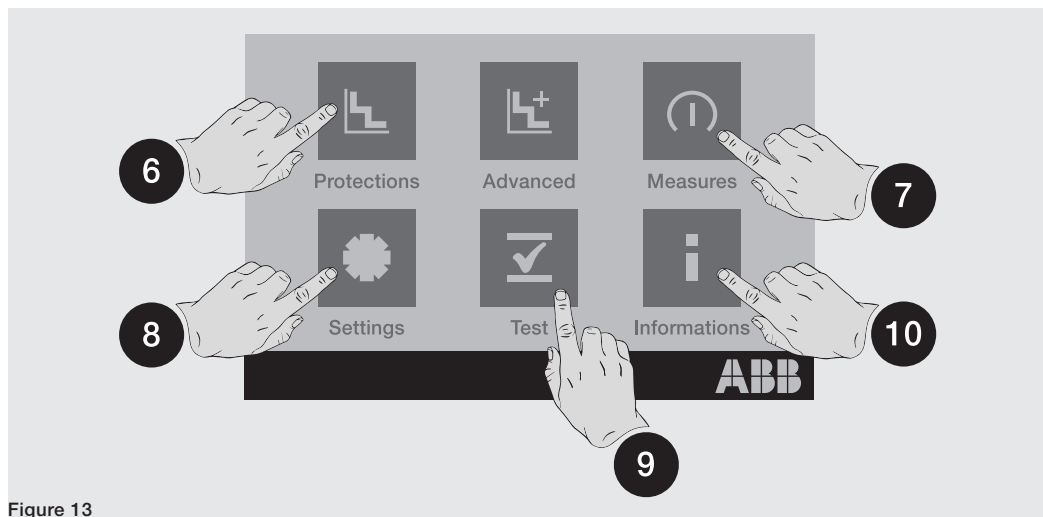


Figure 13

**LEVEL 4 (MENUS and SUBMENUS)**

Selection of one of the level 3 menus accesses a set of submenus with the list of available options, which are organized into several levels through to details of the specific parameter.

Each submenu has a command for returning to the previous menu (11); if the list contains more than five options, there is also a scroll bar (12) for full consultation.

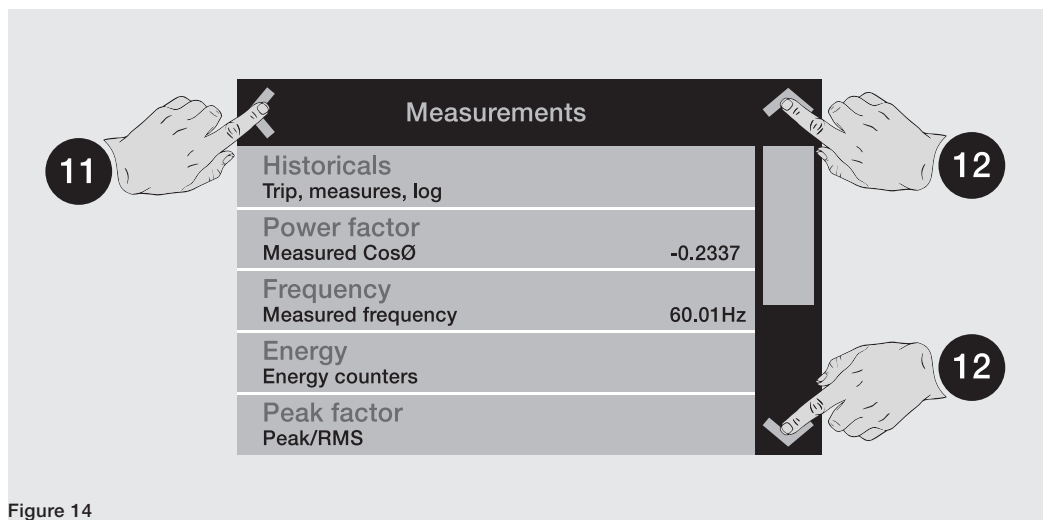


Figure 14

To consult a parameter, it just needs to be selected.

Consult the dedicated section for instructions on how to configure and save the parameters (page 35).



### 3 - Graphic pages

**Histograms** The page displays the histograms of the current and voltage measurements acquired in real time and certain status information:

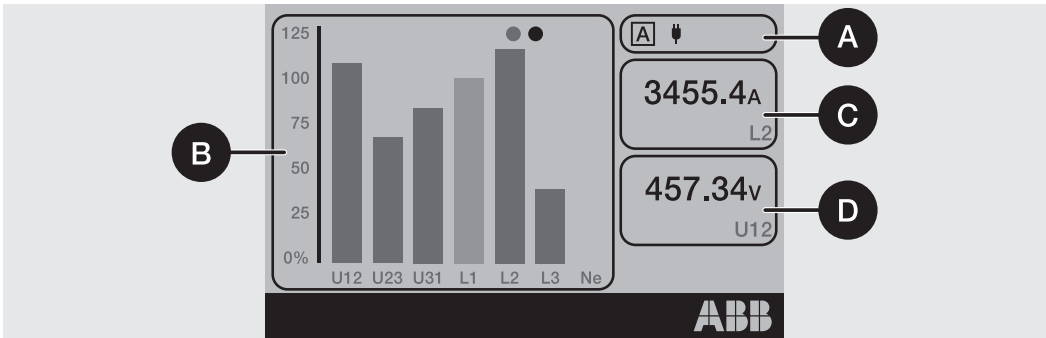






Figure 15

Pos.	Description
	Up to four information icons are available:
A	 The letter corresponding to the active configuration is displayed if <i>Adaptive Protections</i> package is present and with <i>Dual Set enabled</i> ; more details on page 67
	 External power supply present ( <i>Vaux</i> or through a service connector); the plug icon indicates <i>Vaux</i>
	 Remote parameter writing configuration active, modules <i>Ekip Com</i> connected, <i>Vaux</i> present
	 Bluetooth communication activated
B	Histograms of the voltage and current measurements acquired in real time. The bar of each signal is represented in scale 0 to 125 % with reference to the rated current and voltage values of the, and can be of three colors: <ul style="list-style-type: none"> <li>light blue: no protection in alarm status</li> <li>yellow: one of the tripped protections is in prealarm status with respect to set thresholds</li> <li>red: one of the tripped protections is in alarm status with respect to set thresholds</li> </ul> <b>NOTE:</b> Histogram <i>Ne</i> is available with 4P or 3P + N configurations
C	Maximum phase current measured in real time
D	Maximum line-to-line voltage measured in real time

**Summary page** Press on the sides of the display (1) to access further summary pages for certain measurements:

- *Main measurements* page: maximum phase current, maximum line-to-line voltage, power factor, total active/reactive/apparent powers
- *Ekip Synchrocheck main measurements* page (when module is present): Int and Ext frequencies and voltages, phase difference, synchronism status (page 32)

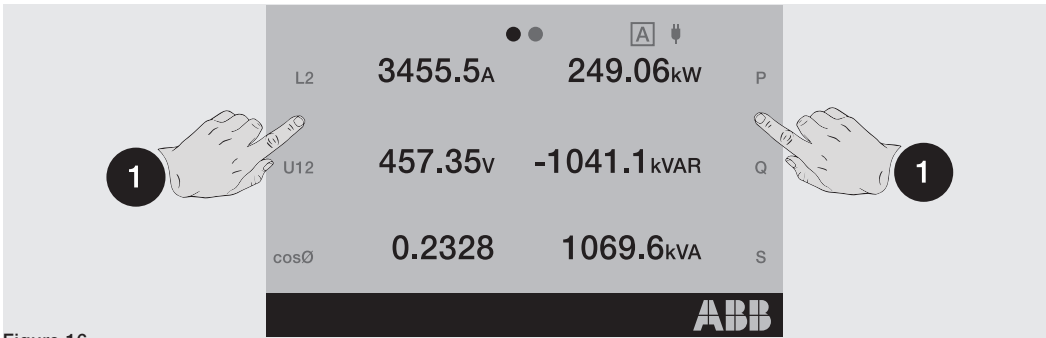


Figure 16

**NOTE:** both pages can be set as the main page by pressing **HOME**, holding it for five seconds and confirming the message on the display

Measuring instruments

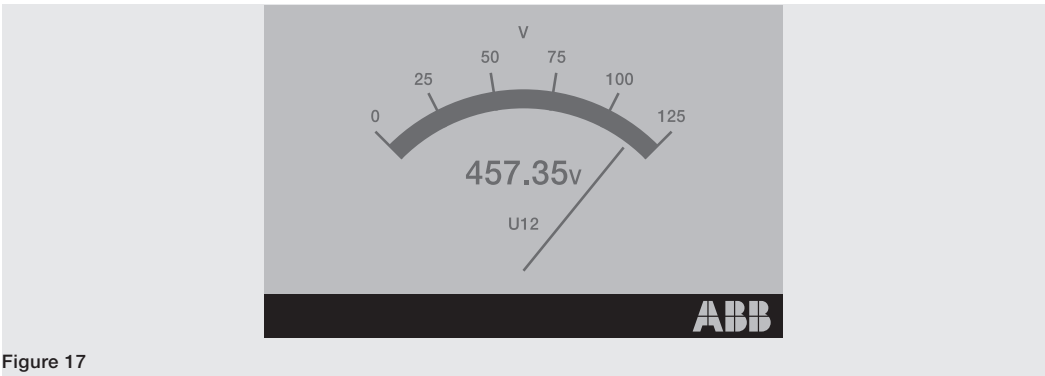


Figure 17

Depending on the Trip unit model, certain measurements acquired in real time are shown on these pages by means of a pointer; each page displays a specific measurement:

Page	Measurement type page	Unit of measurement/indicator
1	Maximum phase current	A
2	Maximum line-to-line voltage	V
3	Total active power	kW
4	Total reactive power	kVAR
5	Total apparent power	kVA

The scale of values ranges from 0 to 125 % and refers to the rated values set (for powers: rated current x rated voltage x  $\sqrt{3}$ ).

Press on the sides of the display to browse the pages; quit the *Measurement tools* section with the **HOME** key.

Page orientation (horizontal by default) can be changed in the *Settings* menu (page 117).

**NOTE:** each page can be set as the main page by pressing **HOME**, holding it for five seconds and confirming the message on the display

Measurements

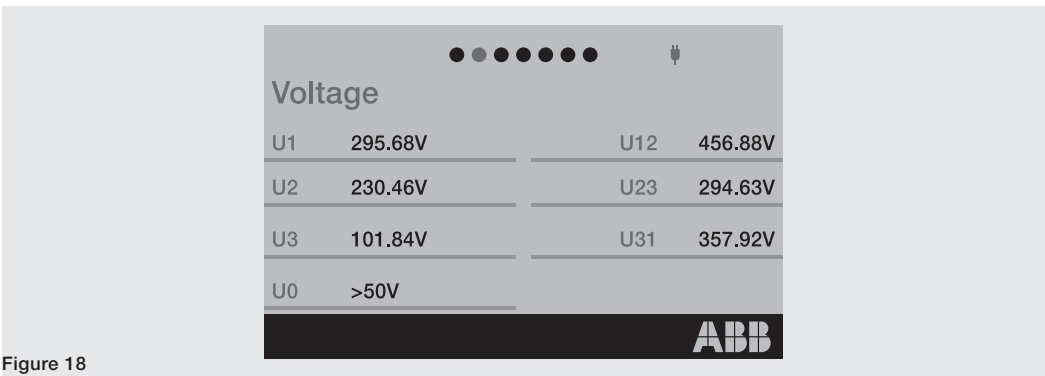


Figure 18

If provided for by Trip unit model, the **Measurements** pages contain a list of measurements acquired in real time, expressed in absolute value:

Page	Name	Measurements
1	Current	Currents: phase, earth fault, external/Rc earth fault
2	Voltage	Voltages: line-to-line, phase, neutral
3	Active power	Phase and total active powers
4	Reactive power	Phase and total reactive powers
5	Apparent power	Phase and total apparent powers
6	Energy counters	Total active, reactive and apparent energies
7	Power Controller	Power Controller measurement summary (page 122).
8	Load shedding	Power Controller measurement summary (page 123).
9	Ekip Signalling 3T	Summary of <i>Ekip Signalling 3T</i> module measurements, if installed

Continued on the next page

Ekip Touch configuration involves certain exceptions:

- the Ne current measurements are available with 4P and 3P + N configurations
- the phase voltage measurements are available with the 4P configuration
- with the 3P configuration, pages: *Active Power*, *Reactive Power* and *Apparent Power* are replaced by the *Powers* page with the total active, reactive and apparent power measurements
- Ige/Rc current available with external sensor activated
- *Power Controller* page available with Power Controller function activated
- *Load Shedding* available with Load Shedding function activated

Press the sides of the display to browse the pages; press the **HOME** key to quit.



**NOTE:** each page can be set as the main page by pressing **HOME**, holding it for five seconds and confirming the message on the display

## Diagnosis bar and Alarm list

The Diagnosis bar lists the faults detected by the unit. It shows a detail of each alarm for about two seconds.



Figure 19

Select the bar to access the *Alarm List* page, with the list of alarms present.

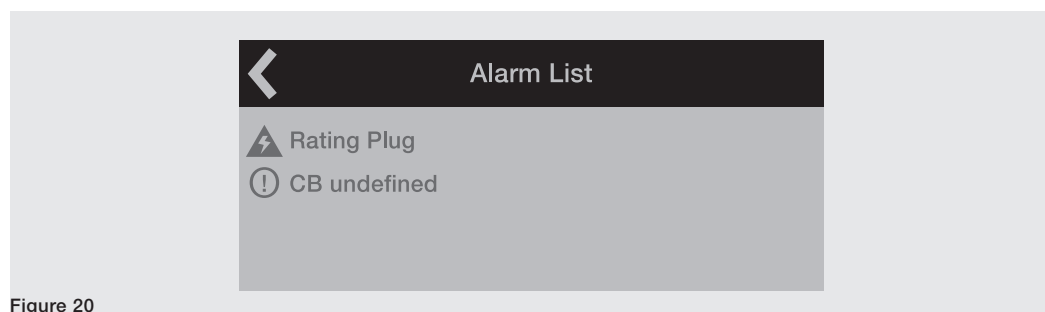


Figure 20



**NOTE:** the *Alarm List* page also appears when the *iTEST* button is pressed in the cases provided for and described on page 24

Each signal is followed by an icon that identifies the type of alarm:

Icon	Alarm type
	Alarm
	Warning, error or prealarm
	About
	Timing due to tripped protection

The complete list of alarms is given on page 19.

# 4 - Menu

**Introduction** Press **Enter** or **ESC** from the main page to access the different menus of the Trip unit.

The menus are the 4th level pages that can be displayed and comprise list of:

- submenus
- settable parameters
- information and measurements
- commands that can be executed

Selection of each menu item enables: access to submenus, consultation of information in detail, configuration of a parameter, execution of a command.

**Elements of each item** The items in each list consist of:

- main name (white color)
- additional description or set value (light blue color)

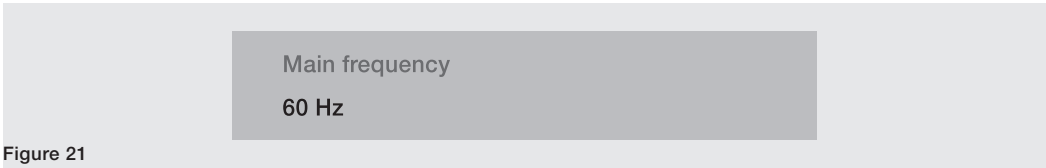


Figure 21

**Protections Menu** The *Protections* menu can be used to configure the following protections <sup>(1)</sup>:



Name	Parameters	SW package	Page
L	List and description in dedicated chapter	Standard Protections	40
S	List and description in dedicated chapter		41
S2	List and description in dedicated chapter		42
I	List and description in dedicated chapter		43
G <sup>(2)</sup>	List and description in dedicated chapter		44

<sup>(1)</sup> if the *Adaptive Protections* package is available and *Dual set* has been activated, an intermediate menu where the set can be selected (Set A / Set B) will be available before the list of protections page 67).

<sup>(2)</sup> available for LSIG versions

## Advanced menus



The *Advanced* menu can be used to configure the following protections <sup>(1)</sup>:

Name	Parameters	SW package	Page
MCR	List in dedicated chapter	Standard Protections	45
2I	List in dedicated chapter		46
IU	List in dedicated chapter		47
UV <sup>(2)</sup>	List in dedicated chapter	Voltage protections	50
OV <sup>(2)</sup>	List in dedicated chapter		51
UV2 <sup>(2)</sup>	List in dedicated chapter		51
OV2 <sup>(2)</sup>	List in dedicated chapter		52
VU <sup>(2)</sup>	List in dedicated chapter		52
S(V) <sup>(2)</sup>	List in dedicated chapter	Voltage Advanced protections	53
S2(V) <sup>(2)</sup>	List in dedicated chapter		54
RV <sup>(2)</sup>	List in dedicated chapter		56
UF <sup>(2)</sup>	List in dedicated chapter	Frequency protections	57
OF <sup>(2)</sup>	List in dedicated chapter		58
UF2 <sup>(2)</sup>	List in dedicated chapter		58
OF2 <sup>(2)</sup>	List in dedicated chapter		59
RP <sup>(2)</sup>	List in dedicated chapter	Power protections	60
D <sup>(2)</sup>	List in dedicated chapter		61
RQ <sup>(2)</sup>	List in dedicated chapter		64
OQ <sup>(2)</sup>	List in dedicated chapter		63
UP <sup>(2)</sup>	List in dedicated chapter		64
OP <sup>(2)</sup>	List in dedicated chapter		63
ROCOF <sup>(2)</sup>	List in dedicated chapter	ROCOF protections	66
R STALL <sup>(2)</sup>	List in dedicated chapter	Motor protections	69
R JAM <sup>(2)</sup>	List in dedicated chapter		69
UC <sup>(2)</sup>	List in dedicated chapter		70
U <sup>(2)</sup>	List in dedicated chapter		70
PTC <sup>(2)</sup>	List in dedicated chapter		71
V DIR, VINV <sup>(2)</sup>	List in dedicated chapter	Interface protections (IPS)	125
59 S1 <sup>(2)</sup>	List in dedicated chapter		125
Warnings	VS Warning, FS Warning, FW1 Warning		125
Signalings	Threshold 1 I1, Threshold 2 I1, Threshold Iw1, Threshold Iw2, Phase Sequence <sup>(2)</sup> , CosØ <sup>(3)</sup>	Standard Protections	79
Functions	External Trip, Trip Reset, Switch On SET B <sup>(4)</sup>		79
Synchrocheck	List in dedicated chapter	<sup>(5)</sup>	76

<sup>(1)</sup> if the *Adaptive Protections* package is available and *Dual set* has been activated, an intermediate menu where the set can be selected (Set A / Set B) will be available before the list of protections (page 67); The only menu always present via *Advanced* is *Functions*

<sup>(2)</sup> available if provided for by Trip unit model or if the relative SW package has been activated, where possible (page 6)

<sup>(3)</sup> CosØ available if provided for by Trip unit model or if the *Power Protections* package has been activated

<sup>(4)</sup> *SET B* available when *Adaptive Protections* package is present

<sup>(5)</sup> available when *Ekip Synchrocheck* is present

Measurements Menu



Menu	Submenus	Description	Page
<i>Historicals</i>	<i>Trip</i>	Description in dedicated chapter	98
	<i>Events</i>	List of events recorded	98
	<i>Measurements</i>	List and description in dedicated chapter	98
<i>Power factor</i> <sup>(1)</sup>	-	Power factor measurement	101
<i>Frequency</i> <sup>(1)</sup>	-	Frequency measured	101
<i>Energy</i> <sup>(1)</sup>	<i>Energy counters</i>	Measurement of energies	101
	<i>Reset counters</i>	Meter reset command	
	<i>Energy RESET</i>	List and description in dedicated chapter	101
<i>Peak factor</i> <sup>(1)</sup>	-	Peak factor of each phase	101
<i>Harmonic dist.</i>	-	Activation command for current harmonic distortion monitoring	48
<i>Ekip Synchrocheck</i> <sup>(2)</sup>	-	Description in dedicated chapter	167
<i>Network Analyzer</i> <sup>(3)</sup>	<i>V Sequences</i>	Measurements associated with Network Analyzer function: list and description in dedicated chapter	107
	<i>3s V Sequences</i>		
	<i>THD Current</i>		
	<i>THD Voltages</i>		
	<i>Counters</i>		
	<i>Waveforms</i>		
<i>Maintenance</i>	<i>Contact Wear</i>	Installation and maintenance dates and commands	117
	<i>LastServiceContactWear</i>		
	<i>Installation</i>		
	<i>Last Maintenance</i>		
	<i>Service RESET</i>		

<sup>(1)</sup> available if provided for by Trip unit model or if SW Measuring Measurements package has been activated

<sup>(2)</sup> available when Ekip Synchrocheck module is present

<sup>(3)</sup> available if provided for by Trip unit model or if Network Analyzer SW package has been activated

## Settings Menu



Menu	Submenus	Description and parameters	Page
<i>Circuit Breaker</i>	<i>Configuration</i>	Phase number selection	114
	<i>Hardware Trip</i>	Protection activation command	48
	<i>T Protection</i>	Protection activation command	48
	<i>Neutral Protection</i> <sup>(2)</sup>	<i>Enable, Neutral threshold</i>	48
	<i>Installation</i>	Installation of modules	34
<i>Main Frequency</i>	-	Grid frequency configuration	114
<i>Phase Sequence</i>	-	Phase sequence configuration	52
<i>Modules</i>	<i>Local/Remote</i>	Parameter writing configuration	116
	<i>Local Bus</i>	Configuration of local bus presence	116
	<i>Modul x</i> <sup>(3)</sup>	Details in chapters of each module	116
	<i>BLE</i>	LV communication configuration	116
	<i>Functions</i>	<i>Switch On LOCAL, Signalling RESET</i>	116
<i>Monitor time</i>	-	Measuring range configuration	99
<i>Test Bus</i>	-	Test bus activation	116
<i>Power Controller</i> <sup>(4)</sup>	<i>Enable</i> <sup>(5)</sup>	Function enabling and parameters: see details in dedicated chapter	122
	-		122
<i>Load Shedding</i> <sup>(4)</sup>	<i>Enable</i> <sup>(5)</sup>	Function enabling and parameters: see details in dedicated chapter	122
	-		122
<i>Network Analyzer</i> <sup>(6)</sup>	<i>Enable</i> <sup>(5)</sup>	Function enabling and parameters: see details in dedicated chapter	107
	-		107
<i>Datalogger</i> <sup>(6)</sup>	<i>Enable</i> <sup>(5)</sup>	Function enabling and parameters: see details in dedicated chapter	105
	-		105
<i>Dual Set</i> <sup>(6)</sup>	<i>Enable</i> <sup>(5)</sup>	Function enabling and parameters: see details in dedicated chapter	67
	Default set		67
<i>System</i>	Date	Configuration of unit date	116
	Time	Configuration of unit time	116
	Language	Configuration of menu language	116
	New PIN	PIN Configuration	116
<i>View</i>	-	Representation parameters of menus and measurements: see details in dedicated chapter	116
<i>Functions</i>	YO Command	<i>Function, Delay</i>	76
	YC Command		76
<i>Maintenance</i>	<i>Alarms</i>	Activation of maintenance signals	100
<i>MLRIU</i> <sup>(7)</sup>	-	Motor protection parameters: see details in dedicated chapter	67

<sup>(1)</sup> with CB in 3P configuration

<sup>(2)</sup> available with CB in 4P or 3P with neutral configuration

<sup>(3)</sup> the menu populates with the list of accessory modules detected by the unit with Local Bus activated and in the envisaged connection and supply conditions

<sup>(4)</sup> available if the function has been installed in the Trip unit

<sup>(5)</sup> additions are only made to the list of the specific submenu when the function is enabled (=On)

<sup>(6)</sup> available if provided for by Trip unit model or if relative SW package has been activated

<sup>(7)</sup> available with Ekip M Touch

**Installation menu**

If Ekip Touch detects that *Rating Plug* or *Ekip Measuring* have not been installed properly, it signals an alarm (page 19) and completes *Settings* menu with the specific installation section:

Menu	Submenus 1	Submenus 2	Commands
Circuit Breaker	Installation	Rating Plug	Install
		Ekip Measuring	Install

Correct installation is confirmed by a message on the display and disappearance of the alarm signal and installation menu.



**NOTE:** availability of submenus depends on the module, which appears to have not been installed

**Test Menu**

Menu	Submenus	Description, parameters and Commands	Page
Autotest	-	Autotest command	120
Trip Test	-	TRIP command	120
Test CB	-	Close CB, Open CB	120
Ekip CI	-	Autotest command	121
Ekip Signalling 2K <sup>(1)</sup>	Ekip Signalling 2K-1 <sup>(1)</sup>	Module autotest command	121
	Ekip Signalling 2K-2 <sup>(1)</sup>		
	Ekip Signalling 2K-3 <sup>(1)</sup>		
ZoneSelectivity <sup>(2)</sup>	S Protection	Input, Force Output, Release Output	121
	G Protection		

<sup>(1)</sup> available if one or more Ekip Signalling 2K modules are connected and detected by Ekip Touch

<sup>(2)</sup> available if Ekip Touch is on with auxiliary supply

<sup>(3)</sup> available with S and/or S2 protection enabled and curve t=k

<sup>(4)</sup> available with G and/or Gext protection enabled and curve t=k

**About Menu**

Menu	Submenus	Information provided
Protection Unit	-	Information about Ekip Touch: Mainboard serial number, Trip unit serial number, type, version, standard, SW version, date and time, language
Circuit Breaker	-	CB information: TAG name, CB name, rated current, number of poles, CB status and position, total operations, CB serial number
IEC61557-12 <sup>(1)</sup>	-	Status of 1% measurements (from <i>Class 1 Power &amp; Energy Metering</i> package), serial number of assembly and current sensors connected
Feature Collection	-	List of tripped protections in Trip unit
Modules	Modul x <sup>(2)</sup>	Module information: serial number, SW version, status of inputs/outputs/contacts (if present)
Power Controller <sup>(3)</sup>	Load Input Status	Status of loads (open/closed)
	Load Active	Load configuration (activated/not activated)
Load shedding <sup>(3)</sup>	Load Input Status	Status of loads (open/closed)
	Load Active	Load configuration (activated/not activated)

<sup>(1)</sup> available if Class 1 Power & Energy Metering SW package is provided for by Trip unit module or if it has been previously activated

<sup>(2)</sup> available if one or more modules are connected and detected by unit

<sup>(3)</sup> available if function has been installed and enabled in Trip unit



# 5 - Changing parameters and commands

## Changing parameters



Comply with the following procedure to change one or more parameters:

**IMPORTANT: parameters can be changed with Trip unit in the Local mode and in the absence of timing alarms**

- 1. Select parameter and enter PIN if required
- 2. Select new value from list or with the aid of page commands
- 3. Select Confirm command if present:

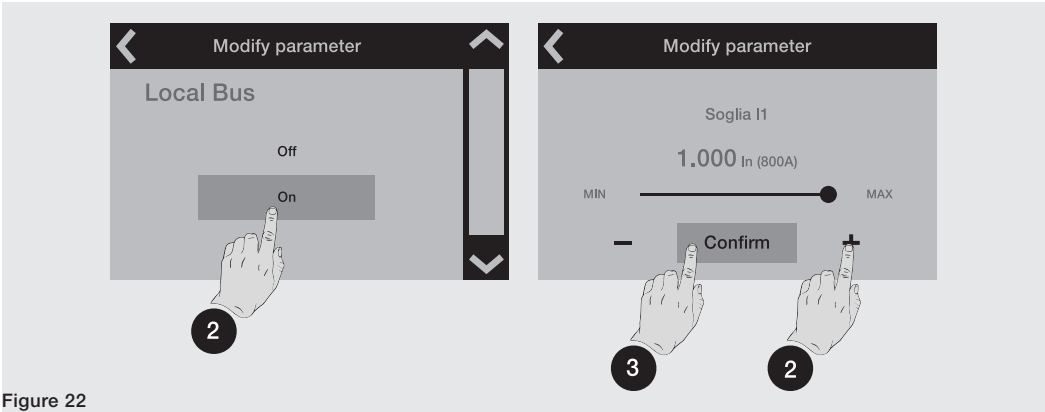


Figure 22

- 4. When the new value has been selected/confirmed, the menu of the parameter is accessed automatically, the changed item presents the new value in light blue and a tick to confirm:

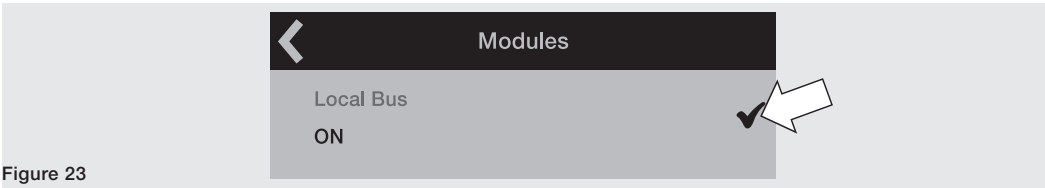


Figure 23

Now proceed by confirming the programming (Step 5) or access other parameters if further changes are required (Step 1).

- Select the arrow at the top left to access the top menu until the *Programming* page appears:

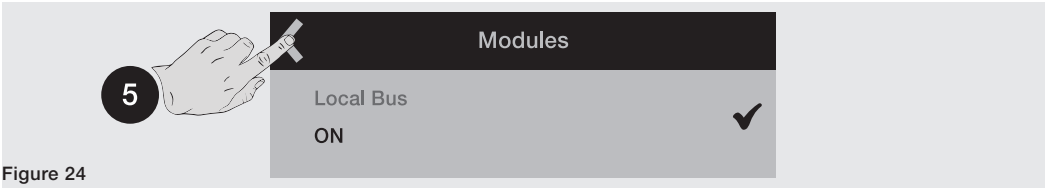


Figure 24

- 6. Various commands are enabled in the programming page:
  - Confirm to validate the new parameters and conclude the programming procedure
  - Abort to interrupt the save data process
  - Modify to go back to the menus and change the parameter or others

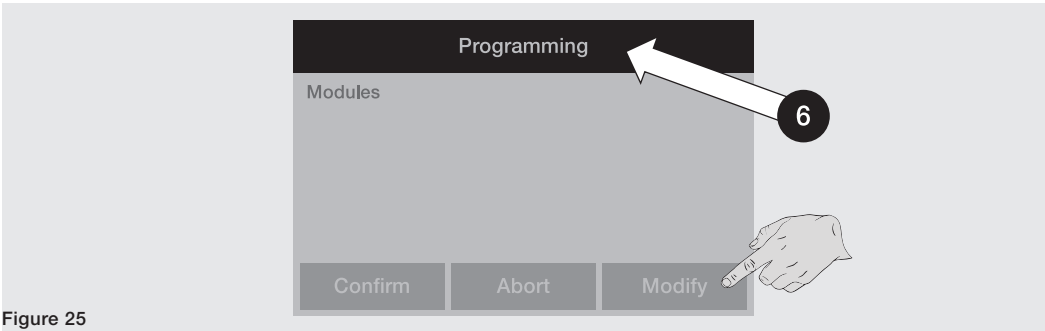


Figure 25

---

## Commands



Selection of a command implies its immediate execution or opening of an intermediate confirm window.

Correct execution is indicated by a confirm window, which disappears automatically from the display.

Certain commands, selection of which immediately activates the respective test sequences without any confirm window, are an exception to this rule:

- *Auto Test*
- *Ekip Signalling 2K* module commands



**IMPORTANT: confirmation on the display refers to launching the command, not to verification of the operation required, which is at the user's charge whichever type of command is concerned: reset parameters, display, open/close contacts**

---

## Exceptions



Before validating a change to a parameter, the Trip unit checks all its parameters to make sure there is no conflict or incorrect condition:

- if the Trip unit detects an incorrect condition, the relative details appear on the display and parameter modification is annulled.

Before executing a command, the Trip unit checks all its parameters to ensure there is no conflict or incorrect condition:

- if the Trip unit detects an incorrect condition, the relative details appear on the display and command execution is annulled.



**WARNING! aborting the programming affects all the parameters modified during the same session**

---

# 6 - PIN and security

## Safety



**WARNING! the user is responsible for security against unauthorized access and modification: configure all Trip unit access points (display menu and, if present, Ekip Connect and remote communication systems) using the access PIN and controlled and authorized connection systems**

## Function

The PIN code enables access to certain areas of the Trip unit and prevents unintentional setting errors from being entered via the display.

However, parameters can still be modified without having to enter the PIN via:

- service connector, using *Ekip T&P* or *Ekip Programming* and the Ekip Connect application
- bus, in the presence of Ekip Com modules and with Trip unit configured as Remote (page 115).

To ensure your unit is in secure conditions, the Wizard window immediately asks you to change the PIN code on first power up; this is strongly recommended by ABB (page 17).

## Description

The PIN code is a number formed by five digits, each of which can be given a value from 0 to 9; the default value is: **00001** and can be changed in the *Settings-New PIN* menu.

The PIN code must be entered to:

- change a parameter (including the PIN code itself)
- access the *Test* menu

Once the PIN code has been entered, all menus can be browsed for two minutes: once two minutes have elapsed, the PIN code must be entered again (depending on the case in question).



**NOTE:** the PIN code must also be entered again if a programming session has been annulled (page 35).

## Entry

The following page will appear when the PIN code is requested: change (1) and confirm (2) each digit to complete the entry process.

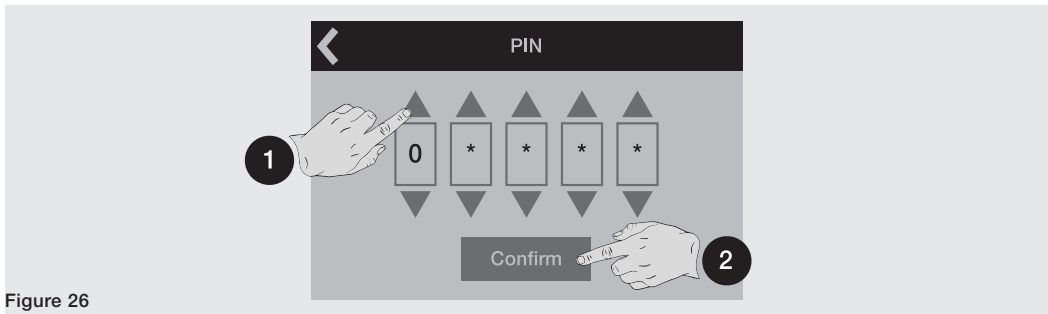


Figure 26



### NOTE:

- if the PIN is wrong, "Wrong PIN" will appear for three seconds after which the entry page will be displayed again; use the command at the top left to quit
- there is no limit to the number of wrong PIN that can be entered

## Disabling

The PIN code can be disabled by entering its value as: 00000; In this case, the PIN is only required to change the PIN itself in the *Settings* menu.

## Recovery

if the PIN code is lost, consult document [1SDH001501R0002](#), available in the ABB website, or contact ABB directly.

# Protections

## Operating principle

The protection functions are available with all Ekip Touch models and versions.

Each protection is associated with a different signal (current, voltages, frequencies, powers, etc) but the operating principle is the same:

1. If the signal measured exceeds the set **threshold**, the specific protection activates (prealarm and/or **alarm**).
1. The **alarm** appears on the display and, after a period of time (timing), depending on the protection parameters set, can convert into a **trip command (TRIP)** transmitted to the internal Trip coil of the CB.



### NOTE:

- if the signal measured drops below the set threshold before the trip time has elapsed, Ekip Touch quits the alarm and/or timing status and returns to the normal operating condition
- all protections have a default configuration: check the parameters and change to suit the installation requirements before putting into service

## TRIP

When the Ekip CI module is present, Ekip M Touch allows a different TRIP configuration to be selected so that, if a trip occurs, a contact of the Ekip CI module connected to an external remote control switch is commanded (Normal mode).



**NOTE:** *TRIP is always controlled by a command to the Trip Coil for protections I and G*

Consult the parameters used with Ekip Touch MLRIU for further details (page 117).

## References

Many of the protection thresholds are displayed in two different quantities: absolute value and relative value. The relative value depends on the type of measurement:

Type of protection	Reference	Description
Current	In	Nominal current of the <i>Rating plug</i>
Voltage	Un	Line-to-line voltage setting
Frequency	fn	Frequency setting
Power	Sn	$\sqrt{3} \times I_n \times U_n$

## Protections packages

The protections described in the following chapters are grouped into packages, the availability of which depends on the model and version of the Trip unit, and on their ability to be installed as additional package:

Package	Page
Standard Protections	39
Voltage protections	50
Voltage Advanced protections	53
Frequency protections	57
Power protections	60
Adaptive protections	67
Motor protections	68

# 1 - Standard Protections


**Elenco** The Standard protections available for all Ekip Touch models, are:

Name	Type of protection	Page
L	Overload with inverse long-time delay	40
S	Selective short-circuit	41
S2 <sup>(3)</sup>	Short-circuit with adjustable delay	42
I	Instantaneous short-circuit	43
G <sup>(1)</sup>	Earth fault with adjustable delay	44
MCR	Instantaneous short-circuit on circuit-breaker closing	45
2I	Instantaneous short-circuit programmable	46
IU	Current unbalance	47
Neutral <sup>(2)</sup>	Different protection on neutral phase	47
Harmonic distortion	Distorted waveforms	48
T	Abnormal temperatures	48
Hardware Trip	Internal connection errors	48
Current thresholds	Control thresholds exceeded	49

<sup>(1)</sup> not available with LSI version of Ekip Touch

<sup>(2)</sup> not available with Ekip M Touch

<sup>(3)</sup> not available with Ekip G Touch

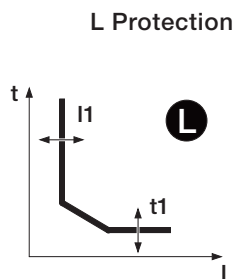

### Function

If the current of one or more phases exceeds threshold I1, the protection trips and, after a time established by the value read and by the parameter settings, transmits the TRIP command.



To check and simulate the trip times in relation to all the parameters, please consult:

- the summary table of the protections with the calculation formulas (page 79)
- the graph with trip curve (from page 82)

### Parameters



**NOTE:** the limitations and default parameters of the Ekip M Touch Trip unit are different from those of the other models. Details are given after the table

Parameter	Description	Default
Curve	Establishes curve dynamics and trip time calculation: <ul style="list-style-type: none"> <li>• <math>t = k / I^2</math> according to IEC 60947-2.</li> <li>• IEC 60255-151 SI</li> <li>• IEC 60255-151 VI</li> <li>• IEC 60255-151 EI</li> <li>• <math>t = k / I^4</math> according to 60255-151</li> </ul>	$t = k / I^2$
Threshold I1	Establishes the value that activates the protection and contributes towards calculating the trip time. The value is given as both absolute value (A) and relative value (In) and can be set within the range: 0.4 In to 1 In, in 0.001 In steps	1 In
Time t1	Contributes towards calculating the trip time. The value is given in seconds and can be set within the range: 3 s .. 48 s (for curve $t = k / I^2$ ) or 3 s .. 9 s (for the other curves), in 1 s steps	48 s
Thermal memory	Activates/deactivates the thermal memory function (page 72)  <b>NOTE:</b> the function is always ON with Ekip M Touch and available with curve $t = k / I^2$ for all the other trip unit models	OFF
Prealarm I1	Warns that the measured current is near to protection activation threshold I1. The value is given in percentage of threshold I1 and can be set within the range: 50% I1 to 90% I1, in 1% steps.  <b>NOTE:</b> the prealarm condition deactivates in two cases: <ul style="list-style-type: none"> <li>• current lower than prealarm threshold I1</li> <li>• current higher than threshold I1</li> </ul>	90 % I1


### Ekip M Touch

With Ekip M Touch, L protection features the following differences compared to the other models:

- *Curve*: non-editable; specific for Ekip M Touch (page 85)
- *Time t1*: non-editable; determined by the Trip class (page 68)
- *Thermal memory*: always enabled, functions according to standard IEC 60255-8; thermal memory reset time is established by the *Trip class* (page 68)
- Different default parameters: I1 = 0.4 In; t1 = 45 s (Class = 20E)

### Limitations and additional functions

- threshold I1 must be lower than threshold I2 (if S protection is activated)
- the trip time of the protection is forcibly set at 1 s if the calculation results give a lower theoretical value and/or if the current reading is more than 12 In

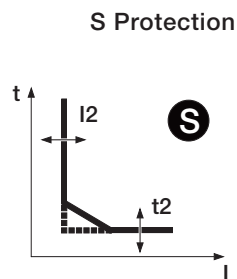

### Function

If the current of one or more phases exceeds threshold  $I_2$ , the protection trips and, after a time established by the value read and by the parameter settings, transmits the TRIP command.

To check and simulate the trip times in relation to all the parameters, please consult:

- the summary table of the protections with the calculation formulas (page 79)
- the graph with trip curve (page 85)


### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu.	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command. if disabled, the alarm and exceedance of protection time are only managed as information.	ON
<i>Curve</i>	Establishes curve dynamics and the threshold or trip time calculation: <ul style="list-style-type: none"> <li>• <math>t = k</math>: fixed time trip</li> <li>• <math>t = k/I^2</math>: inverse time-delay dynamic trip</li> </ul>	$t = k$
<i>Threshold <math>I_2</math></i>	Establishes the value that activates the protection and contributes towards calculating the trip time. The value is given as both absolute value (A) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	4 In
<i>Time <math>t_2</math></i>	It is the trip time or contributes towards timing calculation, depending on the type of curve selected. The value is given in seconds and can be set within the range: 0.05 s to 0.8 s, in 0.01 s steps	0,05 s
<i>Thermal memory</i>	Activates/deactivates the thermal memory function (page 72) <b>i NOTE:</b> the function is only available with curve $t=k/I^2$	OFF
<i>ZoneSelectivity</i>	Activates/deactivates the function and selectivity time availability on the display (page 72) <b>i NOTE:</b> the function is only available with curve $t=k$	OFF
<i>Selectivity time</i>	This is the trip time of the protection with the zone selectivity function activated and selectivity input not present (page 72) The value is given in seconds and can be set within the range: 0.04 s to 0.2 s, in 0.01 s steps	0,04 s
<i>StartUp enable</i>	Activates/deactivates the function and availability of the associated parameters on the display (page 75)	OFF
<i>StartUp Threshold</i>	Protection threshold valid during Startup time, in the conditions in which the function is activated (page 75) The value is given as both absolute value (A) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	0,6 In
<i>StartUp Time</i>	This is the time for which the StartUp threshold remains activated and is calculated from the moment the activation Threshold is exceeded (page 75) The value is given in seconds and can be set within the range: 0.1 s to 30 s, in 0.01 s steps	0.1 s

### Limitations and additional functions

- threshold  $I_2$  must be higher than threshold  $I_1$  (if S protection is activated)
- in the presence of curve  $t = k/I^2$ , the protection trip time is forced to  $t_2$  if the calculation results give a theoretical value lower than  $t_2$  itself
- the block functions and type of selectivity can also be accessed by means of the service connector (via Ekip Connect) or communication via system bus (page 72)

## S2 Protection Function

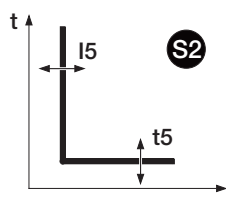


**NOTE:** unlike S protection, S2 protection only has one fixed time trip curve and has no thermal memory

It is independent of S protection, thus thresholds and functions of the two protections can be programmed so as to take advantage of different plant solutions (example: signaling with S and open command with S2 or vice versa, or both S and S2 for signaling or tripping).

To check and simulate the trip times in relation to all the parameters, please consult:


- the summary table of the protections with the calculation formulas (page 79)
- the graph with trip curve (page 86)

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu.	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command. if disabled, the alarm and exceedance of protection time are only managed as information.	ON
<i>Threshold I5</i>	Establishes the value that activates the protection and contributes towards calculating the trip time. The value is given as both absolute value (A) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	4 In
<i>Time t5</i>	This is the trip time of the protection. The value is given in seconds and can be set within the range: 0.05 s to 0.8 s, in 0.01 s steps	0,05 s
<i>ZoneSelectivity</i>	Activates/deactivates the function and selectivity time availability on the display (page 72)  <b>NOTE:</b> if both S and S2 selectivities are activated, the input and output are shared with the OR function; to stimulate inputs and outputs, it is sufficient for even only one of the two to be activated	OFF
<i>Selectivity time</i>	This is the trip time of the protection with the zone selectivity function activated and selectivity input not present (page 72) The value is given in seconds and can be set within the range: 0.04 s to 0.2 s, in 0.01 s steps	0,04 s
<i>StartUp enable</i>	Activates/deactivates the function and availability of the associated parameters on the display (page 75)	OFF
<i>StartUp Threshold</i>	Protection threshold valid during Startup time, in the conditions in which the function is activated (page 75) The value is given as both absolute value (A) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	4 In
<i>StartUp Time</i>	This is the time for which the StartUp threshold remains activated and is calculated from the moment the activation Threshold is exceeded (page 75) The value is given in seconds and can be set within the range: 0.1 s to 30 s, in 0.01 s steps	0.1 s

### Limitations and additional functions

- threshold  $I_5$  must be higher than threshold  $I_1$  (if S2 protection is activated)
- the block functions and type of selectivity can also be accessed by means of the service connector (via Ekip Connect) or communication via system bus (page 74)



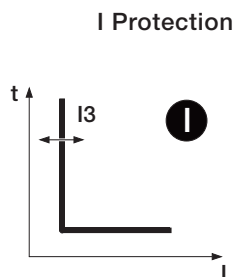

### Function

If the current of one or more phases exceeds threshold  $I_3$ , the protection trips and, after a non-programmable fixed time, transmits the TRIP command.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 79)
- the graph with trip curve (page 86)

### Parameters


Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu.	ON
<i>Threshold <math>I_3</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (A) and relative value ( $I_n$ ) and can be set within the range: $1.5 I_n$ to $15 I_n$ , in $0.1 I_n$ steps	$4 I_n$
<i>StartUp enable</i>	Activates/deactivates the function and availability of the associated parameters on the display (page 74)	OFF
<i>StartUp Threshold</i>	Protection threshold valid during Startup time, in the conditions in which the function is activated (page 74) The value is given as both absolute value (A) and relative value ( $I_n$ ) and can be set within the range: $1.5 I_n$ to $15 I_n$ , in $0.1 I_n$ steps	$1,5 I_n$
<i>StartUp Time</i>	This is the time for which the StartUp threshold remains activated and is calculated from the moment the activation Threshold is exceeded (page 74) The value is given in seconds and can be set within the range: 0.1 s to 30 s, in 0.01 s steps	0.1 s

### Ekip M Touch

With Ekip M Touch, I protection is inhibited for 100 ms if the currents detected by the Trip unit cross zero when at least one is present ( $0.25 I_n$  fixed control threshold).

Limitations and additional functions

- threshold  $I_3$  must be higher than threshold  $I_2$  (if S and I protections are activated)
- I protection can be activated with MCR protection disabled
- the block functions can also be accessed by means of the service connector (via Ekip Connect) or communication via system bus (page 75)

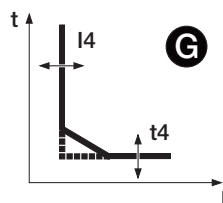**G Protection Function**

Ekip Touch calculates the vector sum of the phase currents (L1, L2, L3, Ne) and obtains the internal earth fault current ( $I_g$ ): if current  $I_g$  exceeds threshold  $I_4$ , the protection trips and, after a time established by the value read and by the parameter settings, transmits the TRIP command.

To check and simulate the trip times in relation to all the parameters, please consult:

- the summary table of the protections with the calculation formulas (page 79)
- the graph with trip curve (page 87)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu.	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command. if disabled, the alarm and exceedance of protection time are only managed as information.	ON
<i>Curve</i>	Establishes curve dynamics and the threshold or trip time calculation: <ul style="list-style-type: none"> <li>• <math>t = k</math>: fixed time trip</li> <li>• <math>t = k/I^2</math>: inverse time-delay dynamic trip</li> </ul>	$t = k$
<i>Threshold <math>I_4</math></i>	Establishes the value that activates the protection and contributes towards calculating the trip time. The value is given as both absolute value (A) and relative value (In) and can be set within the range: 0.1 In to 1 In, in 0.001 In steps	0,2 In
<i>Time <math>t_4</math></i>	It is the trip time or contributes towards timing calculation, depending on the type of curve selected. The value is given in seconds and can be set within the range: 0.1 s to 1 s, in 0.05 s steps <b>i NOTE:</b> in the presence of curve: $t = k$ , $t_4$ can also be configured as: instantaneous; in this mode, the trip time is comparable to that given for I protection (page 79)	0,4 s
<i>Prealarm <math>I_4</math></i>	Warns that the measured current is near to the protection activation threshold. The value is given in percentage of threshold $I_1$ and can be set within the range 50% $I_4$ to 90% $I_4$ , in 1% steps. The prealarm condition deactivates in two cases: <ul style="list-style-type: none"> <li>• current lower than prealarm threshold <math>I_4</math></li> <li>• current higher than threshold <math>I_4</math></li> </ul>	90 % $I_4$
<i>ZoneSelectivity</i>	Activates/deactivates the function and selectivity time availability on the display (page 72) <b>i NOTE:</b> the function is only available with curve $t = k$	OFF
<i>Selectivity time</i>	This is the trip time of the protection with the zone selectivity function activated and selectivity input not present (page 72) The value is given in seconds and can be set within the range: 0.04 s to 0.2 s, in 0.01 s steps	0,04 s
<i>StartUp enable</i>	Activates/deactivates the function and availability of the associated parameters on the display (page 75)	OFF
<i>StartUp Threshold</i>	Protection threshold valid during Startup time, in the conditions in which the function is activated (page 75) The value is given as both absolute value (A) and relative value (In) and can be set within the range: 0.2 In to 1 In, in 0.1 In steps	0,2 In
<i>StartUp Time</i>	This is the time for which the StartUp threshold remains activated, as calculated from the moment the activation Threshold is exceeded (page 75) The value is given in seconds and can be set within the range: 0.1 s to 30 s, in 0.01 s steps	0.1 s

Continued on the next page

## Ekip M Touch


With Ekip M Touch, G protection features the following differences compared to the other models:

- Block *BlockOnStartup* enabled and non-editable (page 75)
- *StartUp Time* non-editable and set with the Motor start-up value, depending on the trip class (page 117)
- curve set as  $t=k$ , non-editable

### Limitations and additional functions

- in the presence of curve  $t= k/I^2$ , the protection trip time is forced to  $t_4$  if the calculation results give a theoretical value lower than  $t_4$  itself
- in the absence of  $V_{aux}$ , the minimum threshold is  $0.25 I_n$  (for  $I_n = 300 A$ ) or  $0.2 I_n$  (for all the other sizes); if lower values are set, the Trip unit forces the threshold to the minimum admissible value and the "Configuration" error appears
- depending on the  $I_4$  threshold setting, the protection deactivates for an  $I_g$  higher than:  $8 I_n$  with threshold  $I_4 \geq 0.8 I_n$ ;  $6 I_n$  with  $0.8 I_n > I_4 \geq 0.5 I_n$ ;  $4 I_n$  with  $0.5 I_n > I_4 \geq 0.2 I_n$ ;  $2 I_n$  with  $I_4 > 0.2 I_n$
- the block functions and type of selectivity can also be accessed by means of the service connector (via Ekip Connect) or communication via system bus (page 72)

### Protection MCR

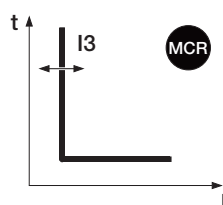

### Function

The protection remains activated for a time interval running from the open - closed change of status of the CB, after which it deactivates.

If, during this time interval, the current of one or more phases exceeds threshold  $I_3$ , the protection transmits the TRIP command after a non-programmable fixed time.


To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 79)
- the graph with trip curve (page 86)

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu.	OFF
<i>Threshold I3</i>	Establishes the value that activates the protection. The value is given as both absolute value (A) and relative value ( $I_n$ ) and can be set within the range: $1.5 I_n$ to $10 I_n$ , in $0.1 I_n$ steps	$6 I_n$
<i>Monitor Time</i>	Defines the time interval in which the MCR protection remains activated, as calculated from the open - closed change of status The value is given in seconds and can be set within the range: 0.04 s to 0.5 s, in 0.01 s steps	0,04 s

### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or communication via system bus (page 72)

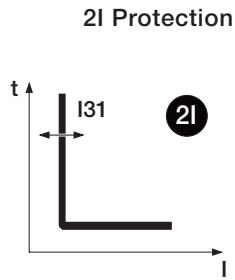

### Function

If the current of one or more phases exceeds threshold  $I_{31}$  and a trip event is present, the protection transmits the TRIP command after a non-programmable fixed time.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 79)
- the graph with trip curve (page 86)

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu.	OFF
<i>Threshold I31</i>	Establishes the value that activates the protection. The value is given as both absolute value (A) and relative value (In) and can be set within the range: 1.5 In to 15 In, in 0.1 In steps	1,5 In

Protection enabling makes the *2I Mode* section available in the *Advanced - Functions* menu, where the protection activation event can be configured:

Parameter	Description	Default
<i>Activation</i>	Two alternative modes are available: <ul style="list-style-type: none"> <li>• Dependent function: the protection is activated if the programmed activation event has occurred; this configuration makes the function and delay parameters available</li> <li>• Activated: the protection is always activated</li> </ul>	Dependent function
<i>Function</i>	The activation event between the input contacts of Ekip Signalling 2K, the statuses of the unit (open/closed) and the Custom function can be selected <i>i</i> <b>NOTE:</b> Ekip Connect allows the Custom function to be customized so as to associate the activation event with up to eight statuses in AND or OR configuration	Disabled
<i>Delay</i>	Protection activation delay calculated from the presence of the activation event onwards. The value is given in seconds and can be set within the range: 0 s to 100 s, in 0.1 s steps <i>i</i> <b>NOTE:</b> the protection trips if the event is present for longer than the set time lag	0 s

### Commands by remote control

Two further temporary protection activation/deactivation commands are available when the unit is connected to one or more Ekip Com modules:

- **2I ON Mode:** activates the protection
- **2I OFF Mode:** deactivates the protection


Consult the unit System Interface 1SDH002031A1101 for details.



**NOTE:** if the protection has been activated by command *2I ON Mode*, it is deactivated by command *2I OFF Mode* or when the unit shuts down

### Signallings

When protection 2I is activated, the message “*2I active*” appears in the diagnostic bar and in the Alarm List page, and the alarm led will be on steady.

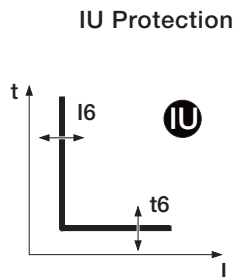

### Function

The protection trips if the current readings are unbalanced; the protection sends a TRIP command if the detected unbalance exceeds threshold  $I_6$  for longer than  $t_6$ .

The protection is automatically self-excluding in two cases:

- the measurement of at least one current exceeds  $6 I_n$
- the maximum current among all the phases is less than  $0.3 I_n$

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 79)
- the graph with trip curve (page 88)

### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Version</i>	Allows the unbalance calculation mode to be selected: <ul style="list-style-type: none"> <li>• Old: <math>\% Sb_{il} = 100 \times (I_{\max} - I_{\min}) / I_{\max}</math></li> <li>• New: <math>\% Sb_{il} = 100 \times (\max I_{mi}) / I_{mi}</math></li> </ul> <b>NOTE:</b> $\max I_{mi}$ : maximum deviation among the measured currents, calculated by comparing each current with the mean value; $I_{mi}$ : mean value of the current readings	Old
<i>Threshold <math>I_6</math></i>	Establishes the unbalance value that trips the protection. Unbalance is given in percentage value within the range: 2% to 90% with 1% steps.	50 %
<i>Time <math>t_6</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.5 s to 60 s, in 0.5 s steps	5 s

### Ekip M Touch

With Ekip M Touch, IU protection features the following differences compared to the other models:

- version set as New, non-editable
- protection is inhibited if the rms value of at least one of the phase currents is less than  $0.25 I_n$ .

### Neutral Protection

#### Function

Neutral protection characterizes protections L, S and I differently on the neutral phase by introducing a different control factor from the other phases.

The protection is available with the 4P and 3P + N configuration; the configuration parameters can be accessed via the Settings menu (page 33).

#### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection	OFF
<i>Neutral threshold</i>	Defines the multiplicative factor applied to the trip thresholds and curves of the protections for the current read on phase Ne: <ul style="list-style-type: none"> <li>• 50 %: lowest trip thresholds for the neutral current</li> <li>• 100 %: same trip thresholds for all phases</li> <li>• 150 %: highest trip thresholds for the neutral current</li> <li>• 200 %: highest trip thresholds for the neutral current</li> </ul> <b>NOTE:</b> with configurations 150% and 200% and current $I_n$ higher than $16 I_n$ , the protection is automatically adjusted to 100%	50 %

### Limitations and additional functions

Ekip Touch rejects modification of thresholds  $I_1$  and  $I_n$  in the absence of the following limitation:  $(I_1 \times I_n) \leq I_u$

- $I_1$  is the threshold of L protection in Amperes (example:  $I_n = 400$  A and  $I_1 = 0.6$  becomes  $I_1 = 240$  A)
- $I_n$  is the neutral threshold expressed as multiplicative factor (example:  $I_n = 200\%$  becomes  $I_n = 2$ )
- $I_u$  is the size of the CB

**Harmonic distortion** Allows an alarm to be activated in the case of distorted waveforms.  
The protection can be enabled in the *Measurements* menu; if enabled an alarm is activated (page 32).



**IMPORTANT: the protection does not handle the trip, just the signal**

**T Protection** T protection protects against abnormal temperatures recorded by the unit.  
It is always activated and involves two statuses, depending on the temperature reading:

State	Temperature range [°C]	Ekip Touch actions
Warnings	$-40 < t < -25$ or $70 < t < 85$	Display off; Warning led on @ 0.5 Hz
Alarm	$t < -40$ or $t > 85$	Display off; Alarm and Warning leds on @ 2 Hz

The Trip Enabling parameter can be enabled in the *Settings - Circuit breaker* menu in order to handle an open command if an alarm occurs (page 33).

**Hardware Trip** Hardware Trip protects against connection errors in Ekip Touch and is available in the *Settings - Circuit breaker - Hardware Trip* menu (page 32).

If enabled, if one or more of these events are detected:

- current sensors disconnected (phase or external if enabled)
- *Rating Plug* disconnected.
- *Trip Coil* disconnected
- faults inside the unit

alarm is signaled and an open command is transmitted.



**IMPORTANT:**

- the protection trips if the error statuses persist for more than one second
- only signaling is managed if an alarm occurs due to Trip coil disconnection

## Current thresholds Function

The Current thresholds allow checks to be set along the current lines, to be associated with the programmable contacts of the *Ekip Signalling* modules (in all versions).

Two pairs of programmable contacts are available:

- Threshold 1 I1 and Threshold 2 I1, with control relating to I1
- Threshold Iw1 and Threshold Iw2, with control relating to In

The thresholds can be enabled and set in the Advanced - Signaling menu (page 31).



### IMPORTANT:

- the current thresholds do not handle the trip, just the signal
- the function is activated if the trip unit is powered by auxiliary voltage

### Parameters

Threshold	Available parameters	Default
Threshold 1 I1	<i>Enable</i> : Activates the protection and availability of the threshold in the menu	OFF
	<i>Threshold</i> : The value is given in percentage of threshold I1 and can be set within the range: 50% I1 to 100% I1, in 1% steps.	50 % I1
Threshold 2 I1	<i>Enable</i> : Activates the protection and availability of the threshold in the menu	OFF
	<i>Threshold</i> : The value is given in percentage of threshold I1 and can be set within the range: 50% I1 to 100% I1, in 1% steps.	75 % I1
Threshold Iw1	<i>Enable</i> : Activates the protection and availability of the threshold in the menu	OFF
	<i>Direction</i> : allows the user to choose whether to have the signal when the current is higher ( <b>Up</b> ) or lower ( <b>Down</b> ) than the threshold.	Down
	<i>Threshold</i> : The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.1 In to 10 In, in 0.01 In steps	3 In
Threshold Iw2	<i>Enable</i> : Activates the protection and availability of the threshold in the menu	OFF
	<i>Direction</i> : allows the user to choose whether to have the signal when the current is higher ( <b>Up</b> ) or lower ( <b>Down</b> ) than the threshold.	Up
	<i>Threshold</i> : The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.1 In to 10 In, in 0.01 In steps	3 In

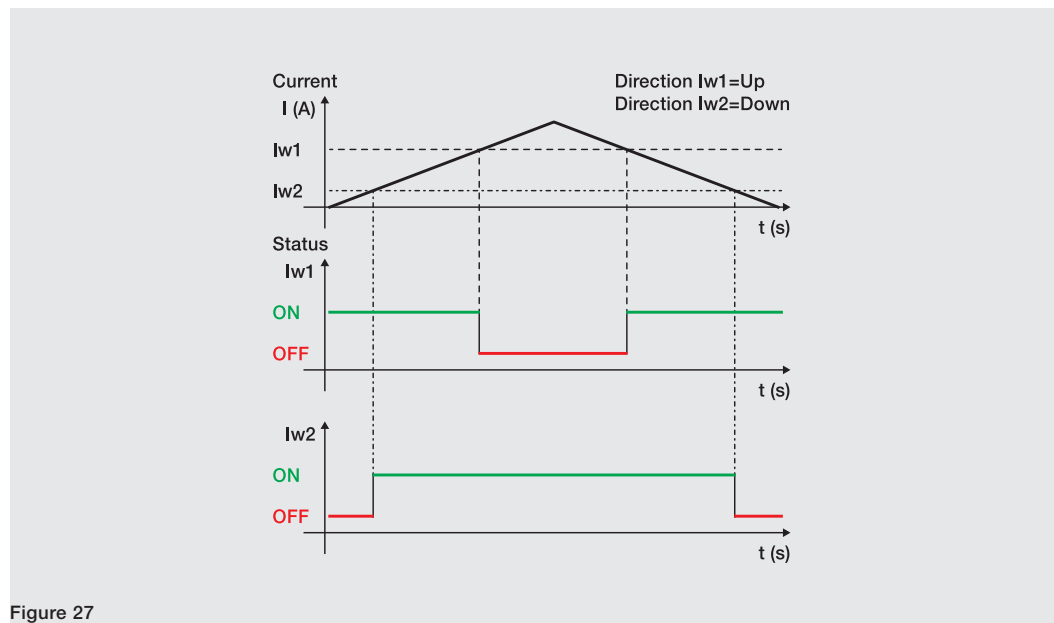


Figure 27


## 2 - Voltage protections

**Elenco** The Voltage protections, available by default for the Ekip Hi-Touch, Ekip G Touch, Ekip G-Hi Touch and Ekip M Touch models and configurable in the remaining models as additional SW package, are:

Name	Type of protection	Page
UV	Minimum voltage	50
OV	Maximum voltage	51
UV2 <sup>(1)</sup>	Minimum voltage	51
OV2 <sup>(1)</sup>	Maximum voltage	52
Phase sequence	Phase sequence error	52
VU	Voltage unbalance	52

<sup>(1)</sup> protections UV2 and OV2 are not available by default with Ekip G Touch. However, they can be integrated by requesting the relative SW package

### UV Protection Function

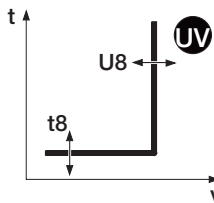

The protection sends a TRIP command if one or more line-to-line voltages detected by the unit drop below threshold U8 for longer than t8.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 88)


#### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold U8</i>	Establishes the value that activates the protection. The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.05 Un to 1 Un in 0.001 Un steps	0,9 Un
<i>Time t8</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.05 s to 120 s, in 0.01 s steps	5 s

#### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).



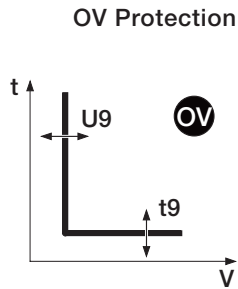

### Function

The protection sends a TRIP command if one or more line-to-line voltages detected by the unit exceed threshold  $U_9$  for longer than  $t_9$ .

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 89)

### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>U_9</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Volts) and relative value ( $U_n$ ) and can be set within the range: $1 U_n$ to $1.5 U_n$ in $0.001 U_n$ steps	$1,05 U_n$
<i>Time <math>t_9</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.05 s to 120 s, in 0.01 s steps	5 s

### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 72).

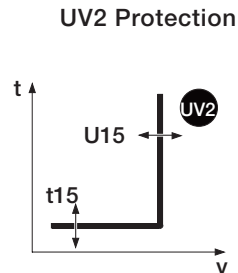

### Function

UV2 protection functions in the same way as UV protection: the protection sends a TRIP command if one or more line-to-line voltages detected by the unit drop below threshold  $U_{15}$  for longer than  $t_{15}$ .

It is independent of UV protection, thus thresholds and functions of the two protections can be programmed so as to take advantage of different plant solutions (example: signaling with UV and open command with UV2 or vice versa, or both for signaling or tripping).

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 88)

### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>U_{15}</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Volts) and relative value ( $U_n$ ) and can be set within the range: $0.05 U_n$ to $1 U_n$ in $0.001 U_n$ steps	$0,9 U_n$
<i>Time <math>t_{15}</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.05 s to 120 s, in 0.01 s steps	5 s

### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 72).

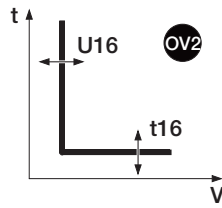**OV2 Protection****Function**

OV2 protection functions in the same way as OV protection: the protection sends a TRIP command if one or more line-to-line voltages detected by the unit exceed threshold U16 for longer than t16.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 89)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold U16</i>	Establishes the value that activates the protection. The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 1 Un to 1.5 Un in 0.001 Un steps	1,05 Un
<i>Time t16</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.05 s to 120 s, in 0.01 s steps	5 s


**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

**Phase sequence**

The *Phase Sequence* protection trips when the sequence of line-to-line voltages is not aligned with the sequence set by the user.

The required sequence can be set in the *Settings* menu and the protection activated in the *Advanced* menu (page 33 and page 31).

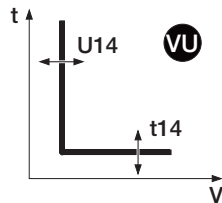**VU Protection****Function**

The protection trips if the line-to-line voltages read by the unit are unbalanced; the protection sends a TRIP command if the detected unbalance exceeds threshold U14 for longer than t14.

The protection excludes itself if the maximum value of the line-to-line voltage is less than 0.3 Un

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 89)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold I14</i>	Establishes the unbalance value that trips the protection. Unbalance is expressed in percentage value and is calculated in the following way: $\% \text{ Unba} = 100 \times (\max U_{mi}) / U_{mi}$ in range: 2% to 90% in 1% steps. <b>i NOTE:</b> max $U_{mi}$ : maximum deviation among the three voltages calculated by comparing each line-to-line voltage with the mean value; $U_{mi}$ : mean value of the line-to-line voltages	50 %
<i>Time t14</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.5 s to 60 s, in 0.5 s steps	5 s

**Limitations and additional functions**


The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

### 3 - Voltage Advanced protections

**Elenco** The Advanced Voltage protections, available by default for the Ekip G Touch and Ekip G Hi-Touch models and configurable in the remaining models as additional SW package, are:

Name	Type of protection	Page
S(V)	Short-circuit with voltammetric control	53
S2(V) <sup>(1)</sup>	Short-circuit with voltammetric control	54
RV	Residual voltage	56

<sup>(1)</sup> S2(V) protection is not available by default with Ekip G Touch. However, it can be integrated by requesting the relative SW package

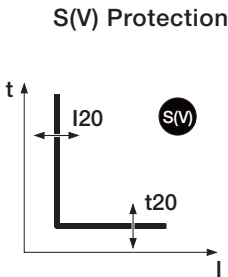

**Function**

S(V) protection protects against short circuits, with a threshold sensitive to the value of the voltage.

If the current of one or more phases exceeds threshold  $I_{20}$  for longer than time  $t_{20}$ , the protection activates and sends a TRIP command.

Threshold  $I_{20}$ , after a voltage drop, varies in two different modes:

- **Step** provides for a stepped variation, depending on parameters  $U_I$  and  $K_s$ .
- **Lin** (linear) provides for a dynamic variation, depending on parameters  $U_I$ ,  $U_h$  and  $K_s$ .

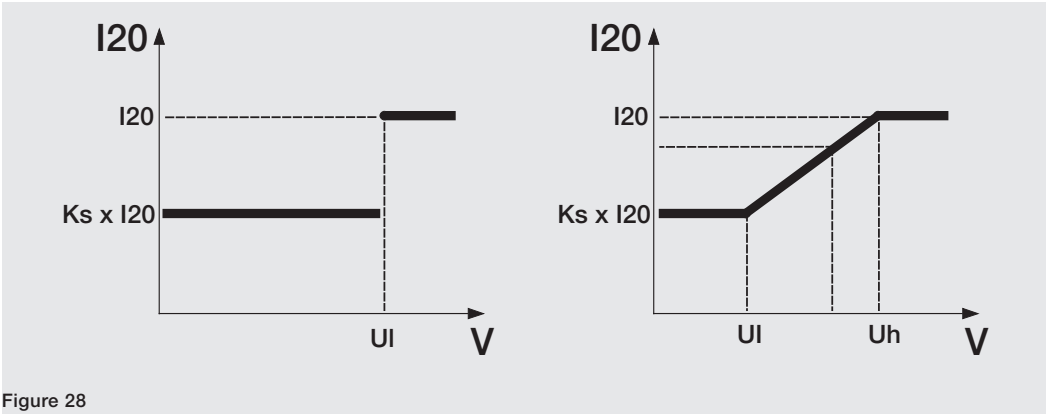


Figure 28

To check and simulate the trip times in relation to all the parameters, please consult:

- the summary table of the protections with the calculation formulas (page 80)
- the graph with trip curve (page 90)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Curve</i>	Allows the operating mode, Step or Lin, to be selected	Scal
<i>Threshold I20</i>	Establishes the value that activates the protection and contributes towards calculating the trip time. The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	1 In

Continued on the next page

Parameter	Description	Default
Threshold $U_I$	This is the voltage that determines the change in trip threshold $I_{20}$ ; the behavior differs, depending on the mode selected <sup>(1)</sup> The value is given as both absolute value (Volts) and relative value ( $U_n$ ) and can be set within the range: $0.2 U_n$ to $1 U_n$ in $0.01 U_n$ steps	$1 U_n$
Threshold $U_h$	The parameter is shown by the Lin curve and contributes towards $I_{20}$ trip threshold calculation: <ul style="list-style-type: none"> <li>with voltage reading <math>&lt; U_h</math> (and <math>\geq U_I</math>), the threshold changes gradually <sup>(1)</sup></li> <li>with voltage reading <math>\geq U_h</math>, the threshold is <math>I_{20}</math></li> </ul> The value is given as both absolute value (Volts) and relative value ( $U_n$ ) and can be set within the range: $0.2 U_n$ to $1 U_n$ in $0.01 U_n$ steps	$1 U_n$
Threshold $K_s$	$I_{20}$ threshold calculation constant. The value is given as percentage of threshold $I_{20}$ and can be set within the range: $0.1 I_{20}$ to $1 I_{20}$ , in $0.01$ steps	$0,6 I_{20}$
Time $t_{20}$	This is the trip time of the protection. The value is given in seconds and can be set within the range: $0.05$ s to $30$ s, in $0.01$ s steps	$0.1$ s


### (1) Trip threshold (depending on the operating curve)

Mode	Voltage reading	Trip threshold
Scal	$< U_I$	$K_s \times I_{20}$
	$\geq U_I$	$I_{20}$
Lin	$< U_I$	$K_s \times I_{20}$
	$\geq U_I$ ( $e < U_h$ )	$((I_{20} \times (1 - K_s) \times (U_{mis} - U_h)) / (U_h - U_I)) + I_{20}$

### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

### S(V) Protection Function

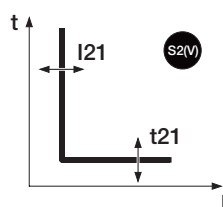

$S2(V)$  protection functions in the same way as  $S(V)$  protection and protects against short-circuits, with threshold sensitive to the voltage value.

It is independent of  $S(V)$  protection, thus thresholds and functions of the two protections can be programmed so as to take advantage of different plant solutions (example: signaling with  $S(V)$  and open command with  $S2(V)$  or vice versa, or both  $S(V)$  and  $S2(V)$  for signaling or tripping).

If the current of one or more phases exceeds threshold  $I_{21}$  for longer than time  $t_{21}$ , the protection activates and sends a TRIP command.

Threshold  $I_{21}$ , after a voltage drop, varies in two different modes:

- Step** provides for a stepped variation, depending on parameters  $U_{I2}$  and  $K_{s2}$ .
- Lin** (linear) provides for a dynamic variation, depending on parameters  $U_{I2}$ ,  $U_{h2}$  and  $K_{s2}$ .

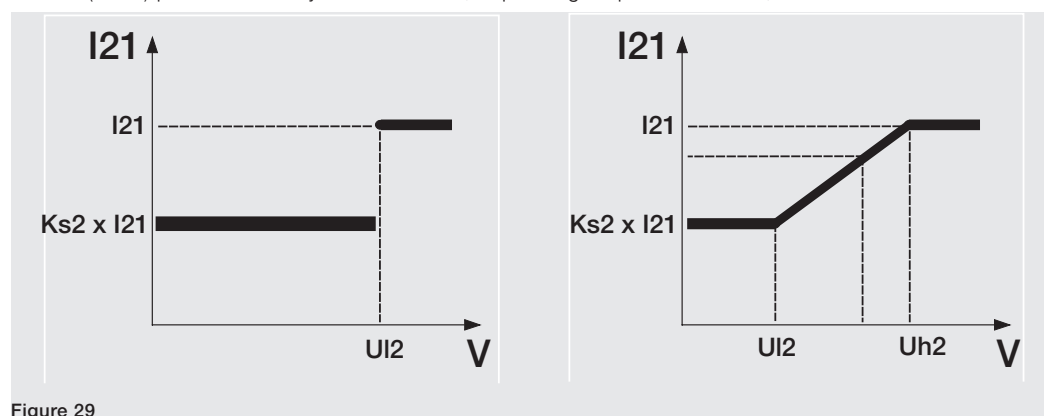


Figure 29

To check and simulate the trip times in relation to all the parameters, please consult:

- the summary table of the protections with the calculation formulas (page 80)
- the graph with trip curve (page 90)

Continued on the next page

**Parameters**


Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Curve</i>	Allows the operating mode, Step or Lin, to be selected	Scal
<i>Threshold I21</i>	Establishes the value that activates the protection and contributes towards calculating the trip time. The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	1 In
<i>Threshold UI2</i>	It is the voltage that determines the change in trip threshold I21; the behavior differs, depending on the mode selected <sup>(1)</sup> The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.2 Un to 1 Un in 0.01 Un steps	1 Un
<i>Threshold Uh2</i>	The parameter is shown by the Lin curve and contributes towards I21 trip threshold calculation: <ul style="list-style-type: none"> <li>• with voltage reading &lt; Uh2 (and ≥ UI2), the threshold changes gradually <sup>(1)</sup></li> <li>• with voltage reading ≥ Uh2, the threshold is I21</li> </ul> The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.2 Un to 1 Un in 0.01 Un steps	1 Un
<i>Threshold Ks2</i>	I21 threshold calculation constant. The value is given as percentage of threshold I21 and can be set within the range: 0.1 I21 to 1 I21, in 0.01 steps	0,6 I21
<i>Time t20</i>	This is the trip time of the protection. The value is given in seconds and can be set within the range: 0.05 s to 30 s, in 0.01 s steps	0.1 s

**(1) Trip threshold (depending on the operating curve)**

Mode	Voltage reading	Trip threshold
Scal	< UI2	Ks2 x I21
	≥ UI2	I21
Lin	< UIs	Ks2 x I21
	≥ UI2 (e < Uh2)	$((I21 \times (1 - Ks2) \times (U_{mis} - Uh2)) / (Uh2 - UI2)) + I21$

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

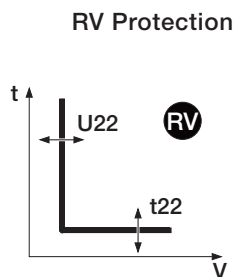

### Function

The protection trips if loss of insulation occurs (verification of residual voltage  $U_0$ ); the protection sends a TRIP command if voltage  $U_0$  exceeds threshold  $U_{22}$  for longer than  $t_2$ .

The protection is always available in the 4P configuration; if presence of neutral voltage is activated in Ekip Measuring module (page 128), protection is also available for 3P and 3P + N configurations.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 90)

### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>U_{22}</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Volts) and relative value ( $U_n$ ) and can be set within the range: $0.05 U_n$ to $0.5 U_n$ in $0.001 U_n$ steps	$0,15 U_n$
<i>Time <math>t_{22}</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: $0.05 \text{ s}$ to $120 \text{ s}$ , in $0.01 \text{ s}$ steps	$15 \text{ s}$
<i>Reset Time</i>	This is the time the alarm is retained after the protection has quit the alarm condition; it can be useful for keeping the timing activated when the protection is temporarily deactivated. The value is given in seconds and can be set within the range: $0 \text{ s}$ to $0.2 \text{ s}$ , in $0.02 \text{ s}$ steps	$0 \text{ s}$

### Limitations and additional functions


The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

# 4 - Frequency protections

**Elenco** The Frequency protections, available by default for the Ekip Hi-Touch, Ekip G Touch, Ekip G-Hi Touch and Ekip M Touch models and configurable in the remaining models as additional SW package, are:

Name	Type of protection	Page
UF	Minimum frequency	57
OF	Maximum frequency	58
UF2 <sup>(1)</sup>	Minimum frequency	58
OF2 <sup>(1)</sup>	Maximum frequency	59

<sup>(1)</sup> protections UF2 and OF2 are not available by default with Ekip G Touch. However, they can be integrated by requesting the relative SW package

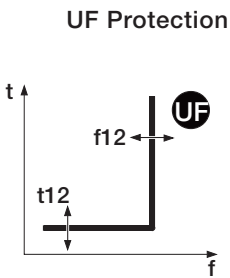

## Function

The protection sends a TRIP command if the grid frequency read by the unit drops below threshold  $f_{12}$  for longer than  $t_{12}$ .

The protection excludes itself if the maximum value of the line-to-line voltage is less than 30 V.

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 91)

## Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>f_{12}</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Hertz) and relative value ( $F_n$ ) and can be set within the range: $0.9 F_n$ to $1 F_n$ in $0.001 F_n$ steps	$0,9 F_n$
<i>Time <math>t_{12}</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.06 s to 300 s, in 0.01 s steps	3 s

## Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

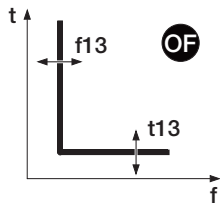**OF Protection****Function**

The protection sends a TRIP command if the grid frequency read by the unit exceeds threshold  $f_{13}$  for longer than  $t_{13}$ .

The protection excludes itself if the maximum value of the line-to-line voltage is less than 30 V.

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 91)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>f_{13}</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Hertz) and relative value ( $F_n$ ) and can be set within the range: 1 $F_n$ to 1.1 $F_n$ in 0.001 $F_n$ steps	1,1 $F_n$
<i>Time <math>t_{13}</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.06 s to 300 s, in 0.01 s steps	3 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

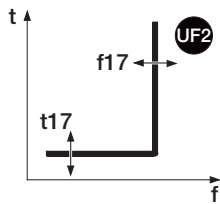**UF2 Protection****Function**

UF2 protection functions in the same way as UF protection: the protection sends a TRIP command if the grid frequency read by the unit drops below threshold  $f_{17}$  for longer than  $t_{17}$ .

It is independent of UF protection, thus thresholds and functions of the two protections can be programmed so as to take advantage of different plant solutions (example: signaling with UF and open command with UF2 or vice versa, or both for signaling or tripping).

The protection excludes itself if the maximum value of the line-to-line voltage is less than 30 V.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 91)


**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>f_{17}</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Hertz) and relative value ( $F_n$ ) and can be set within the range: 0.9 $F_n$ to 1 $F_n$ in 0.001 $F_n$ steps	0,9 $F_n$
<i>Time <math>t_{17}</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.06 s to 300 s, in 0.01 s steps	3 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).



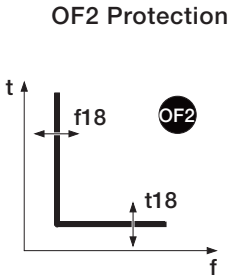

### Function

OF2 protection functions in the same way as OF protection: the protection sends a TRIP command if the grid frequency read by the unit exceeds threshold  $f_{18}$  for longer than  $t_{18}$ .

It is independent of OF protection, thus thresholds and functions of the two protections can be programmed so as to take advantage of different plant solutions (example: signaling with OF and open command with OF2 or vice versa, or both for signaling or tripping).

The protection excludes itself if the maximum value of the line-to-line voltage is less than 30 V.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 91)

### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>f_{18}</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Hertz) and relative value ( $F_n$ ) and can be set within the range: 1 $F_n$ to 1.1 $F_n$ in 0.001 $F_n$ steps	1,1 $F_n$
<i>Time <math>t_{18}</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.06 s to 300 s, in 0.01 s steps	3 s

### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

## 5 - Power protections


**Elenco** The Power protections, available by default for the Ekip Hi-Touch, Ekip G Touch, Ekip G-Hi Touch and Ekip M Touch models and configurable in the remaining models as additional SW package, are:

Name	Type of protection	Page
RP	Reverse active power	60
D <sup>(2)</sup>	Directional short-circuit with adjustable delay	63
OQ <sup>(1)</sup>	Maximum reactive power	63
OP <sup>(1)</sup>	Maximum active power	63
UP <sup>(1)</sup>	Minimum active power	64
RQ <sup>(1)(2)</sup>	Reverse reactive power	64
Cos $\varphi$	Minimum Cos $\varphi$	65

<sup>(1)</sup> protection not available by default with Ekip Hi-Touch and Ekip M Touch. However, it can be integrated by requesting the relative SW package

<sup>(2)</sup> protection not available by default with Ekip G Touch. However, it can be integrated by requesting the relative SW package

### RP Protection Function

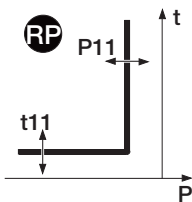

The protection sends a TRIP command if the reverse total active power exceeds threshold P11 for longer than t1.

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 92)

#### Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold f11</i>	Establishes the value that activates the protection. The value is given as both absolute value (kW) and relative value (Sn) and can be set within the range: -0.05 Sn to -1 Sn in 0.001 Sn steps <b>NOTE:</b> the threshold expressed in Sn is preceded by the "-" sign to indicate that inverse power is involved	0,1 Sn
<i>Time t11</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.05 s to 120 s, in 0.01 s steps	10 s

#### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

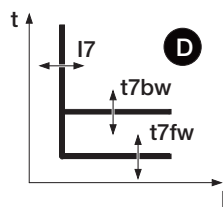**D Protection Function**

D protection is very similar to S protection, with the additional capability of recognizing the direction of the current during a fault.

The current direction allows the user to find out whether the fault is on the supply side or load side of the device controlled by Ekip Touch.

In ring type distribution systems, D protection allows the distribution section in which the fault has occurred to be identified and disconnected without affecting the rest of the installation (using zone selectivity).

Depending on the direction of the fault, if the current of one or more phases exceeds threshold  $I_7$  (fw or bw) for longer than time  $t_7$  (fw or bw), the protection activates and sends a TRIP command.

The **fault direction** is established by comparing the **detected fault current** with the **reference direction**.



**NOTE:** the reference direction is calculated considering the set value of the power flow direction and the phase sequence (cyclic direction of the phases):

Phase sequence (set)	Power flow (set)	Phase sequence (detected)	Reference direction (forward direction)
123	High-->Low	123	High-->Low
123	Bottom --> Top	123	Bottom --> Top
123	High-->Low	321	Bottom --> Top
123	Bottom --> Top	321	High-->Low
321	High-->Low	123	Bottom --> Top
321	Bottom --> Top	123	High-->Low
321	High-->Low	321	High-->Low
321	Bottom --> Top	321	Bottom --> Top

To check and simulate the trip times in relation to all the parameters, please consult:

- the summary table of the protections with the calculation formulas (page 80)
- the graph with trip curve (page 92)

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	ON
<i>Threshold I7 Fw</i>	Establishes the value that activates the protection with forward direction. The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	4 In
<i>Threshold i7 Bw</i>	Establishes the value that activates the protection with backward direction. The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	4 In
<i>Time t7 Fw</i>	This is the trip time in the case of forward direction. The value is given in seconds and can be set within the range: 0.1 s to 0.8 s, in 0.01 s steps	0,2 s
<i>Time t7 Bw</i>	This is the trip time in the case of backward direction. The value is given in seconds and can be set within the range: 0.1 s to 0.8 s, in 0.01 s steps	0,2 s
<i>ZoneSelectivity</i> <sup>(1)</sup>	Activates/deactivates the function and selectivity time availability on the display. <b>NOTE:</b> configure selectivities S, S2 OFF to ensure that selectivity D functions correctly and G	OFF
<i>Selectivity time Fw</i> <sup>(1)</sup>	This is the trip time of the protection with the zone selectivity function activated, forward direction and selectivity input Fw not present. The value is given in seconds and can be set within the range: 0.1 s to 0.8 s, in 0.01 s steps	0,13 s
<i>Selectivity time Bw</i> <sup>(1)</sup>	This is the trip time of the protection with the zone selectivity function activated, backward direction and selectivity input Bw not present. The value is given in seconds and can be set within the range: 0.1 s to 0.8 s, in 0.01 s steps	0,13 s

Continued on the next page

Parameter	Description	Default
<i>StartUp enable</i>	Activates/deactivates the function and availability of the associated parameters on the display	OFF
<i>StartUp Threshold Fw</i> <sup>(2)</sup>	Protection threshold valid during Startup time, in the conditions in which the function is activated and with forward current direction <sup>(2)</sup> . The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	4 In
<i>StartUp Threshold Bw</i> <sup>(2)</sup>	Protection threshold valid during Startup time, in the conditions in which the function is activated and with backward current direction. The value is given as both absolute value (Amperes) and relative value (In) and can be set within the range: 0.6 In to 10 In, in 0.1 In steps	4 In
<i>StartUp Time</i> <sup>(2)</sup>	This is the time for which the StartUp threshold remains activated and is calculated from the moment the activation Threshold is exceeded The value is given in seconds and can be set within the range: 0.1 s to 30 s, in 0.01 s steps	0.1 s
<i>Direction Min Angle</i>	Ekip Touch calculates the phase displacement angle between reactive and apparent power measured: when phase displacement exceeds the set Direction Min Angle parameter, the unit considers the fault direction to have been identified. The value is given in degrees and can be set within a range of 15 values from 3.6° to 69.6°	3,6 °

<sup>(1)</sup> details on page 73


<sup>(2)</sup> details on page 75

### Limitations and additional functions

the functions blocking the type of selectivity and the *Trip only Forward* and *Trip Only Backward* parameters can also be accessed by means of the service connector (via Ekip Connect) or communication via system bus (page 75).

### Notes

- activation of D directional protection automatically activates the alarm that monitors phase sequence (which can also be excluded and activated in the manual mode): note how, in the case of a cyclic sequence of phases that differs from the set value, in the event of a fault the directional protection inverts the reference direction with respect to the expected direction; details of the phase sequence protection are available on page 52
- in the case of small overcurrents, the behavior of the directional protection is influenced by the type of load: to prevent the direction of the fault current from being incorrectly interpreted in the case of capacitive loads, it is advisable for the setting of that protection to be made on the basis of real fault conditions and not overloads

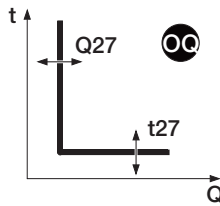**OQ Protection****Function**

The protection sends a TRIP command if one or more of the reactive power values detected by the unit exceed threshold Q27 for longer than t27.

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 93)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold Q27</i>	Establishes the value that activates the protection. The value is given as both absolute value (kVAR) and relative value (Sn) and can be set within the range: 0.4 Sn to 2 Sn in 0.001 Sn steps	1 Sn
<i>Time t27</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.5 s to 100 s, in 0.5 s steps	1 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

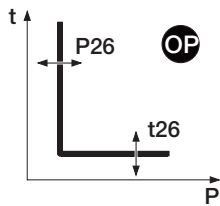**OP Protection****Function**

The protection sends a TRIP command if one or more of the active power values detected by the unit exceed threshold P26 for longer than t26.

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 93)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold P26</i>	Establishes the value that activates the protection. The value is given as both absolute value (kW) and relative value (Sn) and can be set within the range: 0.4 Sn to 2 Sn in 0.001 Sn steps	1 Un
<i>Time t26</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.5 s to 100 s, in 0.5 s steps	1 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

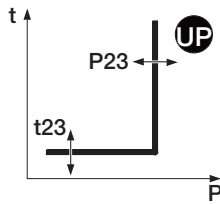**UP Protection****Function**

The protection sends a TRIP command if one or more of the active power values detected by the unit drop below threshold P23 for longer than t23.

The protection is active also for negative (reverse) active power, but is independent from the RP protection (protection against reverse active power).

The protection excludes itself if the maximum value of the line-to-line voltage is less than 30 V.


To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 94)

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold P23</i>	Establishes the value that activates the protection. The value is given as both absolute value (kW) and relative value (Sn) and can be set within the range: 0.1 Sn to 1 Sn in 0.001 Sn steps	1 Sn
<i>Time t23</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.5 s to 100 s, in 0.5 s steps	1 s
<i>StartUp enable</i>	Activates/deactivates the function and availability of the StartUp Time parameter in the menu	OFF
<i>StartUp Time</i>	This is the time for which the threshold remains disabled and is calculated from the moment the activation Threshold is exceeded The value is given in seconds and can be set within the range: 0.1 s to 30 s, in 0.01 s steps	0.1 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

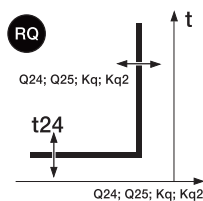**RQ Protection****Function**

RQ protection protects against reactive power reversal; the threshold can be adjusted on the basis of the active power.

The protection sends a TRIP command when inverse reactive power enters the TRIP area, determined by the protection parameters and power value readings, for longer than t24.

Adjustment of constants Kq and Kq2 allows the trip threshold of the protection (determined by the intersection of the two TRIP areas, whose limits depend on the parameters configured in the unit) to be changed.

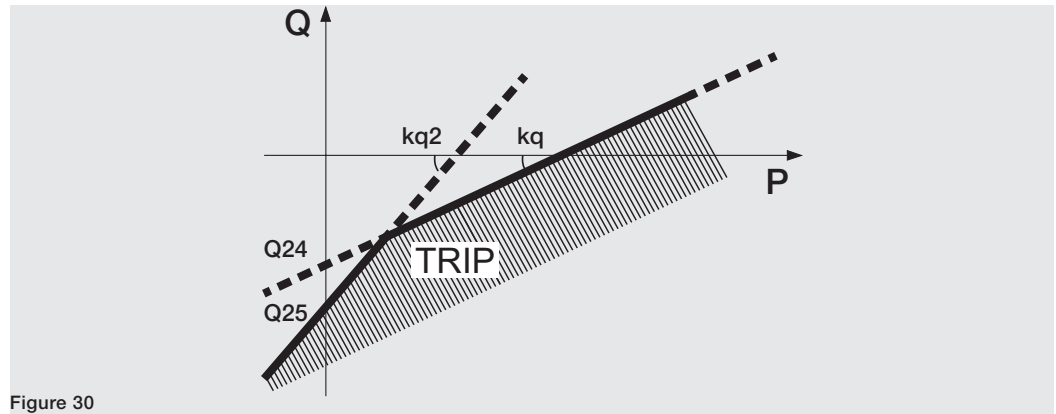




Figure 30

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 94)

Continued on the next page

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold Kq</i>	Defines the gradient of the line relating to threshold Q24. The value is given as absolute value (slope of the line) and can be set within the range: -2 to 2 in 0.01 steps	-2
<i>Threshold -Q24</i>	This is the reactive power required to define the trip line and relative TRIP area The value is given as both absolute value (kVAR) and relative value (Sn) and can be set within the range: 0.1 Sn to 1 Sn in 0.001 Sn steps  <b>NOTE:</b> the threshold expressed in Sn is not preceded by the “-” sign, but should still be understood as inverse reactive power	0,1 Sn
<i>Threshold Kq2</i>	Defines the gradient of the line relating to threshold Q24. The value is given as absolute value (slope of the line) and can be set within the range: -2 to 2 in 0.01 steps	2
<i>Threshold -Q25</i>	Defines the reactive power value at which the protection trips and is required for the purpose of defining the relative TRIP area The value is given as both absolute value (kVAR) and relative value (Sn) and can be set within the range: 0.1 Sn to 1 Sn in 0.001 Sn steps  <b>NOTE:</b> the threshold expressed in Sn is not preceded by the “-” sign, but should still be understood as inverse reactive power	0,11 Sn
<i>Time t24</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.5 s to 100 s, in 0.1 s steps	100 s
<i>Threshold Vmin</i>	This is the minimum activation voltage of the protection. The protection is not activated if at least one line-to-line voltage value is less than threshold Vmin. The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.5 Un to 1.2 Un in 0.01 Un steps	0.5 Un

**Limitations and additional functions**

- Ekip Touch accepts parameters in accordance with the following limitations: Q24 < Q25 and Kq < Kq2
- the block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

**Cos φ** The protection trips when the total Cos φ value drops below the set threshold.

Total cos φ is calculated as ratio between total active Power and total apparent Power.

**Parameters**

The parameters are available in the *Advanced - Signaling menu* (page 31)


Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and availability of the threshold in the menu	OFF
<i>Threshold</i>	Defines the value that activates the protection; can be set within the range: 0.5 to 0.95 in 0.01 steps	0,95

# 6 - ROCOF protections

The ROCOF Protection package is available by default for Ekip G Hi-Touch and configurable in the remaining models as additional SW package


The protection is described below:

## ROCOF Protection

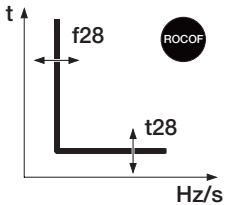

## Function

ROCOF protection protects against rapid frequency variations: the protection sends a TRIP command if the frequency changes faster than control variation f28 set in the unit for longer than t28.

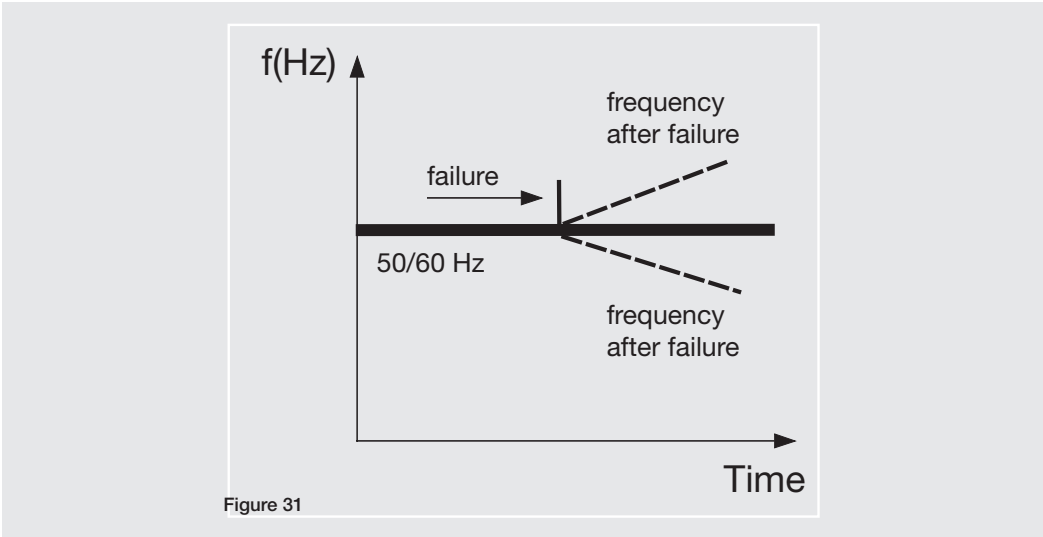

The protection excludes itself if the maximum value of the line-to-line voltage is less than 30 V.

To check and simulate the trip times in relation to all the parameters, please consult:

- summary table of the protections with the operating characteristics (page 80)
- the graph with trip curve (page 95)

## Parameters

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold f28</i>	establishes the maximum admissible frequency variation rate over time; the protection trips if this rate is exceeded. The value is given as absolute value (Hz/s) $F_n$ and can be set within the range: 0.4 Hz/s to 10 Hz/s in 0.2 Hz/s steps	0,6 Hz/s
<i>Trip Direction</i>	Establishes whether the protection monitors an increase ( <b>Up</b> ), a decrease ( <b>Down</b> ) or both variations ( <b>Up and Down</b> )	Up or Down
<i>Time f28</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 0.06 s to 300 s, in 0.01 s steps	0,5 s

## Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).



## 7 - Protection Adaptive

The Adaptive Protection package is available by default for Ekip Hi-Touch, Ekip M Touch and Ekip G Hi-Touch and configurable in the remaining models as additional SW package.

The protection is described below:

---

**Dual Set** The function enables two different protection configurations to be made, one as an alternative to the other, by means of a set change with programmable events.

The function can be activated in the *Settings-Dual Set* menu (page 33)

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the function	OFF
<i>Default Set</i>	Defines the sets of main and secondary protections (which activate in the presence of the programmed event)	Set A

The event that determines set change (from default to secondary) can be programmed in the *Advanced - Functions* menu, see the paragraph Programmable Functions and Commands (page 76).

---

# 8 - Motor protections

**Elenco** The Motor Protection package, available by default and only for Ekip M Touch, comprises protections:

Name	Type of protection	Page
R JAM	Motor block (post startup)	69
R STALL	Motor block (always activated)	69
UC	Under-current	70
U	Phase loss	70
PTC	Maximum temperature	71

The Motor protections conform to standard IEC 60947-4-1 and relative annex 2.

**Trip class and parameters** The trip class mentioned in standard IEC 60947-4-1 is available in Trip units with Motor Class parameter (page 117).

Its value establishes:

- the trip time of L protection (*Time t1*)
- the start-up time (*Motor start-up*), calculated from the moment that at least one phase exceeds the fixed threshold of  $0.25 \times I_1$ , during which some protections are inhibited
- the thermal memory L reset time after a TRIP (*tmem res*)

Motor Class	t1 (s)	Motor start-up (s)	tmem res (min)
5E	12	3	5
10E	22	5	10
20E	45	10	20
30E	72	20	33

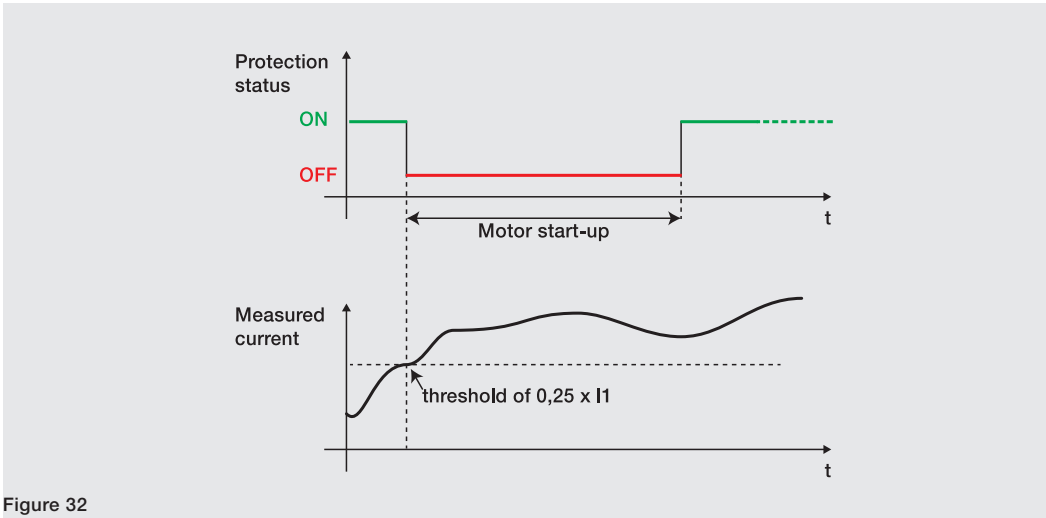



Figure 32

**NOTE:** temporary switch-off during Motor Statup-up is valid and activated for protections G, R Jam and U if enabled; if the protections are disabled they remain off before and after Motor start-up

**Thresholds** Unlike the other current protections, the R Stall, R Jam and UC thresholds are not related to  $I_n$ , but to threshold  $I_1$  (L protection), given as  $I_r$  in the respective configuration menus;

**Example**

Rating plug = 400 A, Threshold  $I_1 = 0.8 I_n$  (--> 320 A); Threshold  $I_j = 2.5 I_r$  (-->  $2.5 \times 320 A = 800 A$ )

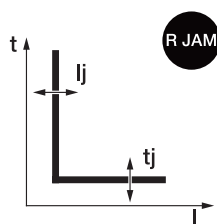**Protection R JAM****Function**

R Jam is a protection against motor block: if the current of one or more phases exceeds threshold  $I_j$  for longer than time  $t_j$ , the protection activates and sends a TRIP command.

The R Jam protection is inhibited during *Motor start-up*.

To check and simulate the trip times in relation to all the parameters, please consult:


- the summary table of the protections with the calculation formulas (page 81)
- the graph with trip curve (page 95)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>I_j</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Amperes) and relative value ( $I_r$ ) and can be set within the range: 1 $I_r$ to 10 $I_r$ in 0.1 $I_r$ steps	1,0 $I_r$
<i>Time <math>t_j</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 2 s to 10 s, in 0.5 s steps	2 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

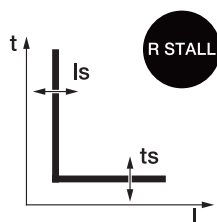**Protection R STALL****Function**

R Stall protects against motor block, but unlike R Jam, it is not inhibited during *Motor startup-up*: if the current of one or more phases exceeds threshold  $I_r$  for longer than time  $t_r$ , the protection activates and sends a TRIP command.

To check and simulate the trip times in relation to all the parameters, please consult:


- the summary table of the protections with the calculation formulas (page 81)
- the graph with trip curve (page 96)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>I_s</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Amperes) and relative value ( $I_r$ ) and can be set within the range: 2 $I_r$ to 10 $I_r$ in 0.1 $I_r$ steps	2,0 $I_r$
<i>Time <math>t_s</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 1 s to 10 s, in 0.5 s steps	1 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

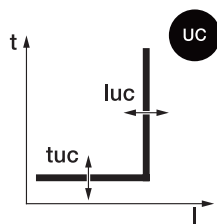**Protection UC****Function**

UC protects the motor in reduced or no load conditions: the protection sends a TRIP command if all the current values detected by the unit drop below threshold  $I_{uc}$  for longer than time  $t_{uc}$ .

To check and simulate the trip times in relation to all the parameters, please consult:


- summary table of the protections with the operating characteristics (page 81)
- the graph with trip curve (page 96)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Threshold <math>I_{uc}</math></i>	Establishes the value that activates the protection. The value is given as both absolute value (Amperes) and relative value ( $I_r$ ) and can be set within the range: 0.5 $I_r$ to 0.9 $I_r$ in 0.1 $I_r$ steps	0,5 $I_r$
<i>Time <math>t_{uc}</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 1 s to 20 s, in 0.5 s steps	1 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

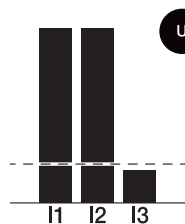**Protection U****Function**

U protects the motor in the event of phase loss: the protection sends a TRIP command if the rms value of at least one phase drops below the 0.1  $I_n$  threshold and, at the same time, a current exceeds 0.25 for longer than time  $t_u$ ; the protection is inhibited during *Motor start-up*.

If an alarm due to U protection occurs during *Motor start-up*, the trip unit calculates the trip time of the protection using whichever is the lowest value between:  $t_u$  and half of *Motor start-up*



**IMPORTANT: in this case, if the alarm occurs on start-up and the calculated TRIP time is sufficiently long to last even until the Motor start-up window closes, the trip unit still considers the previously calculated minimum value as TRIP time**

To check and simulate the trip times in relation to all the parameters, please consult the summary table of the protections with the operating characteristics (page 81)

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF
<i>Time <math>t_u</math></i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 1 s to 10 s, in 0.5 s steps	1 s

**Limitations and additional functions**

The block functions can also be accessed by means of the service connector (via Ekip Connect) or by connection to the system bus (page 75).

**PTC Function**

PTC protects the motor against overtemperatures.

The Trip unit receives the alarm from the *Ekip CI* module to which a thermocouple can be connected for the purpose of monitoring the temperature of the motor: the protection sends a TRIP command if the temperature measured exceeds 120°C for more than one second.

**Parameters**

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	OFF
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	OFF

## 9 - Additional protections and functions

**Introduction** Some protections have additional functions which extend their characteristics and performance:

Name	Type of protection	Page
Thermal Memory	overheating of the cables	72
Zone selectivity	management of trip commands in a network of circuit-breakers	72
Blocks	blocking of protection on the basis of programmable events	75
Startup	different thresholds on the basis of monitoring thresholds	75

The presence of *Ekip Synchrocheck* allows the protections of the module to be activated (page 76)

**Thermal Memory** The function, which can be activated for L and S protections, allows overheating in the cables connected to the device controlled by Ekip Touch to be prevented: in the case of several open commands within a brief interval, the unit considers the time between commands and the entity of the faults so as to reduce trip time.



**NOTE:** the function also changes the trip time in the case of overloads which have not led to the open command

**S, S2, G zone selectivity** The function, which can be activated for S, S2 and G protections (if available and enabled), allows several devices belonging to the same installation (including Ekip Touch) to be interconnected, so as to handle trip commands in the best possible way in the case of S, S2 and G protections.

The function, which can be activated for S, S2, G and Gext protections (if available and enabled), allows several devices belonging to the same installation (including Ekip Touch) to be interconnected, so as to handle trip commands in the best possible way in the case of S, S2, G and Gext protections.

The function allows the devices to be coordinated so that, if a fault occurs:

- the device nearest to the fault trips
- the other devices are blocked for a programmable time



**NOTE:** connection can be made between ABB devices that have the zone selectivity function

### Characteristics

Ekip Touch has five selectivity connections, located on the rear connectors of the CB:

Name	Type	Description	Connection
Szi	Input	S and S2 protection selectivity input	From devices on the load side
Szo	Output	S and S2 protection selectivity output	To devices on the supply side
Gzi	Input	G protection selectivity input	From devices on the load side
Gzo	Output	G protection selectivity output	To devices on the supply side
Szc	Common	Common connection of selectivity network	The entire selectivity network

Continued on the next page

## Configuration

To correctly configure the selectivity network of one or more protections:

1. Connect zone selectivity outputs of the same type (example: Szo) of devices belonging to the same zone, to the zone selectivity input of the device immediately upstream (example: Szi).
2. Connect all the Szc of devices in the same network together.
3. Time t2 must be configured at t2 sel + 50 ms or more, with the exclusion of the device further along its network.

## Logic table

The table includes all cases in which, with zone selectivity enabled in the device, an alarm condition occurs or a zone selectivity signal is received from another device.



### NOTES:

- the table gives the S protection cases, but is also valid for the other protections: G and S2, each with its respective connections
- if the selectivities of protections that share the same connections are active at the same time (example: S and S2), the inputs/outputs are managed with logic

Condition	Szi	Szo	Tripping time	Remarks
If < I2	0	0	No TRIP	TRIP II device not in alarm status
If < I2	1	1	No TRIP	The device is not in the alarm status, but sends the selectivity signal received from the device upstream
If > I2	0	1	t2 sel	The device is in the alarm status and is the first to detect the fault: trips within time t2 sel
If > I2	1	1	t2	The device is in the alarm status but is not the first to detect the fault: trips within time t2

## D zone selectivity Foreword

This function, which can be activated for D protection (if available and enabled), enables devices belonging to the same installation (including Ekip Touch) to be connected together so as to handle the trip commands in a better way in the case of D protection.

It is especially useful in ring and grid type systems where, besides the zone, it is essential to also define the direction of the power flow that supplies the fault.

The function allows the devices to be coordinated so that, if a fault occurs:

- The device nearest to the fault trips
- The other devices are blocked for a programmable time



### NOTES:

- connection can be made between ABB devices that have the zone selectivity function
- disable the zone selectivities of protections S, S2 and G to correctly use the selectivity D function

## Characteristics

Ekip Touch has five selectivity connections, located on the rear connectors of the CB:

Name	Type	Description	Denomination for D
Szi	Input	Forward direction selectivity input	DFin
Szo	Output	Forward direction selectivity output	DFout
Gzi	Input	Backward direction selectivity input	Dbin
Gzo	Output	Backward direction selectivity output	Dbout
Szc	Common	Common connection of selectivity network	SZc

Continued on the next page

## Configuration

To correctly configure selectivity D in a ring system:

1. Connect the zone selectivity outputs of each device (example: DFin) to the selectivity input of the same direction as the device immediately after (example: DFout).
2. Connect all the Szc of devices in the same network together.

## Logic table

The table includes all cases in which, with zone selectivity enabled in the device, an alarm condition occurs or a zone selectivity signal is received from another device.

The Forward output is activated if the **fault direction** coincides with the **reference direction** otherwise, if it is in the opposite direction, the Backward output is activated (page 61)

Fault direction	Condition	Dfin	Dbin	Dfout	Dbout	Tripping time	Remarks
Forward	If < I7 Fw	0	x	0	x	No TRIP	Device not in alarm status
Backward	If < I7 Bw	x	0	x	0		
Forward	If < I7 Fw	1	x	1	x	No TRIP	The device is not in the alarm status, but sends the selectivity signal received to the output of the reference direction
Backward	If < I7 Bw	x	1	x	1		
Forward	If > I7 Fw	0	x	1	x	t7 Fw sel	The device is in the alarm status and is the first to detect the fault: trips within time t7 Fw sel or t7 Bw sel
Backward	If > I7 Bw	x	0	x	1	t7 Bw sel	
Forward	If > I7 Fw	1	x	1	x	t7 Fw	The device is in the alarm status but is not the first to detect the fault: trips within time t7 Fw (or t7 Bw)
Backward	If > I7 Bw	x	1	x	1	t7 Bw	



**NOTE:** when zone selectivity is active and the direction of the fault cannot be established, the unit trips by considering the shorter programmed time between t7 Fw and t7 Bw, without activating any output (DFout or Dbout).

## Trip Only Forward and Backward

D protection can be configured (if available and enabled) with 2 additional parameters via the service connector (via Ekip Connect) or via system bus communication:

- *Trip only Forward:* if activated, D protection only controls open commands if forward direction is detected
  - *Trip only Backward:* if activated, D protection only controls open commands if backward direction is detected
- faults in the opposite direction are only handled as alarm information.

## Type of selectivity

The zone selectivity inputs and certain of the outputs can be configured via service connector (via Ekip Connect) or via system bus communication for protections S, S2, G and D (if available and enabled):

- *Standard:* operation as by zone selectivity standard logic (default configuration)
- *Customized:* the event that activates the zone selectivity input or output can be selected in this mode.



**IMPORTANT:** in the Customized configuration, the only zone selectivity activation event is the one set and standard selectivity operation is therefore not active (changes should only be made by expert technical personnel).



**Startup** The function, which can be activated for protections S, I, G, S2, D and UP (if available and enabled), allow the protection threshold (*StartUp threshold*) to be changed for a period that can be set by the user (Startup time).



**NOTE:** for UP protection, startup means the time for which the protection is disabled

The period begins after a threshold has been exceeded (activation threshold), user-programmable via Ekip Connect or system bus, valid and verified for all phase currents.

The Startup condition elapses after Startup time and re-activates the next time the activation threshold is exceeded



**NOTE:** startup does not occur again until at least one current remains above activation threshold level

A graphic representation with S protection follows:

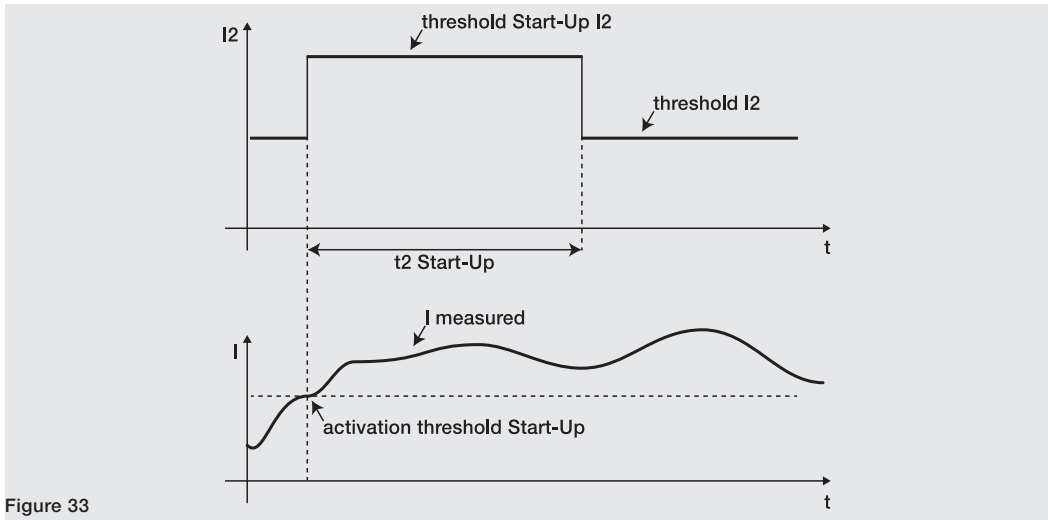


Figure 33

**Block functions** Six blocks can be configured for certain protections by means of the service connector (via Ekip Connect) or communication via system bus. These blocks are useful for deactivating the protections relating to programmable events:

Block name	Description
BlockOnProgStatusA	Block active if programmable status A is true
BlockOnProgStatusB	Block active if programmable status B is true
BlockOnProgStatusC	Block active if programmable status C is true
BlockOnProgStatusD	Block active if programmable status D is true
BlockOnStartup	Block active during StartUp time (if StartUp for the specific protection is available and activated)
BlockOnOutOfFrequency	Block active if frequency measured is not within 30 Hz to 80 Hz range

Each block is independent and has its own activation command (Block On); however, each protection can be configured with several block conditions (operation in OR logic condition).

The protections which have blocks are: S, I, G, MCR, S2, D, S(V), S2(V), UV, OV, VU, UV2, OV2, UP, OP, RP, RQ, OQ, RV, UF, OF, UF2, OF2, ROCOF, UC, U, R Jam, R Stall.



**IMPORTANT: the blocks can cause:**

- increase of protection trip times (max: + 30 ms), owing to verification of the event itself (example: (frequency check)
- undesired deactivation of the protection, if the block is associated with statuses or signals to modules via local bus and auxiliary power supply is absent. In this case, it may be useful to also consider the status of the auxiliary power supply (Supply from Vaux) when programming the event
- undesired deactivation of the protection, if the block is associated with frequency measurements and the voltage is less than the minimum calculation threshold



**IMPORTANT:** if the function is activated, the blocks are deactivated during startup (except for BlockOnStartup, which functions during this period)

**Synchrocheck** With regard to closing the interconnection switch, the *Ekip Synchrocheck* module recognizes and reports whether there are synchronism conditions between two independent voltage sources (example: generator + grid).

A description of the module, the protection function and performance is given in the chapter dedicated to the modules (page 164).

## Programmable Functions and Commands

Eight commands are available, with activation that can be programmed on the basis of signals or events. Distributed among different Ekip Touch menus, the commands are:

Name	Description	Path (page)
External Trip	Sends a TRIP command	<i>Advanced - Functions</i> (31)
Trip RESET	Reset of the trip signal	
Turn on SET B	Changes the protections set, from Set A to Set B	
RESET Energy	Resets the energy meters	<i>Measurements - Energy</i> (32)
YO Command	Sends an open command to YO <sup>(1)</sup>	<i>Settings - Functions</i> (33)
YC Command	Sends a close command to YC <sup>(1)</sup>	
LOCAL Switch On	Changes the configuration, from Remote to Local	<i>Settings - Modules - Functions</i> (33)
Signaling RESET	Reset the contacts of the signalling modules	

<sup>(1)</sup> the MOE-E storage command must be present

### Parameters

Each command provides two programming parameters:

Parameter	Description	Default
<i>Function</i>	Event or several command activation events (up to eight, in AND or OR logic configuration). The Custom configuration can be programmed via Ekip Connect.	Deactivated
<i>Delay</i>	This is the minimum time the expected event must be present in order to activate the command; the value is given in seconds and can be set within a range: 0 s to 100 s, in 0.1 s steps	0 s



**IMPORTANT: the commands are sent if all the operating conditions expected by the unit are present (connections, power supplies, alarms, etc.)**

## 10 - Logic selectivity

**Presentation** Zone Selectivity via Link Bus is indicated as Logic Selectivity.

Logic Selectivity can be actuated for up to 12 of 15 actors that can be associated with Ekip Touch via Link Bus (see *Ekip Link* module, page 153).

### Parameters

The function enabling parameter, available from among the parameters that can be set for the protection, must be set for each protection for which Zone Selectivity must be activated.

In this case, in addition to these parameters, Selectivity time is also activated for the setting.

Otherwise, Zone Selectivity can only be set by means of Ekip Connect software.



**NOTE:** *all the following parameters and configurations are available via Ekip Connect, with Ekip Link connected and on*

**Setting** Certain parameters can be configured in the *Ekip Link configuration* page:

- selection of selectivity type: hardware or mixed (hardware and logic)
- entry of the IP address of each actor present; entry of the address enables the configuration parameters and status indicators to be displayed in the various pages
- the function must be enabled for each actor associated with Ekip Touch via Link Bus and for which logic selectivity must be actuated (the *Actor Selectivity* parameter must be given value: *True*)

**selectivity masks** are available in the *Ekip Link advanced selectivity* page for each actor present: the mask allows the protections of the actors (S, G, D-Forward, D-Backward, S2) that activate the selectivity input of Ekip Touch to be selected (example: actor 1, protection mask S= S2: selectivity S of Ekip Touch will be active in the presence of signals S2 of actor 1).

In this configuration, if the function is enabled for S protection and is in the alarm status, the S/D-Forward hardware block signal and the logic selectivity S bit are activated on the output; depending on the block signals:

- if, on the input, the S/D-Forward hardware block signal and the logic selectivity S2 bits of actor 1 are not activated, the open command is sent in accordance with the selectivity time set for S protection
- a time equal to the trip time of S protection is waited if, on the input, the S/D-Forward hardware block signal is activated or mixed selectivity has been selected and the S2 logic selectivity bits of actor 1 are activated (and the open command is only sent if S protection is still in the alarm status once this time has elapsed)



### NOTES:

- *the logic selectivity bits on the output and on the input are those in the data packages shared by the releases via Link Bus*
- *the S/D-Forward (G/D-Backward) hardware output is only activated if the S or D-Forward (G or D-Backward) protections are in the alarm status, and the S/DForward (G/D-Backward) hardware input only acts as a block for the S and D-Forward (G and D-Backward) protections, regardless of whether solely hardware or mixed selectivity has been selected*



**IMPORTANT:** *if solely hardware selectivity has been selected, the logic selectivity bits are ignored on the input, but are still activated on the output*

### Selectivity masks

*Remote Programmable States A and B* are also included in the **selectivity masks**: these 2 parameters, which are available in the *Ekip Link configuration* page, enable the event (or combination of several events) and reference actor that activates the selectivity input to be selected.

2 further states are available, *C and D*, but they cannot be configured for Zone Selectivity. All 4 programmable states are used for the Programmable Logic function (see *Ekip Link* module on page 153).



**NOTE:** *the Programmable Logic function is independent from that of Zone Selectivity*

**Repetition** The **Repeat Configuration mask** parameter is available in the *Ekip Link advanced selectivity* page. It enables the selection of protections whose logic selectivity bit, if present on the input, must be propagated regardless of the status of the protection on the current unit.



**NOTE:** *the parameter only acts on the selectivity bits. It does not involve the outputs*

**Diagnostic** In the presence of both hardware and logic *Selectivity*, the *diagnosis* highlights any errors in the hardware Selectivity cabling by checking its continuity.

The *Ekip Link diagnosis configuration* page allows you to: enable diagnosis, configure the interval of time between one inspection and the next, select the inputs to be checked for each active actor (S/D\_Forward, G/D\_Backward).

Then:

- the hardware inputs are checked at regular intervals
- if, in Ekip Touch, the input of an actor is configured for diagnosis (e.g. input S of actor 3) and this input is not active when the test is performed, the actor stimulates its output (e.g. actor 3 activates output S) for a short time: Ekip Touch considers the test result to be positive if it receives the signal correctly at its input, otherwise it will signal error
- the diagnosis check will not be performed if the hw input is active: if the input configured for diagnosis is active when the test is performed, diagnosis check will not be performed and the **Detection state** parameter in the *Ekip Link state* page will indicate: Unknown

**Errors and inconsistencies** Regardless of the diagnosis, if a hardware input is active and none of the logic selectivity bits of the associated actors is active, a line inconsistency for this input is reported in the *Ekip Link state* page.



**NOTE:** *line inconsistency is ascertained by checking all the actors associated with the unit, even those for which the function has not been enabled (the Selectivity Actor parameter has not been assigned value: True)*

A line inconsistency (regardless of the diagnosis) is indicative of a possible configuration error (example: a hardware input of the release is connected to the hardware output of a device not associated via Link Bus, or of an actor for which the function has not been enabled).

- to prevent a line inconsistency from being signaled, devices whose hardware outputs are connected to the hardware inputs of Ekip Touch must also be connected to the Link Bus and associated with Ekip Touch, while the function need not be enabled for them (the Selectivity Actor parameter need not be assigned value: *True*)

## 11 - Performance table

- General notes:**
- The performance values given in the next table are valid with 100 ms trip time, temperature and signals within the operating limits; failure to comply with these limitations could lead to an increase in the tolerances.
  - Ekip Touch sends the TRIP command if the signal read exceeds the threshold for longer than the set time (or the time resulting from the calculation formula)
  - With an inverse time-delay trip curve, the calculation refers to a signal with a constant value throughout the timing: variation of the alarm signal causes a different trip time
  - The additional notes are given after all the tables

## Standard Protections

Protection [ANSI code]	Trip time $t_t^{(1)}$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
L [49]	$t_t = \frac{t_1 \times 9}{\left(\frac{I_f}{I_1}\right)^2}$ (with curve $t = k / I^2$ ) $t_t = \frac{t_1 \times a \times b}{\left(\left(\frac{I_f}{I_1}\right)^k - 1\right)}$ (with curves 60255-151)	Activation for $I_f$ within range: (1.05 to 1.2) x $I_1$	with $I_f \leq 6 I_n$ : $\pm 10\%$ / with $I_f > 6 I_n$ : $\pm 20\%$
S [50TD / 51]	$t_t = t_2$ ( with curve $t = k$ ) $t_t = \frac{t_2 \times 100}{I_f^2}$ (with curve $t = k / I^2$ )	with $I_f \leq 6 I_n$ : $\pm 7\%$ / with $I_f > 6 I_n$ : $\pm 10\%$	The best between $\pm 10\%$ and 40 ms  with $I_f \leq 6 I_n$ : $\pm 15\%$ / with $I_f > 6 I_n$ : $\pm 20\%$
S2 [50TD]	$t_t = t_5$	with $I_f \leq 6 I_n$ : $\pm 7\%$ / with $I_f > 6 I_n$ : $\pm 10\%$	The best between $\pm 10\%$ and 40 ms
I [50]	$t_t \leq 30$ ms	$\pm 10\%$	--
G [50N TD / 51N]	$t_t = t_4$ ( with curve $t = k$ ) $t_t = \frac{2}{\left(\frac{I_f}{I_4}\right)^2}$ (with curve $t = k / I^2$ )	$\pm 7\%$	The best between $\pm 10\%$ and 40 ms <sup>(2)</sup>  $\pm 15\%$
MCR	$t_t \leq 30$ ms	$\pm 10\%$	--
2I [50]	$t_t \leq 30$ ms	$\pm 10\%$	--
IU [46]	$t_t = t_6$	$\pm 10\%$	with $t_6 \leq 5$ s: $\pm 100$ ms / with $t_6 < 5$ s the best between $\pm 10\%$ and $\pm 40$ ms

## Startup

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
S StartUp	$t_t = t_2$ startup	with $I_f \leq 6 I_n$ : $\pm 7\%$ / with $I_f > 6 I_n$ : $\pm 10\%$	The best between $\pm 10\%$ and 40 ms
I StartUp	$t_t \leq 30$ ms	$\pm 10\%$	--
G StartUp	$t_t = t_4$ startup	$\pm 7\%$	The best between $\pm 10\%$ and 40 ms
S2 StartUp	$t_t = t_5$ startup	with $I_f \leq 6 I_n$ : $\pm 7\%$ / with $I_f > 6 I_n$ : $\pm 10\%$	The best between $\pm 10\%$ and 40 ms

**Voltage protections**

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
UV [27] / UV2 [27]	$t_t = t8$ (t15)	$\pm 2 \%$ <sup>(4)</sup>	with $t8 \geq 5$ s: $\pm 100$ ms / with $t8 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
OV [59] / OV2 [59]	$t_t = t9$ (t16)	$\pm 2 \%$ <sup>(4)</sup>	with $t9 \geq 5$ s: $\pm 100$ ms / with $t9 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
VU [47]	$t_t = t14$	$\pm 5 \%$	with $t14 \geq 5$ s: $\pm 100$ ms / with $t14 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms

**Voltage Advanced protections**

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
S(V) [51V] / S2(V) [51V]	$t_t = t20$ (t21)	$\pm 10 \%$	with $t20 \geq 5$ s: $\pm 100$ ms / with $t20 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
RV [59N]	$t_t = t22$	$\pm 10 \%$	with $t22 \geq 5$ s: $\pm 100$ ms / with $t22 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms

**Frequency protections**

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
UF [81L] / UF2 [87L]	$t_t = t12$ (t17)	$\pm 1 \%$ <sup>(5)</sup>	with $t12 \leq 5$ s: $\pm 100$ ms / with $t12 < 5$ s: the best between $\pm 10 \%$ (min = 30 ms) and $\pm 40$ ms
OF [81H] / OF2 [87H]	$t_t = t13$ (t18)	$\pm 1 \%$ <sup>(5)</sup>	with $t13 \geq 5$ s: $\pm 100$ ms / with $t13 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms

**Power protections**

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
UP [32LF]	$t_t = t23$	$\pm 10 \%$	with $t23 \geq 5$ s: $\pm 100$ ms / with $t23 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
OP [320F]	$t_t = t26$	$\pm 10 \%$	with $t26 \geq 5$ s: $\pm 100$ ms / with $t26 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
RQ [40 o 32R]	$t_t = t24$	$\pm 10 \%$	with $t24 \geq 5$ s: $\pm 100$ ms / with $t24 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
OQ [320F]	$t_t = t27$	$\pm 10 \%$	with $t27 \geq 5$ s: $\pm 100$ ms / with $t27 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
D [67]	$t_t = t7$	with $I_f \leq 6$ In: $\pm 7 \%$ / with $I_f > 6$ In: $\pm 10 \%$	with $t7 \geq 400$ ms: $\pm 40$ ms / with $t7 < 400$ ms: $\pm 20$ ms and $\pm 10\%$ , whichever is the highest
RP [32R]	$t_t = t11$	$\pm 10 \%$	with $t11 \geq 5$ s: $\pm 100$ ms / with $t11 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms

**Startup**

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
D StartUp	$t_t = t7$ startup	$\pm 10 \%$	con $t11 \geq 5$ s: $\pm 100$ ms / con $t11 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms
UP StartUp	$t_t = t23$ startup	$\pm 10 \%$	with $t23 \geq 5$ s: $\pm 100$ ms / with $t23 < 5$ s: the best between $\pm 10 \%$ and $\pm 40$ ms

**ROCOF protections**

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
ROCOF [81R]	$t_t = t28$	$\pm 10 \%$ <sup>(6)</sup>	the best between $\pm 20\%$ and 200 ms

**Motor protections**

Protection [ANSI code]	Trip time $t_t$	Trip threshold tolerance <sup>(3)</sup>	Trip time tolerance
R JAM [51LR]	$t_t = t_j$	$\pm 10 \%$	with $I_f \leq 6 I_n$ : $\pm 7 \%$ / with $I_f > 6 I_n$ : $\pm 10 \%$
R STALL [51LR]	$t_t = t_s$	$\pm 10 \%$	$\pm 10 \%$
UC [37]	$t_t = t_{uc}$	$\pm 15 \%$	$\pm 20 \%$
U	$t_t = t_u^{(8)}$	$\pm 15 \%$	$\pm 20 \%$

**Note on protections**

<sup>(1)</sup> use trip and threshold current values expressed in  $I_n$  for calculating  $t_t$  (example:  $I_f = 0.8 I_n$ ,  $I_1 = 0.6 I_n$ )

<sup>(2)</sup> with  $t_4 =$  instantaneous, the maximum tolerance is 50 ms

<sup>(3)</sup> Tolerance values valid with Trip unit at steady state or on with auxiliary power supply, trip time  $\geq 100$  ms, temperature and signals within operating limits; the tolerances in the table after the notes are applicable if the conditions are not guaranteed

<sup>(4)</sup> the trip unit considers a 3% hysteresis for clearing from the alarm condition

<sup>(5)</sup> tolerance valid for frequencies within range:  $f_n \pm 2 \%$ . A  $\pm 5 \%$  tolerance is applicable for off range frequencies

<sup>(6)</sup>  $\pm 20 \%$  for threshold 0.4 Hz / s

<sup>(7)</sup> time to be considered valid after Motor start-up

<sup>(8)</sup> time to be considered valid with protection in alarm status after Motor start-up; if the alarm appears during Motor start-up, the trip unit calculates and uses the lowest value between  $t_u$  and the half of Motor start-up

**Performance guaranteed in all operating conditions**

Protection	Trip threshold tolerance	Trip time tolerance
L	Activation within range: $(1.05 \text{ to } 1.2) \times I_1$	$\pm 20 \%$
S	$\pm 10 \%$	$\pm 20 \%$
I / 2I	$\pm 15 \%$	$\leq 60$ ms
G	$\pm 15 \%$	$\pm 20 \%$ (60 ms with $t_4 =$ instantaneous)
UF / UF2 / OF / OF2	$\pm 2 \%$	$\pm 20 \%$
Other	--	$\pm 20 \%$

## 12 - Functions


**Introduction** This chapter includes the trip curves of the protections, which are shown in different point charts:

- The curves are illustrated considering the minimum and maximum values and of the parameters of each protection.
- Protections with several curves (example: S protection), are shown in several graphs.
- The curves do not take account of the effects of special parameters, such as thermal memory and startups.




**NOTE:** it is advisable to always use the mathematical function in the summary table of the protections to calculate the trip time (page 79)

### Function L ( $t = k/I^2$ )

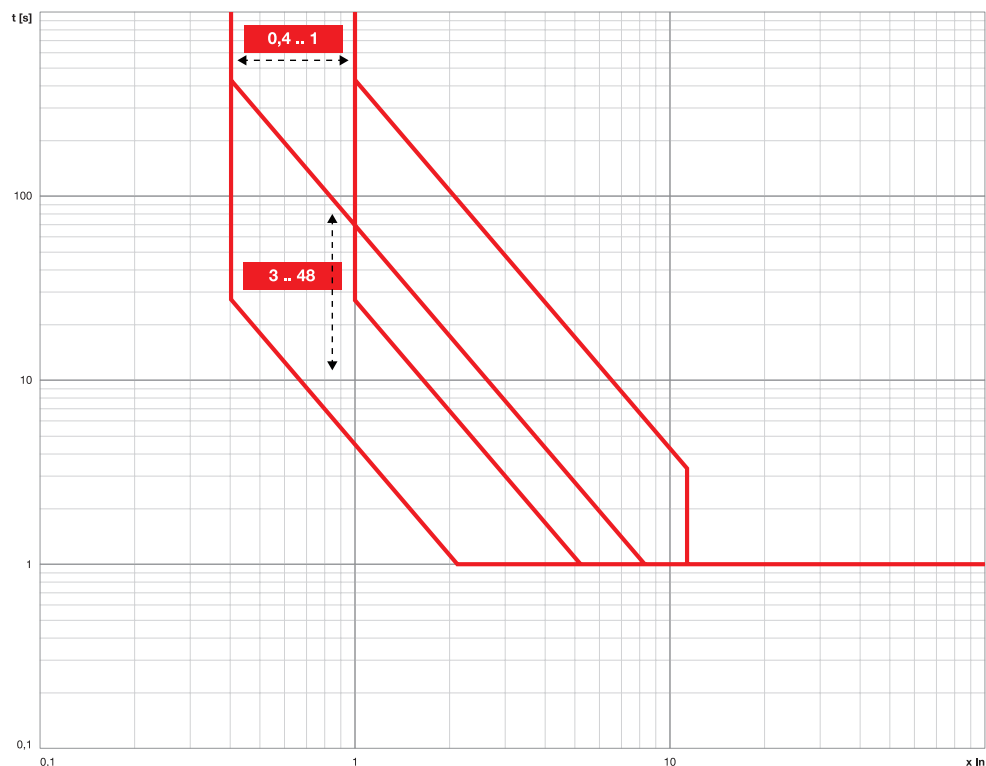






## Function L (IEC 60255-151 SI)

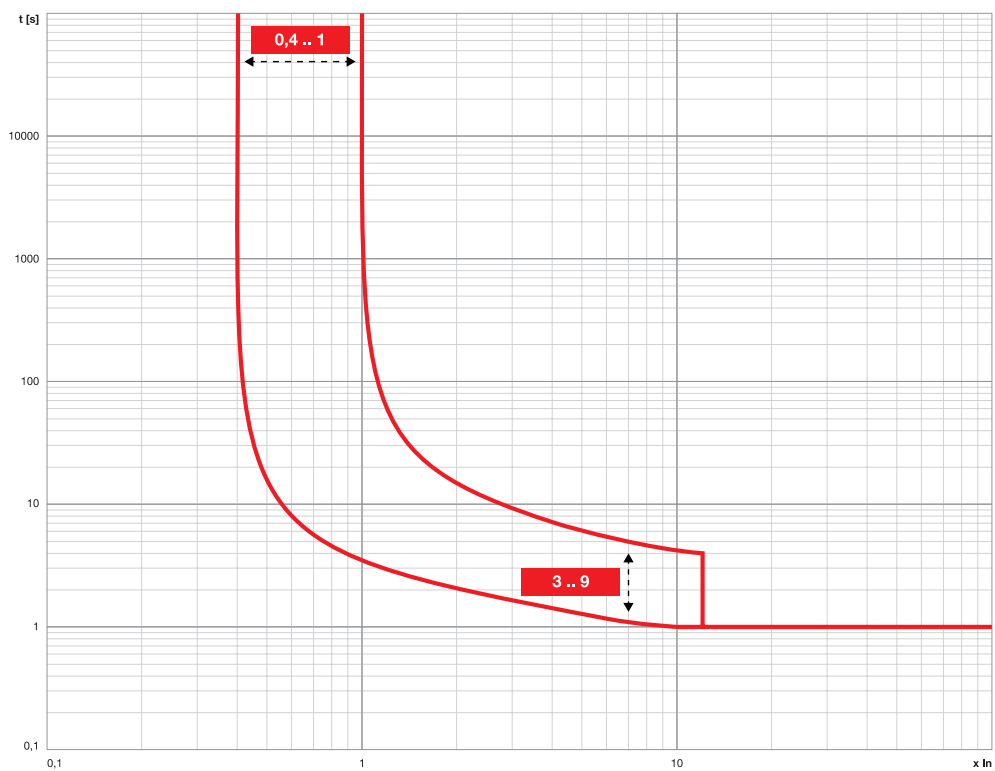



## Function L (IEC 60255-151 VI)

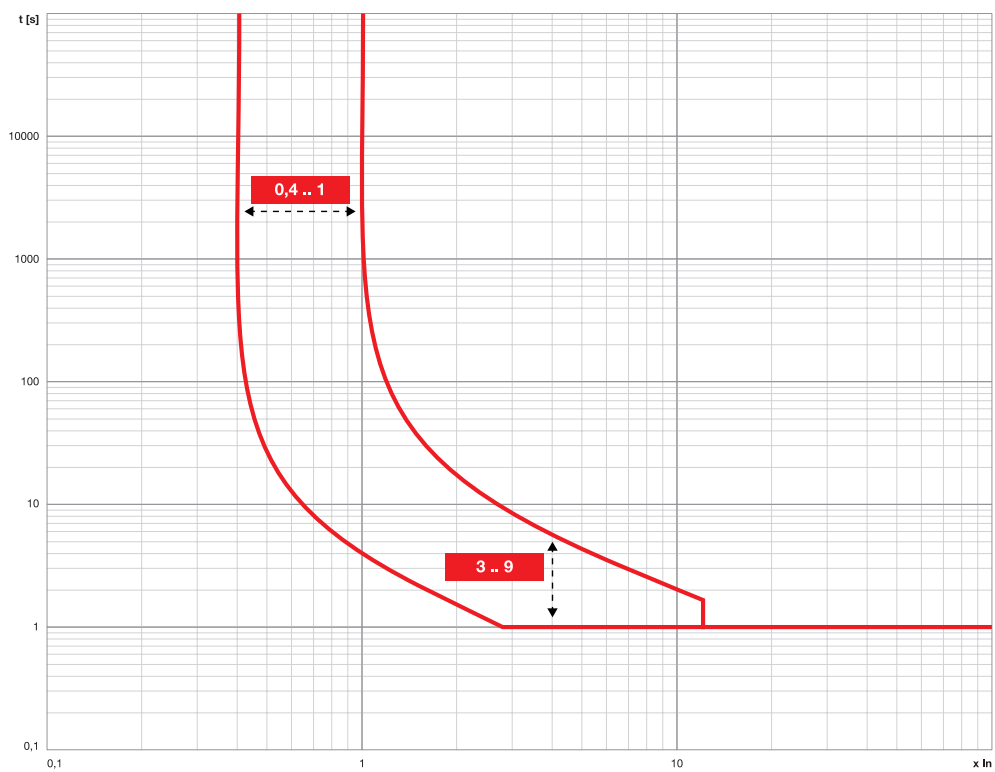



## Function L (IEC 60255-151 EI)

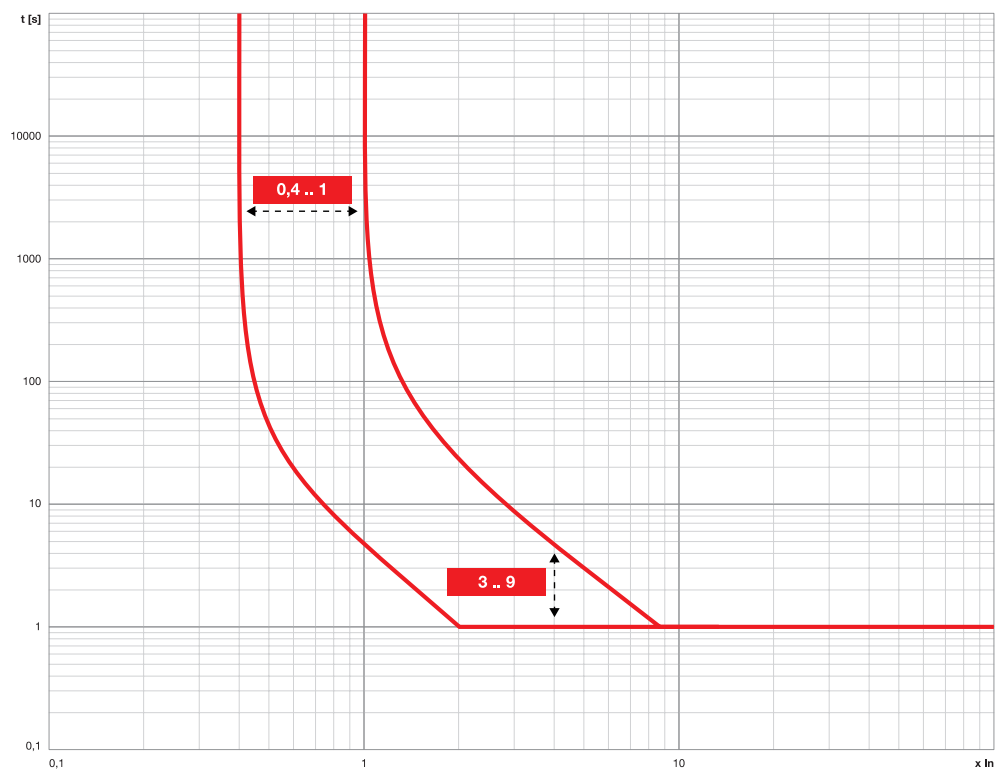
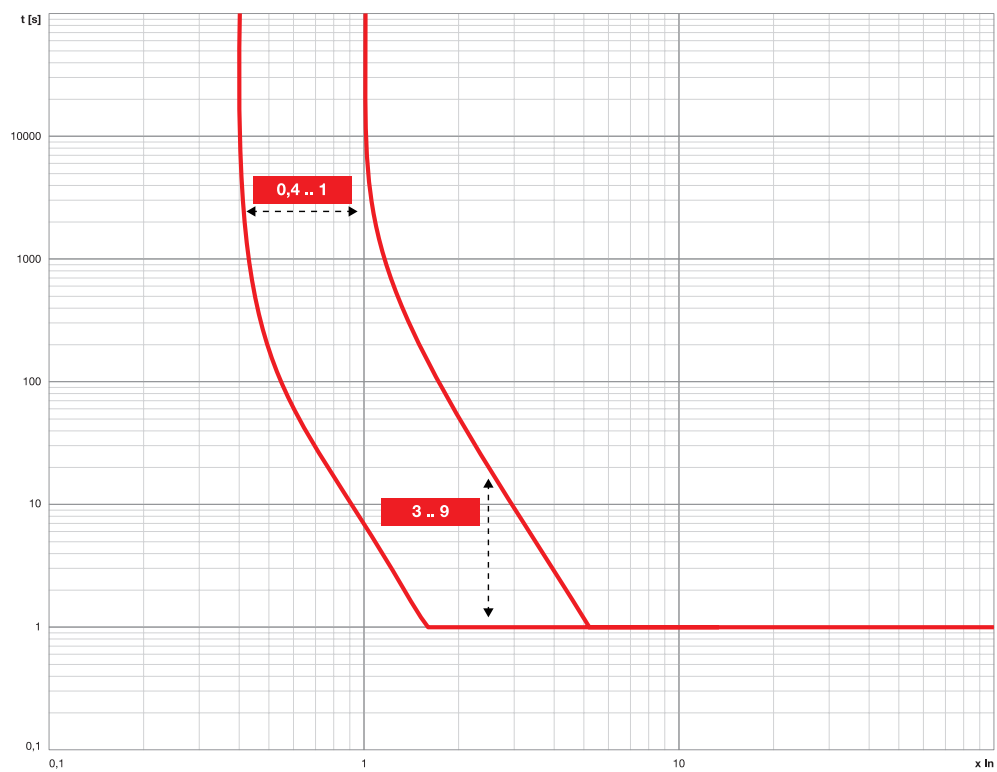
Function L ( $t = k/I^4$ )

## Function L (Ekip M Touch)

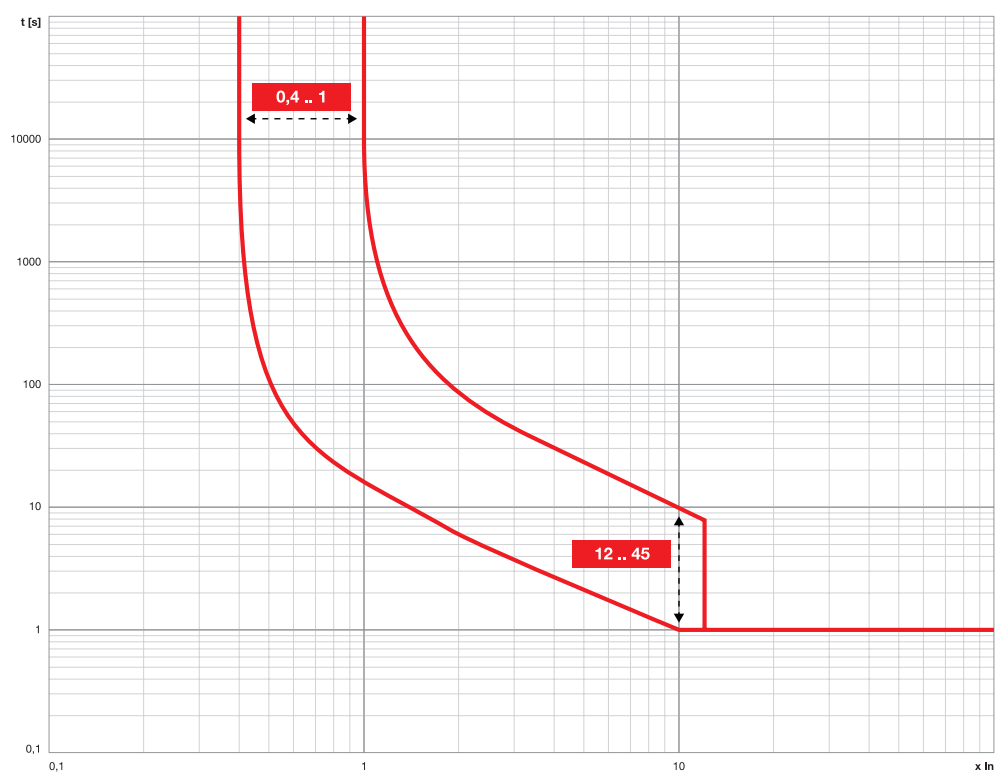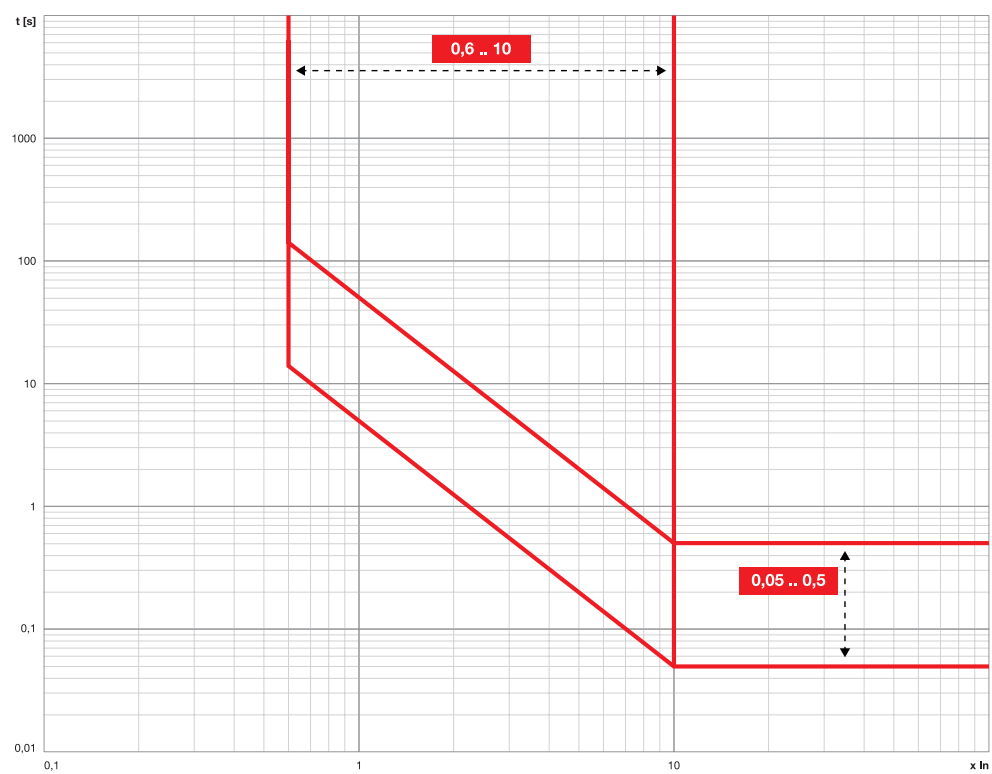
Function S ( $t = k/I^2$ )

## Function S (t = k) \ Function S2

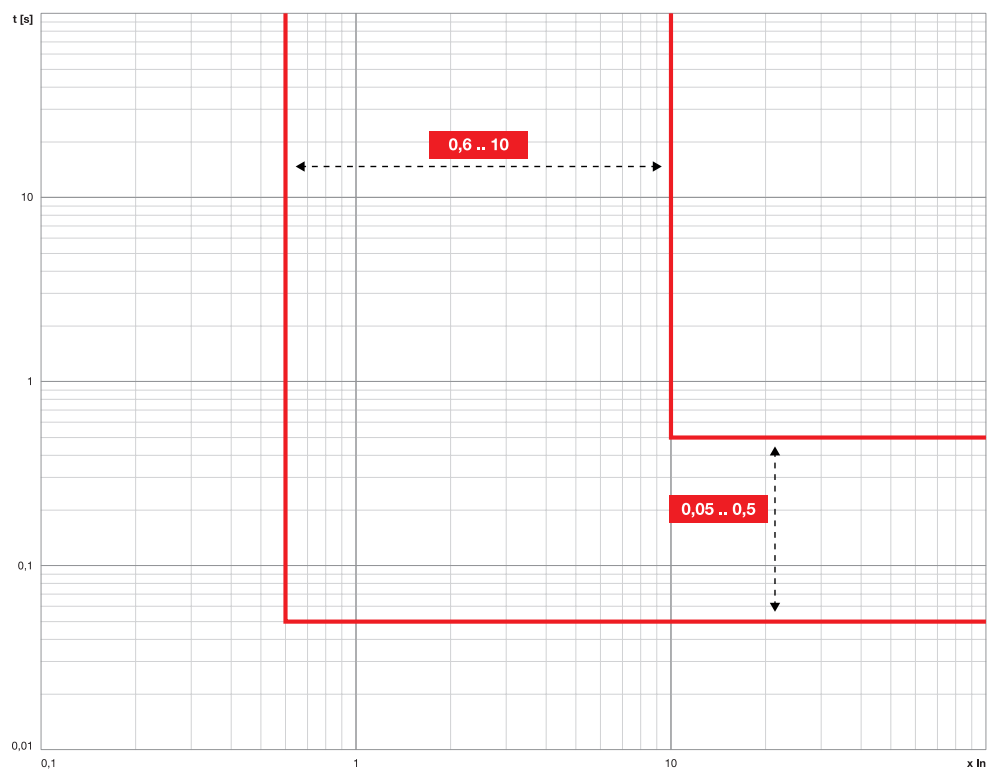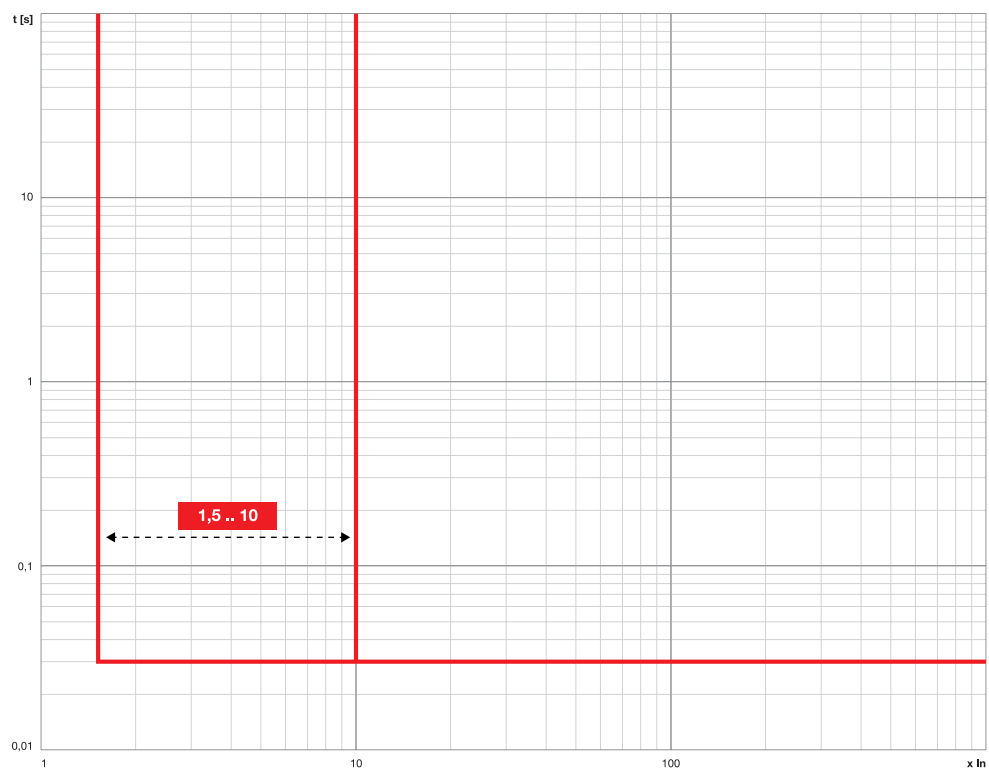
Function I \ Function MCR \  
Function 2I

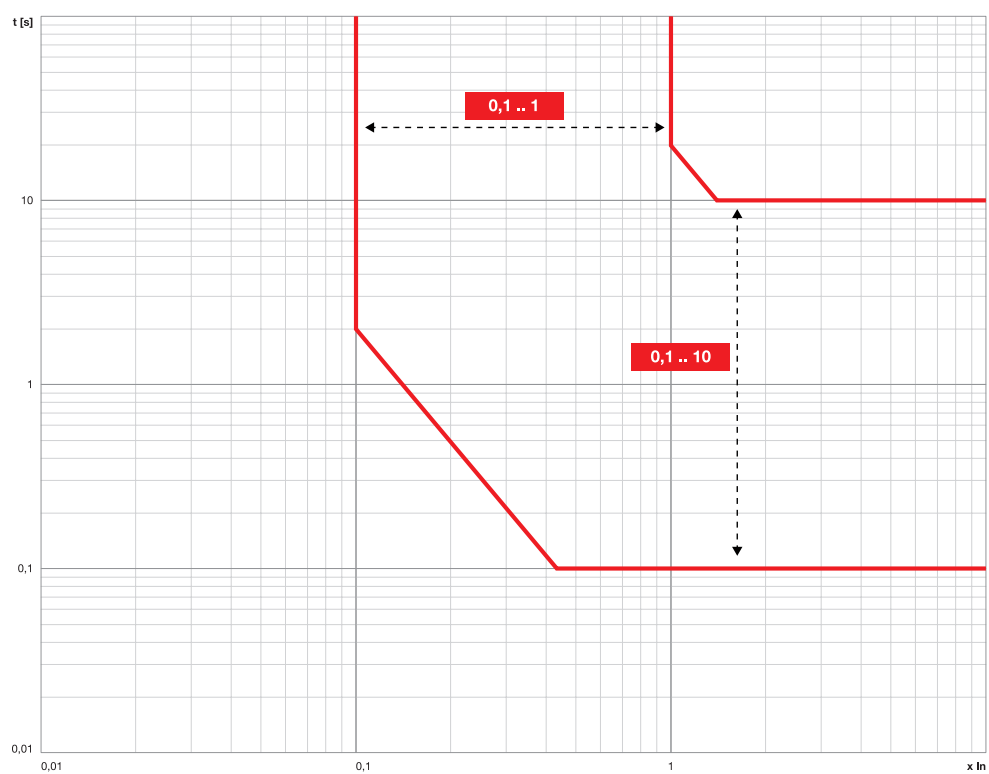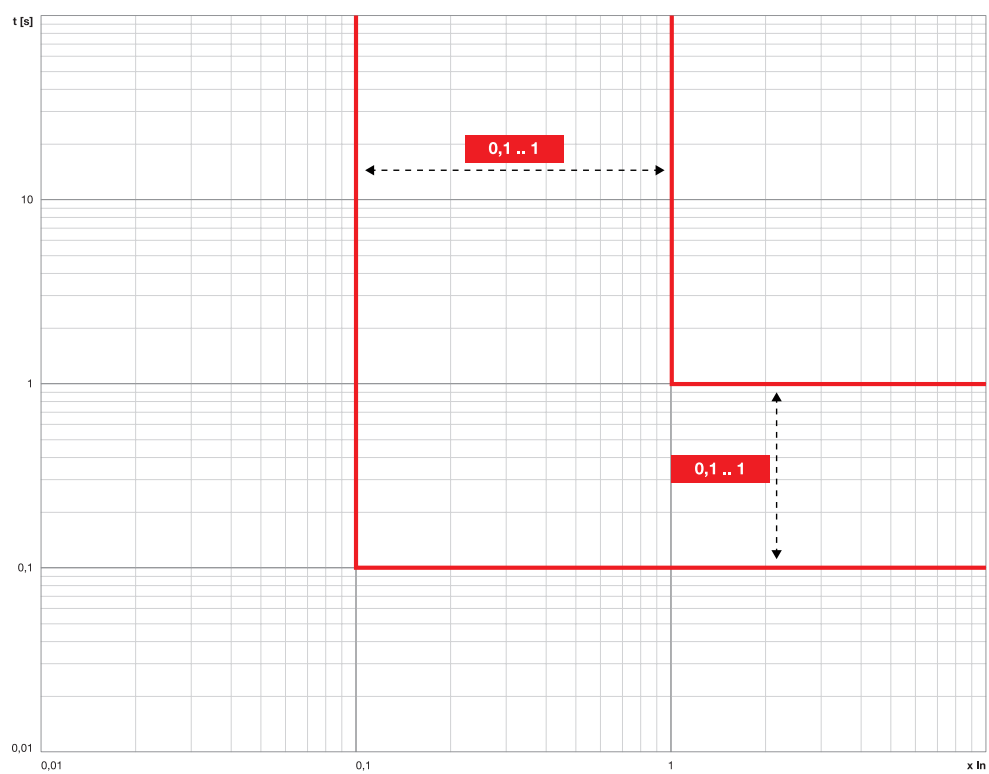Function G ( $t = k/I^2$ )Function G ( $t = k$ )


## Function IU

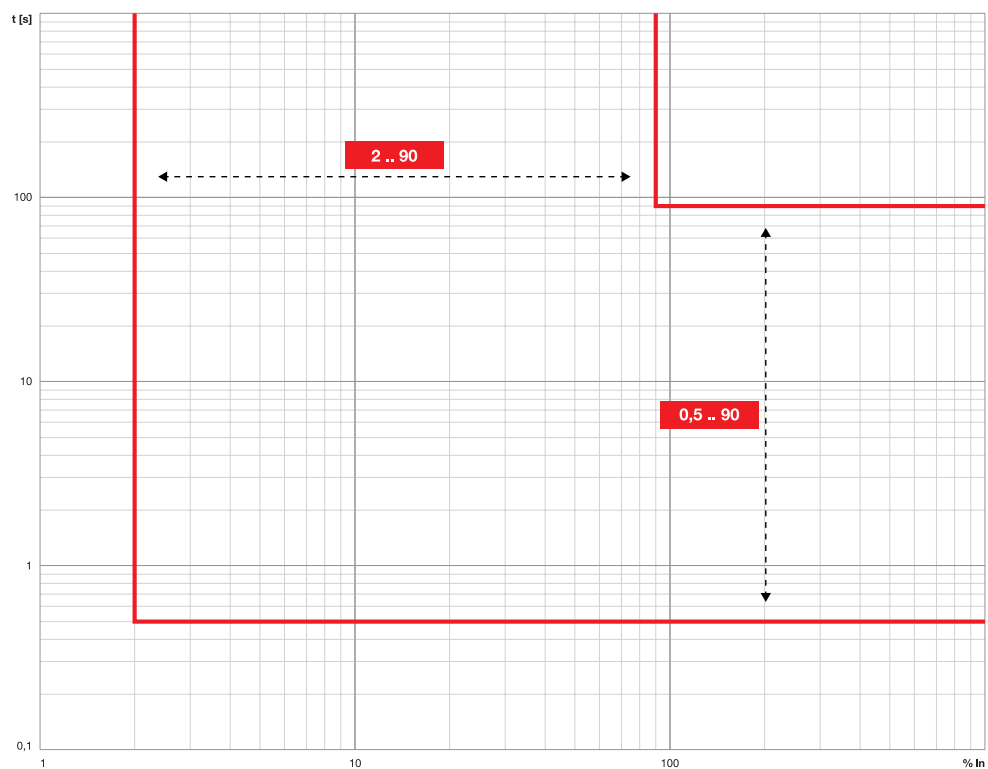


## Function UV \ Function UV2

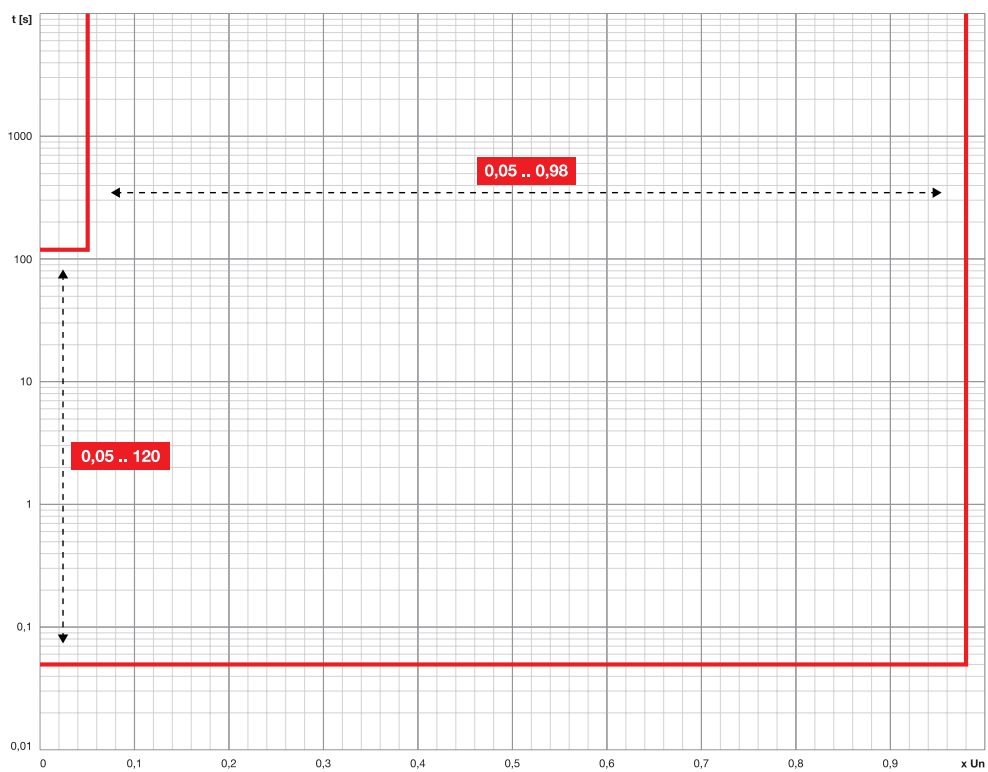


## Function OV \ Function OV2

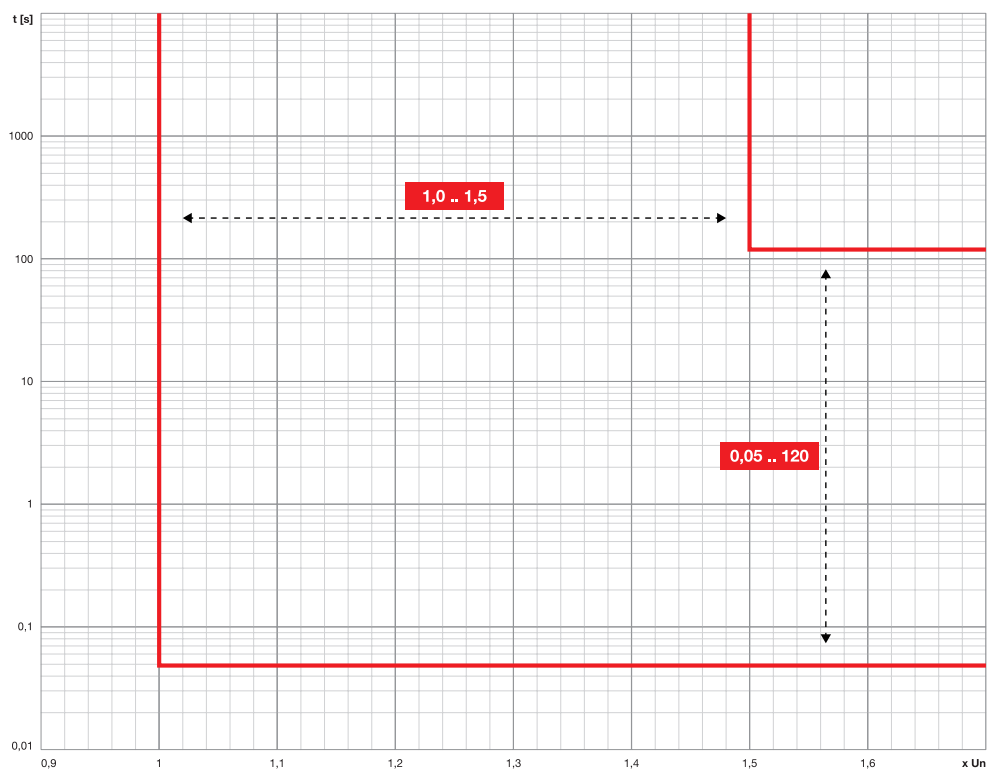


## Function VU

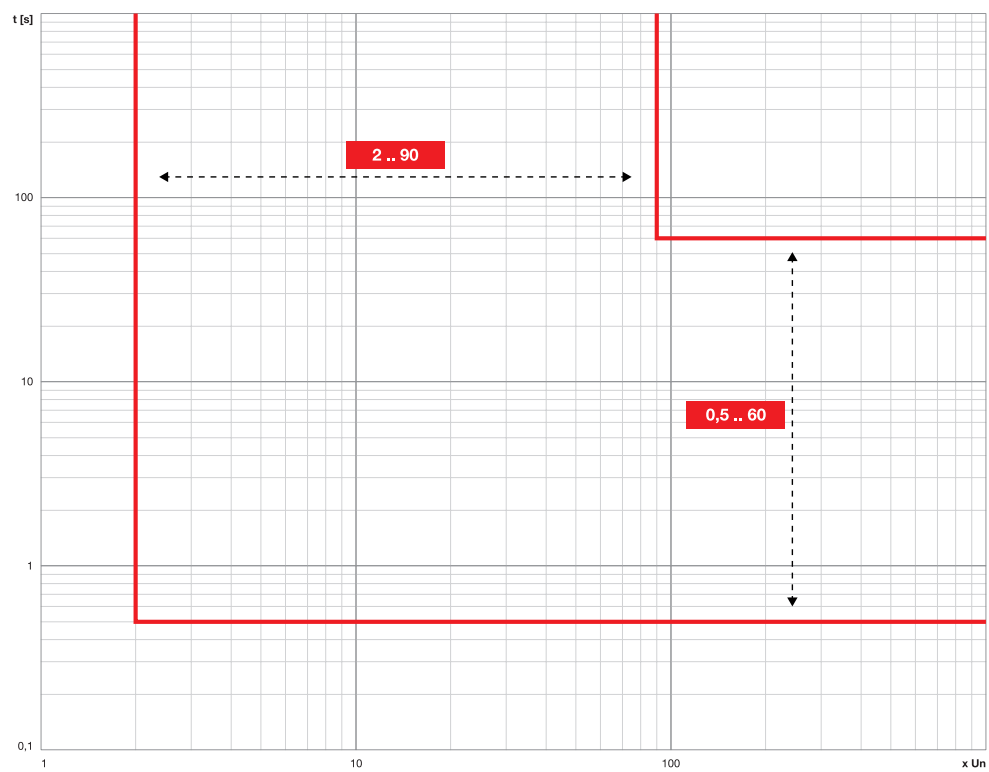

## Function S(V) \ Function S2(V)

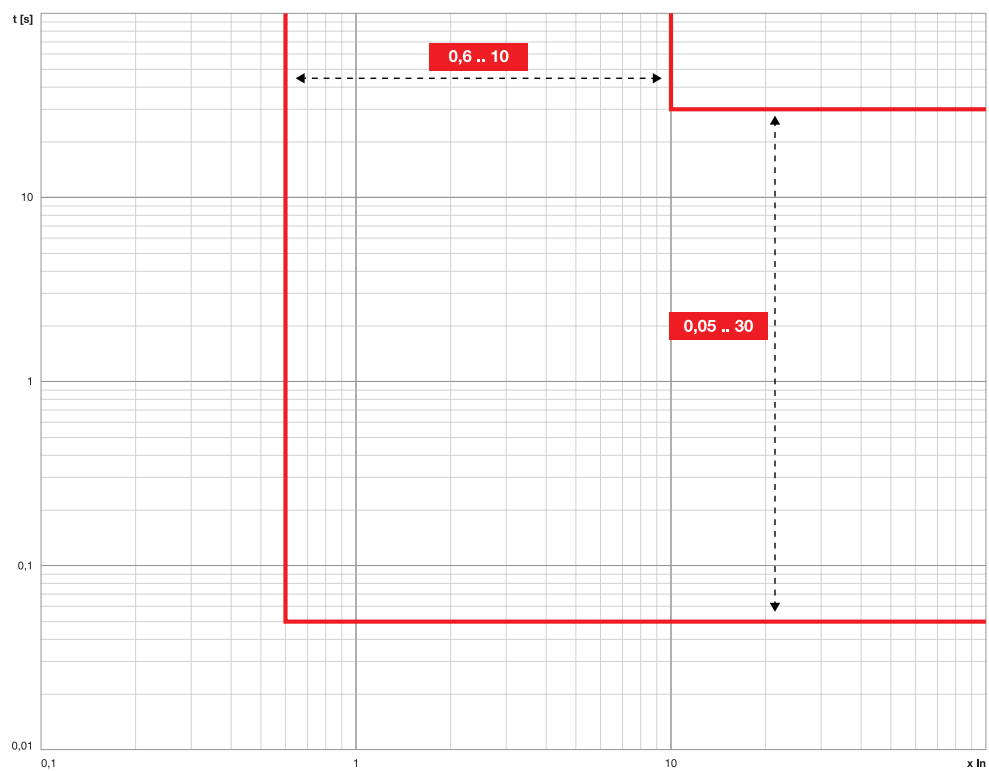


## Function RV

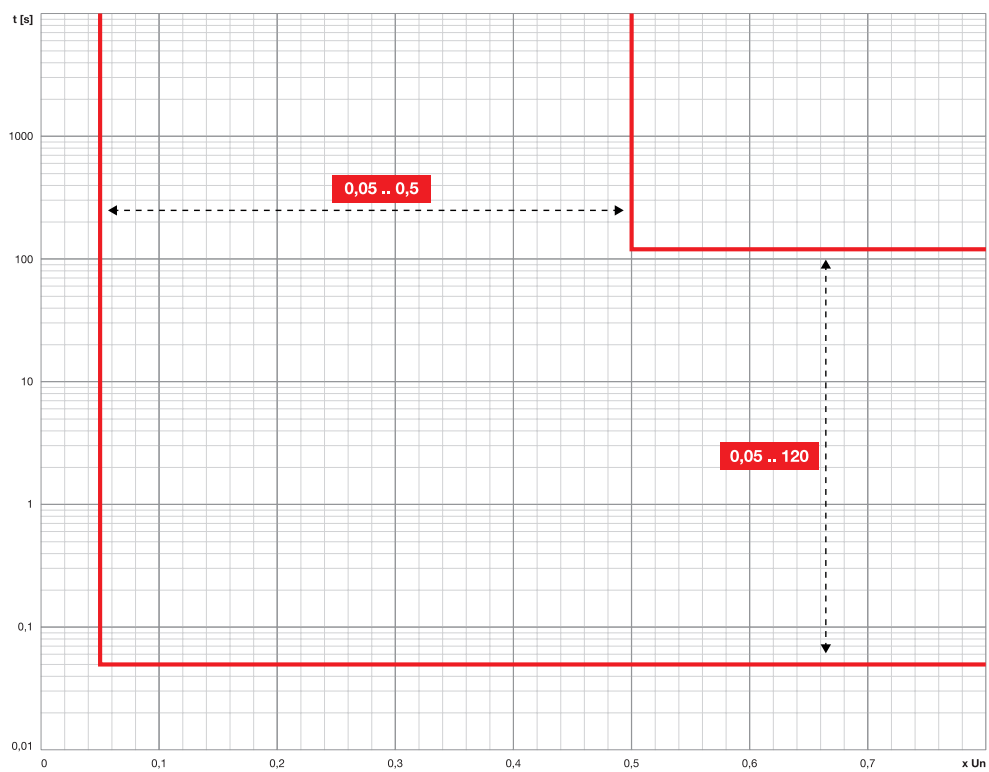





## Function UF \ Function UF2

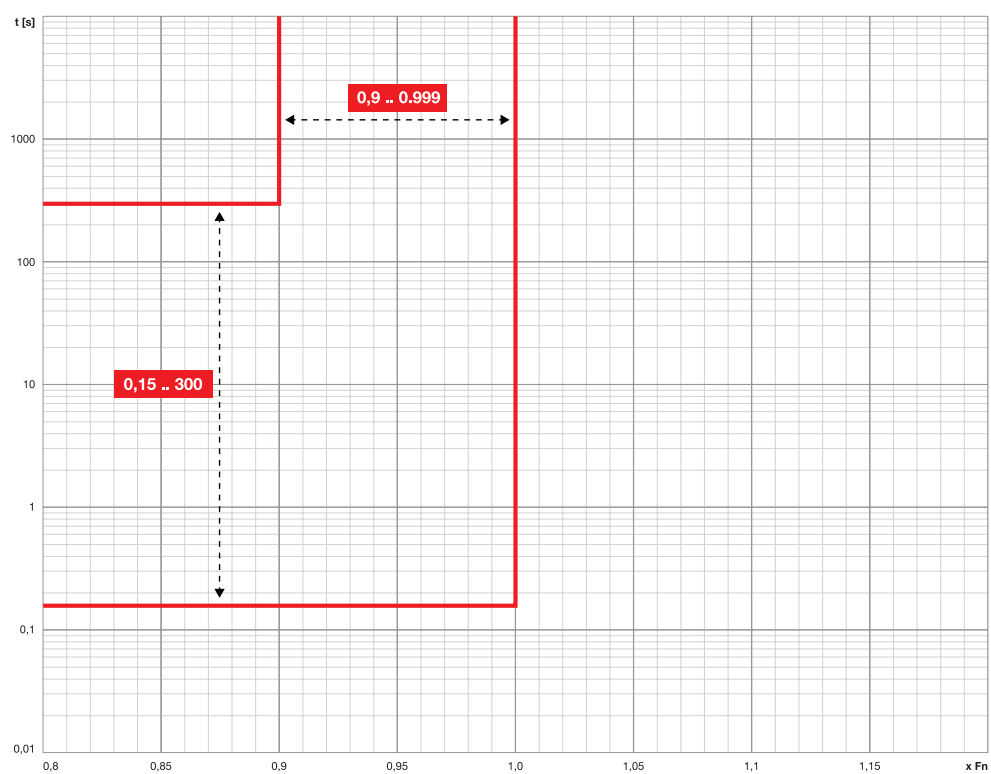


## Function OF \ Function OF2

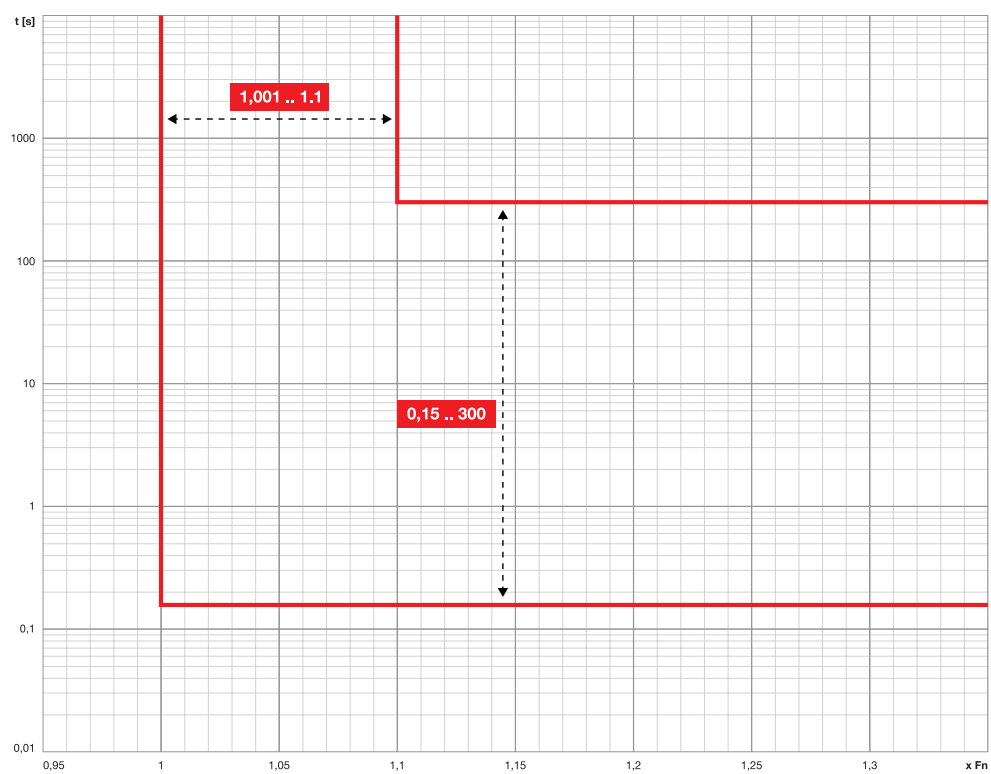


## Function RP

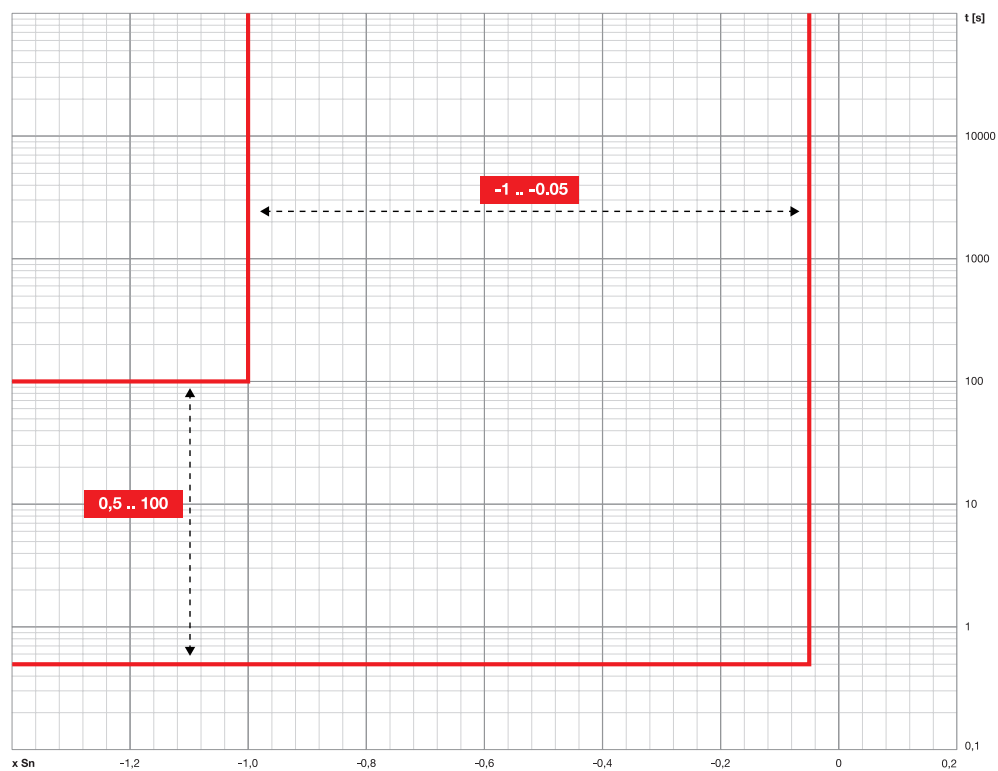


## Function D

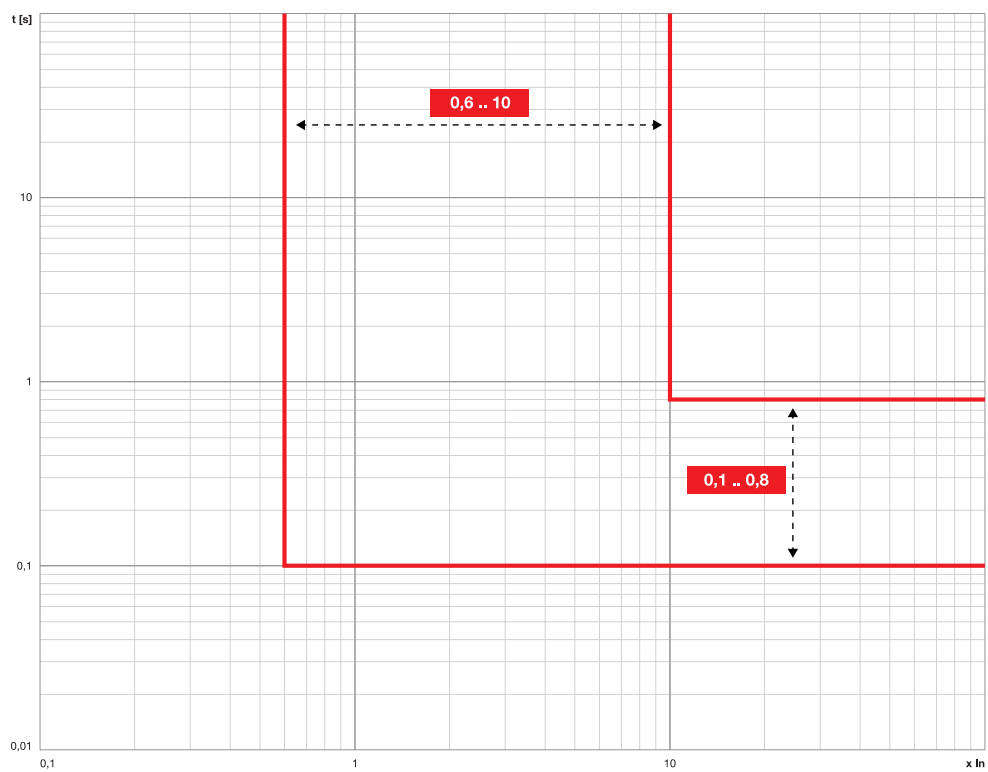


## Function OQ

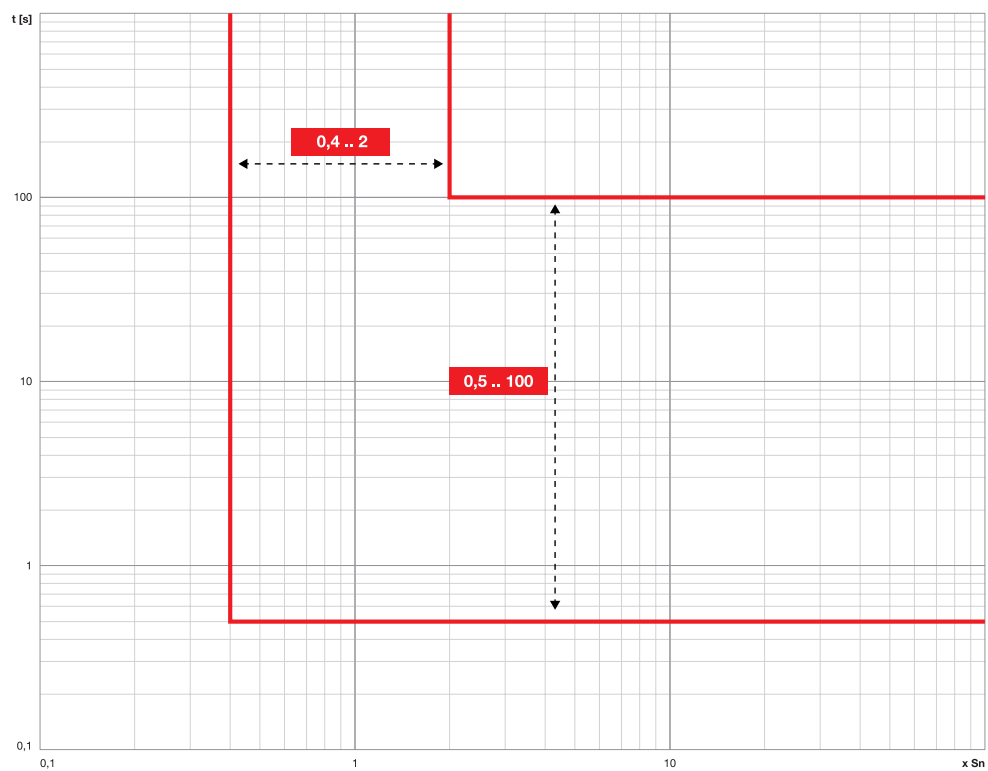


## Function OP

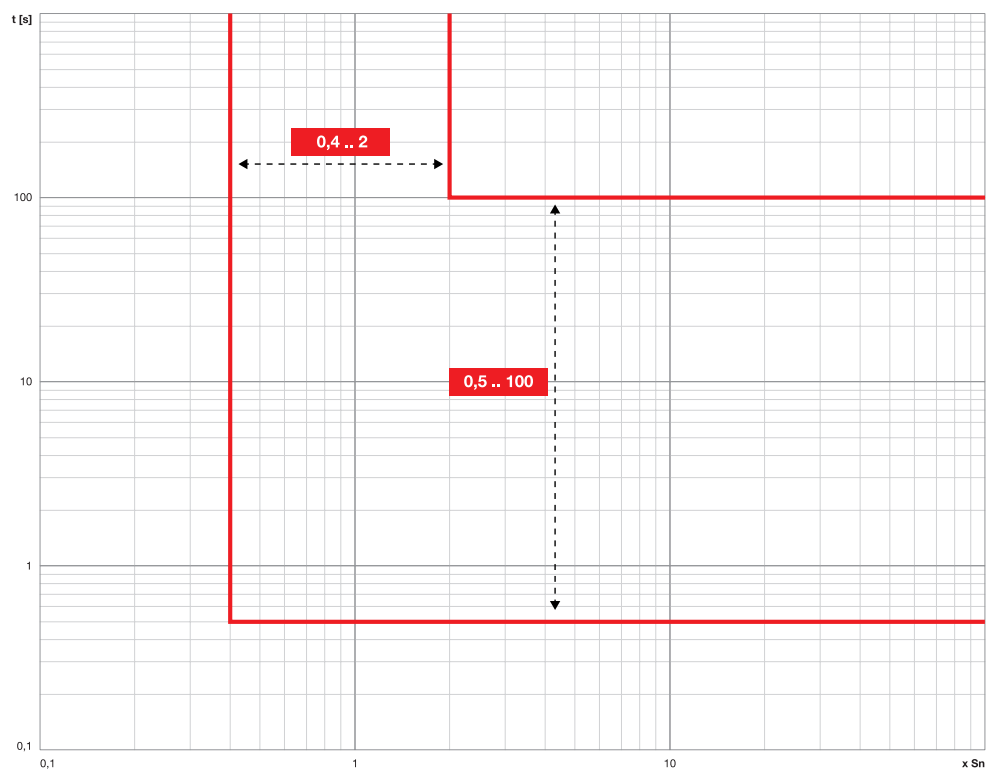


## Function UP

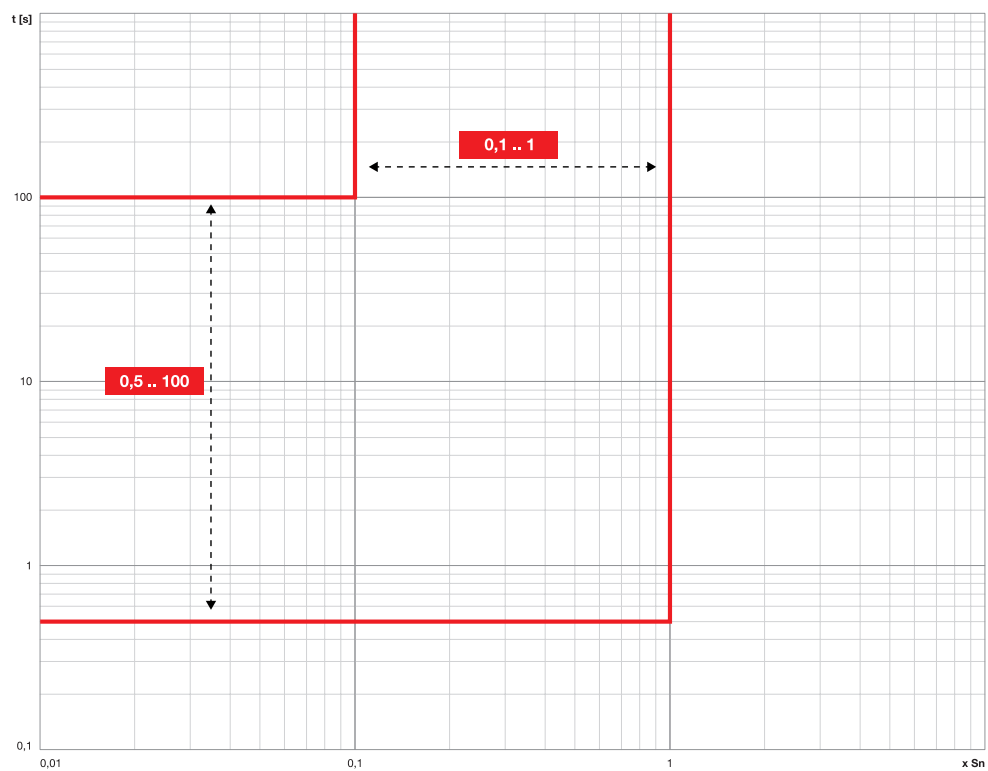


## Function RQ

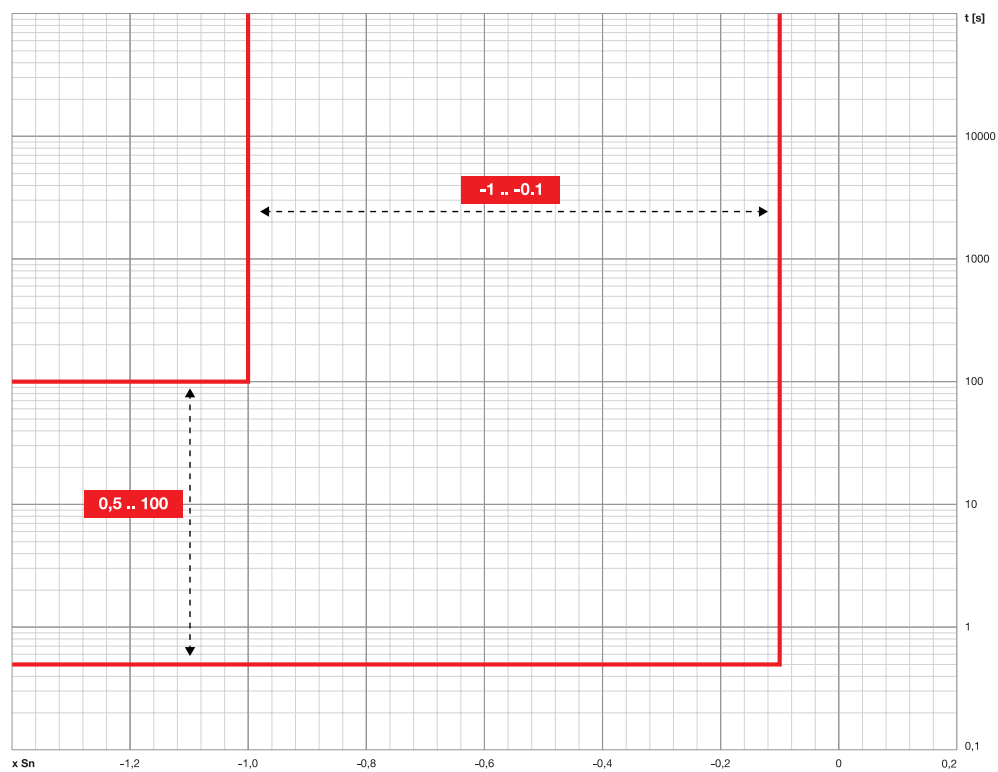


## Function ROCOF

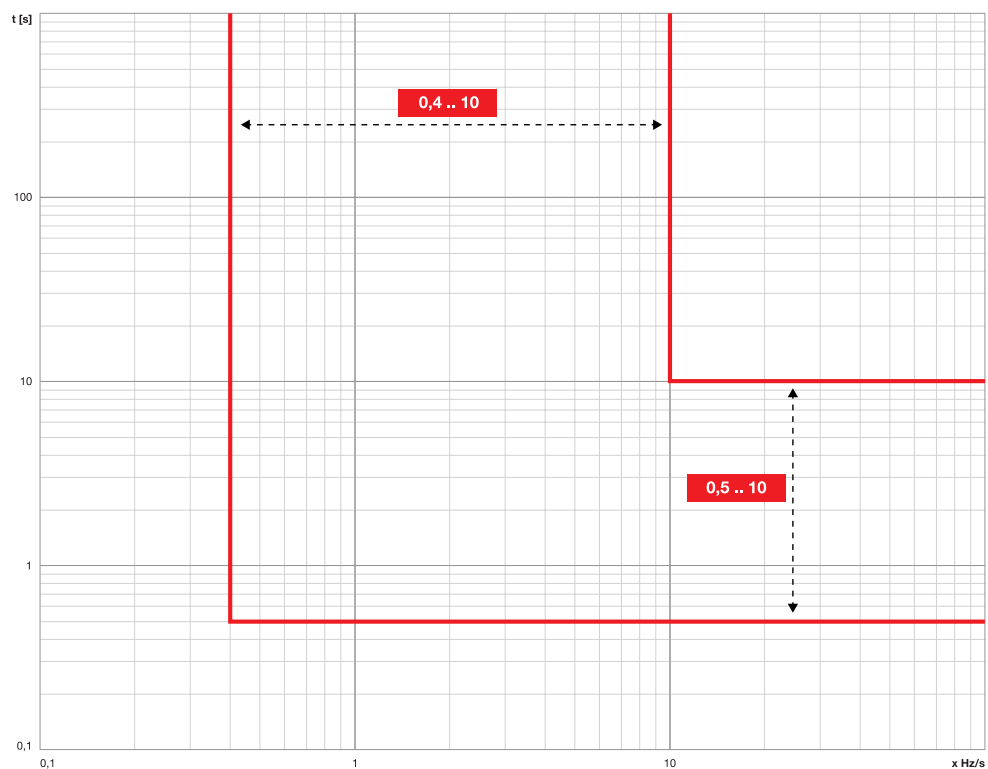


## Function R JAM

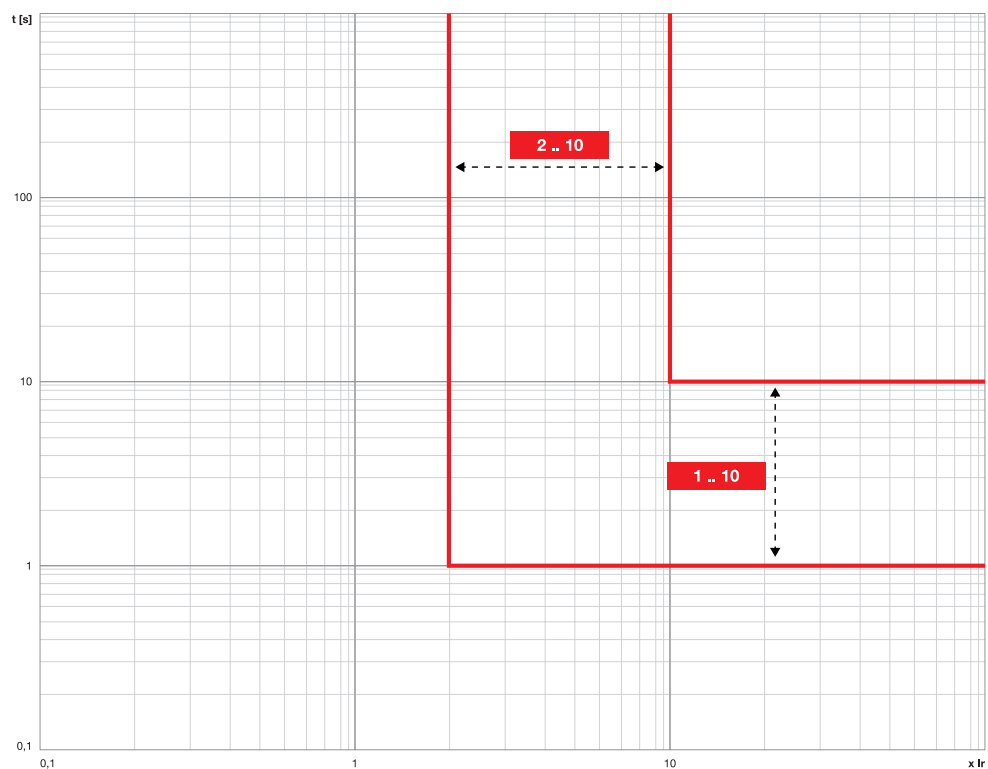

## Function R STALL

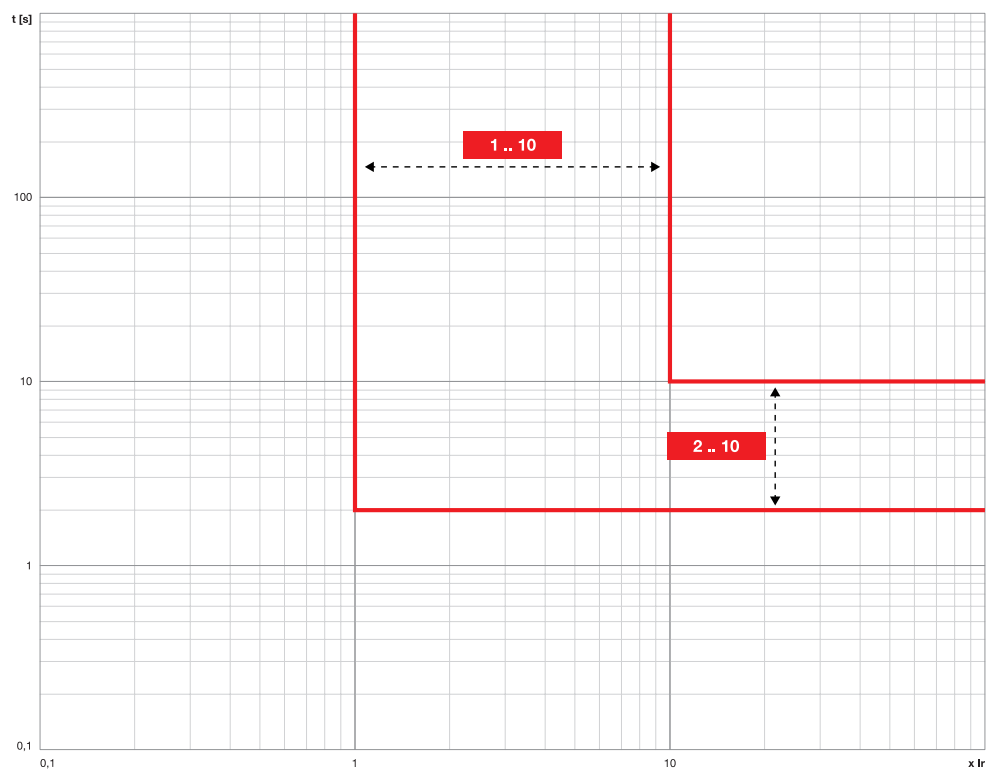

## Function UC

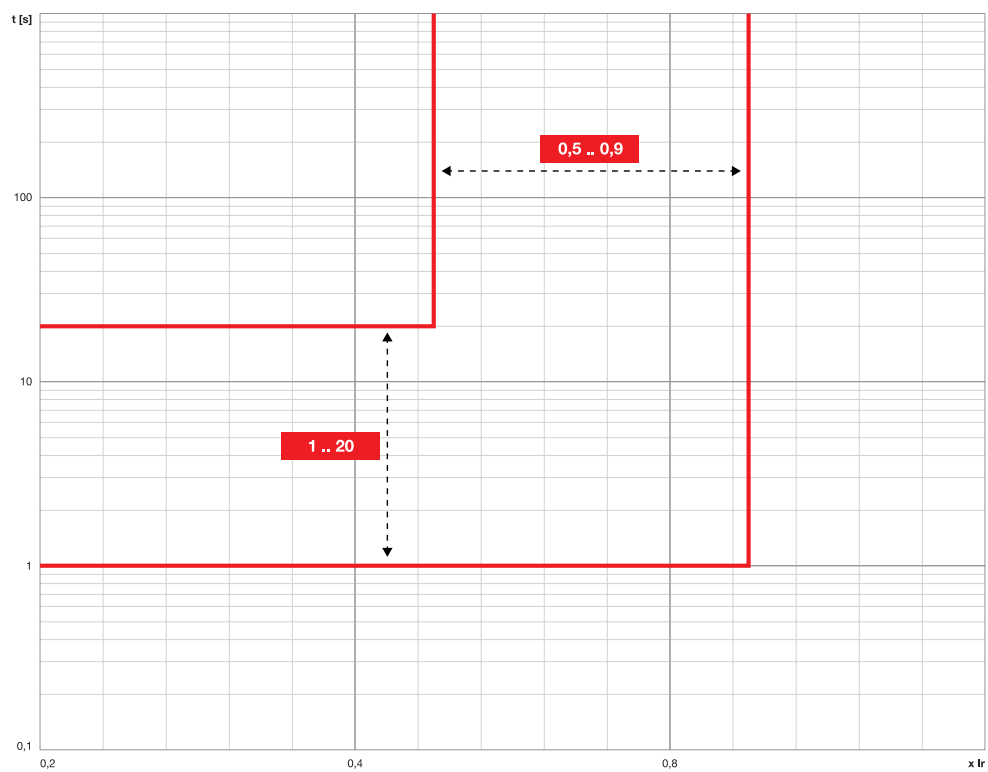

# Measurements

## 1 - Standard Measurements

**List** The Standard measurements are:

Parameter	Description	Page
<i>Instantaneous currents</i>	Phase current measurements in real time	97
<i>Events</i>	List of events, status changes, alarms, recorded by the Trip unit	97
<i>Trip</i>	List of current protection trips (TRIP)	97
<i>Min-Max measurements</i>	History of minimum and maximum currents, recorded at a settable interval	99
<i>Maintenance</i>	CB status: contact wear and last maintenance	100
<i>Operation counters</i>	Number of mechanical and electrical operations	100

**Instantaneous currents** The instantaneous currents, available in the *Measurements* pages, are real time measurements of the phase and earth fault currents expressed in root mean square value; the monitor time and performance depend on the rated current defined by the *Rating plug* ( $I_n$ ):

Measurement	Monitor time (min-max)	Normal operating range	Accuracy of value read <sup>(1)</sup>
<i>Phase currents</i> <sup>(4)</sup>	0,03 ÷ 64 $I_n$	0,2 ÷ 1,2 $I_n$	1% <sup>(3)</sup>
<i>Internal earth fault current</i> <sup>2</sup>	0,08 ÷ 64 $I_n$	0,2 ÷ 1,2 $I_n$	2 % <sup>(3)</sup>

<sup>(1)</sup> the accuracies refer to normal operating ranges, as established by IEC 61557-12

<sup>(2)</sup> available with LSIG versions

<sup>(3)</sup> accuracies based on Ekip Touch and Ekip Touch Measuring without Class 1 Power & Energy Metering package; if the Class 1 Power & Energy Metering package is present and for all other trip unit models, check the indicated performance values from page 104

<sup>(4)</sup> the higher phase currents are also available in the Histograms, Measuring instruments and Measurement summary pages

### Special representations

Type of measurement	Measurement < min value	Measurement < max value	“ _ _ _ ” displayed: (not available) due to
Internal earth fault and phase currents	. . . .	> [64 $I_n$ ]	Sensors disconnected

**Events** Ekip Touch can record the last 200 events, mainly concerning variations in the status and operation of the unit; in particular:

- configuration status of the bus, operating mode, active set, auxiliary supply
- connection statuses or alarms: current sensors, *Trip Coil*
- connection statuses or alarms: current sensors, *Rating Plug*, *HMI*, *Trip Coil*
- protections: timing in progress or alarm
- trip: status of open command, signaling of trips due to protection



**NOTE:** *the first event available in the list is the most recent one; having reached the 200-events threshold, the oldest events will be progressively overwritten*

The complete list is available in the *Measurements - Historicals - Events* menu, where a set of information is given for each event: icon of the type of event, name of event, date and time recorded.

There are 4 icons that identify the type of event:

Icon	Description
	Event reported for information purposes
	Timing of a protection in progress, trip expected
	Alarm referring to a non-dangerous condition
	Alarm concerning operation, a fault or connection failure

**Tripping** Ekip Touch is able to record the last 30 TRIPs.

The complete list is available in the *Measurements - Historicals - Trips* menu, where useful information is given for each trip:

- the protection that caused the trip
- the consecutive number of the trip
- the date and time of the trip (with reference to the internal clock)
- the measurements associated with the tripped protection



**NOTE:** *once the 30-TRIP threshold has been exceeded, the oldest trips are progressively overwritten*

#### Correlated measurements

The type of protection involved determines the measurements recorded at the moment of tripping:

Protection	Measurements recorded	Notes
Current	L1, L2, L3, Ne, Ig Currents	Ne is available with CBs type 4P and 3P + N; Ig is available in the case of trips due to G protection
Temperature	L1, L2, L3, Ne Currents	The temperature cannot be displayed

#### Access to most recent trips

Besides being available in the *Historicals* menu, information about the most recent trips can be accessed in three different ways, depending on the conditions of Ekip Touch:

Condition	Access
Trips that have just occurred with Ekip Touch on	The main page is temporarily replaced by a trip information page; press the <b>iTEST</b> button to reset and go back to the normal screen page
Trips that have just occurred with Ekip Touch off	Press the <b>iTEST</b> button to display the trip information page for a few seconds
Rapid consultation in all the other conditions	Press the <b>iTEST</b> button four times from any page other than a menu, or a page accessed via a menu




### Min-Max measurements

Ekip Touch records the maximum and minimum phase currents in the *Measurements - Historicals - Measurements* menu

The recording interval between one measurement and the next can be set via the Monitor time parameter, available in the *Settings* menu (page 33).

#### Representation

Select one of the measurements to access the graph page containing the records

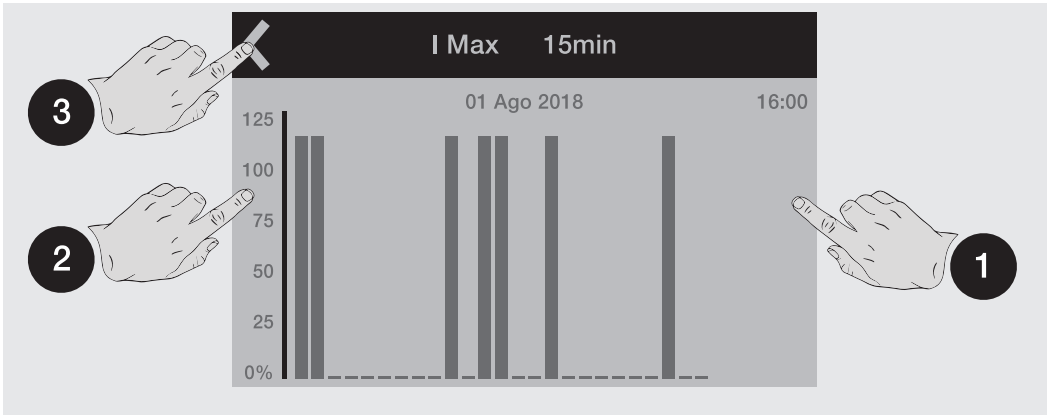

Each measurement allows up to 25 recordings, each shown in a bar chart (graphic full scale equal to 125% of the rated value).

The selected recording flashes, to distinguish it from the others.

Touch the sides of the display to select the recordings after **(1)** and before **(2)** the selected recording. The command for quitting the page **(3)** is in the top left corner.

The selected recording flashes, to distinguish it from the others.

- time elapsed from previous measurement
- phase and value of measurement
- date and time of recording



#### NOTES:

- if the value is less than the minimum viewable threshold, “...” is indicated instead of the value
- graphic representation is in relation to 1 In, with 1.25 In as maximum value
- the trip unit immediately makes a recording when the “Monitor time” parameter is changed

#### Reset measurements

The Reset measurements command is available in the *Measurements - Historicals - Measurements* menu, for the purpose of resetting all the recordings

**Maintenance** Certain information about the status of the CB is available in the *Measurements-Maintenance* menu.

### Contact Wear

Contact wear provides an estimation of the state of wear of the main contacts of the circuit-breaker. The value is given in percentage form and is 0% if there is no wear and 100% if the contacts are completely worn. It is calculated automatically by the Trip unit whenever a trip is caused by a protection or, in the presence of auxiliary power supply, whenever the circuit-breaker is opened in the manual mode.



#### NOTES:

- the percentage is no longer increased once 100% has been reached
- 80% wear is signaled by a prealarm, while 100% is signaled by an alarm



**IMPORTANT: 100% wear does not impose any functional limit on the Trip unit; however, the state of the circuit-breaker must be checked as soon as possible**

### Maintenance

The *Maintenance* function allows the user to be alerted by a Warning that:

one year has elapsed since maintenance was last performed

contact wear has increased by over 10% with respect to the last maintenance value

Two areas are available in the Trip unit menu:

- Activation area (*Settings - Maintenance* menu): allows the *Maintenance* function to be activated
- Measurement and reset area (*Measurements - Maintenance* menu): only appears if the *Maintenance* function is activated; provides information about maintenance (contact wear and dates) and the command for confirming that maintenance has been performed (confirming records the actual date and contact wear values, and resets the alarm signal).

The reference date is that of the internal clock and the time elapsed is calculated with the trip unit both on and off (so long as the internal battery functions).



**NOTE:** manual modification of the date may cause variations to the elapsed time calculation, thus to the next maintenance date



**NOTE:** the maintenance signal due to increased contact wear is given for values exceeding 20%

**Operation counters** The CB operations (total manual operations and TRIPs) are recorded by the Trip unit in the presence of auxiliary power supply and are available in the *About-Circuit breaker* menu.

The following counters are also available when communication with the Trip unit is activated:

- number of mechanical operations
- number of trips due to protection trips (TRIP)
- number of trips due to failed protection trips (TRIP)
- number of trip tests performed

## 2 - Ekip Measuring Measurements

**Elenco** The Measuring measurements are

Condition	Access	Page
<i>Instantaneous voltages</i>	Phase and line-to-line voltage measurements in real time	101
<i>Instantaneous powers</i>	Real time measurements of the active, reactive, apparent phase and total powers	101
<i>Instantaneous frequency</i>	Measurement of the line frequency	101
<i>Trip</i>	List of trips (TRIP) due to voltage, frequency, power protections	102
<i>Min-Max-Med measurements</i>	History of minimum, maximum and mean voltages and powers recorded within a settable range	102
<i>Peak factor</i>	Real time measurement of the peak factor of the currents	102
<i>Power factor</i>	Real time measurement of the power factor	102
<i>Energy counters</i>	Measurement of active, reactive, apparent energy	102

The relative associated measurements are activated by means of the *Ekip Synchrocheck* module (page 164).

### Instantaneous measurements

Instantaneous currents, available in the *Summary pages*, are real time measurements of the line-to-line and phase voltages expressed in root-mean-square value.

Representation, measuring range and performance depend on the set rated voltage ( $U_n$ ).

Available in the *Summary pages*, the instantaneous powers are real time measurements of the phase and total active powers.

Representation, measuring range and performance depend on the set rated voltage ( $U_n$ ) and on the rated current defined by the rated size of the Trip unit ( $I_n$ ); in addition, the reference changes on the basis of the type of measurement:

- $S_n$  for total powers ( $S_n = I_n \cdot U_n \cdot \sqrt{3}$ ).
- $P_n$  for phase powers ( $P_n = I_n \cdot U_n / \sqrt{3}$ ).



**NOTE:** the phase powers and voltages are available with 4P and 3P + N CBs

Measurement	Monitor time (min-max)	Normal operating range	Accuracy of value read <sup>(1)</sup>
Line-to-line voltages <sup>(6)</sup>	5 V ÷ 1,25 $U_n$	100 ÷ 690 V	0.5 % <sup>(8)</sup>
Phase voltages	5 V ÷ 1,25 $U_n$	50 ÷ 400 V	0.5 % <sup>(8)</sup>
Line frequency	30 ÷ 80 Hz <sup>(2)</sup>	f -10 % ÷ f +10 % <sup>(4)</sup>	0,1 % <sup>(3)</sup>
Total active, reactive and apparent power <sup>(7)</sup>	Pmin ÷ Pmax  <sup>(5)</sup>	0,3 ÷ 1,2 $S_n$	2 % <sup>(3)</sup>
Active, reactive and apparent phase power	Pmin ÷ Pmax  <sup>(5)</sup>	0,3 ÷ 1,2 $P_n$	2 % <sup>(3)</sup>

<sup>(1)</sup> the accuracies refer to normal operating ranges, as established by IEC 61557-12

<sup>(2)</sup> available for voltage values of over 30 V (with  $U_n < 277$  V) or 60 V (with  $U_n > 277$  V)

<sup>(3)</sup> accuracies based on Ekip Touch and Ekip Touch Measuring without Class 1 Power & Energy Metering package; if the Class 1 Power & Energy Metering package is present and for all other trip unit models, check the indicated performance values from page 104

<sup>(4)</sup> 45 to 55 Hz with set frequency = 50 Hz; 54 to 66 Hz with f = 60 Hz

<sup>(5)</sup> Pmin = 0,5  $I_n \times 5$  V; Pmax= 3 x 16  $I_n \times 690$  V

<sup>(6)</sup> the higher line-to-line voltages are also available in the Histograms, Measuring instruments and Measurement summary pages

<sup>(7)</sup> the higher total powers are also available in the Measuring instruments and Measurement summary pages

<sup>(8)</sup> without transformers; 0.7 % with class 0.2 external transformers

Continued on the next page

**Special representations**

Type of measurement	Measurement < min value	Measurement < max value	"_ _ _" displayed: (not available) due to
Line-to-line and phase voltages	. . . .	> [Un x 1,25]	<i>Ekip Measuring</i> not detected
Line frequency	30 Hz	80 Hz	<i>Ekip Measuring</i> not present, V < 5 V
Active, reactive and apparent total and phase power	. . . .	> [Pn x 1,25]	Sensors disconnected, <i>Ekip Measuring</i> not present, V < 5 V, I < 0.03 In

**Tripping** The *Measuring Measurements* page adds to the range of TRIPs that Ekip Touch is able to record (page 102). The voltage, frequency or power protection that trips determines the measurements recorded the moment the trip occurs

Protection	Measurements recorded	Notes
Voltage	Currents L1, L2, L3, Ne, voltages U12, U23, U31, U0	Ne is available with CBs type 4P and 3P + N; U0 is available in the case of trips due to RV protection
Frequency	Currents L1, L2, L3, Ne and grid frequency	Ne is available with CBs type 4P and 3P + N
Power	Currents L1, L2, L3, Ne and total power	Ne is available with CBs type 4P and 3P + N; Active or apparent total power depending on which protection tripped

**Min-Max-Med measurements** The *Measuring Measurements* package adds to the range of measurements that Ekip Touch is able to record (page 98):

- Maximum and medium voltage
- Active, reactive and apparent maximum and medium powers

The type of information given, the available commands and notes are the same as those described for the current measurements.

**NOTES:**

- compared to the current measurements, graphic representation is with respect to 1 Un (with maximum value 1.25 Un) for the voltage recordings and with respect to 1 Sn (with maximum value 1.25 Sn) for the power recordings
- and the power measurement is negative, the color of the corresponding bar is different from those with a positive value

**Peak factor** The peak factors are real time measurements of the ratio between the peak and RMS values of the phase current; the measurement is supported by the *Harmonic distortion* protection function (page 48).

Measurement	Monitor time	Accuracy	Notes
Peak factor	0,3 ÷ 6In (currents)	1,5%	"_ _ _" (not available) is indicated for currents outside the range and disconnected sensors

**Power factor** The power factor is the real time measurement of the ratio between total active power and total apparent power, expressed as  $\cos \phi$ .

Measurement	Monitor time	Accuracy	Notes
Power factor	0,5 ÷ 1	2,5% <sup>(1)</sup>	" _ _ _ " (not available) is indicated for: active and/or reactive power not available or outside the admissible ranges

<sup>(1)</sup>accuracy based on Ekip Touch and Ekip Touch Measuring without Class 1 Power & Energy Metering package; if the Class 1 Power & Energy Metering package is present and for all other Trip unit models, check the indicated performance values from page 104

**Energy counters** The energy counters are the measurements of the total reactive and apparent active energy, updated every minute.

Measurement	Monitor time	Accuracy
Total active, reactive and apparent energy	1 kWh ÷ 2 TWh; 1 kVARh ÷ 2 TVARh; 1 kVAh ÷ 2 TVAh	2 % <sup>(1)</sup>

<sup>(1)</sup>accuracy based on Ekip Touch and Ekip Touch Measuring without Class 1 Power & Energy Metering package; if the Class 1 Power & Energy Metering package is present and for all other Trip unit models, check the indicated performance values from page 104

#### Reset measurements

The *Energy RESET* command is available in the *Energy* menu for the purpose of resetting the energy counters (page 32).

### 3 - Class 1 Power & Energy Metering

**List and performance** Presence of the *Class 1 Power & Energy Metering* package allows higher measuring accuracy to be obtained for the following quantities:

Measurement	Monitor time (min-max)	Normal operating range	Accuracy of read value
Phase currents <sup>(6)</sup>	0,004 ÷ 64 In	Standard IEC61557-12, tables 20-22	0,5 % <sup>(1)</sup>
Internal earth fault current <sup>(2)</sup>	0,08 ÷ 64 In	Standard IEC61557-12, table 20	0,5 % <sup>(1)</sup>
Line frequency	30 ÷ 80 Hz <sup>(3)</sup>	$f_n \pm 10\%$ <sup>(4)</sup>	$\pm 0,02$ Hz
Total active and apparent power <sup>(7)</sup>	$ P_{min} \div P_{max} $ <sup>(5)</sup>	Standard IEC61557-12, tables 8-11-14	1 % <sup>(1)</sup>
Active and apparent phase power	$ P_{min} \div P_{max} $ <sup>(5)</sup>	Standard IEC61557-12, tables 8-11-14	1 % <sup>(1)</sup>
Total active and apparent energy	1 kWh ÷ 2 TWh; 1 kVARh ÷ 2 TVARh; 1 kVAh ÷ 2 TVAh	Standard IEC61557-12, tables 8-11-14	1 % <sup>(1)</sup>
Power factor	0,5 ÷ 1	Standard IEC61557-12, table 27	1% <sup>(1)</sup>

<sup>(1)</sup> the accuracy values refer to the normal operating intervals and conditions established by IEC 61557-12, for each quantity and class declared

<sup>(2)</sup> available with LSIG versions

<sup>(3)</sup> available for voltage values of over 30 V (with  $U_n < 277$  V) or 60 V (with  $U_n \geq 277$  V)

<sup>(4)</sup> 47 ÷ 55 Hz with  $f_n = 50$  Hz; 54 ÷ 66 Hz with  $f_n = 60$  Hz

<sup>(5)</sup>  $P_{min} = 0,5 I_n \times 5$  V;  $P_{max} = 3 \times 16 I_n \times 690$  V

<sup>(6)</sup> the higher phase currents are also available in the Histograms, Measuring instruments and Measurement summary pages

<sup>(7)</sup> the higher total powers are also available in the Measuring instruments and Measurement summary pages

**Functional characteristics** The measuring performance of the *Class 1 Power & Energy Metering* package is guaranteed in the following conditions (from table 43 of standard IEC61557-12):

Characteristic	Value
Classification of performance measuring and monitoring device (PMD) in accordance with chapter 4.3 of the standard	PMD-DD
Temperature	Operating: $T = -25^\circ\text{C}$ to $+70^\circ\text{C}$ ; Storage: $T = -30^\circ\text{C}$ to $+70^\circ\text{C}$ ; Class: K70
humidity and altitude	Up to 90% relative humidity without condensation; From 0 to 2000 meters
Performance class for active energy and power	1

**Information page** Presence of the *Class 1 Power & Energy Metering* package activates the IEC61557 12 information page, which can be consulted in the *About* menu

IEC61557-12	
Stato	Attivo
Gruppo Misure SN	84D0018174715000
CS-L1 SN	74B0019224715010
CS-L2 SN	75B0019224715010
CS-L3 SN	76B0019224715010

Figure 34

The page shows the activation state of the *Class 1 Power & Energy Metering* package (*Activated/Deactivated*) and the serial numbers of certain accessories installed on the CB for the specific purpose of conforming to the characteristics of the package (electronic units and internal current sensors)

# 4 - Datalogger

## Presentation



The datalogger is a function which allows data associated with a trigger event to be recorded. The following data are recorded:

- Analog measurements: line-to-line voltages and phase currents
- Digital events: protection events or alarms, circuit-breaker status signals, protection trips.

One or two independent recordings can be configured and, via Ekip Connect, all the associated information can be downloaded, displayed and saved.

## Function

When the datalogger is enabled and activated (**RESTART**), Ekip Touch continuously acquires data by filling and emptying an internal buffer (**B**).

If a trigger event (**A**) occurs, Ekip Touch interrupts acquisition (**STOP**) immediately or after a time that can be set by the user (**C**) and stores all the data of the window (**D**), which can then be downloaded to a PC for reading and analysis.



**IMPORTANT: the function requires an auxiliary voltage supply**

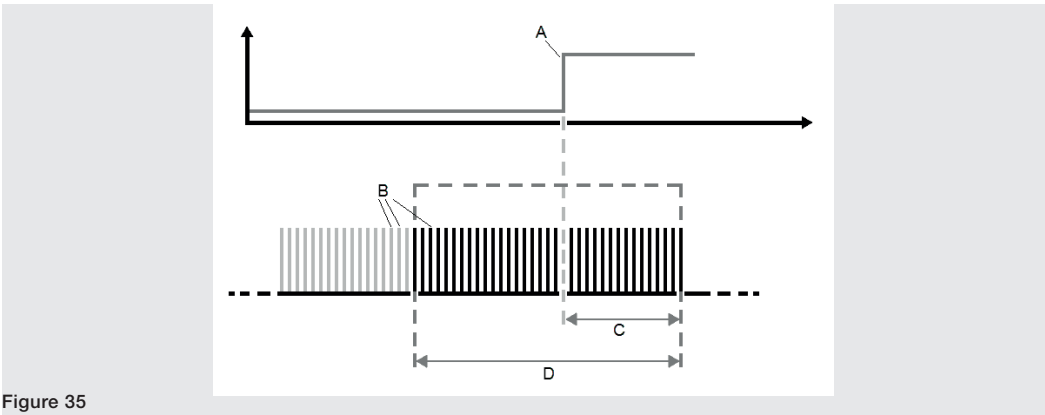


Figure 35

## Parameters 1

The parameters and commands of the function are available in the *Settings* menu (page 33).

Parameter	Description	Default
Enable	Activates/deactivates the function and its availability in the parameters menu <b>i</b> <b>NOTE:</b> <i>il the enable command is hidden when at least one datalogger is activated</i>	Off
Num. of Datalogger	Determines the number of recordings (1 or 2) <b>i</b> <b>NOTE:</b> <i>the recordings share the settings of the sampling frequency and type of memory</i>	1
Sampling frequency	Establishes the number of samples acquired per second and the recording window. Four options are available: 1200 Hz (window= 13.6 s), 2400 Hz (6.8 s), 4800 Hz (3.4 s), 9600 Hz (1.7 s) <b>i</b> <b>NOTE:</b> • <i>A high frequency allows the data to be analyzed more accurately</i> • <i>if there are two dataloggers, the recording window of each recording is halved</i>	9600 Hz
Datalogger 1 and 2	Menu with the parameters of each Datalogger: trigger event, recording delay and Restart/Stop commands	
Restart and Stop Both	Synchronized start and stop commands of the two dataloggers, valid and available with Num. of Datalogger = 2	

**Parameters 2** The *Datalogger 1* and *Datalogger 2* submenus (available if the number of dataloggers selected is: 2) contain the following options:

Parameter	Description	Default
Stop Event	Trigger event at which the recording is to be interrupted; the main protection options (trips, timings, alarms) and the actuator status (open/closed) are displayed. The Custom option can be configured via Ekip Connect	None
Stop delay	Recording interruption delay, calculated from the trigger; the value is given in seconds and can be set within a range: 0 s to 10 s, in 0.01 s steps	0.01 s
Restart	Recording start command	
Stop	Manual recording stop command	

### Memory Type

Ekip Connect enables the *Memory Type* (Non volatile/Volatile) to be selected:

- *Non volatile*: Ekip Touch maintains the recording even when off; the life of the internal battery of the unit may noticeably shorten with respect to the declared value if there is a recording in the memory but no auxiliary supply.
- *Volatile*: Ekip Touch loses the recording if it is switched off; when the unit is switched on again, the datalogger automatically restarts, losing the previously stored data.

The parameter is configured by default as Non volatile.

**Signallings** If there is a recording present, Ekip Touch provides the information on the diagnosis bar (DataLog available).



**NOTE:** *Ekip Touch provides a general indication of recording availability in the configuration with 2 dataloggers: use Ekip Connect to identify which of the 2 recordings (or both) is available*

**Ekip Connect** Ekip Connect 3 has two specific areas for the Datalogger function:

- **Datalogger** for configuring the recording parameters with a user-friendly interface, and for downloading the recordings
- **Data Viewer** for opening and consulting the recordings

Both areas are available in the Tools menu of Ekip Connect.



## 5 - Network Analyzer

**Presentation** The Network Analyzer function allows you to set voltage and current controls over a long period, in order to analyze your system.

To this purpose, voltages and currents are monitored, so as to find:

- voltage sequences (Over, Under, Pos and neg)
- unbalance between voltages (Unbalance)
- short voltage drops (Interruption) and slow sags (Sag)
- short voltage increases (Spikes) and slow swells (Swell)
- harmonic distortion of voltages and currents (THD)

Each monitoring is associated with control parameters set by the user and updated each time the set control conditions occur.

**Parameters** The configuration parameters of the counters are available in the *Settings - Network Analyzer* menu (page 33). The Monitor time parameter, which defines the length of each monitoring session, can also be set in the *Settings* menu.



**NOTE:** the parameter is the one used for measuring the maximum currents and voltages

### Main Menu

Parameter	Description	Default
Enable	Activates/deactivates the function and its availability in the parameters menu	Off
I Harmonic Analysis	Activates harmonic analysis of the currents	Off
V Harmonic Analysis	Activates harmonic analysis of the voltages	Off
V Threshold Low	Control threshold of the <i>Under V Th</i> counter The value is given as a percentage of rated voltage $U_n$ and can be set within the range: 75% to 95%, in 5% steps.	85 % $U_n$
V Threshold High	Control threshold of the <i>Over V Th</i> counter The value is given as a percentage of rated voltage $U_n$ and can be set within the range: 105, 110, 115 % $U_n$	110 % $U_n$
Unbalance V Th	Alarm threshold for the <i>Unbalance</i> counter. The value is given as a percentage of rated voltage $U_n$ and can be set within the range: 2% to 10% $U_n$ , in 1% steps. <b>NOTE:</b> 0% =symmetrical and balanced system	3 % $U_n$
V microinterr. Th	Control threshold of the <i>V microinterr</i> counter. The value is given as a percentage of rated voltage $U_n$ and can be set within the range: 10% to 95% $U_n$ , in 5% steps	95 % $U_n$
V Spike Threshold	Control threshold of the <i>Spike</i> counter. The value is given as a percentage of $U_n$ and can be set within the range: 105% to 125% $U_n$ , in 5% steps	105 % $U_n$
Sags	Menu with the control parameters of the voltage sags	
Swells	Menu with the control parameters of the voltage swells	
Harmonics	The submenu, which becomes available by enabling the harmonic current and/or voltage analysis, allows the harmonic control parameters to be configured	

Continued on the next page

### Sags Menu

All the thresholds are given as a percentage of rated voltage  $U_n$  and can be set from 10% to 95%  $U_n$ , in 5% steps.

All the times are given in seconds and can be set within the range: 0.04 s to 60 s, in variable steps

Parameter	Description	Default
V sag Th Short	Control threshold of <i>Sags Short</i> counter	10 % $U_n$
V sag dur Short	Minimum duration of sag below the Short threshold to validate the count of the <i>Sags Short</i> counter	0,8 s
V sag Th Middle	Control threshold of <i>Sags Middle</i> counter	45 % $U_n$
V sag dur Middle	Minimum duration of sag below the <i>Middle</i> threshold to validate the count of the <i>Sags Middle</i> counter	0,8 s
V sag Th Long	Control threshold of <i>Sags Long</i> counter	95 % $U_n$
V sag dur Long	Minimum duration of sag below the Long threshold to validate the count of the <i>Sags Long</i> counter	0,8 s



**NOTE:** *Ekip Touch* accepts changes to the parameters subject to compliance with the following limitations:  $V \text{ sag dur Long} \geq V \text{ sag dur Middle} \geq V \text{ sag dur Short}$

### Swells Menu (Swell)

All the thresholds are given as a percentage of rated voltage  $U_n$  and can be set from 105% to 125%  $U_n$ , in 5% steps.

All the times are given in seconds and can be set within the range: 0.04 s to 60 s, in variable steps

Parameter	Description	Default
V swell Th Short	Control threshold of the <i>Swell Short</i> counter	125 % $U_n$
V swell dur Short	Minimum duration of swell above the <i>Short</i> threshold to validate the count of the <i>Swell Short</i> counter	0,8 s
V swell Th Long	Control threshold of the <i>Swells Long</i> counter	105 % $U_n$
V swell dur Long	Minimum duration of swell above the Long threshold to validate the count of the <i>Swells Long</i> counter	0,8 s



**NOTE:** *Ekip Touch* accepts changes to the parameters subject to compliance with the following limitations:  $V \text{ sag dur Long} \geq V \text{ sag dur Middle} \geq V \text{ sag dur Short}$

### Harmonics (Current and Voltage)

All the thresholds are given as a percentage and can be set within the range: 5% to 20% (total THD) or: 3% to 10% (single harmonics) in 1% steps.

Menu	Parameter	Description	Default
Current	THD Threshold	Control threshold of the <i>THD Voltages</i> counter	5 %
	Single harmonic th	Control threshold of the single harmonics counters of the voltages	5 %
Voltage	THD Threshold	Control threshold of the <i>THD Current</i> counter	5 %
	Single harmonic th	Control threshold of the single harmonics counters of the currents	5 %

Counters - introduction

The main counters of the function are available in the *Measurements – Network Analyzer* menu, distributed among several sections (page 32).

The extended list of all the measurements is available via Ekip Connect or by connecting to the bus system



**NOTE:** the *Additional List* item in the following paragraphs contains the additional counters that are only present via Ekip Connect; the type of reference counter is given in the heading of the additional tables

V Sequences and V 3s Sequences

Submenus **V Sequences** and **V 3s Sequences** have the following counters:

Menu	Parameter	Description
V Sequences	V seq pos	Positive sequence of period in progress [V]
	V seq neg	Negative sequence of period in progress [V]
	Last V pos seq	Positive sequence of period preceding the one in progress [V]
	Last V neg seq	Negative sequence of period preceding the one in progress [V]
V 3s Sequence	V seq pos	Positive sequence calculated during the last three seconds [V]
	V seq neg	Negative sequence calculated during the last three seconds [V]
	Unbalance	Voltage unbalance calculated during the last three seconds [%]

Additional List

Counters (Sequences)	Description
Last time stamp	Date and time of last recording of the sequences
Counters (Sequences)	Description
Last value	Voltage unbalance relating to the period in progress [%]
Actual unbalance value	Voltage unbalance relating to the period preceding the one in progress [%]
Last time stamp	Date and time of last recording of the unbalances
Actual number of U.	Counts the number of times that the average value of the ratio between the positive on negative sequence (with direction of rotation 3-2-1) and negative on positive sequence (1-2-3) exceeds the <i>Unbalance V Th</i> threshold; the count refers to the actual day
Actual [day -1 ... day -7] number of U.	Counters relating to the number of unbalances detected in the last seven days of activity, calculated using the internal clock of the unit
Cumulative number of U.	Cumulative counter of all the unbalances detected by the unit (sum of the other counters or to be increased also for the previous days?)



**NOTE:** all measurements of unbalances (*Not balanced* and *Unbalance value*) saturate at 200%

THD Current and THD Voltages

The *THD Current* and *THD Voltages* submenus have the following counters:

Menu	Counters	Description
THD Current	L1, L2, L3, Ne	Instantaneous harmonic distortion value of each current phase
THD Voltages	U12, U23, U31	Instantaneous harmonic distortion value of each line-to-line voltage

**Over V Th and Under V Th**

Certain counters relating to the sequence measurements are available in the *Counters - Day -1* and *Counters - Cumulative* submenus:

Counters	Description
Over V Th	Counts the number of times that the average value of the positive sequence (in the set direction of rotation of the phases: 1-2-3) or negative sequence (in the set direction of rotation of the phases: 3-2-1) exceeds the <i>V Threshold High</i> threshold. The count refers to the reference menu interval (previous day or cumulative)
Under V Th	Counts the number of times that the average value of the positive sequence (in the set direction of rotation of the phases: 1-2-3) or negative sequence (in the set direction of rotation of the phases: 3-2-1) falls below the <i>V Threshold Low</i> threshold. The count refers to the reference menu interval (previous day or cumulative)

**Additional List**

Counters (Over Voltage)	Description
Last time stamp	Date and time of last recording of the <i>Over V Th</i> counter
Last value	Value of the last swell above the <i>Over V Th</i> [V] threshold
Actual number of O.	<i>Over V Th</i> count for the current day
Actual [day -2 ... day -7] number of O.	<i>Over V Th</i> count of the last seven days of activity, calculated using the internal clock of the unit

Counters (Under Voltage)	Description
Last time stamp	Date and time of last recording of the <i>Under V Th</i> counter
Last value	Value of the last sag below the <i>Under V Th</i> [V] threshold
Actual number of O.	<i>Under V Th</i> count for the current day
Actual [day -2 ... day -7] number of O.	<i>Under V Th</i> count of the last seven days of activity, calculated using the internal clock of the unit


**V microinterr. (Interruption)**

The *V microinterr* counter should be understood as reduction of the RMS value of the line-to-line voltage below the *V microinterr. Th* set threshold for less than 40 ms (short time voltage sag).

The counter is available in the two submenus *Counters - Day -1* and *Counters - Cumulative* (previous day or cumulative)



**NOTE:** Since the counter is based on the RMS value calculation, two rapid voltage sags of equal duration may be evaluated differently, depending on when they occur:

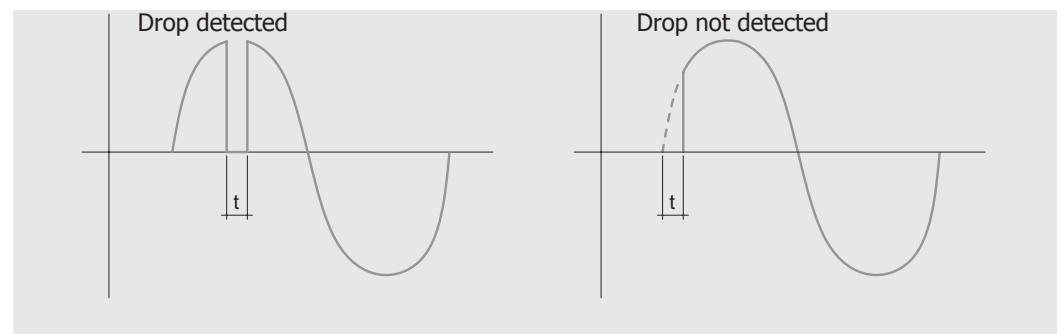**Additional List**


Counters (Interruptions)	Description
Last instant	Date and time of last recording of the <i>V microinterr</i> counter
Last value	Value of last sag below the <i>V microinterr</i> [V] threshold
Last duration	Value of last sag below the <i>V microinterr</i> [ms] threshold
Actual number of I.	<i>V microinterr</i> count for the current day
Actual [day -2 ... day -7] number of I.	<i>V microinterr</i> count of the last seven days of activity, calculated using the internal clock of the unit

**Spikes** The *Spikes* counter should be understood as increase of the RMS value of the line-to-line voltage above the set *V Spike Threshold* threshold for less than 40 ms (short time voltage spike).

The counter is available in the two submenus *Counters - Day -1* and *Counters - Cumulative* (previous day or cumulative)



**NOTE:** Since the counter is based on the RMS value calculation, two rapid voltage spikes of equal duration may be evaluated differently, depending on their amplitude:

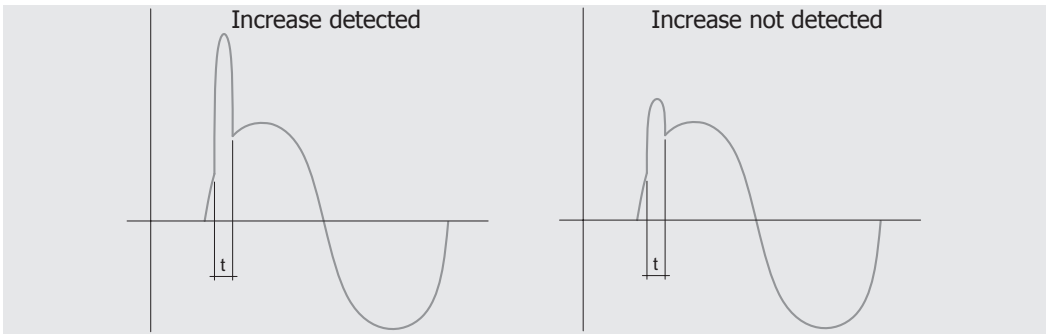

**Additional List**

Counters (Interruptions)	Description
Last time stamp	Date and time of last recording of the <i>Spikes</i> counter
Last value	Value of last swell above <i>Spikes</i> [V] threshold
Last duration	Duration of last swell above <i>Spikes</i> [ms] threshold
Actual number of S.	<i>Spikes</i> count for the current day
Actual [day -2 ... day -7] number of S.	<i>Spikes</i> count of the last seven days of activity, calculated using the internal clock of the unit

**Sags** Certain counters relating to sags are available in the *Counters - Day -1* and *Counters - Cumulative* submenus:

Counters (Interruptions)	Description
Sags Short	Counts the number of times that any line-to-line voltage falls below the <i>V sag Th Short</i> threshold for longer than <i>V sag dur Short</i>
Sags Middle	Counts the number of times that any line-to-line voltage falls below the <i>V sag Th Middle</i> threshold for longer than <i>V sag dur Middle</i>
Sags Long	Counts the number of times that any line-to-line voltage falls below the <i>V sag Th Long</i> threshold for longer than <i>V sag dur Long</i>

The count refers to the reference menu interval (previous day or cumulative)



**NOTE:** since an event may fall under more than one category, only the counter of the main type (*Long > Middle > Short*) is increased

**Additional List**

Counters (Interruptions)	Description
Last time stamp	Date and time of last recording of the <i>Sags Short</i> counter
Sags Middle	Value of last sag below the <i>Sags Short</i> [V] threshold
Sags Long	Duration of last sag below the <i>Sags Short</i> [ms] threshold
Actual number of S.	<i>Sags Short</i> count for the current day
Actual [day -2 ... day -7] number of S.	<i>Sags Short</i> count of the last seven days of activity, calculated using the internal clock of the unit

Continued on the next page

Counters (Sags Middle)	Description
Last time stamp	Date and time of last recording of the <i>Sags Middle</i> counter
Sags Middle	Value of last sag below the <i>Sags Middle [V]</i> threshold
Sags Long	Duration of last sag below the <i>Sags Middle [ms]</i> threshold
Actual number of S.	<i>Sags Middle</i> count of the current day
Actual [day -2 ... day -7] number of S.	<i>Sags Middle</i> count of the last seven days of activity, calculated using the internal clock of the unit

Counters (Sags Middle)	Description
Last time stamp	Date and time of last recording of the <i>Sags Long</i> counter
Sags Middle	Value of last sag below the <i>Sags Long[V]</i> threshold
Sags Long	Duration of last sag below the <i>Sags Long[ms]</i> threshold
Actual number of S.	<i>Sags Long</i> count of the current day
Actual [day -2 ... day -7] number of S.	<i>Sags Long</i> count of the last seven days of activity, calculated using the internal clock of the unit

**Swells** Certain counters relating to swells are available in the *Counters - Day -1* and *Counters - Cumulative* submenus:

Counters (Sags Middle)	Description
Swells Short	Counts the number of times that any line-to-line voltage exceeds the <i>V swell Th Short</i> threshold for longer than <i>V swell dur Short</i>
Swells Long	Counts the number of times that any line-to-line voltage exceeds the <i>V swell Th Long</i> threshold for longer than <i>V swell dur Long</i>

The count refers to the reference menu interval (previous day or cumulative)



**NOTE:** since an event may fall under more than one category, only the counter of the main type (long > short) is increased

#### Additional List

Counters (Swells Short)	Description
Last time stamp	Date and time of last recording of the <i>Swells Short</i> counter
Last value	Value of last swell above <i>Swells Short [V]</i> threshold
Last duration	Duration of last swell above <i>Swells Short[ms]</i> threshold
Actual number of S.	<i>Swells Short</i> count for the current day
Actual [day -2 ... day -7] number of S.	<i>Swells Short</i> count of the last seven days of activity, calculated using the internal clock of the unit

Counters (Swells Long)	Description
Last time stamp	Date and time of last recording of the <i>Swells Long</i> counter
Last value	Value of last swell above <i>Swells Long[V]</i> threshold
Last duration	Duration of last swell above <i>Spikes[ms]</i> threshold
Actual number of S.	<i>Swells Long</i> count for the current day
Actual [day -2 ... day -7] number of S.	<i>Swells Long</i> count of the last seven days of activity, calculated using the internal clock of the unit

# THD Voltages and Currents

Certain counters relating to harmonic distortion are available in the *Counters - Day -1 and Counters - Cumulative* submenus:

Counters (Swells Long)	Description
THD Voltages	Counts the total number of minutes in which total distortion exceeds current threshold <i>THD Threshold</i>
THD Current	Counts the total number of minutes in which total distortion exceeds voltage threshold <i>THD Threshold</i>



**NOTE:** the counters saturate at 65535 minutes (45 days); they can be reset by a service connector command (via Ekip Connect) or via communication from the system bus

## Additional List

Counters (Swells Long)	Description
Actual minutes	<i>THD Current</i> count for the current day [min]
Actual [day -2 ... day -7] number of THD C.	<i>THD Current</i> count of the last seven days of activity, calculated using the internal clock of the unit

Counters (Swells Long)	Description
Actual minutes	<i>THD Voltages</i> count for the current day [min]
Actual [day -2 ... day -7] number of THD C.	<i>THD Voltages</i> count of the last seven days of activity, calculated using the internal clock of the unit

# Waveforms

The *Network Analyzer - Waveforms* menu provides graphic representations of:

- phase currents L1, L2, L3, Ne (for units configured with 4 phases)
- line-to-line voltages V12, V23, V31

When one of the available quantities is selected, Ekip Touch acquires and displays the waveform

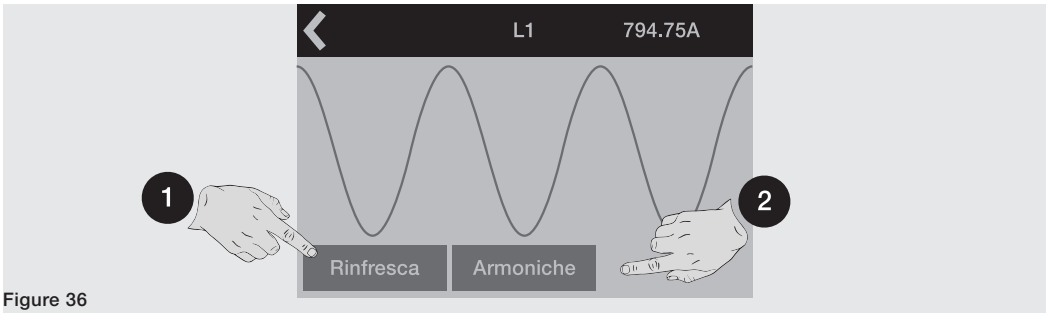


Figure 36

The detected waveform and the value at the time of selection are displayed in the window that appears. A new waveform and the relative measurement can be acquired with the Refresh command (1).

## Harmonics

The waveform window will propose the *Harmonics* (2) command if harmonic analysis of currents and/or voltages has been selected. This command accesses the histogram of the harmonics (relating to the grid frequency set in the menu) that make up the waveform.

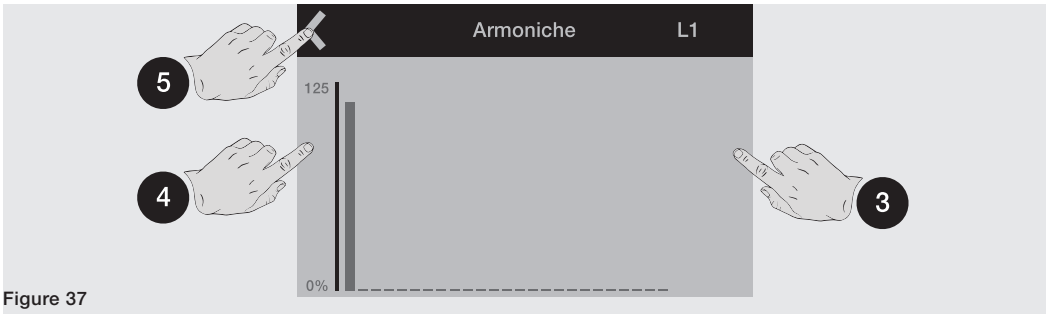


Figure 37

Touch the sides of the display to scroll the harmonics after (3) and before (4) the selected harmonic, displayed on a flashing graph with value shown in the center of the page. The command for exiting the page is at the top left (5).

# Settings

## 1 - Main settings

---

**Foreword** All the following parameters are available either directly, or from the *Settings* menu, in the conditions established by Ekip Touch on the basis of the version and configuration described.

To correctly address parameters which are present in the menu but not described below:

- Circuit-breaker: Hardware Trip, T Protection, Neutral Protection
- Phase sequence
- Monitor time
- Power Controller
- Load Shedding
- Network Analyzer
- Datalogger
- Dual Set
- Functions

please consult the *Settings* menu overview (page 33).



**WARNING! changes to the settings must be made in the absence of protection alarms**

---

**Configuration** The *Circuit breaker-Configuration* menu, allowing the presence of the *External neutral* sensor to be activated, is available for the 3P CB (page 200).

Activation of the configuration with *External neutral* (3P + N) enables:

- histograms of phase Ne in the *Histograms* page
- neutral current measurements
- submenu for configuring the Neutral protection (*Neutral Protection*)
- neutral current recording in the case of TRIP

With 3P CB, the parameter is set by default as: 3P.

---

**Line frequency** Frequency adjustment is performed to set the installation frequency; the choice is between 50 Hz and 60 Hz.



**NOTE:** *the measurements are taken on the basis of the set grid frequency: incorrect configuration of the parameter may lead to abnormal measurements and protection*

Ekip Touch is supplied with the parameter setting that suits the ordered configuration.

---



**Modules** The *Modules* menu provides various options:

Parameter	Description	Default
Local/Remote	<p>The parameter defines the mode in which the parameters are written in the unit:</p> <ul style="list-style-type: none"> <li>• <i>Local</i>: parameter editing only via the display or service connector</li> <li>• <i>Remote</i>: parameter editing only remotely (Ekip Com modules)</li> </ul> <p><b>NOTES:</b></p> <ul style="list-style-type: none"> <li>• the <i>Remote</i> mode requires the presence of auxiliary power supply and Ekip Com modules, otherwise it disables automatically</li> <li>• However, the <i>Local/Remote</i> parameter can still be edited in the <i>Remote</i> mode</li> </ul>	Local
Local bus	<p>The parameter enables communication between the Trip unit and modules installed via terminal box or outside the unit to be activated. Correct communication between unit and modules is confirmed by:</p> <ul style="list-style-type: none"> <li>• population of the <i>Modules</i> menu with all the modules connected</li> <li>• Power Leds of the modules on and synchronized like the power led of Ekip Touch</li> <li>• absence of Local Bus alarm in the diagnosis bar</li> </ul>	Off
Ekip Signalling 1K	Menu with the parameters of the module (page 194)	
Ekip Measuring	Menu with the parameters of the module (page 128)	
BLE	BLE activation parameters, see next paragraph	Off
-	Menu of every module connected and detected (from page 132)	
Functions	Access to the <i>LOCAL Switch On</i> and <i>RESET signaling</i> functions (from page 76)	

**BLE - Connection security** Activation of LV communication requires the Trip unit to be pre-engineered for a wireless connection: security of the data and LV connection between the Trip unit and its device is guaranteed thanks to the *ABB Ekip Connect Mobile* application and the pairing configuration.



**WARNING!**

- It is the customer's sole responsibility to provide and continuously ensure a secure connection between his device and the Trip unit. The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of malware prevention systems, application of authentication measures, his own system and interface against any kind of security breach, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information, use of APPs other than those allowed.
- Consult the guidelines of the Ekip Connect Mobile APP for the correct pairing procedure

ABB recommends a few general configurations to strengthen the access of data into the Trip unit:

- activate the access PIN code in the Trip unit configure it with a value differing from the default value
- if parameters need not be written, configure the Trip unit only for parameter readout via bus (*Test bus* parameter = *Off*)
- switch off the BLE (*BLE-Enable* parameter = *Off*) after use




**IMPORTANT: communications via LV and via service connector function alternatively: if BLE is activated there can be no communication with other accessories via the service connector**

**BLE - Parameters**

The menu, which is available in *Settings-Modules*, enables the Bluetooth antenna on the Trip unit to be activated. This is useful for launching a communication with an external device (tablet, smartphone) according to the BLE protocol, via the *Ekip Connect Mobile APP* (page 14).

The following parameters are available

Parameter	Description	Default
<i>Enable</i>	Enables/disables LV antenna switch-on and availability of the <i>Battery mode</i> parameter in the menu: <ul style="list-style-type: none"> <li>• if <i>On</i>, the LV antenna comes on, on the basis of the <i>Battery Mode</i> parameter configuration</li> <li>• if <i>Off</i>, the antenna is off</li> </ul>	Off
<i>Battery mode</i>	Defines the switch-on mode of the LV antenna, based on the presence of devices on the service connector (Ekip T&P, Ekip Programming, Ekip TT); can have two values: <ul style="list-style-type: none"> <li>• --- ; with this option, the status of the LV antenna depends exclusively on the presence of devices: on if not present; off if present</li> <li>• <b>ON</b> ; with this option, the antenna is switched off for 15 seconds when a device is connected, after which: it remains off if communication with the device has been activated; it comes on if no communication has been activated</li> </ul>  <b>IMPORTANT: the typical scenario in which Battery mode should be configured = On is: Ekip Touch + Ekip TT + communication with smartphone activated; in all other cases, including System Update, configure Battery mode = ---</b>	---



**IMPORTANT: when LV antenna is on, communication on the service connector is not available**

**Test Bus**

The parameter allows parameter editing via the service connector to be enabled/disabled, thereby limiting the possibility of configuring all the options on the display (in the Local mode) or via modules *Ekip Com* (in the Remote mode).

Disabling the parameter, Local mode and using the password allow security against undesired modification by unauthorized persons to be increased.



**NOTE:** with *Test Bus*= Off, communication via service connector is still guaranteed (reading enabled)

Ekip Touch is supplied with the parameter set to: On.

**System**

The *System* menu provides various options:

Parameter	Description	Default
Date	Setting the current date	
Time	Setting the current time	
Language	Setting the language in display menus	English
Password	Password setting (page 37)	00001



**IMPORTANT: setting and checking Date and Time is important for all the recording functions (trips or measurements); in the event of date and time glitches, reset and if necessary replace the battery inside Ekip Touch (page 19).**

**View** The *View* menu provides various options:

Parameter	Description	Default
<i>TFT orientation</i>	Enables the orientation of the <i>Alarms List</i> , <i>Measuring Instruments</i> and <i>Main Measurements</i> pages to be set. The options are: Horizontal, Vertical clockwise, Vertical counter-clockwise	Horizontal
<i>Customer page</i>	Allows you to activate a supplementary information page, which can be accessed by pressing the <b>iTEST</b> button twice from any page with a diagnosis bar. The information on the new page can be configured via Ekip Connect (page 119)	Off
<i>Ammeter Phase</i>	Allows the current to be displayed in the <i>Measuring instruments</i> page to be set from among the following options: I <sub>max</sub> , I <sub>1</sub> , I <sub>2</sub> , I <sub>3</sub> , N <sub>e</sub> (only in the 4P or 3P + N configuration)	I <sub>max</sub>
<i>Voltmeter Phase</i>	Allows the voltage to be displayed in the <i>Measuring instruments</i> page to be set from among the following options: V <sub>max</sub> , V <sub>12</sub> , V <sub>23</sub> , V <sub>31</sub>	V <sub>max</sub>

**Maintenance** The parameter allows an alarm, concerning maintenance of the unit, to be enabled/disabled. (page 100).  
Ekip Touch is supplied with the parameter set to: On.

**MLRIU** The *MLRIU* parameters are available with Ekip M Touch for the *Motor Protections* functions (page 68).



**NOTE:** to ensure correct operation, check where applicable: presence and status of the outgoing connections, those towards the Trip unit of Ekip CI and the relative output contact (O61)

#### Parameters

Parameter	Description	Default
<i>Open Mode</i>	Allows the TRIP mode to be set (page 38): <ul style="list-style-type: none"> <li>• <i>Heavy</i>: in the event of a TRIP, it is controlled by the Trip coil of the CB</li> <li>• <i>Normal</i>: contact O61 of the <i>Ekip CI</i> module is opened in the event of a TRIP</li> </ul> <b>NOTES:</b> <ul style="list-style-type: none"> <li>• the TRIP for protections G or I always involves the Trip coil command, regardless of the Open Mode configuration</li> <li>• in the Normal mode, if the Trip unit detects the presence of a fault even after the open command sent to O61, a command is also sent to the Trip coil of the CB</li> </ul>	Standard
<i>Autoreclosure Enabled</i>	When Open Mode= Normal, allows re-closing of contact O61 to be activated after a TRIP due to protection L (On)	Off
<i>Motor Class</i>	Allows the trip class of the motor to be selected from among: 5E, 10E, 20 E, 30E (page 68)	
<i>Contactor Delay</i>	Defines the time waited, after the open command of contact O61, before the fault is considered to be still present and action is taken by sending a command to the Trip coil of the CB. The value is given in seconds and can be set within the range: 0.1 s to 1 s, in 0.1 s steps	0,1
<i>Autoreclosure Time</i>	Defines the time waited after the open command of contact O61, before this latter is closed. The value is given in seconds and can be set within the range: 1 s to 1000 s, in 1 s steps	60

## 2 - Additional settings

**Presentation** Via the service connector (via Ekip Connect) or system bus communication, you can:  
A description of the different functions is given below.

**Programmable States** There are sixteen independent programmable states identified by the letters A, B, C, D, E, F, G, H, I, L, M, N, O, P, Q, R, offering different solutions for event control.

Each programmable status can have two values: True or False. There are also various configuration parameters available:

- *Trigger*: event or combination of several status activation events (up to 24, in AND or OR logic configuration).
- *On Delay*: status activation delay calculated from trigger presence onwards.
- *Off Delay*: status de-activation delay calculated from trigger absence onwards.

**NOTE:** the status activates if the trigger is present for longer than the On delay setting and de-activates if the trigger is absent for longer than the Off delay setting

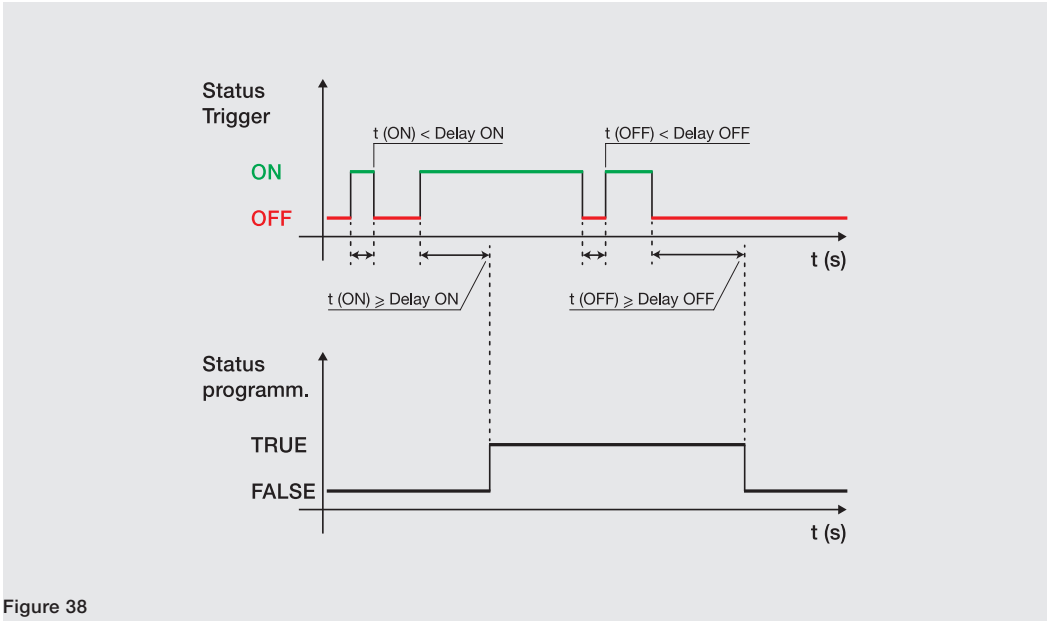


Figure 38


The statuses can be used with external module *Ekip Signalling 10K*, on Link Bus or with the programmable functions, so as to convey the required signaling combination to the contacts.

**Filters** A measuring filter (*V0 filter*) can be activated with V0 external neutral connection

If the filter is activated, the measurements and specific protections of V0 are dealt with differently: Ekip Touch applies a pass-band filter to the signal so as to measure the fundamental component only (50 or 60 Hz).

**TAG Name, User data** Tags that can be programmed by the user to facilitate remote identification of units.

**NOTE:** the Name TAG and communication address form the identification used by Ekip Connect for the connected devices

<b>Customers Page</b>	Enabling and fields for editing the Customers page (5 information lines) that can be viewed on the display of the unit (page 117).
<b>Installation</b>	Date of installation of unit
<b>Load Profile Time</b>	The counter indicates the time that has elapsed since the last reset of the energy measurements. It is active and updated in the presence of at least one of the following: auxiliary supply or supply by Ekip T&P.
<b>Led Alive</b>	<p>The parameter enables the behavior of the Power led of the Trip unit and of all the connected modules to be modified; if activated (<i>Alive Mode on</i>), the Power leds act in the following way:</p> <ul style="list-style-type: none"> <li>• <i>Ekip Touch</i>: flashes at 0.5Hz frequency</li> <li>• <i>Modules</i>: if there are no communication errors, they synchronize with the led of Ekip Touch.</li> </ul> <p>If deactivated, the Power leds on the respective devices come on with a steady light.</p>
<b>Open/Close Remote Direct Command</b>	<p>The parameter controls 2 different command packages for remote opening and closing:</p> <ul style="list-style-type: none"> <li>• <i>Enabled</i>: command 7 and 8 valid (direct Open and Close commands).</li> <li>• <i>Disabled</i>: commands 7 and 8 not valid: in this case, remote opening and closing can still be obtained using the programmable YC COMMAND and YO COMMAND functions and the <i>Request circuit-breaker opening</i> and <i>Request circuit-breaker closing</i> commands</li> </ul>
<b>Change Double Set of parameters always</b>	<p>If activated, enables the set of parameters (<i>Adaptive Protections</i>) to be changed even when timing alarms are in progress.</p> <p>Disabled by default.</p>
<b>Repeat zone selectivity S/G HW</b>	<p>If Enabled, zone selectivity HW signals propagation logic applies in accordance with the table in the QT1 technical application notes. <a href="#">1SDC007100G0205</a></p> <p>If Disabled, the HW selectivity signal is not propagated by Ekip Touch</p>
<b>Zone selectivity input functions</b>	<p>The zone selectivity inputs and certain of the outputs can be configured in this section:</p> <ul style="list-style-type: none"> <li>• <i>Standard</i>: input or output operation as per standard zone selectivity logic; all selectivity functions are set as Standard. (<a href="#">1SDC007100G0205</a> or <a href="#">1SDC007401G0201</a>)</li> <li>• <i>Customized</i>: the event that activates the zone selectivity input or output can be selected.</li> </ul> <p> <b>IMPORTANT: in the Customized configuration, the only zone selectivity activation event is the one set and standard selectivity operation is therefore not active (changes should only be made by expert technical personnel).</b></p>
<b>Glitch</b>	The commands of Glitches 16 to 23 activate the respective glitch registers, which can be used for customizing programmable functions or output contacts.
<b>Wizard Reset</b>	Reset Wizard: the Wizard window appears on Ekip Touch at the first power-on and can be used to enter some of the parameters of the unit.

# Test

## 1 - Test

---

**Presentation** The test area can be accessed on the display; the commands available in this area allow certain functions of the Trip unit to be checked; details of all the commands available in the Test menu are given below (page 34). Ekip T&P with Ekip Connect has a *Test Protections* section where the presence of current or voltage alarm signals can be simulated and times and trips can be checked.

---

**Autotest** The Autotest command starts an automatic sequence of the display and leds so as to enable their operation to be checked.

The sequence comprises the following test phases:

1. Screen with message "www.abb.com".
2. Darkening of the display.
3. Color sequence with red, green, blue bands, with gradual increase of backlighting
4. Lighting up, for one second, of the Warning and Alarm leds.



**NOTE:** *auxiliary power supply must be present in order to check the gradual increase of backlighting*

---

**Trip Test** Selection of the *Trip test* command accesses the dedicated page where the operator is asked to press the **iTEST** key to confirm the test operation.

An open command is transmitted to the Trip coil of the CB when the key is released.



**IMPORTANT:**

- the open command is sent with the circuit-breaker closed and in the absence of current
- following a command, the user is responsible for checking the effective change in status of the actuator and the information displayed: make sure that there are no alarms on the diagnosis bar before performing the test



**NOTE:** *to reset the TRIP signal, go back to the HOME page and press the iTEST key or transmit a TRIP RESET command (via Ekip Connect or remotely)*

---

**Test CB** Selection of the *Test CB* command accesses a submenu with the *Open CB* and *Close CB* commands. The commands allow opening coil YO and closing coil YC to be activated, respectively: a window with the message "Test Executed" confirms that the command has been transmitted correctly.

Correct operation of the entire command system (Trip unit and opening and closing coils) is checked by opening and closing the circuit-breaker.



**IMPORTANT:**

- the open and close commands of the coils only function when the Trip unit is on and powered by an auxiliary supply
  - make sure that the coils are connected to the supply source
  - release operation is checked by the commands: coil faults are not detected by the test
-

**Ekip CI** The menu activates in the presence of module *Ekip CI*, auxiliary power supply and local bus enabled. The *Autotest* command is available in the menu; its selection activates the test of the leds and output contact O61 in sequence:

1. Led reset and closing of contact O61 (if open)
2. Lighting up of all leds in sequence and successive switch-off
3. Opening of the O61 contact, switching on and off of the O61 led
4. Re-closing of O61 contact



**IMPORTANT:**

- the autotest sequence also includes transmission of the open command of the output contact: the user is responsible for checking that it has opened correctly
- the test sequence always ends with the closing of the O61 contact, regardless of the starting condition: verify that the change of status following the test does not create problems in your installation.

**Ekip Signalling 2K** The menu activates in the presence of module *Ekip Signalling 2K*, auxiliary power supply and local bus enabled.



**NOTE:** a menu is available for each *Ekip Signalling 2K* module present, up to a maximum of three

The *Autotest* command is available in each submenu; it activates the automatic output test (Contacts and leds), input test (leds) and provides for the following operations:

1. Resetting of output contacts (= open) and leds (= off).
2. Lighting up of all leds in sequence (output and input)
3. Closing and switch-off in sequence of the two output contacts while the relative leds come on.
4. Reset initial conditions



**IMPORTANT: the Autotest command closes the contacts regardless of the configuration set by the user: the user is responsible for making the devices connected to the Ekip Signalling 2K modules secure, checking that the contacts have closed properly and that the leds have come on**

**Ekip Signalling 1K** The menu includes the *Autotest* command which, in the presence of *Ekip Signalling 1 K / MM* and auxiliary power supply, commands an automatic open-close-open sequence of the module contact.



**IMPORTANT: the command closes the contact regardless of the configuration set by the user: the user is responsible for making the devices connected to the Ekip Signalling 1K module secure and checking that the contact has closed properly**

**ZoneSelectivity** The menu has one or two sections, visibility of which depends on the protections available and enabled:

Submenus	Reference selectivity	Outputs/Inputs managed
S Selectivity	S, S2, D (Forward)	SZi (DFi), SZo (DFo)
G Selectivity	G, Gext, D (Backward)	GZi (DBi), GZo (DBo)

Each submenu has three fields for checking selectivity inputs and outputs:


Field	Description
Input	Provides the status of the selectivity input (On/Off)
Force output	Selectivity output activated
Force Output	Selectivity output deactivated

Consult the description of the putting into service procedure when checking the selectivity contacts (page 17).

# Additional functions

## 1 - Power Controller

### Description

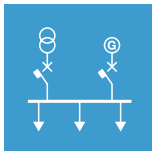

The *Power Controller* function allows the loads of an installation to be managed according to power consumption, for the purpose of reducing consumption and optimizing energy efficiency.

All the parameters and measurements of the function are available via Ekip Connect; however, the Trip unit allows certain of them to be set and displayed, as described below.



**IMPORTANT: consult the Technical catalog or White paper of the function for full details (page 4, 13).**

### Ekip Touch Parameter

Certain configuration parameters of the function are available in the *Settings - Power Controller* menu (33).

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the function and its availability in the parameters menu	OFF
<i>Load Operating Mode</i>	Enables the configuration of each of the 15 programmable loads to be set (from Load 1 to Load 15); either Automatic or Manual configuration can be selected	Manual
<i>Power Limits</i>	Enables 10 power limits to be set (from Power Limit 1 to Power Limit 10); the value is given in kW and can be set within range: 10 kW to 10000 kW, in 10 kW steps	10 kW



**NOTE:** to characterize the parameters of the function, it is advisable to first configure them via Ekip Connect and only then use the Trip unit to enable or modify the power limits and loads

### Ekip Touch Measure

A specific page containing the main measurements is available in the *Measurements* pages, with *Power Controller* activated:

Measurement	Description
<i>Ea</i>	Expected energy
<i>T</i>	Time elapsed in the evaluation window
<i>LOADS</i>	Number of loads monitored
<i>LOADS Shed</i>	Number of shed loads
<i>Sp</i>	Load shedding priority setting
<i>T</i>	Evaluation window

The *Power Controller* menu, with information concerning the 15 loads in two submenus, is available in the *About* page when *Power Controller* is activated (page 34):

Submenus	Information provided
<i>Load Input Status</i>	Status of the loads (from Load 1 to Load 15): open or closed
<i>Load Active</i>	Load configuration (from Load 1 to Load 15): active or inactive



## 2 - Load Shedding

### Description



The *Load Shedding* function allows faults to be managed in installations which are able to function thanks to the energy produced by renewable and local energy sources, especially the absence of power supply caused, for example, by a fault on the MV voltage side.

This function is available in two versions:

- *Basic*, supplied with all the Ekip Touch Trip units
- *Adaptive*; can be purchased by means of the relative additional package and is available for all Trip units with the *Measuring Measurements* package, except Ekip M Touch

All the parameters and measurements of the function are available via Ekip Connect; however, the Trip unit allows certain of them to be set and displayed, as described below.




**IMPORTANT:** consult the **Technical catalog** or **White paper** of the function for full details (page 4, 14).

### Ekip Touch Parameter

Certain configuration parameters of the function are available in the *Settings - Load Shedding* menu (page33).



**NOTE:** it is advisable to first configure the parameters via Ekip Connect, and only then operate on the Trip unit

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the function and its availability in the parameters menu	Off
<i>Version</i>	Display of the version of the function, Basic or Adaptive  <b>NOTE:</b> with the Basic version, the only parameter available is <i>Reconnection Timeout</i>	--
<i>Solar Plant present</i>	Establishes whether the microgrid includes a solar energy system (Off/On)	Off
<i>Solar Plant Nominal Power</i>	Available with Solar Energy System Present = On, defines the rated power of its solar energy system. The value is given in kW and can be set within the range: 100 kW to 65535 kW, in 1 kW steps	100 kW
<i>ATS</i>	Establishes whether the installation has an ATS system (Off/On)	Off
<i>Generator Power</i>	Available with ATS=On, defines the power received from the ATS branch; can be set within the range: 0 kW (. . .) to 10000 kW, in 1 kW steps	. . . .
<i>Frequency slope</i>	Defines the instantaneous frequency variation that activates <i>Load shedding</i> The value is given as absolute value (Hz/s) and can be set within the range: 0.6 Hz/s to 10 Hz/s in 0.2 Hz/s steps	0,6 Hz/s
<i>F W Warning <sup>(1)</sup></i>	Control threshold of the minimum frequency that activates Load shedding The value is given as absolute value (Hertz) and can be set within the range: 0.9 Fn to 1.1 Fn in 0.001 Fn steps	3 Fn
<i>Reconnection Timeout</i>	Defines the time employed by the Trip unit between reconnection of one load and the next, after the main CB has reclosed. The value is given as absolute value (s) and can be set within the range: 10 s to 1800 s, in 1 s steps	10 s



**NOTE:** Load shedding activates if the monitoring conditions defined by the *Frequency slope* and *F W Warning* parameters are present at the same time

**Ekip Touch Measure**

A specific page containing the main measurements is available in the *Measurements* pages, with *Power Controller* activated:

Measurement	Description
<i>F</i>	Frequency measured
<i>F<sub>n</sub></i>	Nominal frequency of the Trip unit
<i>LOADS</i>	Number of loads monitored
<i>LOADS Shed</i>	Number of shed loads

The *Power Controller* menu, with information concerning the 15 loads in two submenus, is available in the *About* page when *Load Shedding* is activated (page 34).

Submenus	Information provided
<i>Load Input Status</i>	Status of the loads (from Load 1 to Load 15): open or closed
<i>Load Active</i>	Load configuration (from Load 1 to Load 15): active or inactive

### 3 - IPS Interface protections

#### Description



The *IPS Interface protection* function allows faults to be managed in installations which are able to function thanks to the energy produced by renewable and local energy sources, especially the absence of power supply, e.g. caused by a fault on the MV voltage side.

The function is available for all the Ekip Hi-Touch Trip units.

All the parameters and measurements of the function are available via Ekip Connect; however, the Trip unit allows protection 59 S1, V DIR, V INV and control thresholds *Voltage stability*, *Frequency stability* and *F W1* to be set, as described below.



**IMPORTANT: consult the Technical catalog or White paper of the function for full details (page 4, 14).**

#### Protection 59.S1 [ANSI 59S1]

The protection sends a TRIP command if the maximum mean value of the three line-to-line voltages, calculated in a 10-minute floating menu, exceeds the threshold for longer than the set time.

The *Protections-Advanced* menu includes the protection submenu in which the parameters can be entered:

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	Off
<i>Trip Enable</i>	Activates/deactivates transmission of the open command: if disabled, the alarm and exceedance of protection time are only managed as information	Off
<i>Threshold</i>	Establishes the value that activates the protection. The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 1 Un to 1.3 Un, in 0.05 Un steps	1,1 Un
<i>Time</i>	This is the trip time of the protection; the value is given in seconds and can be set within a range: 3 s to 999 s, in 3 s steps	3 s

#### Limitations and additional functions

The block functions can also be accessed by means of the service connector (via Ekip Connect) or communication via system bus (page 75).

#### Protection V DIR [ANSI 27VD]

If the positive sequence measured by the Trip unit exceeds or falls below threshold Up<sub>os</sub> (depending on the direction set), the corresponding alarm will be activated (no TRIP). The *Protections-Advanced* menu includes the protection submenu in which the parameters can be entered:

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the control threshold of the parameters and their availability in the menu	Off
<i>Direction</i>	Defines whether sequence monitoring is performed after the measured sequence has dropped (Down) or been exceeded (Up)	Down
<i>Threshold</i>	Establishes the value that activates the alarm. The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.1 Un to 1.5 Un in 0.05 Un steps	0,8 Un

#### Protection V INV [ANSI 59VI]


If the negative sequence measured by the Trip unit exceeds or falls below threshold Un<sub>eg</sub>, the corresponding alarm will be activated (no TRIP).

The *Protections-Advanced* menu includes the protection submenu in which the parameters can be entered:

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates monitoring of the parameters and their availability in the menu	Off
<i>Threshold</i>	Establishes the value that activates the alarm. The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.05 Un to 0.5 Un in 0.05 Un steps	0,05 Un


**VS Warning** A warning signal is activated if all three of the line-to-line voltages measured by the Trip unit are within the window defined by the control thresholds for the set time.

The *Protections-Advanced-Warnings* menu includes the control threshold submenu in which the parameters can be entered:

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates monitoring of the parameters and their availability in the menu	Off
<i>Signal source</i>	Establishes whether the line-to-line voltages to be checked are those from the internal sockets (Measuring) or from Ekip Synchrocheck, if present.  <b>NOTE:</b> if Ekip Synchrocheck is set, monitoring will refer to one single voltage	Meas.
<i>Threshold DOWN</i>	Establishes the lower limit value of the control band, given as both absolute value (Volts) and relative value (Un), which can be set within the range: 0.5 Un to 1 Un in 0.001 Un steps	0,9 Un
<i>Threshold UP</i>	Establishes the upper limit value of the control band, given as both absolute value (Volts) and relative value (Un), which can be set within the range: 1 Un to 1.5 Un, in 0.001 Un steps	1,1 Un
<i>Time</i>	This is the monitoring time that activates the signal; the value is given in seconds and can be set within a range: 0.1 s to 900 s, in 0.1 s steps	30 s

**FS Warning** A warning signal is activated if the frequency measured by the Trip unit is within the window defined by the control thresholds for the set time.

The *Protections-Advanced-Warnings* menu includes the control threshold submenu in which the parameters can be entered:

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates monitoring of the parameters and their availability in the menu	Off
<i>Signal source</i>	Establishes whether the line-to-line voltages to be checked are those from the internal sockets (Measuring) or from Ekip Synchrocheck, if present.  <b>NOTE:</b> if Ekip Synchrocheck is set, monitoring will refer to one single voltage	Meas.
<i>Threshold DOWN</i>	Establishes the lower limit value of the control band, given as both absolute value (Hertz) and relative value (Fn), which can be set within the range: 0.9 Fn to 1 Fn in 0.001 Fn steps	0,998 Fn
<i>Threshold UP</i>	Establishes the lower limit value of the control band, given as both absolute value (Hertz) and relative value (Fn), which can be set within the range: 1 Fn to 1.1 Fn in 0.001 Fn steps	1,002 Fn
<i>Time</i>	This is the monitoring time that activates the signal; the value is given in seconds and can be set within the range: 0.1 s to 900 s, in 0.1 s steps	30 s


**F W1 Warning** If the frequency measured by the Trip unit exceeds or falls below the threshold (depending on the direction set), the corresponding alarm will be activated (no TRIP).

The *Protections-Advanced-Warnings-F W Warnings* menu includes the control threshold submenu in which the parameters can be entered:

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the control threshold of the parameters and their availability in the menu	Off
<i>Direction</i>	Defines whether frequency monitoring is performed after the measured sequence has dropped (Down) or been exceeded (Up)	Down
<i>Threshold</i>	Establishes the value that activates the alarm. The value is given as both absolute value (Hertz) and relative value (Fn) and can be set within the range: 0.9 Fn to 1.1 Fn in 0.001 Fn steps	3 Fn

# Electronic accessories

## 1 - Rating Plug

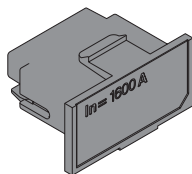

The *Rating Plug*, supplied with Ekip Touch, establishes the rated current  $I_n$  required by the measuring range and sets the current protections (with reference to  $I_n$ ).

It is installed on a dedicated front connector which can be accessed by the user.

The trip unit continuously checks for the presence of the *Rating Plug* and signals its absence or any assembly or installation errors.

If a new model is installed, Ekip Touch displays the request for installation when first powered.

Field *Nom.Curr* in the *About-Circuit breaker* menu displays the  $I_n$  quantity read by the unit.

### Replacement

The module can be replaced by the user; any *Rating Plug* with maximum rated current equal to the nominal size of the CB (lu) can be installed.



#### **WARNING!**

- models up to 250A at 400A can be installed if the original Rating Plug is 400A or less
- models up to 250A at 630A can be installed if the original Rating Plug is 500A or 630A

Further details about assembly and the Rating Plug installation procedure are available in ABB Library, particularly in document [1SDH002011A1505](#).



**IMPORTANT: to avoid alarms or undesired trips, the Rating Plug must be replaced when Ekip Touch is off, the CB open and in the absence of primary currents and voltages**

## 2 - Ekip Measuring

**Presentation** *Ekip Measuring* allows the following measurements to be taken:

- Voltage (RMS measurement of line-to-line voltages and phase voltages in the applicable cases)
- Frequency of the voltages
- Power and energy, also using the phase current measurements

Measurement performance is higher if the *Class 1 Power & Energy Metering* package is present.



**NOTE:** *measurement performance is described on page 101 and 104.*

If used in conjunction with *Ekip Synchrocheck*, recognition of whether the synchronism conditions between internal sockets and external contacts are able to allow the synchronism contact to close can also be obtained (see chapter dedicated to *Ekip Synchrocheck* from page 164).

**Electrical characteristics** *Ekip Measuring* functions correctly in the following conditions:

Component	Range
Phase-to-phase input voltage	0 ÷ 760 VAC (692 VAC + 10 %)
Input frequency	30 ÷ 80 Hz

**Connection configurations** The module is connected directly to the internal sockets of the CB.

In the 3P + N configuration, the external neutral voltage (V0) can be connected to the trip unit so as to measure and protect the residual voltage. Consult circuit diagrams [1SDM000005A1001](#).

**Menu** The specific configuration area will activate in the *Settings-Modules* menu if the *Ekip Measuring* module is detected correctly by Ekip Touch..

The following parameters can be configured in this menu:

Parameter	Description	Default
<i>Rated voltage</i>	Available in the absence of a transformer; defines rated voltage $U_n$ . The value is given as absolute value (Volts) and can be set within the range: 100 V to 690 V with variable steps.	400 V
<i>Positive Power flow</i>	Defines the power flow required for D protection; there are 2 options available (page 61): • High → Low: the power flows from the low terminals to the high ones (load connected low) • Low → High: opposite power flow (load connected high)	High → Low
<i>Neutral connection</i>	Available with 3P CB; allows the presence of the external Neutral to be enabled. <b>NOTE:</b> <i>presence of the neutral activates phase voltage measurement</i>	Absent

**About** The *About-Modules* menu contains the specific menu of the module with the serial number and version of the module itself.

**Test** The dielectric test is described in the Installation instructions [1SDH002011AR0001](#), [1SDH002011AR0002](#).

# External accessories

## 1 - Introduction and System interface

### Operating conditions

Ekip Synchrocheck, *Ekip Com*, *Ekip Signalling* and *Ekip CI* function correctly:

- In the presence of auxiliary supply voltage
- With the circuit-breaker in the Racked-in position (if the CB version is withdrawable)

The limitations listed below apply in all the other cases:

Modul / Condition	Ekip Synchro-check	Ekip Com	Ekip Signalling	Ekip CI
Module power supply absent	Synchronization contact: open	Communication: absent	Output contacts: open	Output contact: maintains previous position
CB in Test <sup>(1)(2)</sup> position	Synchronism: not available <sup>(4)</sup>	Communication: active	Inputs and output contacts: available	Inputs and output contact: functioning
CB in DISCONNECTED <sup>(1)(3)</sup> position	Synchronism: not available <sup>(4)</sup>	Communication: partially active <sup>(5)</sup>	Inputs and output contacts: partial available <sup>(6)</sup>	Output contact: maintains previous position

<sup>(1)</sup> the description refers to the module when correctly on and with the CB in the indicated position

<sup>(2)</sup> in the Test position, the Trip unit is connected to the modules and all information is available on the display or via external communication

<sup>(3)</sup> in the Racked-out position, connection and communication between Trip unit and modules is interrupted. Information is not available/valid

<sup>(4)</sup> due to voltage not connected to the internal sockets

<sup>(5)</sup> see System Interface, INFORMATION WITH PROTECTION TRIP UNIT DISCONNECTED section (next page)

<sup>(6)</sup> the outputs only function correctly if configured as: input status (of module itself) or non-communication with Trip unit. For all other configurations, the module forces the Outputs as per Contact Type parameter (NO, NC).

### System Interface

Document 1SDH002031A1101.zip, describing how to use the Ekip Com communication modules correctly, is available in ABB library; the file contains:

Document	Description
1SDH002031A1101.pdf	Guidelines with details about how to put the communication modules into service, with reference to the protocols and supporting documents
1SDH002031A1101.xlsx	Table with the references of all the registers for parameters, controls, measurements, etc.


The .zip file contains the files for supplementing Ekip Touch in the available communication networks, with the specific Ekip Com module and an IMPORTANT file with notes on how to use the files:

File <sup>(1)(2)</sup>	Protocol / Ekip Com module
ABBS0E7F.gsd + EkiDPB.bmp	File .gsd and module image for configuring <i>Ekip Com Profibus DP</i>
Ekip_COM_EtherNetIP_M4_v03_06.eds	File .eds for configuring <i>Ekip Com EtherNet/IP™</i>
Ekip_COM_DeviceNet_v02_08.eds	File .eds for configuring <i>Ekip Com DeviceNet™</i>
ABBEC0304_Ed1.icd ABBEC0304_Ed2.icd	File .icd for configuring <i>Ekip Com IEC 61850</i>
GSDML-V2.3-ABB S.p.A.-Ekip Com Profinet-20180823.xml	File .xml for configuring <i>Ekip Com Profinet</i>

<sup>(1)</sup> The files are also valid for the respective Redundant versions.

<sup>(2)</sup> Check the Firmware version of your module so as to choose the file with the correct configuration.

## 2 - Ekip Cartridge

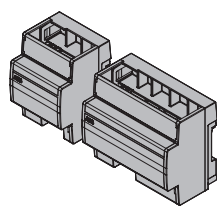

Ekip Cartridge is an external accessory. It can be installed on standard 35 mm DIN rail (DIN EN 50022 type TS 35x15 mm) and allows Ekip Touch to be connected to other external accessories:

- all cartridge modules (e.g.: Ekip Supply, Ekip Com, etc)
- contact for signaling racked-in/racked-out state, in the case of withdrawable CBs

**Models** The two different models available allow two or four modules to be connected, respectively.



**IMPORTANT: one of the modules must always be Ekip Supply**

**Connections** Ekip Cartridge has two terminal boxes:

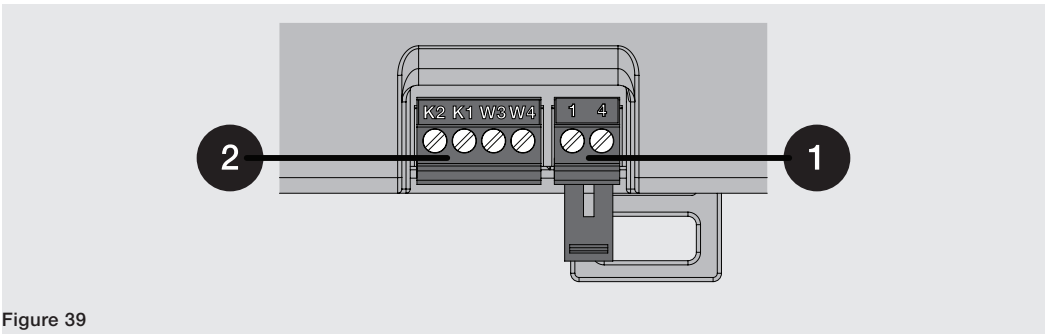


Figure 39


Connector	Description
1	Terminal for connecting the racked-in/racked-out status contact. <b>i NOTE:</b> <i>Ekip Cartridge is supplied by default with a jumper on the terminal</i> To use the racked-in/racked-out status signal, remove the jumper in the connector and connect the cables from the fixed part of the CB.
2	Terminal for connecting Ekip Cartridge to Ekip Touch. A list and description of the Pins is given below: <ul style="list-style-type: none"><li>• K2: Supply output for Ekip Touch (+24V DC)</li><li>• K1: Supply output for Ekip Touch (-24V DC)</li><li>• W3: CAN Bus</li><li>• W4: CAN Bus</li></ul>

Access to all the external connections is available in the respective modules, on the upper side of *Ekip Cartridge*.

**Mounting** To connect the module to Ekip Touch, please consult document [1SDH002009A1503](#).



## 3 - Ekip Supply

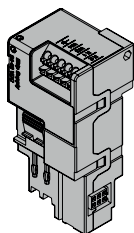

*Ekip Supply* is an accessory supply module. It is available in two models, depending on the incoming voltage to be provided.

It performs three functions:

- supplies auxiliary power to Ekip Touch
- allows the modules installed inside *Ekip Cartridge* to be connected to Ekip Touch
- acts as a bridge for the Local Bus between Ekip Touch and the external electronic accessories (e.g. *Ekip Signalling 10K* and *Ekip Multimeter*)

The module has a Power led to signal the presence of incoming power supply:

- off: no supply
- on (steady): supply present

### Electrical characteristics

Model	Ekip Supply 24-48VDC	Ekip Supply 110-240 VAC/DC
Power supply voltages	21,5 ÷ 53 VDC	105 ÷ 265 VAC/DC
Frequency	--	45 ÷ 66Hz
Maximum power consumption without modules <sup>(1)</sup>	3 W	3 VA/W
Maximum power consumption with modules <sup>(2)</sup>	10 W	10 VA/W
Maximum inrush current	2 A for 20 ms	2 A for 20 ms

<sup>(1)</sup> Ekip Touch with just Ekip Supply

<sup>(2)</sup> Ekip Touch with three modules connected with Ekip Cartridge


### Connections

The module must be assembled in the first slot of *Ekip Cartridge*.

For references about the connection and terminals, please consult document [1SDM000005A1001](#); use AWG 22-16 cables with 1.4 mm maximum outer diameter for the external cabling.

To connect the module to *Ekip Cartridge*, please consult document [1SDH002009A1503](#).

## 4 - Ekip Com Modbus RTU

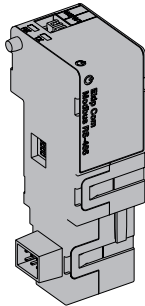

*Ekip Com Modbus RTU* is a communication accessory which allows Ekip Touch to be integrated into an RS-485 network with Modbus RTU communication protocol, remote supervision and monitoring functions, in two different modes, master and slave.

You can perform the following operations remotely:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information and parameters not available on the display
- If connected to a withdrawable version of the circuit-breaker, the allows the racked-in/racked-out status to be detected



**NOTE:** the remote open and close commands of the circuit-breaker can only be executed if *Ekip Touch* is in the Remote configuration

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Modbus RTU* to Ekip Touch (page 130 ,131).

### Models

Two different modules compatible with the Modbus RTU protocol are available: *Ekip Com Modbus RTU* and *Ekip Com Modbus RTU Redundant*.

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.



**NOTE:** if different indications are not given, the information in the next chapter is valid for both models

The two modules can be connected at the same time to Ekip Touch so as to expand the potential of the unit (e.g. for applications where high grid reliability is required).



**IMPORTANT:** each Ekip Touch can be fitted with only one module per type. The configuration with two modules of the same model is not allowed (example: two Ekip Com Modbus RTU Redundant)

### Connections

To connect the module to its communication network and for references about the terminals, please consult document [1SDM000005A1001](#); use Belden 3105A type cables or equivalent for the external cabling.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document To connect the module to Ekip Touch, please consult document [1SDH002009A1503](#).

### Power supply

*Ekip Com Modbus RTU* is supplied directly by the *Ekip Supply* module to which it is connected.



**NOTE:** communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply

**Interface** the module has three signaling leds:

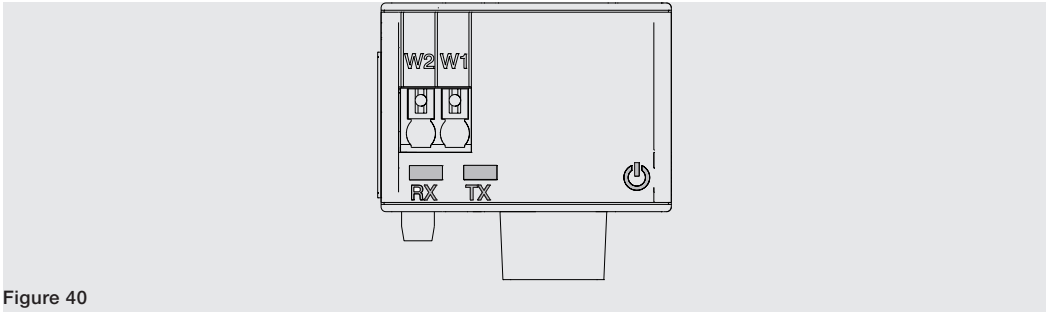


Figure 40

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"><li>• off: module off</li><li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li><li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li></ul>
Rx	Indicates the status of the communication between network master and module (slave): <ul style="list-style-type: none"><li>• off: Modbus RTU communication not activated</li><li>• on with fast flashes: Modbus RTU communication activated</li></ul>
Tx	Indicates the status of the communication between network master and module (slave): <ul style="list-style-type: none"><li>• off: communication between Modbus RTU not activated</li><li>• on with fast flashes: Modbus RTU communication activated</li></ul>

**Configurations**

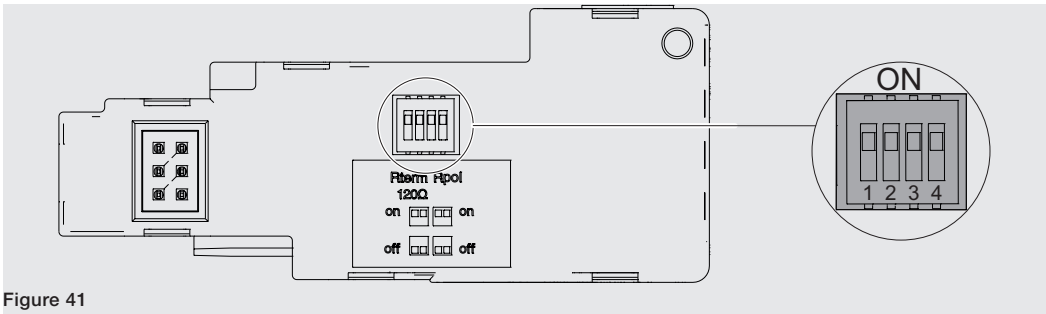


Figure 41

Resistor	Dip	Description	Default
Rterm	1 and 2	120 $\Omega$ termination resistor Move dip-switches 1 and 2 to the ON position to connect Rterm	Off
Rpol	3 and 4	220 $\Omega$ pull-up or pull-down resistor Move dip-switches 3 and 4 to the ON position to connect Rpol	Off




**IMPORTANT:** move the dip-switches before connecting the module to Ekip Supply and the communication network

**Menu** Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 116).

Two areas are activated if Ekip Touch detects the module correctly:

- information area in the About-Modules menu, containing the software version and serial number of the module
- specific configuration area in the Settings-Modules menu, where the following communication parameters can be configured

Parameter	Description	Default
<i>Serial address</i>	Module address; 1 to 247 range available  <b>IMPORTANT: devices connected to the same network must have different addresses</b>	247 / 246 <sup>(1)</sup>
<i>Baudrate</i>	Data transmission speed; 3 options are available: 9600 bit/s, 19200 bit/s, 38400 bit/s	19200 bit/s
<i>Physical protocol</i>	Defines the stop and parity bit; 4 options are available: <ul style="list-style-type: none"> <li>• 8,E,1 = 8 data bits, 1 EVEN parity bit, 1 STOP bit</li> <li>• 8,O,1 = 8 data bits, 1 ODD parity bit, 1 STOP bit</li> <li>• 8,N,2 = 8 data bits, no parity bit, 2 STOP bits</li> <li>• 8,N,1 = 8 data bits, no parity bit, 1 STOP bit</li> </ul>	8,E,1

<sup>(1)</sup> 247 default of the Ekip Com Modbus RTU module; 246 default of the Ekip Com Modbus RTU Redundant module

**Remote configurations** The operating configuration can be changed from slave to master via the service connector (via Ekip Connect) or via system bus communication so as to integrate the module into an interactive data exchange network (see description of Ekip Com Hub, page 157).




**IMPORTANT:**

- **In the Master configuration, the module does not allow data exchange as in the normal Slave function**
- **the presence of several masters in the same network can cause faulty operation**

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

# 5 - Ekip Com Profibus DP

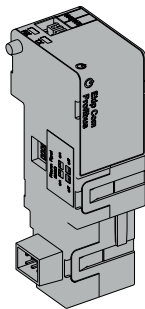

*Ekip Com Profibus DP* is a communication accessory which allows Ekip Touch to be integrated into an RS-485 network with Profibus communication protocol, with remote supervision and monitoring functions.

The module is configured as a Slave and remotely, you can:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator
- access information not available on the display
- If connected to a withdrawable version of the circuit-breaker, the allows the racked-in/racked-out status to be detected



**NOTE:** the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com Profibus DP* to Ekip Touch (page 130, 131).

## Models

Two different modules compatible with the Profibus protocol are available: *Ekip Com Profibus DP* and *Ekip Com Profibus DP Redundant*

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.



**NOTE:** if different indications are not given, the information in the next chapter is valid for both models

The two modules can be connected at the same time to Ekip Touch so as to expand the potential of the unit (e.g. for applications where high grid reliability is required).



**IMPORTANT:** each Ekip Touch can be fitted with only one module per type. The configuration with two modules of the same model is not allowed (example: two Ekip Com Profibus DP Redundant)

## Connections

For references about the connection and terminals, please consult document [1SDM000005A1001](#); use Belden 3079A type cables or equivalent for the external cabling.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document [1SDH002009A1503](#).

## Power supply

*Ekip Com Profibus DP* is supplied directly by the *Ekip Supply* module to which it is connected.



**NOTE:** communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply

## Interface

the module has three signaling leds:

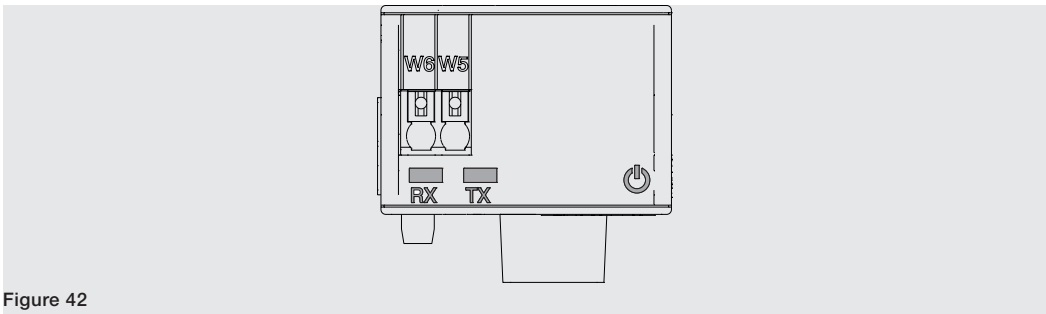


Figure 42

Continued on the next page

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"> <li>• off: module off</li> <li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li> <li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li> </ul>
Rx	Indicates the status of the communication between network master and module (slave): <ul style="list-style-type: none"> <li>• off: communication between master and module not activated</li> <li>• on steady: communication between master and module activated</li> </ul>
Tx	Indicates the status of the communication between network master and module (slave): <ul style="list-style-type: none"> <li>• off: communication between master and module not activated</li> <li>• on flashing: communication between master and module activated</li> </ul>

**Configurations** Resistors can be connected to the RS-485 bus by configuring the dip-switches at the side of the module:

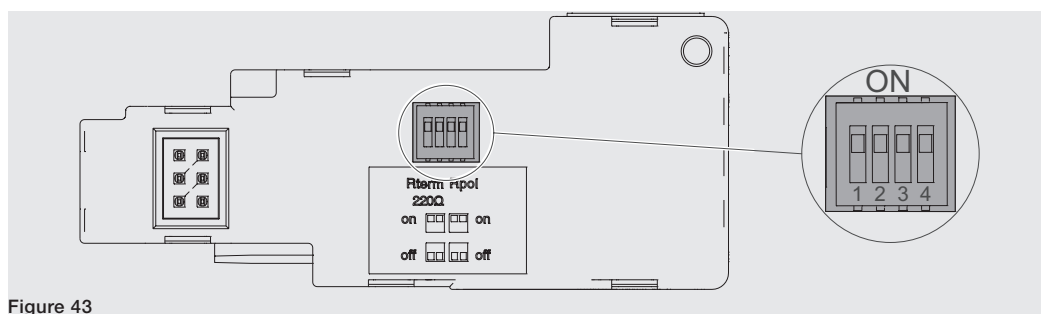


Figure 43

Resistor	Dip	Description	Default
Rterm	1 and 2	220 $\Omega$ termination resistor Move dip-switches 1 and 2 to the ON position to connect Rterm	Off
Rpol	3 and 4	390 $\Omega$ pull-up or pull-down resistor Move dip-switches 3 and 4 to the ON position to connect Rpol	Off



**IMPORTANT: move the dip-switches before connecting the module to Ekip Supply and the communication network**

**Menu** Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

Two areas are activated if Ekip Touch detects the module correctly:


- information area in the *About - Modules* menu, containing the software version and serial number of the module
- specific configuration area in the *Settings - Modules* menu, where the following communication parameters can be configured:

Parameter	Description	Default
Serial address	Module address; 1 to 126 range available <b>IMPORTANT: devices connected to the same network must have different addresses</b>	125 / 124 <sup>(1)</sup>

<sup>(1)</sup> 125 default of the Ekip Com Profibus DP module; 124 default of the Ekip Com Profibus DP Redundant module

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

## 6 - Ekip Com DeviceNet™

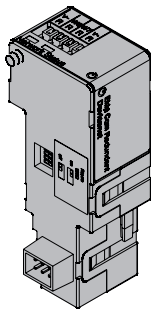

*Ekip Com DeviceNet™* is a communication accessory which allows Ekip Touch to be integrated into a CAN network with DeviceNet™ communication protocol, with remote supervision and monitoring functions.

The module is configured as a Slave and remotely, you can:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator
- access information and parameters not available on the display
- If connected to a withdrawable version of the circuit-breaker, the allows the racked-in/racked-out status to be detected



**NOTE:** the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com DeviceNet™* to Ekip Touch (page 130, 131).

### Models

Two different modules compatible with the DeviceNet™ protocol are available: *Ekip Com DeviceNet™* and *Ekip Com DeviceNet™ Redundant*.

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.



**NOTE:** if different indications are not given, the information in the next chapter is valid for both models

The two modules can be connected at the same time to Ekip Touch so as to expand the potential of the unit (e.g. for applications where high grid reliability is required).



**IMPORTANT:** each Ekip Touch can be fitted with only one module per type. The configuration with two modules of the same model is not allowed (example: two Ekip Com DeviceNet™ Redundant)

### Connections

For references about the connection and terminals, please consult document [1SDM000005A1001](#); use Belden 3084A type cables or equivalent for the external cabling.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document To connect the module to Ekip Touch, please consult document [1SDH002009A1503](#).

### Power supply

*Ekip Com DeviceNet™* is supplied directly by the *Ekip Supply* module to which it is connected.

To function correctly, the DeviceNet™ bus must be supplied on terminals V+ and V- with a signal of over 12 VDC.



**NOTE:**

- the ABB PLC with DeviceNet (CM575-DN) communication module provides V+ V- supply
- communication between Ekip Touch and the module is interrupted in the absence of power supplies from Ekip Supply and on the supply terminals of the bus

**Interface** the module has three signaling leds:

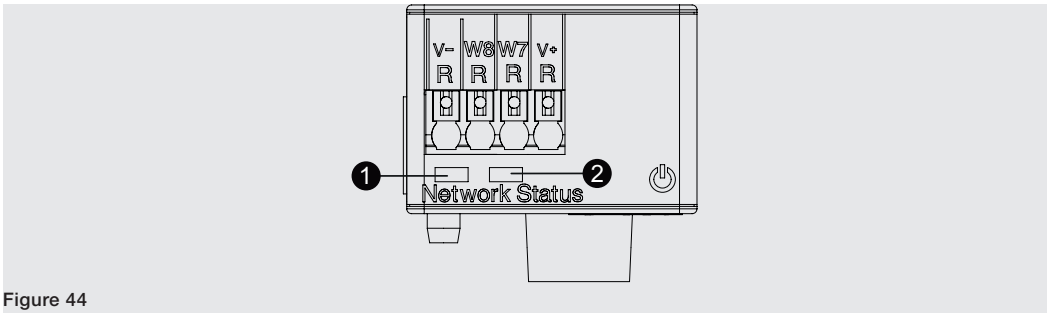


Figure 44

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"><li>• off: module off</li><li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li><li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li></ul>
Network Status (1)	Indicates the communication status on the bus: <ul style="list-style-type: none"><li>• off: device off line (with Status led off)<sup>(1)</sup>, or in the error condition (with Status led on)</li><li>• on steady: device on line, and assigned to a master (operating condition)</li><li>• on flashing: device on line, but not assigned to a master (device ready to communicate)</li></ul>
Network Status (2)	Indicates the communication status on the bus: <ul style="list-style-type: none"><li>• Off: no error.</li><li>• On fixed: device in bus off, or Network Power absent.</li><li>• On flashing: I/O connection (cyclic data) in timeout</li></ul>

<sup>(1)</sup> the device has not yet sent the Duplicate ID sequence in line

**Configurations** Resistors can be connected to the CAN bus by configuring the dip-switches at the side of the module:

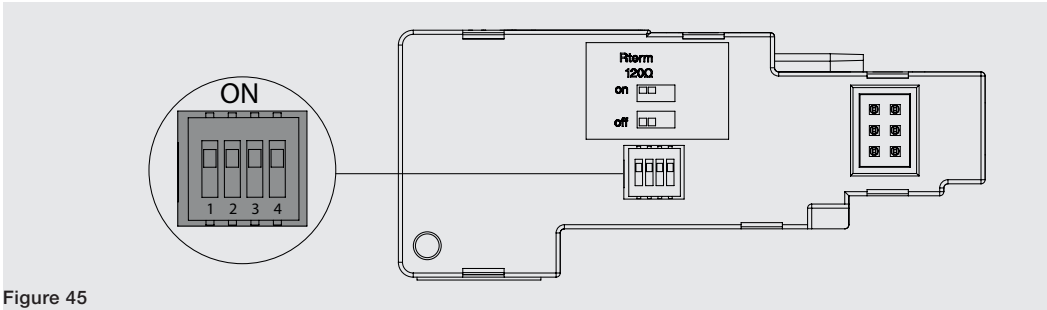


Figure 45

Resistor	Dip	Description	Default
Rterm	1 and 2	120 Ω termination resistor Move dip-switches 1 and 2 to the ON position to connect Rterm	Off



**IMPORTANT:**


- move the dip-switches before connecting the module to Ekip Supply and the network
- the termination resistors must never be included in the nodes; inclusion of this capacitance could lead to a network with improper termination (impedance too high or too low), which could potentially cause a failure. For example, removal of a node comprising a termination resistor could lead to network failure
- the termination resistors must never be installed at the end of a drop line but only at the ends of the main trunk line



**Menu** Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

Two areas are activated if Ekip Touch detects the module correctly:

- information area in the *About - Modules* menu, containing the software version and serial number of the module
- specific configuration area in the *Settings - Modules* menu, where the following communication parameters can be configured:

Parameter	Description	Default
<i>MAC Address</i>	Module address; 1 to 63 range available  <b>IMPORTANT: devices connected to the same network must have different addresses</b>	63 / 62 <sup>(1)</sup>
<i>Baudrate</i>	Data transmission speed; 3 options are available: 125 kbit/s, 250 kbit/s, 500 kbit/s	125 kbit/s


<sup>(1)</sup> 63 default of the Ekip Com DeviceNet™ module; 62 default of the Ekip Com DeviceNet™ Redundant module

**Remote configurations** Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Parameter	Description	Default
<i>Class ID</i>	Defines the addressing class of the module, either 8 or 16 bits.	8-bit Class ID
<i>Bus-Off Behavior</i>	Defines the behavior of the module following loss of communication (Bus-Off), with a choice between Standard (supply reset is awaited if the communication is lost) and Advanced (the module attempts to reset itself if it detects the error status).	DeviceNet standard

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

## 7 - Ekip Com Modbus TCP

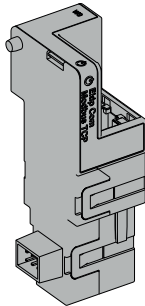

*Ekip Com Modbus TCP* is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with Modbus TCP communication protocol, with remote supervision and monitoring functions in two different modes, standard and HTTP server.

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator
- access information and parameters not available on the display
- If connected to a withdrawable version of the circuit-breaker, the allows the racked-in/racked-out status to be detected



**NOTE:** *the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration*

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com Modbus TCP*™ to Ekip Touch (page 130, 131).

Depending on the parameter settings, described in the next pages, the ports used by the module are:

Port	Service	Notes
502/tcp	Modbus TCP	Valid for the Modbus TCP mode
80/tcp	Server HTTP	Valid for the HTTP Server mode
319/udp	IEEE 1588	Valid with IEEE 1588 protocol enabled
20/udp		
68/udp	DHCP client	DHCP client enabled alternatively as: <i>Static address = On</i>

### Safety and cyber security

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).



#### IMPORTANT:

- **it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.**
- **The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with Modbus TCP communication protocol**

### Models

Two different modules compatible with the Modbus TCP protocol are available: *Ekip Com Modbus TCP* and *Ekip Com Modbus TCP Redundant*.

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.



**NOTE:** *if different indications are not given, the information in the next chapter is valid for both models*

The two modules can be connected at the same time to Ekip Touch so as to expand the potential of the unit (e.g. for applications where high grid reliability is required).



**IMPORTANT:** **each Ekip Touch can be fitted with only one module per type. The configuration with two modules of the same model is not allowed (example: two Ekip Com Modbus TCP Redundant)**

**Connections** For references about the connection and terminals, please consult document [1SDM000005A1001](#); a cable of the Class 6 S/FTP type (Class 6 with double screening S/FTP) must be used for the communication bus. To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document [1SDH002009A1503](#).

**Power supply** *Ekip Com Modbus TCP* is supplied directly by the *Ekip Supply* module to which it is connected.

**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Interface** the module has three signaling leds:

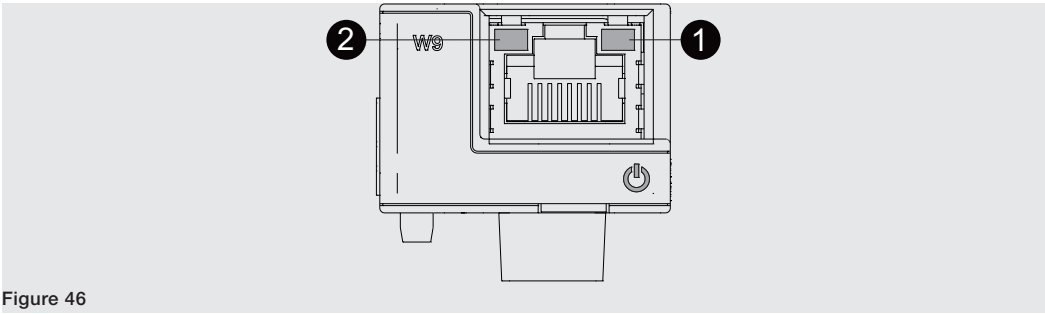


Figure 46

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"> <li>off: module off</li> <li>on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li> <li>flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li> </ul>
Link (1)	Indicates the communication state: <ul style="list-style-type: none"> <li>off: incorrect connection, signal absent.</li> <li>on steady: connection correct</li> </ul>
Activity (2)	Indicates the communication state: <ul style="list-style-type: none"> <li>off: no activity on line</li> <li>flashing: activity on line present (receiving and/or transmitting)</li> </ul>

**Mode** The two operating modes available can be configured via the menu:

Mode	Description
Modbus TCP	Information and commands are managed by single requests/queries according to Modbus TCP protocol rules and mapping (see System Interface)
HTTP Server	Information and commands are available in a web page, which can be accessed via a browser by entering the IP Address of the module as the address. The page has a login window where the user is requested to enter the same user password as the one requested on the display for editing parameters.

**Configurations via menu**


Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 114).

The following communication parameters can be configured if the module has been correctly detected by Ekip Touch in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Function</i>	Defines the mode between Modbus TCP and HTTP Server	Modbus TCP
<i>Static IP address ON</i>	Defines whether the module has a dynamic (Off) IP address or static (On) IP address Se = On all the associated parameters are enabled	Off
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0


**Information in menu**

The following information will be available in the About-Modules menu if Ekip Touch has detected the module correctly:

About	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be xset via the menu in the event of a static IP.  <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>TCP Client 1, 2, 3</i>	IP addresses of the client devices connected to the module (in the Server mode)
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Parameter	Description	Default
Client/Server	Parameter for changing the configuration of the module from Server Only to Client and Server and for integrating it into an interactive data exchange network (see Ekip Com Hub on page 157)  <b>IMPORTANT: if Client/Server, the module allows data exchange like a normal Server function</b>	Server only
IEEE 1588 enable	Allows the IEEE 1588 protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup> .	OFF
Master IEEE 1588	Enables the module to be set up as a master in the the network segment to which it belongs (synchronization clock).	OFF
IEEE 1588 delay mechanism	Allows the data exchange mode between module and master, either Peer-to-Peer or End-to-End, to be selected.	End-to-End
SNTP Client enable	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup>	OFF
Force Static IP Address	Allows the network server that supplies the SNTP to be set.	0.0.0.0
Time zone	Defines the time zone to be used for synchronism	+00:00
Daylight Saving Time	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	OFF
Disabilita Gratuitos ARP	Permits (Enabled ARP) the periodic generation of a Gratuitos ARP message, used by Ekip Connect to rapidly find the modules via Ethernet scan without knowing the IP address beforehand	ARP Enabled
Access protected by password	Enables the writing operations performed via the network to be protected by a password (Request password)	Standard mode
Password Modbus TCP	With access protected by enabled password, this is the password to use before each writing session <sup>(2)</sup> .	Local access

<sup>(1)</sup> Enable IEEE 1588 and Enable SNTP client must not be enabled at the same time


<sup>(2)</sup> the parameter can only be changed via system bus in the remote configuration

**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Information	Description
Boot and HW version	General module information
Flash CRC status e result	Information about the correctness of the SW in the module
Stato Ekip Link	Signals Ethernet cable connection errors
SNTP Server Error	Error in communication with SNTP server
SNTP Server Synchronisation	State of synchronism with SNTP server
IEEE 1588 status	Valid with Master IEEE 1588= ON, notifies the presence (Slave or PTP Master Active) or absence (PTP Master but Passive) of the higher level master

# 8 - Ekip Com Profinet

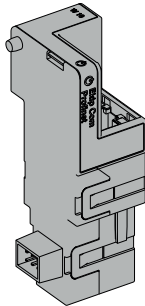

*Ekip Com Profinet* is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with Profinet communication protocol, with remote supervision and monitoring functions.

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information not available on the display
- If connected to a withdrawable version of the circuit-breaker, the allows the racked-in/racked-out status to be detected



**NOTE:** the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

The ports used by the module are:

Ethertype	Port	Service	Notes
0x88CC	-	LLDP	Link Layer Discovery Protocol
0x8892 (Profinet)	-	Profinet IO	Specific for real time communications (RT)
0x0802	34964/udp	Profinet-cm (Context manager)	DCE/RPC

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com Profinet* to Ekip Touch (page 130, 131).

## Safety and cyber security

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).



### IMPORTANT:

- it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.
- The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with Profinet communication protocol

## Models

Two different modules compatible with the Profinet protocol are available: *Ekip Com Profinet* and *Ekip Com Profinet Redundant*.

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.



**NOTE:** if different indications are not given, the information in the next chapter is valid for both models

The two modules can be connected at the same time to Ekip Touch so as to expand the potential of the unit (e.g. for applications where high grid reliability is required).



**IMPORTANT:** each Ekip Touch can be fitted with only one module per type. The configuration with two modules of the same model is not allowed (example: two Ekip Com Profinet Redundant)

**Connections** For references about the connection and terminals, please consult document [1SDM000005A1001](#); a cable of the Class 6 S/FTP type (Class 6 with double screening S/FTP) must be used for the communication bus. To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document .

**Power supply** *Ekip Com Profinet* is supplied directly by the *Ekip Supply* module to which it is connected.

 **NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Interface** the module has three signaling leds:

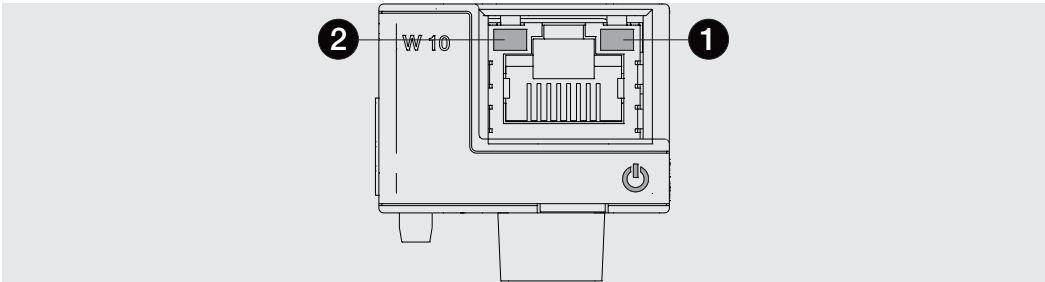


Figure 47

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"> <li>• off: module off</li> <li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li> <li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li> </ul>
Link (1)	Indicates the communication state: <ul style="list-style-type: none"> <li>• off: incorrect connection, signal absent.</li> <li>• on steady: connection correct</li> </ul>
Activity (2)	Indicates the communication state: <ul style="list-style-type: none"> <li>• off: no activity on line</li> <li>• flashing: activity on line present (receiving and/or transmitting)</li> </ul>


**Menu** Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

The following information will be available in the *About-Modules* menu if Ekip Touch has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

# 9 - Ekip Com EtherNet/IP™

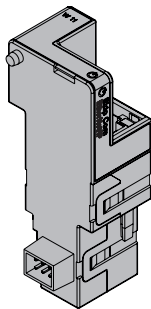

*Ekip Com EtherNet/IP™* is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with EtherNet/IP™ communication protocol, with remote supervision and monitoring functions.

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information and parameters not available on the display
- If connected to a withdrawable version of the circuit-breaker, the allows the racked-in/racked-out status to be detected

**i** **NOTE:** *the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration*

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

Depending on the parameter settings, described in the next pages, the ports used by the module are:

Port	Protocol	Notes
44818	TCP	Encapsulation Protocol (example: ListIdentity, UCMM, CIP Transport Class 3)
44818	UDP	44818 UDP Encapsulation Protocol (example: ListIdentity)
2222	UDP	2222 UDP CIP Transport Class 0 or 1
68/udp	DHCP Client	DHCP client enabled alternatively as <i>Static address = On</i>

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com EtherNet/IP™* to Ekip Touch (page 130, 131).

## Safety and cyber security

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).

- !** **IMPORTANT:**
- **it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.**
  - **The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with EtherNet/IP™ communication protocol**

## Models

Two different modules compatible with the EtherNet/IP™ protocol are available: *Ekip Com EtherNet/IP™* and *Ekip Com EtherNet/IP™ Redundant*.

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.

**i** **NOTE:** *if different indications are not given, the information in the next chapter is valid for both models*

The two modules can be connected at the same time to Ekip Touch so as to expand the potential of the unit (e.g. for applications where high grid reliability is required).

**!** **IMPORTANT:** **each Ekip Touch can be fitted with only one module per type. The configuration with two modules of the same model is not allowed (example: two Ekip Com EtherNet/IP™ Redundant)**



## Connections

For references about the connection and terminals, please consult document [1SDM000005A1001](#); a cable of the Class 6 S/FTP type (Class 6 with double screening S/FTP) must be used for the communication bus. To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document [1SDH002009A1503](#).

**Power supply** *Ekip Com EtherNet/IP™* is supplied directly by the *Ekip Supply* module to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Interface** the module has three signaling leds:

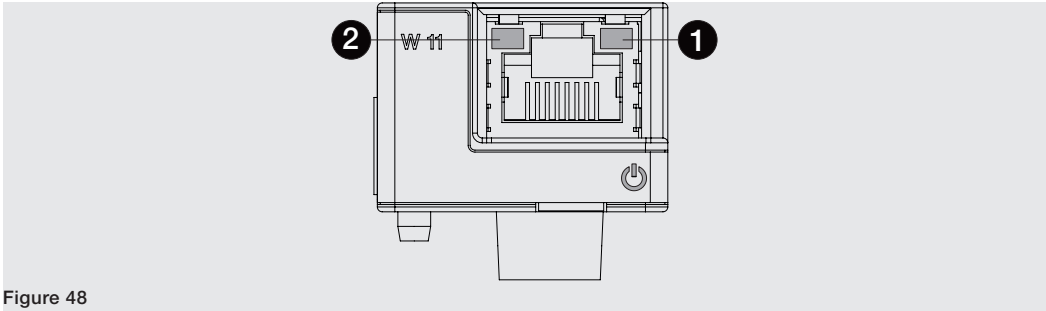


Figure 48

LEDs	Description
Power	<p>Signals the on status and correct communication with Ekip Touch:</p> <ul style="list-style-type: none"> <li>off: module off</li> <li>on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li> <li>flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li> </ul>
Link (1)	<p>Indicates the communication state:</p> <ul style="list-style-type: none"> <li>off: incorrect connection, signal absent.</li> <li>on steady: connection correct</li> </ul>
Activity (2)	<p>Indicates the communication state:</p> <ul style="list-style-type: none"> <li>off: no activity on line</li> <li>flashing: activity on line present (receiving and/or transmitting)</li> </ul>


**Configurations via menu** Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by Ekip Touch in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Static IP address ON</i>	Defines whether the IP address of the module is dynamic (Off) or static (On); If = On, all the associated parameters are enabled	OFF
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0

**Information in menu**

The following information will be available in the *About-Modules* menu if Ekip Touch has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP.  <b>NOTE:</b> <i>without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range</i>
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Parameter	Description	Default
<i>Enable IEEE 1588</i>	Allows the IEEE 1588 protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup> .	OFF
<i>IEEE 1588 Master</i>	Enables the module to be set up as a master in the the network segment to which it belongs (synchronization clock).	OFF
<i>IEEE 1588 Delay mechanism</i>	Allows the data exchange mode between module and master, either Peer-to-Peer or End-to-End, to be selected.	End-to-End
<i>Enable client SNTP</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup>	OFF
<i>ANTP Server address</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0
<i>Time zone</i>	Defines the time zone to be used for synchronism	+00:00
<i>Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	OFF


<sup>(1)</sup> Enable IEEE 1588 and Enable SNTP client must not be enabled at the same time

**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Information	Description
<i>HW and Boot version</i>	General module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Ekip Link status</i>	Signals Ethernet cable connection errors
<i>SNTP Server Error</i>	Error in communication with SNTP server
<i>SNTP Server Synchronization</i>	State of synchronism with SNTP server
<i>IEEE 1588 status</i>	Valid with Master IEEE 1588= <b>ON</b> , notifies the presence (Slave or PTP Master Active) or absence (PTP Master but Passive) of a higher level master

# 10 - Ekip Com IEC 61850

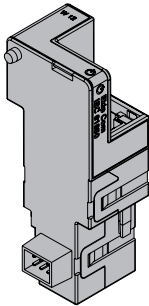

*Ekip Com IEC 61850* is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with IEC 61850 communication protocol, with remote supervision and monitoring functions.

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information and parameters not available on the display
- transmit vertical communication (report) to superior supervision systems (SCADA), with statuses and measurements (re-transmitted whenever and only if they change with respect to the previous report)
- transmit horizontal communication (GOOSE) to other actuator devices (example: medium voltage circuit-breakers), with all the information about status and measurements normally shared by Ekip Com communication modules via bus.
- If connected to a withdrawable version of the circuit-breaker, the allows the racked-in/racked-out status to be detected



**NOTE:** *the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration*

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

The document also describes the configuration files for the IEC 61850 protocol and relative uploading procedure for assigning the Technical Name and enabling GOOSE messages if required (by setting the relative MAC Addresses)

Depending on the parameter settings, described in the next pages, the ports used by the module are:

Ethertype	Port	Protocol
0x0800-IP	102	ISO Transport Service on top of the TCP (RFC 1006)
0x88B8	-	GOOSE Messages
0x0800-IP	123 UDP	NTP - Network Time Protocol
0x0800-IP	69 UDP	TFTP - Trivial File Transfer Protocol

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com EtherNet/IP™* to Ekip Touch (page 130, 131).

## Safety and cyber security

The module uses the HTTPS protocol and can be connected to the Internet

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).



### IMPORTANT:

- **it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.**
- **The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with IEC 61850 communication protocol**

**Models** Two different modules compatible with the IEC 61850 protocol are available: *Ekip Com IEC 61850* and *Ekip Com IEC 61850 Redundant*.

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.

**NOTE:** if different indications are not given, the information in the next chapter is valid for both models

The two modules can be connected at the same time to Ekip Touch so as to expand the potential of the unit (e.g. for applications where high grid reliability is required).

**IMPORTANT:** each Ekip Touch can be fitted with only one module per type. The configuration with two modules of the same model is not allowed (example: two Ekip Com IEC 61850 Redundant)

Connections

For references about the connection and terminals, please consult document [1SDM000005A1001](#); a cable of the Class 6 S/FTP type (Class 6 with double screening S/FTP) must be used for the communication bus.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult documentTo connect the module to Ekip Touch, please consult document [1SDH002009A1503](#).

**Power supply** *Ekip Com IEC 61850* is supplied directly by the *Ekip Supply* module to which it is connected.

**NOTE:** communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply

**Interface** the module has three signaling leds:

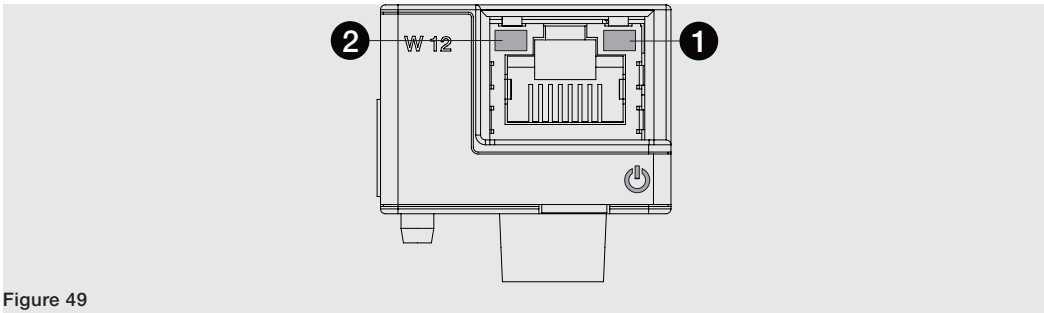


Figure 49

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"><li>• off: module off</li><li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li><li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li></ul>
Link (1)	Indicates the communication state: <ul style="list-style-type: none"><li>• off: incorrect connection, signal absent.</li><li>• on steady: connection correct</li></ul>
Activity (2)	Indicates the communication state: <ul style="list-style-type: none"><li>• off: no activity on line</li><li>• flashing: activity on line present (receiving and/or transmitting)</li></ul>

**Configurations via menu**


Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by Ekip Touch in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Static IP address ON</i>	Defines whether the module has a dynamic (Off) IP address or static (On) IP address Se = On all the associated parameters are enabled	OFF
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0
<i>Enable SNTP client</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled.	OFF
<i>SNTP Server Addr.</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0

**Information in menu**

The following information will be available in the *About-Modules* menu if Ekip Touch has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP.  <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device
<i>Cfg file</i>	Name of the configuration file uploaded to the modules
<i>Cfg file error</i>	Code of the error concerning the configuration file (0 = no error)

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:


Parameter	Description	Default
<i>Preferred configuration file</i>	If several configuration files are present, allows file hierarchy between .cid and .iid to be defined	.cid
<i>Enable IEEE 1558</i>	Allows the IEEE 1588 protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup> .	OFF
<i>IEEE 1558 Master</i>	Enables the module to be set up as a master in the the network segment to which it belongs (synchronization clock).	OFF
<i>IEEE 1558 Delay mechanism</i>	Allows the data exchange mode between module and master, either Peer-to-Peer or End-to-End, to be selected.	End-to-End
<i>Time zone</i>	Defines the time zone to be used for synchronism	+00:00
<i>Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	OFF
<i>TFTP Security level</i>	Defines the file loading procedure: <ul style="list-style-type: none"> <li>• <i>TFTP always On</i> = port open, loading always possible</li> <li>• <i>TFTP enable required</i> = port normally closed. To start loading, <i>Enable TFTP</i> must be run at the start of the procedure and <i>Disable TFTP</i> must be run at the end of the procedure (disable not necessary, security command).</li> </ul>	TFTP always On
<i>CB Open/CB Close command</i>	Defines the limitations to remote opening and closing command execution: <ul style="list-style-type: none"> <li>• <i>Standard commands</i> = standard commands (unrestricted) activated</li> <li>• <i>CB operate request</i> = standard commands not activated. Use programmable functions YC COMMAND and YO COMMAND, and Request breaker open (28) and Request breaker close (29) commands</li> </ul>	Standard commands
<i>Flg word hex</i>	Sets a filter on the selectivity statuses	0

**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Information	Description
<i>HW and Boot version</i>	General module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Ekip Link status</i>	Signals Ethernet cable connection errors
<i>SNTP Server Error</i>	Error in communication with SNTP server
<i>SNTP Server Synchronization</i>	State of synchronism with SNTP server
<i>IEEE 1558 status</i>	Valid with Master IEEE 1588= <b>ON</b> , notifies the presence (Slave or PTP Master Active) or absence (PTP Master but Passive) of a higher level master
<i>GOOSE Missing</i>	Signals that an expected GOOSE has not been received
<i>Configure Mismatch</i>	A GOOSE received does not conform to the expected structure
<i>Decode Error</i>	
<i>Sequence number error</i>	
<i>Remote programmable statuses (from E to R)</i>	Condition (true/false) of the programmable states and information on selectivity arising from logic defined in the configuration files loaded in module IEC 61850
<i>Zone selectivity remote inputs</i>	

## 11 - Ekip Link

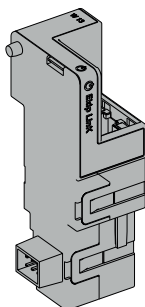

*Ekip Link* is a communication accessory which allows Ekip Touch to be integrated into an internal Ethernet network with ABB proprietary protocol.

The following functions can be performed with the remote module:

- Programmable Logic
- Power Controller
- Zone selectivity

To perform these functions, the system units involved must be equipped with their own *Ekip Link* and for each of these, the IP addresses of all the other *Ekip Link* connected must have been entered.

Each device is defined as an Actor in the Link network.

Each *Ekip Link* can interface with up to 15 actors, of which up to 12 for the *Zone Selectivity* function.

The ports used by the module are:

Port	Service	Notes
18/udp	ABB proprietary	In the case of rapid exchanges of information among ABB devices
319/udp	IEEE 1588	Valid with IEEE 1588 protocol enabled
320/udp		
68/udp	DHCP client	DHCP client enabled alternatively as <i>Static address = On</i>

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Link* to Ekip Touch (page 130, 131).

**Network** The *Ekip Link* modules must be connected to a dedicated network that includes only *Ekip Link* and Ethernet switches for which support for level L2 multicast is declared in the datasheet.

If the network also includes routers, multicast must be enabled and configured in all the level L3 VLAN interfaces.

**Programmable Logic** Activation of up to four bits of the *Ekip Link* can be programmed via the Programmable Logic function, each bit according to any combination of the status bits of an actor of which the IP address has been entered.

These four bits are indicated as Statuses A B C and D; they are remotely programmable and their value is transmitted to the device to which *Ekip Link* is connected

**Power Controller** Using the *Power Controller* function, each actor can:

- Acquire the status and control the loads
- Act as master and collect the energy measurements of actors entered as Energy Meters
- Supply energy measurements to actors entered as masters

The state of the loads can be acquired by checking the status of the inputs of the signaling modules connected to the actors of which the IP Addresses have been entered, while load control can be performed by programming the outputs.

Remote acquisition of the statuses of the loads and their control can also be performed with *Ekip Signalling 10K* connected to the network.

Further details about the potential of the function are available in White Paper [1SDC007410G0201](#) "Load management with Ekip Power Controller for SACE Emax 2".

**Zone selectivity** With the Zone Selectivity function:


- the IP addresses entered refer to actors with the role of interlock with respect to the current role
- the protections for which selectivity must be actuated by setting a mask, must be selected for each interlock actor entered. Thus set, the function will now be indicated as logic in the following text so as to distinguish it from the standard function, now also indicated as hardware in the following text
- thus selected, the protections add to those of the hardware S, G, D-Backward and D-Forward
- hardware selectivity only, or both hardware and logic selectivity can be selected
- diagnosis can be set, for each interlock release, to ascertain whether there is consistency between the hardware and logic selectivity information
- a mask can be set for the purpose of identifying those protections whose received selectivity information must be re-transmitted, regardless of whether the actor is in the alarm status. The mask is only applicable to logic selectivity information

For further details about the *Zone Selectivity* function with *Ekip Link*, please consult page 77.

**Connections** For references about the connection and terminals, please consult document [1SDM000005A1001](#); a cable of the Class 6 S/FTP type (Class 6 with double screening S/FTP) must be used for the communication bus.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult documentTo connect the module to *Ekip Touch*, please consult document [1SDH002009A1503](#).

**Power supply** *Ekip Link* is supplied directly by the Ekip Supply module to which it is connected.

 **NOTE:** *communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply*

**Interface** the module has three signaling leds:

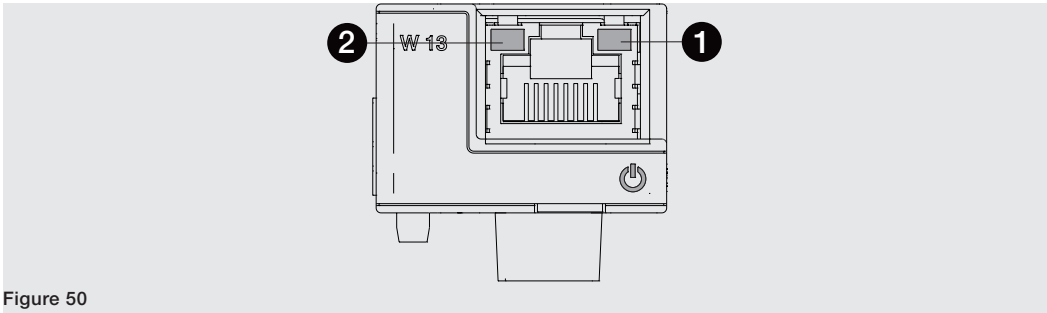


Figure 50

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"><li>• off: module off</li><li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li><li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li></ul>
Link (1)	Indicates the communication state: <ul style="list-style-type: none"><li>• off: incorrect connection, signal absent.</li><li>• on steady: connection correct</li></ul>
Activity (2)	Indicates the communication state: <ul style="list-style-type: none"><li>• off: no activity on line</li><li>• flashing: activity on line present (receiving and/or transmitting)</li></ul>



**Configurations via menu**


Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by Ekip Touch in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Static IP address ON</i>	Defines whether the module has a dynamic (Off) IP address or static (On) IP address Se = On all the associated parameters are enabled	OFF
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0


**Information in menu**

The following information will be available in the *About-Modules* menu if Ekip Touch has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP.  <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Parameter	Description	Default
<i>Client/Server</i>	Parameter for changing the configuration of the module from Server Only to Client and Server and for integrating it into an interactive data exchange network (see Ekip Com Hub on page 157).  <b>IMPORTANT: if Client/Server, the module allows data exchange like a normal Server function</b>	Server only
<i>Enable IEEE 1588</i>	Allows the IEEE 1588 protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup> .	OFF
<i>IEEE 1588 Master</i>	Enables the module to be set up as a master in the network segment to which it belongs (synchronization clock).	OFF
<i>IEEE 1588 Delay mechanism</i>	Allows the data exchange mode between module and master, either Peer-to-Peer or End-to-End, to be selected.	End-to-End
<i>Enable client SNTP</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup>	Off
<i>SNTP Server address</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0
<i>Time zone</i>	Defines the time zone to be used for synchronism	+00:00
<i>Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	OFF

Continued on the next page

Parameter	Description	Default
<i>Disable Gratuitous ARP</i>	Permits (Enabled ARP) the periodic generation of a Gratuitous ARP message, used by Ekip Connect to rapidly find the modules via Ethernet scan without knowing the IP address beforehand	ARP Enabled
<i>Password protected access</i>	Enables the writing operations performed via the network to be protected by a password (Request password)	Standard mode
<i>Password Modbus TCP</i>	With access protected by enabled password, this is the password to use before each writing session <sup>(2)</sup> .	Local access

<sup>(1)</sup> Enable IEEE 1588 and Enable SNTP client must not be enabled at the same time

<sup>(2)</sup> the parameter can only be changed via system bus in the remote configuration

## Remote Link configurations

Regarding the Link functions, the following further parameters are available:

Parameter	Description	Default
<i>Link Actor (1÷15)</i>	IP address of each actor (from 1 to 15)	0.0.0.0
<i>Remote Programmable Status (A÷D)</i>	Configuration parameters of the configurable states: <ul style="list-style-type: none"> <li>• selection of actor (actor from 1 to 15) which activates the programmable status</li> <li>• event of the actor that determines change of programmable status</li> </ul>	Actor 1 None
<i>Remote Status word (A÷D)</i>	Configuration parameters of the words: <ul style="list-style-type: none"> <li>• selection of actor (actor from 1 to 15) from which the word status is taken</li> <li>• selection of the taken word</li> </ul>	None 1 global
<i>Diagnostic</i>	Active (Passive diagnosis) or deactivated (No diagnosis) cabled selectivity diagnosis	No Diagnostic
<i>Diagnostic check timeout</i>	30 s, 1 min, 10 min, 60 min diagnosis frequency intervals available, if activated	30 seconds
<i>Zone Selectivity Type</i>	Configuration of hardware selectivity (Only HW) or hardware and logic (Mixed)	HW only
<i>Repeat Configuration mask</i>	Interactive mask for selecting selectivity to be sent also to the upper levels (even if not active in the programmed device)	0x0000

## Remote information

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:


Information	Description
<i>HW and Boot version</i>	General module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Ekip Link status</i>	Signals Ethernet cable connection errors
<i>SNTP Server Error</i>	Error in communication with SNTP server
<i>SNTP Server Synchronization</i>	State of synchronism with SNTP server
<i>IEEE 1588 status</i>	Valid with Master IEEE 1588= <b>ON</b> , notifies the presence (Slave or PTP Master Active) or absence (PTP Master but Passive) of a higher level master

## Remote Link information

Regarding the Link functions, the following further parameters are available:

Information	Description
<i>Line Congruency detection</i>	Information about the state and inconsistency of HW and logic selectivity (state and type of selectivity inconsistent)
<i>Remote Programmable Status</i>	Status (true/false) of remote programmable statuses A, B, C and D
<i>Remote Status Word</i>	Value of remote programmable Words A, B, C, D
<i>Logic Zone Selectivity</i>	Logic selectivity states (inputs and outputs)

## 12 - Ekip Com Hub

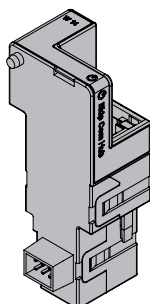

*Ekip Com Hub* is a communication accessory that enables the data and measurements of Ekip Touch and other devices connected to the same installation to be gathered and then made available on the server through an Ethernet network.

The configuration of the module is available via Ekip Connect or with the System Interface document, which contains all the details. (page 129).

The ports used by the module are:

Port	Service	Notes
67/udp 68/udp	DHCP client	DHCP client enabled alternatively as <i>Static address = On</i>
443/tcp	HTTPS	Always active when module is enabled
123/udp	SNTP	Active with SNTP client enabled
53/udp	DNS	Always active

The *Ekip Com Modbus RTU* and *Ekip Com Modbus TCP* modules can be configured to support *Ekip Com Hub* in the collection of data to send to Cloud. See Getting Started [1SDC200063B0201](#).

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com Hub* to Ekip Touch (page 130, 131).

### Safety and cyber security

The module uses the HTTPS protocol and can be connected to the Internet



#### IMPORTANT:

- it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.

### Connections

For references about the connection and terminals, please consult document [1SDM000005A1001](#); a cable of the Class 6 S/FTP type (Class 6 with double screening S/FTP) must be used for the communication bus.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document [1SDH002009A1503](#).


### Power supply

*Ekip Com Hub* is supplied directly by the Ekip Supply module to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Interface** the module has three signaling leds:

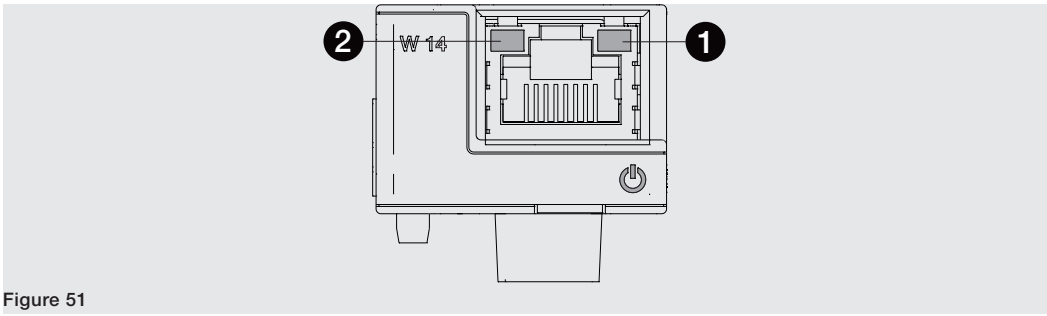

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"><li>• off: module off</li><li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li><li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li></ul>
Link (1)	Indicates the communication state: <ul style="list-style-type: none"><li>• off: incorrect connection, signal absent.</li><li>• on steady: connection correct</li></ul>
Activity (2)	Indicates the communication state: <ul style="list-style-type: none"><li>• off: no activity on line</li><li>• flashing: activity on line present (receiving and/or transmitting)</li></ul>


**Configurations via menu** Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by Ekip Touch in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Enable</i>	Switches communication between module and server on/off.	
<i>Force Static IP Address ON</i>	Defines whether the module has the dynamic (Off) or static ( <b>On</b> ) IP address. If = <b>On</b> all the associated parameters are enabled	Off
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0
<i>Enable SNTP client</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled.	Off
<i>SNTP Server Addr.</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0
<i>Password</i>	code required to register module on Cloud	---
<i>Remote firmware update</i>	Enables the firmware of the module to be updated. There are two parameters: <ul style="list-style-type: none"><li>• <i>Enable</i>, to configure firmware download</li><li>• <i>Automatic</i>, to automate module updating</li></ul>	Off Automatic

**Information in menu**

The following information will be available in the *About-Modules* menu if Ekip Touch has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP.  <b>NOTE:</b> <i>without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range</i>
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:


Parameter	Description	Default
<i>CRL Enable</i>	Allows the CRL (Certificate Revocation List) to be used to ascertain whether the server certificate is valid	
<i>Clock update hardening enable</i>	Enables control of the time reference transmitted by the SNTP server	
<i>SNTP Server Location</i>	Enables the position of the SNTP server to be set in relation to the network in which the module is installed	
<i>SNTP Time zone</i>	Defines the time zone to be used for synchronism	+00:00
<i>SNTP Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	OFF
<i>Disable Gratuitous ARP</i>	Permits (Enabled ARP) the periodic generation of a Gratuitous ARP message, used by Ekip Connect to rapidly find the modules via Ethernet scan without knowing the IP address beforehand	ARP Enabled

**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Information	Description
<i>HW and Boot version</i>	General module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Publish enable configuration</i>	State of enabling in Security File
<i>Configuration file</i>	Name of the file dedicated to the information to transmit (measurements, etc.)
<i>Security file</i>	Name of the file dedicated to the information requested by the module for transmission purposes (addresses, certificates, etc.)
<i>Certificate Revocation List</i>	Name of the file containing the revoked certificates
<i>Executable file</i>	Name of the executable firmware update file
<i>Configuration error</i>	Module configuration error state
<i>Sample time</i>	Period of data acquisition from the connected devices
<i>Log time</i>	Period within which the acquired data are saved in the log
<i>Upload time</i>	Period (calculated by the module) between each data transmission
<i>Configured device</i>	Number of modules involved in the network with Hub module
<i>Polling period API events</i>	Period in which the module communicates with the API device
<i>Connection client 1, 2, 3</i>	Address of TCP modbus clients connected to the module
<i>Statistics</i>	Recordings of the latest saving operations and percentage of resources being used
<i>Status plant side</i>	Information about the quality of the communication with the other devices
<i>Status Cloud side</i>	State of the errors concerning the TLS session established between module and server
<i>Application status</i>	Operation progress indicators
<i>Status</i>	General indicators of the module: SNTP status, flash, cable connection, FW availability, file errors, etc.

# 13 - Ekip Signalling 2K

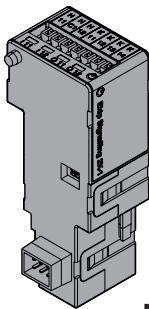

*Ekip Signalling 2K* is an accessory signaling module allowing programmable inputs/outputs to be managed.

This module has:

- two contacts for output signals and relative status led
- two digital inputs and relative status led
- a Power led with the startup status of the module

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Signalling 2K* to *Ekip Touch* (page 130, 131).

**Models** Three different Signalling 2K modules are available: *Ekip Signalling 2K-1*, *Ekip Signalling 2K-2* and *Ekip Signalling 2K-3*.

The modules are identical in terms of characteristics and installation methods, except for: display menus, cabling and addresses for system communication, which are specific for each module.

**i** **NOTE:** if different indications are not given, the information in the next chapter is valid for all three models

The three modules can be connected at the same time to *Ekip Touch* so as to expand the potential of the unit (e.g. to increase the number of control outputs and inputs).

**!** **IMPORTANT:** each *Ekip Touch* can be fitted with only one module per type. The configuration with two or three modules of the same model is not allowed (example: two *Ekip Signalling 3T-3* modules)

**Connections** For references about the connection and terminals, please consult document [1SDM000005A1001](#); use AWG 22-16 cables with 1.4 mm maximum outer diameter for the external cabling.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document [1SDH002009A1503](#).

**Power supply** *Ekip Com Signalling 2K* is supplied directly by the *Ekip Supply* module to which it is connected.

**i** **NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Input** *Ekip Touch* can be configured so that the status of the inputs corresponds to actions or signals, with different programming options (page 162).

The connection of each input (H11 and H12 for model 2K-1, H21 and H22 for model 2K-2, H31 and H32 for model 2K-3) must be made with reference to the common contacts (HC).

The module permits two logic statuses, interpreted differently by *Ekip Touch* depending on the configuration selected for each contact:

State	Electrical condition	Contact configuration	Status detected by Trip unit
Open	Circuit open	Active open	ON
		Active closed	OFF
Closed	Short-circuit	Active open	OFF
		Active closed	ON

**Output** Ekip Touch can be configured so that the contacts of each output are closed or opened upon the occurrence of one or more events, with different programming options (page 162).

The output of each module consists of 2 contacts (K11-K12 and K13-K14 for model 2K-1; K21-K22 and K23-K24 for model 2K-2; K31-K32 and K33-K34 for model 2K-3), which are isolated from the unit and from the other outputs, and have the following electrical characteristics:

Characteristics	Maximum limit <sup>(1)</sup>
Maximum switchable voltage	150 VDC / 250 VAC
Breaking capacity	2 A @ 30 VDC, 0,8 A @ 50 VDC, 0,2 A @ 150 VDC, 4A @ 250 VAC
Dielectric strength between open contacts	1000 V AC (1 minute @ 50 Hz).
Dielectric strength between each contact and coil	1000 V AC (1 minute @ 50 Hz).

<sup>(1)</sup> data relating to a resistive load

**Interface** the module has three signaling leds:

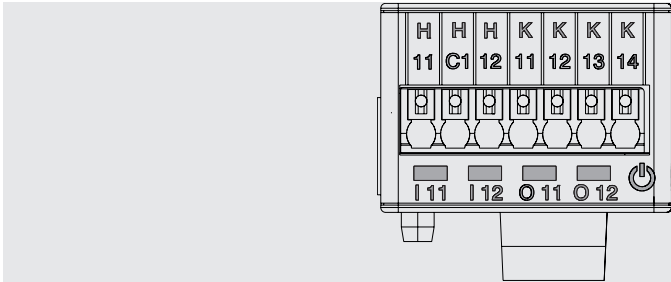


Figure 52

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"> <li>• off: module off</li> <li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present.</li> <li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with Trip unit absent.</li> </ul>
I 11, I 12	Indicate the status of the contacts of each output: <ul style="list-style-type: none"> <li>• off: contact open</li> <li>• on: contact closed</li> </ul>
O 11, O 12	Indicate the status of the contacts of each input: <ul style="list-style-type: none"> <li>• off: circuit open</li> <li>• on: short circuit</li> </ul>

**Menu** The specific configuration area will activate in the *Settings - Modules* menu if the *Ekip Signalling 2K* module is detected correctly by Ekip Touch.


A specific menu containing the submenus of all the available and configurable inputs and outputs is available for each *Ekip Signalling 2K* module detected by Ekip Touch.

**Input parameters** All the available inputs enable the following parameters to be configured:

Parameter	Description	Default
<i>Polarity</i>	Defines whether the input is interpreted as ON by Ekip Touch when it is open ( <i>Active open</i> ) or when it is closed ( <i>Active Closed</i> )	Active closed
<i>Delay</i>	Minimum activation time of the input before status change is recognized; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps <b>NOTES:</b> <ul style="list-style-type: none"> <li>• if the input is deactivated before this time has elapsed the status change is not recognized</li> <li>• if delay = 0 s status change must still be more than 300 µS</li> </ul>	0.1 s



**Output parameters** All the available inputs enable the following parameters to be configured:

Parameter	Description	Default
<i>Signal source</i>	Event which activates the output and switches the contacts. Different protection proposals, statuses and thresholds are available on the display; the Custom mode can be configured via Ekip Connect so as to extend the solutions and combine several events	None
<i>Delay</i>	Minimum duration of the presence of the source before the output is activated; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps <b>NOTES:</b>  <ul style="list-style-type: none"> <li>the output will not be switched if the source is deactivated before this time has elapsed</li> <li>if delay = 0 s the source must still be present for longer than 300 µS</li> </ul>	0 s
<i>Contact Type</i>	Defines the rest status of the contact with source not present between: open (NO) and closed (NC)	NO
<i>Latched</i> <sup>(1)</sup>	Allows the output (and relative status led) to be kept activated (On) or deactivated (Off) when the event disappears	OFF
<i>min Activation Time</i> <sup>(2)</sup>	Defines the minimum closing time of the contact following the rapid presence of sources: <ul style="list-style-type: none"> <li>Source duration &lt; min. activation = contact is activated for the minimum activation time</li> <li>Source duration ≥ min. activation = contact is activated for as long as the source persists</li> </ul> Choose between: 0 ms, 100 ms, 200 ms	0 ms

<sup>(1)</sup> deactivate the latching of the outputs used if Ekip Measuring is used for the Power Controller function

<sup>(2)</sup> if Ekip Measuring is used for the Power Controller function, the Power Controller option will also be available; if selected, the output is kept activated for a set time that depends on the function, regardless of whether the event that activated it persists


**About** The specific menu of the module available in the *About - Modules* menu contains:

- the serial number and version of the module
- the statuses of the inputs (On/Off) and outputs (Open/Closed)

**Test** The test area in the *Test* menu is activated if the *Ekip Signalling 2K* module is detected correctly. For details of the test characteristics, please consult page 121.

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

# 14 - Ekip Synchrocheck

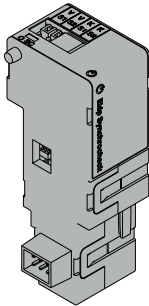

*Ekip Synchrocheck* is an accessory module that is used to control closing of an actuator when synchronism conditions, programmable by the user, exist.

To actuate synchronism:

- *Ekip Synchrocheck* and the internal sockets measure, respectively, the voltage on the external contacts (external voltage) and on the internal contacts (internal voltage) of the actuator
- *Ekip Synchrocheck* manages a closing contact



## NOTES:

- *the actuator is described as a circuit-breaker in the following description and in the menus*
- *with a generator and the actuator being configured: Normally, the external voltage is that of the grid and the internal voltage is that of the generator*



## **IMPORTANT: only one Ekip Synchrocheck can be installed on each CB**

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Synchrocheck* to Ekip Touch (page 130, 131).

**Mode** The module operates in two modes, configurable by the user (manual-mode configuration) or managed automatically by the unit (automatic-mode configuration).

Conditions	Description
Busbar active	Operation with external voltage other than zero: <ul style="list-style-type: none"> <li>• synchronism search starts if the external voltage is (0.5 Un by default) or more, for at least (1 s by default)</li> <li>• synchronism is considered to have been reached if the differences between RMS values and frequencies and the voltage phases are (0.12 Un, 0.1 Hz, and 50° by default) or less</li> </ul>
Dead busbar and configuration: <i>Normal</i>	Operation with one of the voltages nil: <ul style="list-style-type: none"> <li>• synchronism search starts if the internal voltage is (0.5 Un by default) or more, for at least (1 s by default)</li> <li>• synchronism is considered to have been reached if the external voltage is (0.2 Un by default) or less, for at least (1 s by default)</li> </ul>



**NOTE:** *with dead busbar and configuration: Reversed, the roles of the internal and external voltages are reversed*

Synchronism signal:

- is activated and maintained, after synchronism has been reached, for at least 0.2 s
- is deactivated when synchronism ends or the circuit-breaker is opened (with condition: *Evaluate CB status* = enabled) or communication with Ekip Touch is interrupted

**Additional functions** Certain options can be remotely configured in the synchronism conditions described above:

- the open circuit-breaker condition can be added (disabled by default)
- removal of the frequency and phase controls can be disabled



**IMPORTANT: to be able to disable the frequency and phase controls, first make sure that the required frequency and phase correspondence between external and internal contacts already exists**

**Connections** For references about the connection and terminals, please consult document [1SDM000005A1001](#); use AWG 22-16 cables with 1.4 mm maximum outer diameter for the external cabling.

To connect the module to *Ekip Supply* and *Ekip Cartridge*, please consult document [1SDH002009A1503](#).

**Power supply** *Ekip Com Synchrocheck* is supplied directly by the *Ekip Supply* module to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Input** *Ekip Synchrocheck* has an input (V S1 - V S2) for reading voltage, operation of which is ensured within the ranges and with the performance given below:

Component	Operating range	Normal operating range	Accuracy <sup>(1)</sup>
Voltage	0÷120 VAC	10 ÷ 120 VAC	1 % <sup>(2)</sup>
Frequency <sup>(3)</sup>	30÷80 Hz	30 ÷ 80 Hz	0,1 % <sup>(4)</sup>
Phase <sup>(5)</sup>	-	-180 ÷ +180 °	1 °

<sup>(1)</sup> the accuracy values refer to normal operating ranges, as established by IEC 61557-12

<sup>(2)</sup> with busbar activated

<sup>(3)</sup> with the busbar activated, frequency measurement starts at ≥ 36 V AC and ends at ≤ 32 V AC measured voltage

<sup>(4)</sup> in the absence of harmonic distortion

<sup>(5)</sup> phase measurement refers to the phase difference between internal and external voltage

### Isolation transformer

An isolating transformer with the characteristics given below must always be installed between the external contacts of the circuit-breaker and the input of the module:

Characteristics	Description
Mechanical	<ul style="list-style-type: none"> <li>fixing: EN 50022 DIN43880 rail</li> <li>material: self-extinguishing thermoplastic</li> <li>protection class: IP30</li> <li>electrostatic protection: with earth connector shield</li> </ul>
Electrical	<ul style="list-style-type: none"> <li>accuracy class: ≤ 0,2</li> <li>performance: ≥ 4 VA</li> <li>overload: 20% permanent</li> <li>insulations: 4 kV between inputs and outputs, 4 kV between shield and outputs, 4 kV between shield and inputs</li> <li>frequency: 45 to 66 Hz</li> </ul>

**Output** *Ekip Synchrocheck* has an output (K S1 - K S2) used as synchronism contact.

The output is insulated from the unit and input, and has the following electrical characteristics:

Characteristics	Maximum limit <sup>(1)</sup>
Maximum switchable voltage	150 VDC / 250 VAC.
Breaking capacity	2 A @ 30 VDC, 0,8 A @ 50 VDC, 0,2 A @ 150 VDC, 4A @ 250 VAC
Dielectric strength between open contacts	1000 V AC (1 minute @ 50 Hz).
Dielectric strength between each contact and coil	1000 V AC (1 minute @ 50 Hz).

<sup>(1)</sup> data relating to a resistive load

**Interface** the module has three signaling leds:

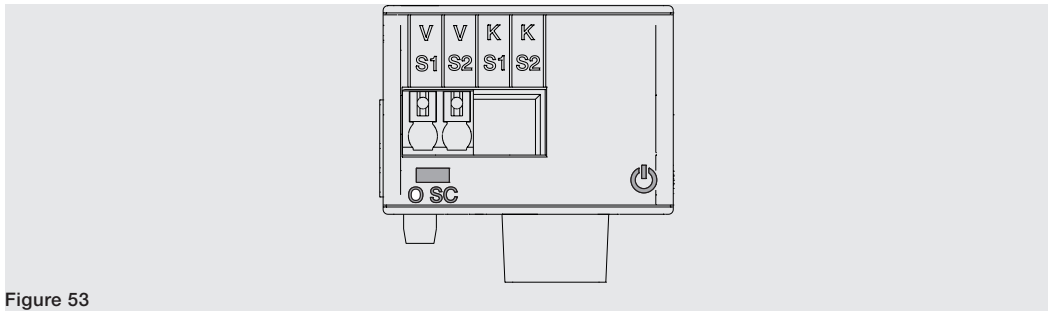



Figure 53

LEDs	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"> <li>off: module off</li> <li>on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with Trip unit present, flashing not synchronized with the Power led of Ekip Touch (two fast flashes per second): module on and communication with Trip unit absent</li> </ul>
O SC	Indicate the status of the contacts of each output: <ul style="list-style-type: none"> <li>off: contact open</li> <li>on: contact closed</li> </ul>  <b>NOTE:</b> The LED shows the output status: it indicates synchronization OK or KO, depending on the contact rest configuration (normally open or closed)

## Configurations via menu

The specific configuration area will activate in the *Advanced - Synchrocheck* menu if the *Ekip Synchrocheck* module is detected correctly by Ekip Touch.

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates the protection and its availability in the parameters menu	Off
<i>Dead bar option</i>	On = busbar activated; Off = dead busbar present	Off
<i>Udead Threshold</i> <sup>(1)(2)</sup>	Maximum external voltage (with dead busbar and configuration: <i>Normal</i> <sup>(2)</sup> is the first synchronism condition) The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.02 Un to 2 Un, in 0.001 Un steps	0.2 Un
<i>Ulive Threshold</i> <sup>(2)(3)</sup>	Minimum voltage for starting monitoring of external voltage (with busbar activated) or internal voltage (with dead busbar and <i>Normal</i> configuration) The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.5 Un to 1.1 Un, in 0.001 Un steps	0.5 Un
<i>Stability Time</i>	Minimum time within which the <i>Ulive Threshold</i> condition must be obtained in order to activate voltage monitoring The value is given in seconds and can be set within the range: 100 ms to 30 s, in 1 ms steps	1 s
<i>Delta Voltage</i>	Maximum difference between internal and external voltage (first synchronism condition) The value is given as both absolute value (Volts) and relative value (Un) and can be set within the range: 0.02 Un to 0.12 Un, in 0.001 Un steps	0.12 Un
<i>Delta frequency</i> <sup>(4)</sup>	Maximum difference between internal and external frequency (second synchronism condition) The value is given in Hertz and can be set within the range: 0.1 Hz to 1 Hz in 0.1 Hz steps	0.1 Hz
<i>Delta phase</i> <sup>(4)</sup>	Maximum difference between internal and external phase (third synchronism condition) The value is given in degrees and can be set within the range: 5° to 50° in 5° steps	50 °
<i>Dead bar configuration</i>	With dead busbar and generator: <ul style="list-style-type: none"> <li>Reversed = <i>Ekip Synchrocheck</i>/external contacts connected to the generator</li> <li>Normal = <i>Ekip Synchrocheck</i>/external contacts connected to the grid</li> </ul>	Standard
<i>Auto Live-dead detect</i>	Enables automatic synchronism control to be activated: <ul style="list-style-type: none"> <li>Manual = Ekip Touch considers the <i>Dead bar option</i> parameter</li> <li>Automatic = Ekip Touch automatically assesses the configuration to be actuated between the dead busbar and active busbar</li> </ul>	Manual
<i>Auto Deadbar detect</i>	Configuration for detecting dead busbar: <ul style="list-style-type: none"> <li>Manual = Ekip Touch considers the <i>Dead bar configuration</i> parameter</li> <li>Automatic = Ekip Touch automatically assesses the configuration to be actuated between: <i>Reversed</i> and <i>Normal</i></li> </ul>	Manual
<i>Primary voltage</i>	Rated voltage Un of installation; the value is given as absolute value (Volts) and can be set within the range: 100 V to 1150 V in variable steps.	100 V

Continued on the next page

Parameter	Description	Default
<i>Secondary voltage</i>	Secondary voltage of the transformer; the value is given as absolute value (Volts) and can be set within the range: 100 V to 120 V in variable steps.	100 V
<i>Concatenated Ref</i>	Line-to-line voltage entering the module among the 3 installation voltages	U12
<i>Contact Type</i>	Defines the rest status of the contact with synchronism not present between: open (NO) and closed (NC)	NO

(1) parameter not available with busbar active and Auto deadbar detect= Manual



(2) with dead busbar and configuration: Reversed, the roles of the internal and external voltages are reversed

(3) 10% hysteresis is applied to the minimum voltage condition: once reached, the condition is lost if the voltage drops below 90% of the set limit

(4) parameter not available with dead busbar and Auto deadbar detect= Manual

## Remote configurations

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Parameter	Description	Default
<i>Frequency check</i>	Activates (ON) or deactivates (OFF) frequency control for synchronism assessment	ON
<i>Phase check</i>	Activates (ON) or deactivates (OFF) phase control for synchronism assessment	ON
<i>Evaluate CB status</i>	Activates (YES) or deactivates (NO) circuit-breaker open status control for synchronism assessment  <b>NOTE:</b> fourth synchronism condition with busbar active; second synchronism condition with dead busbar	NO
<i>Minimum matching time</i>	With active busbar, minimum time within which the <i>Delta Phase</i> condition must be obtained The value is given in seconds and can be set within the range: 100 ms to 3 s, in 10 ms steps  <b>NOTE:</b> this is not a synchronism condition, but a parameter allowing a discrimination to be made between correct and incorrect combinations of the <i>Delta Frequency</i> and <i>Delta Phase</i> conditions. Owing to worst case latencies, the time that effectively elapses before synchronism is recognized may be longer than the set time (approx. 20 ms)	100 ms

## Measurements

The specific measurement area will activate in the *Measurements - Synchrocheck* menu if the *Ekip Synchrocheck* module is detected correctly by Ekip Touch.

Measurement	Description
<i>Module</i>	<ul style="list-style-type: none"> <li>Ok = Synchronism conditions fulfilled</li> <li>Not Ok = Synchronism conditions not fulfilled or function disabled</li> </ul>
<i>Frequency</i>	<ul style="list-style-type: none"> <li>Ok = Synchronism condition regarding frequencies fulfilled</li> <li>Not Ok = Synchronism condition regarding frequencies not fulfilled or synchronism function disabled, or frequencies outside measuring range limits.</li> <li>--- = Synchronism condition regarding frequencies not available (example: for operation with dead busbar)</li> </ul>
<i>Voltage</i>	<ul style="list-style-type: none"> <li>Ok = Synchronism conditions regarding voltages fulfilled.</li> <li>Not Ok = Synchronism conditions regarding voltages not fulfilled or synchronism function disabled</li> </ul>
<i>Phase</i>	<ul style="list-style-type: none"> <li>Ok = Synchronism condition regarding phase difference fulfilled</li> <li>Not Ok = Synchronism condition regarding phase difference not fulfilled or synchronism function disabled, or frequencies outside measuring range limits</li> <li>--- = Synchronism condition regarding phase difference not available (example: for operation with dead busbar)</li> </ul>
<i>Ext Side Voltage</i> <sup>(1)</sup>	<ul style="list-style-type: none"> <li>Voltage measured by <i>Ekip Synchrocheck</i> given in Volts</li> <li>.... = measurement DC or less than 1 VAC</li> <li>--- = measurement not available (example: because synchronism function is disabled)</li> </ul>

Continued on the next page

Measurement	Description
<i>Int Side Voltage</i> <sup>(2)</sup>	Voltage measured on internal sockets, given in Volts. • .... = measurement less than 1 VAC
<i>Ext Side Frequency</i> <sup>(1)</sup>	Frequency measured by <i>Ekip Synchrocheck</i> • --- = measurement not available (example: because synchronism function is disabled, or operation with dead busbar, or frequencies outside measuring range limits)
<i>Int Side Frequency</i> <sup>(2)</sup>	Frequency measured on internal sockets • --- = measurement not available (example: because synchronism function is disabled, or operation with dead busbar, or frequencies outside measuring range limits)
<i>Phase Difference</i> <sup>(1)</sup>	Phase difference between voltages, given in degrees • --- = measurement not available (example: because synchronism function is disabled, or operation with dead busbar, or frequencies outside measuring range limits)
<i>Auto detection</i>	• Busbar active = with automatic detection of operating mode and operation with active busbar, or with synchronism function not enabled • Dead bar = with automatic detection of operating mode and operation with dead busbar • --- = Measurement not available (example: owing to manual detection of operating mode)
<i>Voltage relation</i>	• $V_{int} \leq V_{ext}$ = Internal voltage the same as external voltage or lower • $V_{in} > V_{ext}$ = Internal voltage higher than external voltage • --- = Measurement not available (example: because the synchronism function is disabled, or direct voltages or voltages lower than 1 V).
<i>Frequency relation</i>	• $f_{int} \leq f_{ext}$ = Internal frequency the same as external frequency or lower • $f_{in} > f_{ext}$ = Internal frequency higher than external frequency • --- = Measurement not available (example: because synchronism function is disabled, or operation with dead busbar, or frequencies outside measuring range limits)

<sup>(1)</sup> voltage difference measurement accuracy is  $\pm 10\%$  unless the parameter value is  $0.02 U_n$ , in which case accuracy is  $\pm 20\%$

<sup>(2)</sup> the characteristics of the voltage and frequency measurements coincide with those given on the internal sockets (page 97)

**Summary page** The summary page is activated in the presence of the *Ekip Synchrocheck* module; access is obtained in the same way as the other summary pages (page 27).


The measurements in this page are:

- V int: voltage read by Ekip Touch
- f int: frequency read by Ekip Touch
- : phase difference
- SYNC: status of synchronism

**About** The *About - Modules* menu contains the specific menu of the module with the serial number and version of the module itself.

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

## 15 - Ekip Signalling 3T

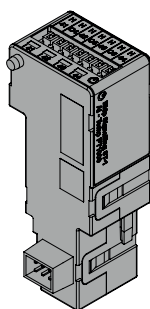

*Ekip Signalling 3T* is a signaling accessory which enables the connection of:

- three analog inputs for PT1000 temperature sensors (2 wires): I42, I43, I44
- an analog input for 4-20mA current loop: I41

The measurements supplied by the module can be associated with different control threshold, useful for configuring alarm signals, states and programmable commands.

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Signalling 3T* to *Ekip Touch* (page 130, 131).

### Models

*Ekip Touch* can be configured with two different 3T modules: *Ekip Signalling 3T-1* and *Ekip Signalling 3T-2*.



**NOTE: if different indications are not given, the information in the next chapter is valid for both models; on the second module the inputs are called I51 (loop 4-20mA), I52, I53, I54 (PT1000)**

The two modules can be installed at the same time on the same circuit-breaker so as to extend the opportunities for measuring and monitoring the installation.



**IMPORTANT: each circuit-breaker can only be fitted with one module per type. Configuration with two modules of the same model is not allowed (example: two Ekip Signalling 3T-1 modules)**

### Connections

For references about the connection and terminals, the circuit diagrams are [1SDM000068R0001](#).

To connect the module to *Ekip Touch*, the kit sheet is [1SDH002009A1503](#).

For PT1000 sensors, use insulated cables for resistance thermometers such as PENTRONIC TEC/SITW-24F (Type TX) or similar. Maximum length 3 meters.

For the 4-20mA Current Loop sensor, use suitable cables up to 3 meters in length compatible with the workplace in which the 4-20mA current sensor is used.



**IMPORTANT: the inputs are not insulated: regardless of plant voltage, the customer must ensure there is insulation between each input and between the inputs and power supply of the Ekip Supply module on the basis of the customer's own application and network.**

**For applications in low voltage installations ABB suggests use of the dedicated isolated external sensor PT1000, which can be ordered by code 1SDA085695R1, is equipped with a nut and screw for use on busbars and is compatible with the dielectric withstand and insulation levels established by standard IEC 60947-2 (Ui= 1000 V, Uimp= 12 kV).**

### Power supply

*Ekip Signalling 3T* is supplied directly by the *Ekip Supply* module to which it is connected.



**NOTE: communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply**

### Input

The module enables the following quantities to be measured

Input	Measurement	Range	Auflösung	Accuracy <sup>(1)</sup>
PT1000	Temperature	-50 ÷ 250 °C	0,01 °C	± 0,25 °C <sup>(2)</sup>
4-20mA current loop	DC current	0 ÷ 100 % <sup>(3)</sup>	0.1 %	± 0,5 % <sup>(4)</sup>

<sup>(1)</sup> accuracy values refer to 3T module without sensors. For complete accuracy, consider the characteristics of the sensors and cabling used

<sup>(2)</sup> accuracy valid in -25 to 250°C range; in complete range it is: ± 0.5°C

<sup>(3)</sup> the measurement is expressed as a percentage, where: 0% = 4 mA and 100% = 20 mA

<sup>(4)</sup> accuracy values refer to full scale: 0.5%= 0.1 mA

**Interface** Five signalling leds are available:

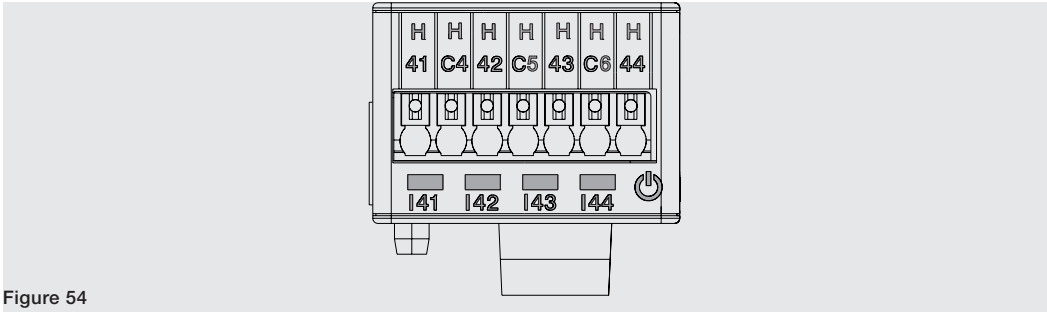



Figure 54

LEDs	Description
Power	Signals the on state and correct communication with the trip unit: <ul style="list-style-type: none"><li>• off: module off</li><li>• on steady or flashing synchronized with the trip unit Power led: module on and communication with trip unit present</li><li>• flashing not synchronized with trip unit Power led (two fast flashes per second): module on and communication with trip unit absent</li></ul>
I 41, I 42, I 43, I 44	Indicate the state of the input contacts: <ul style="list-style-type: none"><li>• off: input disabled</li><li>• on steady: input enabled, sensor connected and measurement valid</li><li>• flashing: input enabled, sensor not connected and/or measurement not valid</li></ul>

**Access from the display** The following areas are activated on Ekip Touch if the Ekip Signalling 3T module is detected correctly:


- *Measurements* page, accessible from the Home page, containing the measurements of all the PT1000 and 4-20mA Current Loop inputs of both modules 3T-1 and 3T-2
- information submenus in the *About-Modules* menu containing: serial number, module version and statuses of sensors (Present/Alarm)

- **IMPORTANT:**
- if one or more sensors are in the alarm status, the signal on the diagnosis bar will be: **Ekip Signalling 3T**
  - if a sensor is not enabled, the status indicated is: **Present**

**Remote configurations** The configuration of the module is available:

- via Ekip Connect, with communication accessories via service connector or with communication via system bus
- via own communication system and *Ekip Com* modules installed on circuit-breaker, in the conditions required by the trip unit (use System Interface for details)

All the measurements, states and alarms of the module are available in both conditions.

- **NOTE:** parameters and measurements are distributed in Ekip Connect pages and communication addresses sometimes nonsequential; references to the pages in Ekip Connect 2 are given in the tables below

**Enabling and measurements** The individual inputs of the module can be enabled in the *Ekip Signalling 3T* page: I42 Temperatures, I43 Temperatures, I44 Temperatures, I41 Current 4-20mA (per 3T-1), I52 Temperatures, I53 Temperatures, I54 temperatures, I51 Current 4-20mA (for 3T-2).

Parameter	Description	Default
Enable	Enables the specific input and relative alarm state and signaling controls to be activated	Enabled



**Alarm signals**

Up to three alarm thresholds (independent of each other), Threshold A, Threshold B, Threshold C, can be activated and configured for each input in the *Protection parameters - Other parameters A* (and B if dual set is activated) page

Each alarm threshold has the following configuration parameters:




**NOTE:** the table lists the parameters of threshold A of input I42; the names and references of all the other thresholds and inputs change

Parameter	Description	Default
<i>Threshold A enable</i>	Activates verification of input I42 with alarm Threshold A	Off
<i>Threshold A hysteresis direction</i>	Defines whether the alarm must activate when measurement is above ( <i>Up</i> ) or below ( <i>Down</i> ) the set value, with reference to the Threshold A setting	Up
<i>Threshold A value</i>	Alarm threshold A of input I42. The value is given in degrees Celsius (°C) and can be set within the range: -40°C to 240°C, in 0.1°C steps. <b>NOTE:</b> the thresholds of the 4-20mA (I41 and I51) Current Loop input are given in percentage form and can be set within the range: 0% to 100 %, in 0.1% steps (each step equivalent to 0.016µA)	200 °C (I42, I43, I44, I52, I53, I54) / 50 % (I41, I51)
<i>Threshold A hysteresis</i>	Hysteresis value, valid for quitting the alarm condition if the set Threshold A alarm threshold has been exceeded. The hysteresis parameter only allows positive values. The trip unit decides whether to add or subtract this value to or from the alarm threshold on the basis of the direction parameter, example: • <i>Direction</i> = Up, <i>Value</i> = 200°C, <i>hysteresis</i> = 10°C, the alarm activates over 200° and de-activates below 190°C The value is expressed in degrees Celsius (°C) and can be set within the range: 0°C to 50°C with 0.1°C steps. <b>NOTE:</b> the thresholds associated with the 4-20mA (I41 and I51) Current Loop input are given in percentage form and can be set within the range 0% to 30 %, in 0.1% steps (each step equivalent to 0.016µA)	1 °C (I42, I43, I44, I52, I53, I54) / 1 % (I41, I51)

**States and alarms**

The state of all control thresholds can be checked in the *Warnings/Alarms* page

## 16 - Ekip CI

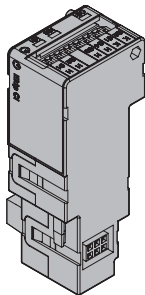

*Ekip CI* is an accessory module configurable with *Ekip M Touch*, which enables a remote control switch to be managed in the *Normal* configuration (page 117).

This module has:

- a contact for controlling a remote control switch
- an input for temperature probe PT100 (2 wires)
- a digital input for the Trip Reset function
- led for signaling the startup status and operating status of the module

Accessories *Ekip Cartridge* and *Ekip Supply* are required in order to connect *Ekip Com Hub* to *Ekip Touch* (page 130, 131).

### Connections

For references about the connection and terminals, please consult document [1SDM000068R0001](#); for input I61, use insulated cables for resistance thermometers such as PENTRONIC TEC/SITW-24F (Type TX) or similar. Maximum length 3 meters. The circuit diagrams are

To connect the module to *Ekip Supply* and *Ekip M Touch*, please consult document [1SDH002009A1503](#).



**IMPORTANT: input I61 is not insulated: regardless of plant voltage, the customer must ensure there is insulation between the input and power supply of the Ekip Supply module on the basis of the customer's own application and network**

### Power supply

*Ekip CI* is supplied directly by the *Ekip Supply* module to which it is connected.



**NOTE:** in the absence of auxiliary power supply, communication between *Ekip M Touch* and the module is interrupted, the output contact maintains its status and the input signals are no longer valid.

### Output

Output contact O61 (K61 and K62), which is normally closed, is opened if a TRIP occurs.

Re-closing can be obtained after a command on the *Trip Reset* input or if the *Autoreclosure* function is active, after the time defined by the user (*Autoreclosure Time*).

The contact has the following electrical characteristics:

Characteristics	Maximum limit <sup>(1)</sup>
Rated breaking capacity	8A @ 250 VAC / 5A @ 30 VDC
Minimum breaking capacity	10 mA @ 5 VDC
Insulation resistance between contact and Trip unit	1000 MΩ, 50 VDC

(1) data relating to a resistive load

### Input PT100

Analog input I61 (H61 and H62) allows a thermocouple to be connected (model PT100) so as to monitor the temperature and, if *PTC protection* is activated, to manage a TRIP if an alarm occurs (120°C fixed threshold) (page 71)

The contact has the following measuring characteristics:

Input	Measurement	Range	Auflösung	Accuracy <sup>(1)</sup>
PT100	Temperature	-50 ÷ 250 °C	0,01 °C	± 0,25 °C <sup>(2)</sup>

(1) accuracy values refer to *Ekip CI* module without sensor. For complete accuracy, consider the characteristics of the sensor and cabling used

(2) accuracy valid in -25 to 250°C range; in complete range it is: ± 0.5°C

**Input Trip reset** Digital input I63 (H63 and H64) allows contact O61 to be re-opened after a TRIP.

The module permits two logic statuses, interpreted differently by the Trip unit on the basis of the polarity configured by the user:

State	Electrical condition	Polarity	Status detected (and command required)
Open	Circuit open	Active open	On (O61 open command)
		Active closed	Off
Closed	Short-circuit	Active open	Off
		Active closed	On (O61 open command)

The re-closing command is activated at the front.

**Interface** The module has four signaling leds:

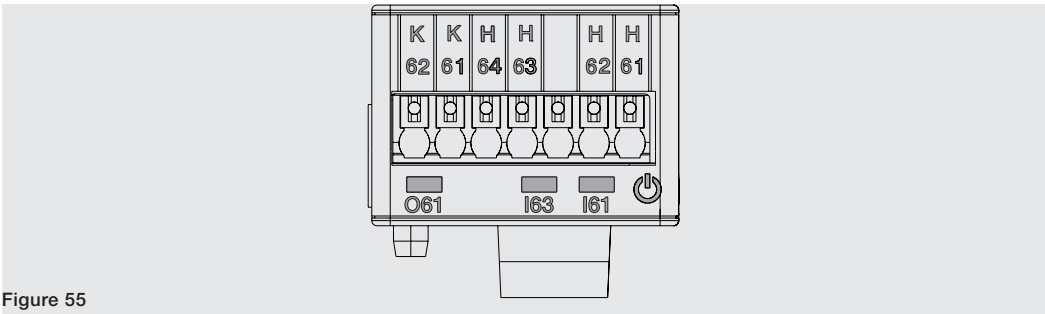



Figure 55

Parameter	Description
Power	Signals the on status and correct communication with Ekip Touch: <ul style="list-style-type: none"> <li>• off: module off</li> <li>• on steady or flashing synchronized with the Power led of Ekip Touch: module on and communication with trip unit present</li> <li>• flashing not synchronized with the Power led of Ekip Touch (2 fast flashes per second): module on and communication with trip unit absent</li> </ul>
I 61	status of input for temperature probe PT100 I61: <ul style="list-style-type: none"> <li>• off: input disabled</li> <li>• on: input enabled and sensor present</li> <li>• flashing: input enabled and sensor disconnected or signal not valid</li> </ul>
I 63	Indicates the status of the digital input for Trip Reset I63: <ul style="list-style-type: none"> <li>• off: input open</li> <li>• on: input closed</li> </ul>
O 61	Indicates the status of the command contact of remote control switch O61: <ul style="list-style-type: none"> <li>• off: contact closed</li> <li>• on: contact open</li> </ul>

**Menu** Local bus activation, which is essential for starting communication between the module and Trip unit, is available in the *Settings* menu (page 33).

The specific configuration, measurement, test and information areas will activate in the respective menus if the *Ekip CI* module is detected correctly by Ekip Touch.

**Configuration** The module parameters can be configured in the *Settings-Modules-Ekip CI* menu:

Parameter	Description	Default
<i>Enable</i>	Activates/deactivates certain functions and their availability in the parameters menu: <ul style="list-style-type: none"> <li>• if On: all the inputs, outputs and relative functions are activated</li> <li>• if Off: only input I61 is activated: the command function of O61 is off</li> </ul>	Off
<i>Polarity</i>	Defines whether input I63 is interpreted as On by Ekip Touch when it is open ( <i>Active open</i> ) or when it is closed ( <i>Active Closed</i> )	Active closed
<i>Delay</i>	Minimum activation time of input I63 before the re-opening command of contact O61 is sent; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps  <b>NOTES :</b> <ul style="list-style-type: none"> <li>• if the input is deactivated before this time has elapsed, the re-opening command is not sent</li> <li>• if delay = 0 s the input must still be present for longer than 300 µs</li> </ul>	0.1 s

**Measurements** The specific area of the module, containing the temperature measurement of probe PT100 if connected and activated, will be available in the *Measurements* menu if *Ekip CI* is correctly detected by Ekip Touch.



**NOTE:** value “- - -” will be displayed if no probe is detected

**Test** The test area in the *Test* menu is activated if the *Ekip CI* module is detected correctly.  
For details of the test characteristics, please consult page 34.


**About** If *Ekip CI* is detected correctly by Ekip Touch, the specific area of the module will be available in the *About-Modules* menu, containing:

- the serial number and version of the module
- activation status of the input for temperature probe PT100

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

# Internal accessories

## 1 - Ekip Com Modbus RTU

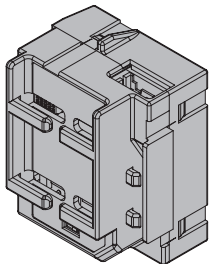

*Ekip Com Modbus RTU* is a communication accessory which allows Ekip Touch to be integrated into an RS-485 network with Modbus RTU communication protocol, with remote supervision and monitoring functions.

You can perform the following operations remotely:

- read Ekip Touch measurements and information
- provide information about the status of the circuit-breaker (open, closed, tripped)
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information and parameters not available on the display



**NOTE:** *the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration*

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).



**IMPORTANT:** **each circuit-breaker can house one module only; configuration with external communication modules is not allowed if an internal module is present**

### Connections

To connect the module to its communication network and for references about the terminals, please consult circuit diagrams [1SDM000005A1001](#).

The module is supplied with a 1-meter length cable for interfacing with its network.



**NOTE:** *different cables are supplied, depending on whether the circuit-breaker version is fixed/plug-in or withdrawable. For further details, please consult document [1SDH002011A1506](#)*

To connect the module to Ekip Touch, please consult document [1SDH002011A1506](#).

### Power supply

*Ekip Com Modbus RTU* is supplied directly by the Ekip Touch to which it is connected.




**NOTE:** *communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply*

**Menu** Local bus activation, which is essential for starting the communication between module and Ekip Touch, is available in the *Settings* menu (page 33).

Two areas are activated if Ekip Touch detects the module correctly:

- information area in the *About-Modules* menu, containing the software version and serial number of the module
- specific configuration area in the *Settings-Modules* menu, where the following communication parameters can be configured:


Parameter	Description	Default
<i>Serial address</i>	Module address; 1 to 247 range available  <b>IMPORTANT: devices connected to the same network must have different addresses</b>	247
<i>Baudrate</i>	Data transmission speed; 3 options are available: 9600 bit/s, 19200 bit/s, 38400 bit/s	19200 bit/s
<i>Physical protocol</i>	Defines the stop and parity bit; 4 options are available: <ul style="list-style-type: none"> <li>• 8,E,1 = 8 data bits, 1 EVEN parity bit, 1 STOP bit</li> <li>• 8,O,1 = 8 data bits, 1 ODD parity bit, 1 STOP bit</li> <li>• 8,N,2 = 8 data bits, no parity bit, 2 STOP bits</li> <li>• 8,N,1 = 8 data bits, no parity bit, 1 STOP bit</li> </ul>	8,E,1



**NOTE:** 247 default of Ekip Com Modbus RTU module

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via Ekip Connect) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

## 2 - Ekip Com Modbus TCP

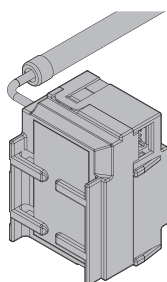

*Ekip Com Modbus TCP* is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with Modbus TCP communication protocol, with remote supervision and monitoring functions in two different modes, standard and HTTP server.

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- provide information about the status of the circuit-breaker (open, closed, tripped)
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information and parameters not available on the display



**NOTE:** the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

Depending on the parameter settings, described in the next pages, the ports used by the module are:

Port	Service	Notes
502/TCP	Modbus TCP	Valid for the Modbus TCP mode
80/TCP	Server HTTP	Valid for the HTTP Server mode
319/UDP	IEEE 1588	Valid with IEEE 1588 protocol enabled
320/UDP		
68/UDP	DHCP client	DHCP client enabled alternatively as: <i>Static address = On</i>



**IMPORTANT:** each circuit-breaker can house one module only; configuration with external communication modules is not allowed if an internal module is present.

### Safety and cyber security

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).



#### IMPORTANT:

- it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.
- The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with Modbus TCP communication protocol

### Connections

To connect the module to its communication network and for references about the terminals, please consult document [1SDM000005A1001](#).

The module is supplied with a 1-meter length cable and cabled RJ45 connector for interfacing with its network.

To connect the module to Ekip Touch, please consult document [1SDH002011A1503](#).

**Power supply** *Ekip Com Modbus TCP* is supplied directly by the *Ekip Touch* module to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Mode** The two operating modes available can be configured via the menu:

Mode	Description
Modbus TCP	Information and commands are managed by single requests/queries according to Modbus TCP rules and mapping (see System Interface)
HTTP Server	Information and commands are available in a web page, which can be accessed via a browser by entering the IP Address of the module as the address. The page has a login window where the user is requested to enter the same user password as the one requested on the display for editing parameters.

**Configurations via menu** Local bus activation, which is essential for starting the communication between module and *Ekip Touch*, is available in the *Settings* menu (page 129).

The following communication parameters can be configured if the module has been correctly detected by *Ekip Touch* in the *Settings-Modules* menu:


Parameter	Description	Default
<i>Function</i>	Defines the mode between Modbus TCP and HTTP Server/Modbus TCP (see System Interface)	Modbus TCP
<i>Static IP address ON</i>	Defines whether the module has a dynamic (Off) IP address or static (On) IP address Se = On all the associated parameters are enabled	Off
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0

**Information in menu** The following information will be available in the *About-Modules* menu if *Ekip Touch* has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP. <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>TCP Client 1, 2, 3</i>	IP addresses of the client devices connected to the module (in the Server mode)
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device



### 3 - Ekip Com Profinet

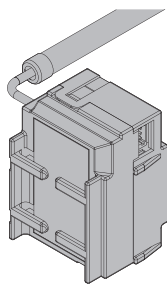

*Ekip Com Profinet* is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with Profinet communication protocol, with remote supervision and monitoring functions.

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- provide information about the status of the circuit-breaker (open, closed, tripped)
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information not available on the display



**NOTE:** *the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration*

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

The ports used by the module are:

Ethertype	Port	Service	Notes
0x88CC	-	LLDP	Link Layer Discovery Protocol
0x8892 (Profinet)	-	Profinet IO	Specific for real time communications (RT)
0x0802	34964/UDP	Profinet-cm (Context manager)	DCE/RPC



**IMPORTANT:** *each circuit-breaker can house one module only; configuration with external communication modules is not allowed if an internal module is present.*

#### Safety and cyber security

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).



**IMPORTANT:**

- **it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.**
- **The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with Profinet communication protocol**

#### Connections

To connect the module to its communication network and for references about the terminals, please consult document [1SDM000005A1001](#).

The module is supplied with a 1-meter length cable and cabled RJ45 connector for interfacing with its network.

To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1503](#).

---

**Power supply** *Ekip Com Profinet* is supplied directly by the *Ekip Touch* module to which it is connected.



**NOTE:** *communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply*

---

**Menu** Local bus activation, which is essential for starting the communication between module and *Ekip Touch*, is available in the *Settings* menu (page 33).

The following information will be available in the *About-Modules* menu if *Ekip Touch* has detected the module correctly:


Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

---

**Remote information** Certain additional information concerning the version and status of the module is available via the service connector (via *Ekip Connect*) or by communication via system bus; the information includes: HW and Boot version, CRC status (correctness of the SW in the module).

---

# 4 - Ekip Com EtherNet/IP™

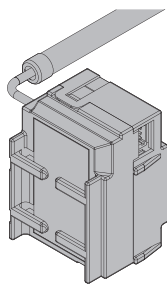

Ekip Com EtherNet/IP™ is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with EtherNet/IP™ communication protocol, with supervision functions

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- provide information about the status of the circuit-breaker (open, closed, tripped)
- manage certain controls, including opening and closing the actuator (MOE-E)
- access information and parameters not available on the display



**NOTE:** the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

Depending on the parameter settings, described in the next pages, the ports used by the module are:

Port	Description	Default
44818	TCP	Encapsulation Protocol (example: ListIdentity, UCMM, CIP Transport Class 3)
44818	UDP	44818 UDP Encapsulation Protocol (example: ListIdentity)
2222	UDP	2222 UDP CIP Transport Class 0 or 1
68/UDP	DHCP Client	Client DHCP enabled as an alternative to Static address = On



**IMPORTANT:** each circuit-breaker can house one module only; configuration with external communication modules is not allowed if an internal module is present.

## Safety and cyber security

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).



### IMPORTANT:

- it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.
- The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with EtherNet/IP™ communication protocol

## Connections

To connect the module to its communication network and for references about the terminals, please consult circuit diagrams [1SDM000005A1001](#).

The module is supplied with a 1-meter length cable and cabled RJ45 connector for interfacing with its network.

To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1503](#).

**Power supply** *Ekip Com EtherNet/IP™* is supplied directly by the *Ekip Touch* module to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Configurations via menu** Local bus activation, which is essential for starting the communication between module and *Ekip Touch*, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by *Ekip Touch* in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Static IP address ON</i>	Defines whether the module has a dynamic (Off) IP address or static (On) IP address Se = On all the associated parameters are enabled	Off
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0

**Information in menu** The following information will be available in the *About-Modules* menu if *Ekip Touch* has detected the module correctly:

Parameter	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP. <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote configurations** Additional parameters can be accessed via the service connector (via *Ekip Connect*) or via a system bus communication:

Parameter	Description	Default
<i>Enable IEEE 1588</i>	Allows the IEEE 1588 protocol for distribution of the clock and synchronization signal to be enabled <sup>(NOTE)</sup>	Off
<i>IEEE 1588 Master</i>	Enables the module to be set up as a master in the the network segment to which it belongs (synchronization clock).	Off
<i>IEEE 1588 Delay mechanism</i>	Allows the data exchange mode between module and master, either Peer-to-Peer or End-to-End, to be selected.	End-to-End
<i>Enable client SNTP</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled <sup>(NOTE)</sup> .	Off
<i>ANTP Server address</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0
<i>Time zone</i>	Defines the time zone to be used for synchronism	+00:00
<i>Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	Off




**NOTE:** *Enable IEEE 1588* and *Enable SNTP client* must not be enabled at the same time

**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Parameter	Description
<i>HW and Boot version</i>	general module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Ekip Link status</i>	Signals Ethernet cable connection errors
<i>SNTP Server Error</i>	Error in communication with SNTP server
<i>SNTP Server Synchronization</i>	State of synchronism with SNTP server
<i>IEEE 1588 status</i>	Valid with Master IEEE 1588= <b>ON</b> , notifies the presence (Slave or PTP Master Active) or absence (PTP Master but Passive) of a higher level master

# 5 - Ekip Com IEC 61850

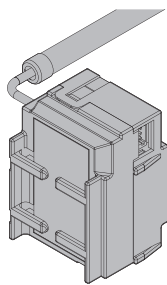

*Ekip Com IEC 61850* is a communication accessory which allows Ekip Touch to be integrated into an Ethernet network with IEC 61850 communication protocol, with remote supervision and monitoring functions.

The module is configured as master and remotely, you can:

- read Ekip Touch measurements and information
- manage certain controls, including opening and closing the actuator (MOE-E)
- provide information about the status of the circuit-breaker (open, closed, tripped)
- access information and parameters not available on the display
- transmit vertical communication (report) to superior supervision systems (SCADA), with statuses and measurements (re-transmitted whenever and only if they change with respect to the previous report)
- transmit horizontal communication (GOOSE) to other actuator devices (example: medium voltage circuit-breakers), with all the information about status and measurements normally shared by Ekip Com communication modules via bus.

**i** **NOTE:** *the remote open and close commands of the circuit-breaker can only be executed if Ekip Touch is in the Remote configuration*

The System Interface document is available for mapping the module in its communication network. All the required communication and command details are listed in the document (page 129).

The document also describes the configuration files for the IEC 61850 protocol and relative uploading procedure for assigning the Technical Name and enabling GOOSE messages (by setting the relative MAC Addresses)

Depending on the parameter settings, described in the next pages, the ports used by the module are:

Ethertype	Port	Protocol
0x0800-IP	102	ISO Transport Service on top of the TCP (RFC 1006)
0x88B8	-	GOOSE Messages
0x0800-IP	123 UDP	NTP - Network Time Protocol
0x0800-IP	69 UDP	TFTP - Trivial File Transfer Protocol

**!** **IMPORTANT:** **each circuit-breaker can house one module only; configuration with external communication modules is not allowed if an internal module is present.**

## Safety and cyber security

Since the module allows the actuator connected to Ekip Touch and access to the data in the unit to be checked, it can only be connected to networks equipped with all the necessary security and prevention measures against unauthorized access (for example, the network of the control system of an installation).

- !** **IMPORTANT:**
- **it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.**
  - **The module cannot be connected directly to the Internet. Only connect to dedicated Ethernet networks with IEC 61850 communication protocol**

**Connections** To connect the module to its communication network and for references about the terminals, please consult circuit diagrams [1SDM000005A1001](#).

The module is supplied with a 1-meter length cable and cabled RJ45 connector for interfacing with its network.

To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1503](#).

**Power supply** Ekip Com IEC 61850 is supplied directly by the *Ekip Touch* to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Configurations via menu** Local bus activation, which is essential for starting the communication between module and *Ekip Touch*, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by *Ekip Touch* in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Static IP address ON</i>	Defines whether the module has a dynamic (Off) IP address or static (On) IP address Se = On all the associated parameters are enabled	Off
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0
<i>Enable SNTP client</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled.	Off
<i>SNTP Server Addr.</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0

**Information in menu** The following information will be available in the *About-Modules* menu if *Ekip Touch* has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP. <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device
<i>Cfg file</i>	Name of the configuration file uploaded to the modules
<i>Cfg file error</i>	Code of the error concerning the configuration file (0 = no error)

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Parameter	Description	Default
<i>Preferred configuration file</i>	If several configuration files are present, allows file hierarchy between .cid and .iid to be defined	.cid
<i>Enable IEEE 1588</i>	Allows the IEEE 1588 protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup> .	Off
<i>IEEE 1588 Master</i>	Enables the module to be set up as a master in the the network segment to which it belongs (synchronization clock).	Off
<i>IEEE 1588 Delay mechanism</i>	Allows the data exchange mode between module and master, either Peer-to-Peer or End-to-End, to be selected.	End-to-End
<i>Time zone</i>	Defines the time zone to be used for synchronism	+00:00
<i>Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	Off
<i>TFTP Security level</i>	Defines the file loading procedure: <ul style="list-style-type: none"> <li>• <i>TFTP always On</i>= port open, loading always possible</li> <li>• <i>TFTP enable required</i>= port normally closed. To start loading, Enable TFTP must be run at the start of the procedure and disable TFTP must be run at the end of the procedure (disable not necessary, security command)</li> </ul>	TFTP always On
<i>CB Open/CB Close command</i>	Defines the limitations to remote opening and closing command execution: <ul style="list-style-type: none"> <li>• <i>Standard commands</i>= standard commands (unrestricted) activated</li> <li>• <i>CB operate request</i>= standard commands not activated. Use programmable functions YC COMMAND and YO COMMAND, and Request breaker open (28) and Request breaker close (29) commands</li> </ul>	Standard commands
<i>Flag word hex</i>	Set a filter on the selectivity statuses	0

<sup>(1)</sup> Enable IEEE 1588 and Enable SNTP client must not be enabled at the same time


**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Information	Description
<i>HW and Boot version</i>	General module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Ekip Link status</i>	Signals Ethernet cable connection errors
<i>SNTP Server Error</i>	Error in communication with SNTP server
<i>SNTP Server Synchronization</i>	State of synchronism with SNTP server
<i>IEEE 1588 status</i>	Valid with Master IEEE 1588= ON, notifies the presence (Slave or PTP Master Active) or absence (PTP Master but Passive) of the higher level master
<i>GOOSE Missing</i>	Signals that an expected GOOSE has not been received
<i>Configure Mismatch</i>	A GOOSE received does not conform to the expected structure
<i>Decode Error</i>	
<i>Sequence number error</i>	
<i>Remote programmable statuses (from E to R)</i>	Condition (true/false) of the programmable states and information on selectivity arising from logic defined in the configuration files loaded in module IEC 61850
<i>Zone selectivity remote inputs</i>	



# 6 - Ekip Link

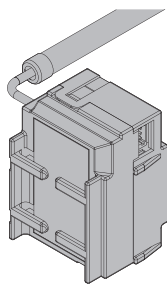

*Ekip Link* is a communication accessory which allows Ekip Touch to be integrated into an internal Ethernet network with ABB proprietary protocol.

The following functions can be performed with the remote module:

- Programmable Logic
- Power Controller
- Zone selectivity

To perform these functions, the system units involved must be equipped with their own *Ekip Link* and for each of these, the IP addresses of all the other *Ekip Link* connected must have been entered.

Each devices is defined as an Actor in the Link network.

Each *Ekip Link* can interface with up to 15 actors, of which up to 12 can be for the Zone Selectivity function.

The ports used by the module are:

Port	Service	Notes
18/UDP	ABB proprietary	In the case of rapid exchanges of information among ABB devices
319/UDP	IEEE 1588	Valid with IEEE 1588 protocol enabled
320/UDP		
68/UDP	DHCP client	DHCP client enabled as an alternative to <i>Static address</i> = <i>On</i>



**IMPORTANT: each circuit-breaker can house one module only; configuration with external communication modules is not allowed if an internal module is present**

## Connections

To connect the module to its communication network and for references about the terminals, please consult circuit diagrams [1SDM000005A1001](#).

The module is supplied with a 1-meter length cable and cabled RJ45 connector for interfacing with its network.

To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1503](#).

## Network

*Ekip Link* modules must be connected to a dedicated network that includes only Ekip Link modules and Ethernet switches for which support for level L2 multicast is declared in the datasheet.

If the network also includes other routers, multicast must be enabled and configured in all the level L3 VLAN interfaces

## Programmable Logic

Activation of up to four bits of the *Ekip Link* can be programmed via the Programmable Logic function, each bit according to any combination of the status bits of an actor of which the IP address has been entered.

These four bits are indicated as Statuses A B C and D; they are remotely programmable and their value is transmitted to the device to which *Ekip Link* is connected

**Power Controller** Using the *Power Controller* function, each actor can:

- Acquire the status and control the loads
- Act as master and collect the energy measurements of actors entered as Energy Meters.
- Supply energy measurements to actors entered as masters

The state of the loads can be acquired by checking the status of the inputs of the signaling modules connected to the actors of which the IP Addresses have been entered, while load control can be performed by programming the outputs.

Remote acquisition of the statuses of the loads and their control can also be performed with *Ekip Signalling 10K* connected to the network.

Further details about the potential of the function are available in White Paper [1SDC007410G0201](#) "Load management with Ekip Power Controller for SACE Emax 2".

**Zone selectivity** With the Zone Selectivity function:

- the IP addresses entered refer to actors with the role of interlock with respect to the current role
- the protections for which selectivity must be actuated by setting a mask, must be selected for each interlock actor entered. Thus set, the function will now be indicated as logic in the following text so as to distinguish it from the standard function, now also indicated as hardware in the following text
- thus selected, the protections add to those of the hardware S, G, D-Backward and D-Forward
- hardware selectivity only, or both hardware and logic selectivity can be selected
- diagnosis can be set, for each interlock release, to ascertain whether there is consistency between the hardware and logic selectivity information
- a mask can be set for the purpose of identifying those protections whose received selectivity information must be re-transmitted, regardless of whether the actor is in the alarm status. The mask is only applicable to logic selectivity information

For further details about the Zone Selectivity function with *Ekip Link*, please consult page page 77.

**Power supply** Ekip Link is supplied directly by the *Ekip Touch* to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply


**Configurations via menu** Local bus activation, which is essential for starting the communication between module and *Ekip Touch*, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by *Ekip Touch* in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Static IP address ON</i>	Defines whether the module has a dynamic (Off) IP address or static (On) IP address Se = On all the associated parameters are enabled	Off
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0


**Information in menu**

The following information will be available in the *About-Modules* menu if Ekip Touch has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP.  <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Information	Description	Default
<i>Client/Server</i>	Parameter for changing the configuration of the module from Server Only to Client and Server and for integrating it into an interactive data exchange network (see Ekip Com Hub on page 191).  <b>IMPORTANT: if Client/Server, the module allows data exchange like a normal Server function</b>	Server only
<i>Enable IEEE 1588</i>	Allows the IEEE 1588 protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup> .	Off
<i>IEEE 1588 Master</i>	Enables the module to be set up as a master in the the network segment to which it belongs (synchronization clock).	Off
<i>IEEE 1588 Delay mechanism</i>	Allows the data exchange mode between module and master, either Peer-to-Peer or End-to-End, to be selected.	End-to- End
<i>Enable client SNTP</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled <sup>(1)</sup>	Off
<i>ANTP Server address</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0
<i>Time zone</i>	Defines the time zone to be used for synchronism	+00:00
<i>Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers	Off
<i>Disable Gratuitous ARP</i>	Permits (Enabled ARP) the periodic generation of a Gratuitous ARP message, used by Ekip Connect to rapidly find the modules via Ethernet scan without knowing the IP address beforehand	ARP Enabled
<i>Password protected access</i>	Enables the writing operations performed via the network to be protected by a password (Request password)	Standard mode
<i>Password Modbus TCP</i>	With access protected by enabled password, this is the password to use before each writing session <sup>(2)</sup> .	Local access

<sup>(1)</sup> Enable IEEE 1588 and Enable SNTP client must not be enabled at the same time

<sup>(2)</sup> the parameter can only be changed via system bus in the remote configuration

**Remote Link configurations**

Regarding the Link functions, the following further parameters are available:

Information	Description	Default
<i>Link Actor (1÷15)</i>	IP address of each actor (from 1 to 15)	0.0.0.0
<i>Remote Programmable Status (A÷D)</i>	Configuration parameters of the configurable states: <ul style="list-style-type: none"> <li>• selection of actor (actor from 1 to 15) which activates the programmable status</li> <li>• event of the actor that determines change of programmable status</li> </ul>	Actor 1 Nobody
<i>Remote Status word (A÷D)</i>	Configuration parameters of the words: <ul style="list-style-type: none"> <li>• selection of actor (actor from 1 to 15) from which the word status is taken</li> <li>• selection of the taken word</li> </ul>	None 1 global
<i>Diagnostic</i>	Active (Passive diagnosis) or deactivated (No diagnosis) cabled selectivity diagnosis	No Diagnostic
<i>Diagnostic check timeout</i>	30 s, 1 min, 10 min, 60 min diagnosis frequency intervals available, if activated	30 seconds
<i>Zone Selectivity Type</i>	Configuration of hardware selectivity (Only HW) or hardware and logic (Mixed)	HW only
<i>Repeat Configuration mask</i>	Interactive mask for selecting selectivity to be sent also to the upper levels, even if not active in the programmed device	0x0000

**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:


Information	Description
<i>HW and Boot version</i>	general module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Ekip Link status</i>	Signals Ethernet cable connection errors
<i>SNTP Server Error</i>	Error in communication with SNTP server
<i>SNTP Server Synchronization</i>	State of synchronism with SNTP server
<i>IEEE 1588 status</i>	Valid with Master IEEE 1588= ON, notifies the presence (Slave or PTP Master Active) or absence (PTP Master but Passive) of the higher level master

**Remote Link information**

Regarding the Link functions, the following further parameters are available:

Information	Description
<i>Line Congruency detection</i>	Information about the state and inconsistency of HW and logic selectivity (state and type of selectivity inconsistent)
<i>Remote Programmable Status</i>	state (true/false) of remote programmable states A, B, C and D
<i>Remote Status Word</i>	value of remote programmable Words A, B, C, D
<i>Logic Zone Selectivity</i>	Logic selectivity states (inputs and outputs)

# 7 - Ekip Com Hub

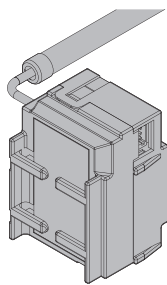

*Ekip Com Hub* is a communication accessory that enables the data and measurements of Ekip Touch and other devices connected to the same installation to be gathered and then made available on the server through an Ethernet network.

The configuration of the module is available via Ekip Connect or with the System Interface document, which contains all the details. (page 129).

The ports used by the module are:

Port	Service	Notes
67/UDP 68/UDP	DHCP client	DHCP client enabled as an alternative to <i>Static address = On</i>
443/TCP	HTTPS	always active when module is enabled
123/TCP	SNTP	active with SNTP client enabled
53/TCP	DNS	always active

*Ekip Link* also provides information about the status of the circuit-breaker (open, closed, tripped).



**IMPORTANT: each circuit-breaker can house one module only; configuration with external communication modules is not allowed if an internal module is present.**

## Safety and cyber security

The module uses the HTTPS protocol and can be connected to the Internet



### **IMPORTANT:**

- it is the customer's sole responsibility to provide and continuously ensure a secure connection between the module and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information.ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.

## Connections

To connect the module to its communication network and for references about the terminals, please consult circuit diagrams [1SDM000005A1001](#).

The module is supplied with a 1-meter length cable and cabled RJ45 connector for interfacing with its network.

To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1503](#).

**Power supply** Ekip Com Hub is supplied directly by the *Ekip Touch* to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Configurations via menu** Local bus activation, which is essential for starting the communication between module and *Ekip Touch*, is available in the *Settings* menu (page 33).

The following communication parameters can be configured if the module has been correctly detected by *Ekip Touch* in the *Settings-Modules* menu:

Parameter	Description	Default
<i>Enable</i>	Switches communication between module and server on/off.	
<i>Force Static IP Address ON</i>	Defines whether the module has the dynamic (Off) or static ( <b>On</b> ) IP address. If = <b>On</b> all the associated parameters are enabled	Off
<i>Static address IP address</i>	Enables the static IP to be selected	0.0.0.0
<i>Static Network Mask</i>	Enables the subnet mask to be selected	0.0.0.0
<i>Static Gateway address</i>	When there are several subnets, enables the IP address of the node to which the module is connected to be selected	0.0.0.0
<i>Enable SNTP client</i>	Allows the SNTP protocol for distribution of the clock and synchronization signal to be enabled.	Off
<i>SNTP Server Addr.</i>	Allows the network server that supplies the SNTP to be set.	0.0.0.0
<i>Password</i>	code required to register module on Cloud	---
<i>Remote firmware update</i>	Enables the firmware of the module to be updated. There are two parameters: <ul style="list-style-type: none"> <li>• <i>Enable</i>, to configure firmware download</li> <li>• <i>Automatic</i>, to automate module updating</li> </ul>	Off Automatic

**Information in menu** The following information will be available in the *About-Modules* menu if *Ekip Touch* has detected the module correctly:

Information	Description
<i>SN and version</i>	Identifier and SW version of the module
<i>IP address</i>	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP. <b>NOTE:</b> without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range
<i>Network Mask</i>	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
<i>Gateway address</i>	IP address of the node to which the module is connected, in the presence of several subnets
<i>MAC address</i>	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device

**Remote configurations**

Additional parameters can be accessed via the service connector (via Ekip Connect) or via a system bus communication:


Information	Description
<i>CRL Enable</i>	Allows the CRL (Certificate Revocation List) to be used to ascertain whether the server certificate is valid
<i>Clock update hardening enable</i>	Enables control of the time reference transmitted by the SNTP server
<i>SNTP Server Location</i>	Enables the position of the SNTP server to be set in relation to the network in which the module is installed
<i>SNTP Time zone</i>	Defines the time zone to be used for synchronism
<i>SNTP Daylight Saving Time</i>	Used to select whether daylight saving time is present (ON) or not (OFF) in the country to which the synchronization time refers
<i>Disable Gratuitous ARP</i>	Permits (Enabled ARP) the periodic generation of a Gratuitous ARP message, used by Ekip Connect to rapidly find the modules via Ethernet scan without knowing the IP address beforehand

**Remote information**

Additional information can be accessed via the service connector (via Ekip Connect) or via a system bus communication:

Information	Description
<i>HW and Boot version</i>	general module information
<i>Flash CRC status and result</i>	Information about the correctness of the SW in the module
<i>Publish enable configuration</i>	Enable status in <i>Security File</i>
<i>Configuration file</i>	Name of the file dedicated to the information to transmit (measurements, etc.)
<i>Security file</i>	Name of the file dedicated to the information requested by the module for transmission purposes (addresses, certificates, etc.)
<i>Certificate Revocation List</i>	name of file containing revoked certificates
<i>Executable file</i>	name of the executable firmware update file
<i>Configuration error</i>	error status of module configuration
<i>Sample time</i>	period of data acquisition from the connected devices
<i>Log time</i>	period within which the acquired data are saved in the log
<i>Upload time</i>	period (calculated by the module) between each data transmission
<i>Configured device</i>	Number of modules involved in the network with Hub module
<i>Polling period API events</i>	period with which the module communicates with the API device
<i>Connection client 1, 2, 3</i>	Address of TCP modbus clients connected to the module
<i>Statistics</i>	Recordings of the latest saving operations and percentage of resources being used
<i>Status plant side</i>	Information about the quality of the communication with the other devices
<i>Status Cloud side</i>	State of the errors concerning the TLS session established between module and server
<i>Application status</i>	operation progress indicators
<i>Status</i>	General indicators of the module: SNTP status, flash, cable connection, FW availability, file errors, etc.

# 8 - Ekip Signalling 1K

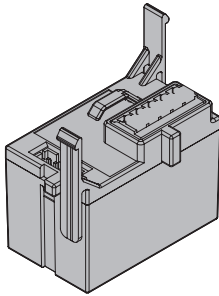

*Ekip Signalling 1K* is a signaling accessory allowing programmable inputs/outputs to be managed. The module can be configured in the CB with the IEC standard.



**IMPORTANT: each circuit-breaker can house one module only; configuration with external modules is not allowed if an internal module is present**

## Connections

The circuit diagrams and references concerning the terminals are available in document [1SDM000005A1001](#). To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1507](#).

## Power supply

*Ekip Signalling 1K* is supplied directly by the Ekip Touch to which it is connected.



**WARNING! communication between Ekip Touch and the module is interrupted in the absence of auxiliary power supply**

## Input

The input can be configured so that its status corresponds to actions or signals, with different programming options (see *Menu*).

The module permits two logic statuses, interpreted differently by the Trip unit on the basis of the selected configuration:

State	Electrical condition	Contact configuration	Status detected by Trip unit
Open	Circuit open	Active open	ON
		Active closed	OFF
Close	Short-circuit	Active open	OFF
		Active closed	ON

## Output

The output has three contacts: normally open (NO), normally closed (NC) and common.

The output can be configured so that the contacts change status when one or more events occur, with different programming options (see *Menu*).


Compared to the common contact, the NO and NC contacts have the following electrical characteristics:

Characteristics	Maximum limit <sup>(1)</sup>
Maximum switchable voltage	150 VDC / 250 VAC.
Breaking capacity	2 A @ 30 VDC, 0,8 A @ 50 VDC, 0,2 A @ 150 VDC, 4A @ 250 VAC
Dielectric strength between contact and internal coil	1000 V AC (1 minute @ 50 Hz).


<sup>(1)</sup> data relating to a resistive load



**Input parameters** The input can be configured in the *Settings-Modules-Ekip Signalling 1K-Input* menu:

Parameter	Description	Default
<i>Polarity</i>	Defines whether the input is interpreted as ON by the Trip unit when it is open ( <i>Active open</i> ) or when it is closed ( <i>Active Closed</i> )	Active closed
<i>Delay</i>	Minimum activation time of the input before status change is recognized; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps   <b>NOTES :</b> <ul style="list-style-type: none"> <li>• <i>status change is not recognized if the input deactivates before this time has elapsed</i></li> <li>• <i>if delay = 0 s status change must still be more than 300 µS</i></li> </ul>	0.1 s

**Output parameters** The output can be configured in the *Settings-Modules-Ekip Signalling 1K-Output* menu:

Parameter	Description	Default
<i>Signal source</i>	Event which activates the output and switches the contacts. Different protection proposals, statuses and thresholds are available on the display; the Custom mode can be configured via Ekip Connect so as to extend the solutions and combine several events	None
<i>Delay</i>	Minimum duration of the presence of the source before the output is activated; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps   <b>NOTE:</b> <ul style="list-style-type: none"> <li>• <i>the output will not be switched if the source is deactivated before this time has elapsed</i></li> <li>• <i>if delay = 0 s the source must still be present for longer than 300 µS</i></li> </ul>	0 s
<i>Contact Type</i>	Defines the rest status of the contact with source not present between: open (NO) and closed (NC)	NO
<i>Latched</i> <sup>(1)</sup>	Allows the output (and relative status led) to be kept activated (On) or deactivated (Off) when the event disappears	Off
<i>min Activation Time</i> <sup>(2)</sup>	Defines the minimum closing time of the contact following the rapid presence of sources <ul style="list-style-type: none"> <li>• Source duration &lt; min. activation = contact is activated for the minimum activation time</li> <li>• Source duration ≥ min. activation = contact is activated for as long as the source persists</li> </ul> Choose between: 0 ms, 100 ms, 200 ms	0 ms


<sup>(1)</sup> deactivate the latching of the outputs used if Ekip Measuring is used for the Power Controller function

<sup>(2)</sup> if Ekip Measuring is used for the Power Controller function, the Pulse Mode option will also be available; if selected, the output is kept activated for a set time that depends on the function, regardless of whether the event that activated it persists

**About** The *About-Modules* menu contains the specific menu of the module, in which the statuses of the input (*On/Off*) and output (*Open/Closed*) are present.

**Test** The output test command can be executed in the *Test* menu (see page 121).

## 9 - Ekip Maintenance

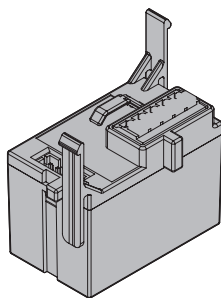

*Ekip Maintenance* is a signaling accessory allowing a programmable input and a programmable output to be managed.

The module can be configured in the CB according to standard UL; the menus and information about the module are available in the Trip unit with the names of the respective module for the IEC standard (*Ekip Signalling 1K*).



**IMPORTANT:** each circuit-breaker can house one module only; configuration with external modules is not allowed if an internal module is present

**Connections** The circuit diagrams and references concerning the terminals are available in document [1SDM000005A1001](#). To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1507](#).

**Power supply** *Ekip Maintenance* is supplied directly by the Ekip Touch to which it is connected.



**NOTE:** communication between *Ekip Touch* and the module is interrupted in the absence of auxiliary power supply

**Input** The input can be configured so that its status corresponds to actions or signals, with different programming options (see *Menu*).

The module permits two logic statuses, interpreted differently by the Trip unit on the basis of the selected configuration:

Parameter	Description	Contact configuration	Status detected by Trip unit
Open	Circuit open	Active open	ON
		Active closed	OFF
Close	Short-circuit	Active open	OFF
		Active closed	ON

**Output** The output has three contacts: normally open (NO), normally closed (NC) and common

The output can be configured so that the contacts change status when one or more events occur, with different programming options (see *Menu*).

Compared to the common contact, the NO and NC contacts have the following electrical characteristics:

Characteristics	Maximum limit <sup>(1)</sup>
Maximum switchable voltage	150 VDC / 250 VAC.
Breaking capacity	2 A @ 30 VDC, 0,8 A @ 50 VDC, 0,2 A @ 150 VDC, 4A @ 250 VAC
Dielectric strength between contact and internal coil	1000 V AC (1 minute @ 50 Hz).

<sup>(1)</sup> data relating to a resistive load

**Input parameters** The input can be configured in the *Settings-Modules-Ekip Signalling 1K-Input* menu:

Parameter	Description	Default
Polarity	Defines whether the input is interpreted as ON by the Trip unit when it is open ( <i>Active open</i> ) or when it is closed ( <i>Active Closed</i> )	Active closed
Delay	Minimum activation time of the input before status change is recognized; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps <b>NOTES:</b> <ul style="list-style-type: none"> <li>status change is not recognized if the input deactivates before this time has elapsed</li> <li>if delay = 0 s status change must still be more than 300 μS</li> </ul>	0.1 s

**Input parameters** The input can be configured in the *Settings-Modules-Ekip Signalling 1K-Input* menu:

Parameter	Description	Default
<i>Polarity</i>	Defines whether the input is interpreted as ON by the Trip unit when it is open ( <i>Active open</i> ) or when it is closed ( <i>Active Closed</i> )	Active closed
<i>Delay</i>	Minimum activation time of the input before status change is recognized; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps  <b>NOTES:</b> <ul style="list-style-type: none"> <li>• <i>status change is not recognized if the input deactivates before this time has elapsed</i></li> <li>• <i>if delay = 0 s status change must still be more than 300 μS</i></li> </ul>	0.1 s

**Output parameters** The output can be configured in the *Settings-Modules-Ekip Signalling 1K-Output* menu:

Parameter	Description	Default
<i>Signal source</i>	Event which activates the output and switches the contacts. Different protection proposals, statuses and thresholds are available on the display; the Custom mode can be configured via Ekip Connect so as to extend the solutions and combine several events	None
<i>Delay</i>	Minimum duration of the presence of the source before the output is activated; the delay is given in seconds and can be set within range: 0 s to 100 s, in 0.01 s steps  <b>NOTES:</b> <ul style="list-style-type: none"> <li>• <i>the output will not be switched if the source is deactivated before this time has elapsed</i></li> <li>• <i>if delay = 0 s the source must still be present for longer than 300 μS</i></li> </ul>	0 s
<i>Contact Type</i>	Defines the rest status of the contact with source not present between: open (NO) and closed (NC)	NO
<i>Latched</i> <sup>(1)</sup>	Allows the output (and relative status led) to be kept activated (On) or deactivated (Off) when the event disappears	Off
<i>min Activation Time</i> <sup>(2)</sup>	Defines the minimum closing time of the contact following the rapid presence of sources: <ul style="list-style-type: none"> <li>• Source duration &lt; min. activation = contact is activated for the minimum activation time</li> <li>• Source duration ≥ min. activation = contact is activated for as long as the source persists</li> </ul> Choose between: 0 ms, 100 ms, 200 ms	0 ms


<sup>(1)</sup> deactivate the latching of the outputs used if Ekip Measuring is used for the Power Controller function

<sup>(2)</sup> if Ekip Measuring is used for the Power Controller function, the Pulse Mode option will also be available; if selected, the output is kept activated for a set time that depends on the function, regardless of whether the event that activated it persists

**About** The *About-Modules* menu contains the specific menu of the module, in which the statuses of the input (*On/Off*) and output (*Open/Closed*) are present.

**Test** The output test command can be executed in the *Test* menu (page 121).

## 10 - Micro I/O

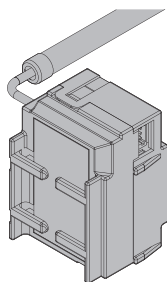

---

*Micro I/O* is a signaling accessory which provides the Trip unit with information about the status of the circuit-breaker (open, closed, tripped).

*Micro I/O* is configured by default and is available for XT5 circuit-breakers without internal modules installed.


---

**Connections** The circuit diagrams and references concerning the terminals are available in document [1SDM000005A1001](#). To connect the module to Ekip Touch and to actuator MOE-E if present, please consult document [1SDH002011A1509](#).

---

# Other accessories

## 1 - Ekip Signalling 10K

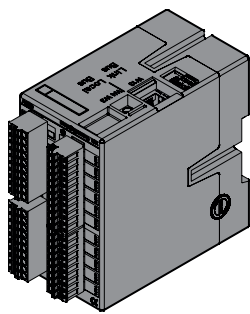

*Ekip Signalling 10K* is an external accessory signaling module. It can be installed on a standard 35 mm DIN rail (DIN EN 50022 type TS 35x15 mm).

This module has:

- Ten programmable output contacts
- Ten or eleven programmable digital inputs
- One power led and twenty or twenty-one signaling leds (one for each input/output)

The module can be set in four different configurations

- One in case of connection to a Link bus network
- Three configurations in case of connection via Local Bus (to allow up to three modules to be connected to the same trip unit)


The module can be supplied by 110...240 V AC / DC or 24...48 V DC.

Further details about *Ekip Signalling 10K* are available in ABB Library, especially in document [1SDH001318R0002](#).



**IMPORTANT: make sure that you have read the recommendations concerning safety and prevention of unauthorized access.**

## 2 - Ekip Signalling Modbus TCP

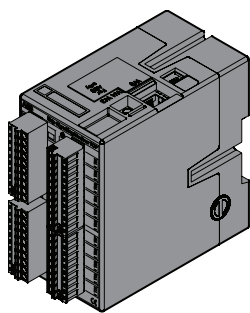

*Ekip Signalling Modbus TCP* is an external accessory module. It can be installed on a standard 35 mm DIN rail (DIN EN 50022 type TS 35 x 15 mm).


Its function is to share on another Ethernet network with communication protocol.

The module has 11 digital inputs and 10 output contacts:

- The inputs allow the state of the devices and other information to be monitored
- The outputs allow the circuit-breakers to be operated.

Each input and output is associated with a state LED.


The module can function in three different modes:

Mode	Characteristics
CB Supervisor	The module can be associated with a single circuit-breaker, which can be selected from a list. Configuration of the inputs and output is pre-defined
Multi MCCB Supervisor	The module can be associated with up to five circuit-breakers. Configuration of the inputs and output is pre-defined.  <b>NOTE:</b> mode available with moulded-case circuit-breakers
Free I/O	The inputs and outputs can be fully configured by the user

The module can be supplied by 110...240 V AC / DC or 24...48 V DC.

Further details about *Ekip Signalling Modbus TCP* are available in ABB Library, especially in document [1SDH001456R0002](#).

3 - Ekip Multimeter

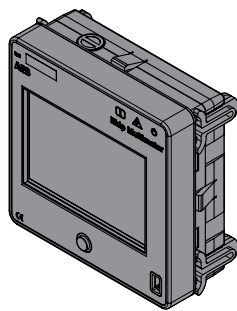

*Ekip Multimeter* is a remote display panel-front module with touchscreen display allowing the parameters of the Trip unit to which it is connected via local bus to be displayed and edited.


Up to four *Ekip Multimeter* modules can be connected to the same Trip unit. On the other hand, the module can only be connected to one Trip unit.

The rear connector allows the unit to be supplied in two different ways:

Terminals / supply voltage	Frequency	Power input	Inrush current
21,5 ÷ 53 VDC	-	Maximum 10W	Maximum 2 A for 20 ms
105 ÷ 265 VAC/DC	45 ÷ 66 Hz	Maximum 10 VA/W	Maximum 2 A for 20 ms

 **IMPORTANT: AC and DC supplies cannot be present at the same time**

The module provides for 24 VDC auxiliary voltage (terminals 24Vout L+ and L-), which can be used to directly supply the Trip unit.

 **WARNING! Ekip Multimeter is sized to supply the Trip unit alone, without additional modules: if auxiliary voltage is used via module, it must be connected directly to the terminal box of the CB without the possibility of using Ekip Supply or other modules**


**Connections**

Belden 3105A cables or equivalent, up to 15 m in length, must be used for the local bus and auxiliary supply. The cable shield must be earthed on both sides of the connection.

**Documents**

Further details are available in ABB Library, especially in document [1SDH001000R0520](#).

4 - External neutral

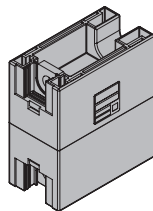

This is a current sensor for the external neutral pole of the circuit-breaker, designed for 3P CBs. It provides neutral protection via the connection to the Trip unit.


The sensor is available in two versions: one version allows solely the sensor to be connected to the trip unit; the other version has a connection for neutral voltage (V0).

To configure the presence of the sensor and protection, please consult pages 33 and 47.

Further details about the *External neutral* connection are available in ABB Library, especially in document [1SDH001000R0506](#).

## 5 - Testing and Programming

### Ekip TT



*Ekip TT* is a supply accessory and is useful for powering Ekip Touch in the absence of auxiliary power supply; the unit allows:

- Ekip Touch to be supplied and the tripped protection to be displayed, in the event of a TRIP and absence of auxiliary voltage
- the protections and certain parameters to be set before installation in the system



#### IMPORTANT:

- **Ekip TT can also be connected to Ekip Touch when in service.**
- **Ekip TT only supplies the display: the presence of an auxiliary supply is required in order to set and display the information about electronic accessories**


*Ekip TT* is connected to the service connector of Ekip Touch by means of the supplied cable.

To switch on the module, set the side switch to the ON position and check the status of the led:

- if green, proceed with the required reading and configuring operations
- if red, replace the batteries of the device (three 1.5 V AA batteries)

Further details are available in ABB Library, especially in document [1SDH001000R0519](#) (compatible with Ekip Touch and SACE Tmax XT5).

### Ekip Programming and Ekip T&P



*Ekip Programming* is a supply and communication accessory that is useful for:

- Ekip Touch to be supplied and the tripped protection to be displayed, in the event of a TRIP and absence of auxiliary voltage
- the protections and certain parameters to be set before installation in the system
- with Ekip Connect software, accessing the programming, measuring pages and other exclusive functions (Datalogger, Dataviewer, Power Controller, Load Shedding, IPS, IEC 61850)



#### IMPORTANT:

- **Ekip Programming can also be connected to Ekip Touch when in service**
- **Ekip Programming only supplies the display: the presence of an auxiliary supply is required in order to set and display the information about the electronic accessories**


*Ekip Programming* connects to the USB port of the PC, from which it receives the power required to switch on and also supply Ekip Touch; connection to the service connector of Ekip Touch must be made with the supplied cable.

*Ekip Programming* has two leds, one green to indicate when the module is on, the other yellow to indicate when communication is activated.

*Ekip T&P* is a supply and communication accessory with the same characteristics as *Ekip Programming*, plus a further function:

- with Ekip Connect software, it enables access to the test pages

### Ekip Bluetooth Key

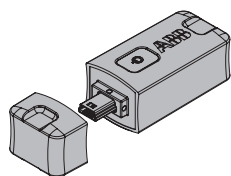

The Ekip Bluetooth Key enables a temporary connection to be activated between circuit-breaker and smartphone/tablet device with the Ekip Connect Mobile application for the purpose of configuring parameters, reading measurements and consulting information. The communication protocol used is Bluetooth Low Energy (Bluetooth 4.1).

Ekip Bluetooth Key is compatible with all the trip units installed in ABB Tmax XT and Emax 2 low voltage circuit-breakers.

Further details are available in ABB Library, especially in document [1SDH002023A1001](#).





